

Figure 1

1. INTRODUCTION

This instruction sheet provides operation and maintenance instructions for Hydraulic Crimping Head 1752786-1. See Figure 1.

The crimping head accepts interchangeable die sets for a variety of terminals and splices for large wire sizes -4/0 through 1000 MCM range. Refer to the instructions packaged with the specific die sets for compatible products, wire ranges, strip dimensions, and application procedures.

The crimping head is designed and recommended for use with the Foot Hydraulic Pump 1583659-1; Hand Hydraulic Pump 1583661-1; or the Electric Hydraulic Pump 1804700-1 (110Vac) or 1804700-2 (220 Vac).

Read these instructions and all applicable references before inserting any die set assemblies and crimping any terminals or splices.

NOTE


Dimensions on this sheet are in metric units [with U.S. customary units in brackets]. Figures and illustrations are for reference only and are not drawn to scale.

Reasons for reissue of this instruction sheet are provided in Section 7, REVISION SUMMARY.

2. DESCRIPTION (Figure 1)

Main components of Hydraulic Crimping Head 1752786-1 include a "C"-head, which houses the stationary die, a cylinder which contains the head's hydraulic chamber, a piston (ram) which holds and controls the moving die, and a quick-disconnect coupling (cylinder half) which mates with the coupling on the hose to release or supply pressure. A dust cap covers the quick-disconnect coupling.

3. INSTALLATION

3.1. Head Installation

CAUTION


Prior to installing the head, ensure that the pump and hose being used are working properly, and are adjusted to and rated at 68948 kPa [10,000 psi]. An incorrectly adjusted or rated pump/hose could result in severe tooling damage, as well as personal injury.

1. Release the hydraulic pressure to the hose. Disconnect electric power unit from power supply.
2. Remove protective dust caps.
3. Thoroughly clean the coupling on the pump/hose and the coupling on the crimping head.
4. Mate both quick-disconnect couplings and tighten the collar of the coupler assembly on the hose.

CAUTION


Oil flow must be unobstructed between the power unit and the crimping head. Ensure that all couplings are fully mated and tightened.

DANGER


If a crimping head must be removed after the power unit was in operation, be sure to release the pressure in the hydraulic system. When using Hydraulic Power Unit 1804700-[], **DISCONNECT THE POWER UNIT FROM THE POWER SUPPLY**. When using Hydraulic Foot Pump 1583659-1 or Hydraulic Hand Tool 1583661-1, depress the pressure release pedal to release pressure.

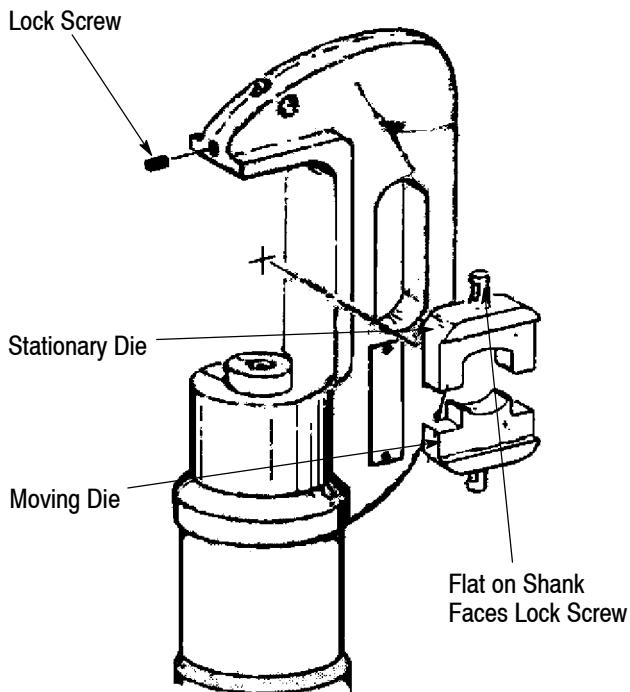


Figure 2

3.2. Die Installation/Removal

A. Die Installation

DANGER

To avoid personal injury, do NOT accidentally depress the footswitch or handle control when installing or removing dies.

CAUTION

Operating the head WITHOUT the crimping dies installed will damage the "C"-Head or ram.

1. Back off the set-screws in the head and ram (ram must be advanced to gain access to the set-screw). Refer to Figure 2.
2. Insert dies in the head and ram, ensuring that the "flats" on the die shanks are facing the set-screws (see Figure 2).
3. Tighten the set-screws.
4. Slowly close the dies to ensure proper alignment.
5. Complete the cycle and return the ram to the "down" position.

B. Die Removal

DANGER


To avoid personal injury, do NOT accidentally depress the footswitch or handle control when installing or removing dies.

CAUTION


Operating the head WITHOUT the crimping dies installed will damage the "C"-Head or ram.

1. Back off the set-screw in the C-Head and remove the stationary die.
2. Raise the ram slightly to gain access to the set-screw in the piston (ram).
3. Back off the set-screw in the piston (ram) and remove the moving die.

4. CRIMPING PROCEDURE

The following procedure provides only general information concerning crimping. Refer to the instructions packaged with the dies and power unit for detailed information, including wire stripping dimensions and instructions for positioning terminals and splices in the dies.

1. Insert terminal or splice in the stationary die according to the instructions packaged with the dies.
2. Activate the power unit to advance the dies and hold the terminal or splice in place.
3. Insert stripped wire into the terminal or splice.
4. Activate the power unit to complete the crimp.

5. INSPECTION/MAINTENANCE

DANGER


Make sure hydraulic pressure is released and power supply is disconnected before following inspection and maintenance procedures, unless otherwise specified in the procedure.

Each crimping head is assembled and inspected before shipment. It is recommended that the crimping head be inspected immediately upon its arrival at your facility, and at regularly scheduled intervals, to ensure that the crimping head has not been damaged during handling. Frequency of inspection depends upon the following:

- Care, amount of use, and handling of the head;
- Type and size of products crimped;
- Degree of operator skill; and
- Environmental conditions.

Once a year, or every 7,500 cycles (whichever comes first), the hydraulic head should be returned to Tyco Electronics for magnetic particle inspection.

Additionally, inspect and service the head every month or 1,000 cycles, whichever comes first.

Inspect the metal surfaces for nicks, cracks, scratches, and excessive wear, especially where sliding contact occurs. Refer to Figure 3. Inspect for cracks especially at the corners of the "C"-head and around the top of the cylinder.

5.1. Cleaning

Remove accumulations of dirt and grease on the crimping head, especially in areas where dies are installed and terminals are crimped. Clean the entire head frequently with a clean, lint-free cloth.

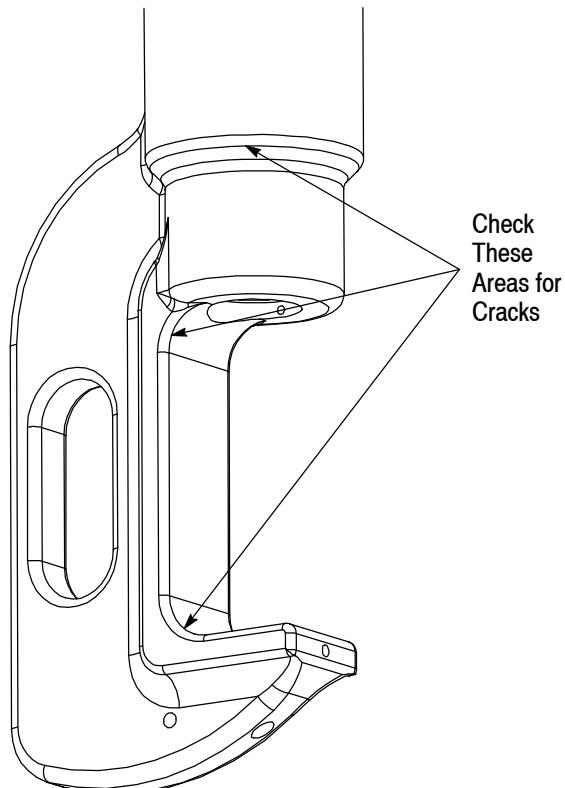


Figure 3

5.2. Crimping Head Check-Out Procedure

If the ram fails to retract after completion of a crimping cycle, the cause may be in the crimping head. To determine whether or not the trouble is in the crimping head, release pressure in the power unit. If the ram retracts, the trouble is not in the crimping head. If ram does NOT retract, refer to Section 6, RETURN/REPAIR.

Replacement parts are listed in Figure 4.

6. RETURN/REPAIR

Order replacement parts through your Tyco Electronics Representative, or call 1-800-526-5142, or send a facsimile of your purchase order to 1-717-986-7605, or write to:

CUSTOMER SERVICE (38-35)
TYCO ELECTRONICS CORPORATION
PO BOX 3608
HARRISBURG PA 17105-3608

Crimping heads may also be returned for evaluation and repair. For tool repair service, contact a Tyco Electronics Representative at 1-800-526-5136.

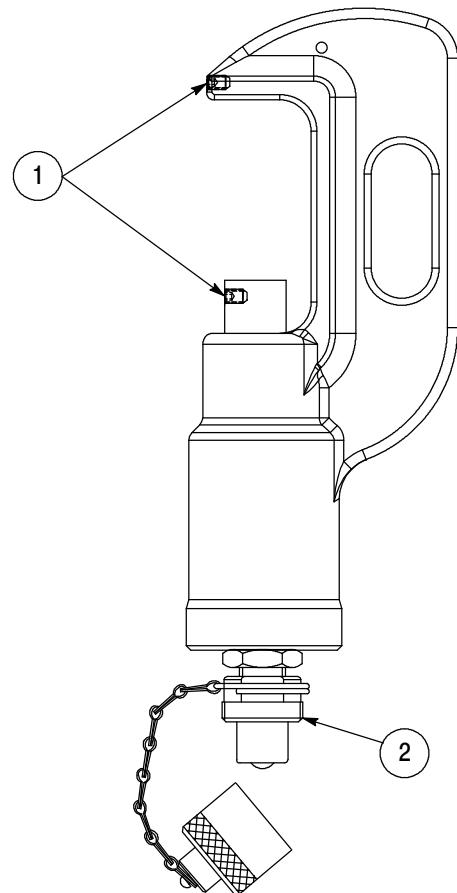


Figure 4

7. REVISION SUMMARY

- Added "Original Instructions" statement

Данный компонент на территории Российской Федерации**Вы можете приобрести в компании MosChip.**

Для оперативного оформления запроса Вам необходимо перейти по данной ссылке:

<http://moschip.ru/get-element>

Вы можете разместить у нас заказ для любого Вашего проекта, будь то серийное производство или разработка единичного прибора.

В нашем ассортименте представлены ведущие мировые производители активных и пассивных электронных компонентов.

Нашей специализацией является поставка электронной компонентной базы двойного назначения, продукции таких производителей как XILINX, Intel (ex.ALTERA), Vicor, Microchip, Texas Instruments, Analog Devices, Mini-Circuits, Amphenol, Glenair.

Сотрудничество с глобальными дистрибуторами электронных компонентов, предоставляет возможность заказывать и получать с международных складов практически любой перечень компонентов в оптимальные для Вас сроки.

На всех этапах разработки и производства наши партнеры могут получить квалифицированную поддержку опытных инженеров.

Система менеджмента качества компании отвечает требованиям в соответствии с ГОСТ Р ИСО 9001, ГОСТ Р В 0015-002 и ЭС РД 009

Офис по работе с юридическими лицами:

105318, г.Москва, ул.Щербаковская д.3, офис 1107, 1118, ДЦ «Щербаковский»

Телефон: +7 495 668-12-70 (многоканальный)

Факс: +7 495 668-12-70 (доб.304)

E-mail: info@moschip.ru

Skype отдела продаж:

moschip.ru
moschip.ru_4

moschip.ru_6
moschip.ru_9