


Modular Crimp Head Order No. 63827-8970

molex

Application Tooling Specification Sheet

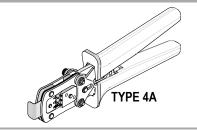

Hand Crimp Tool Order No. 63827-8900

FEATURES

- A full cycle ratcheting hand tool ensures complete crimps
- Ergonomically designed soft handles
- Precisely designed crimping profiles with simple contact positioning
- Easy handling due to outstanding force ratio
- Modular Crimp Head is removable and can be use in the Air Powered Tool Order No.63816-0100, accompanied by Air Powered Crimp Adapter (Order No. 63816-0700).
- % Can also be used in the Battery Powered Tool Order No.63816-0200 (110 V) or 63816-0250 (220 V), accompanied by Battery Powered Crimp Adapter (Order No. 63816-0600).

SCOPE

Products: Board-In Crimp Terminals, 22-26 AWG.

Terminal Series No.	Terminal Order No.	Wire Size		◆Insulation Diameter (Max.)		Strip Length	
reminal Series No.	reminal Order No.	AWG	mm²	mm	ln.	mm	ln.
90198	90198-0002	22-26	NA	1.52	.060	2.0-2.5	.079098

Terminal will accommodate the following wire specification:


22 AWG-Solid Wire or Fused Wire

24-26 AWG Solid Wire, Fused Wire or Stranded Wire

◆To achieve optimum IPC-A620 Class 2 insulation crimps, use this insulation OD range: 22 AWG: 1.32-1.52 mm, 24 AWG: 1.05-1.18 mm, 26 AWG: 0.89-1.32 mm


Strip Length

Check the insulation to ensure that there has been a nice clean cut. Wires with damaged insulation should not be used. See Figure 1.

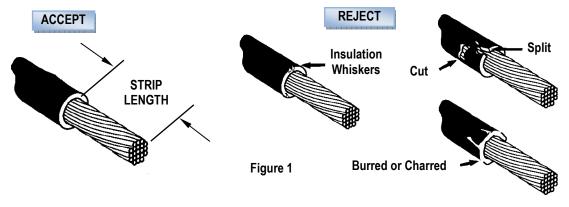

Doc No: ATS-6382789HM Release Date: 09-21-16
Revision: A Revision Date: 09-21-16

Release Date: 09-21-16 UNCONTROLLED COPY

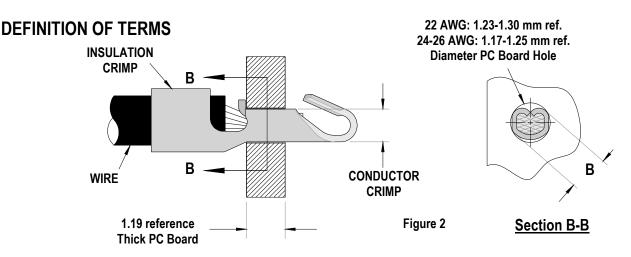


CRIMP SPECIFICATIONS

After crimping, the conductor profiles should measure the following (See Figure 2).

Terminal Series No.	Wire Size		"A" Crimp Height (Ref.)		"B" Diagonal Dim. Maximum		◆Pull Force Minimum	
	AWG	mm ²	mm	In	mm	ln.	N	Lb.
	22	NA	0.85	.034	1.19	.047	35.6	8.0
90198	24	NA	0.75	.030	1.14	.045	22.2	5.0
	26	NA	0.70	.028	1.14	.045	13.3	3.0

Terminal Series No.	Wire Size Insul		Insulation Crim	p Height (Ref.)	Insulation Crimp Width (Ref.)		Profile		
Terminal Series No.	AWG	mm²	mm	ln.	mm	ln.	22	24	26
	22	NA	1.65	.065	1.75	.069	Χ		
90198	24	NA	1.55	.061	1.45	.057		Χ	
	26	NA	1.50	.059	1.45	.057			Χ

◆The crimp on this terminal is not an electrical crimp; the final soldering operation is the electrical connection. This minimum pull force is what should be expected when pulling the terminal with both insulation and conductor crimped.

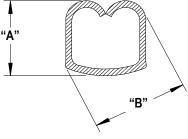

"CRIMP PROFILE"

Tool Qualification Notes:

The above specifications are guidelines to an optimum crimp.

Notes:

- 1. This tool should only be used for the terminals and wire gauges specified on this sheet.
- 2. This tool is not adjustable for crimp height. Variations in tools, terminals, wire stranding, and insulation types may affect crimp height.
- 3. Molex does not repair hand tools (see *Warranty* on page 4). The replacement parts listed are the only parts available for repair. If the handles or crimp tooling is damaged or worn, a new tool must be purchased.

4. Molex does not certify crimp hand tools.

Doc No: ATS-6382789HM Release Date: 09-21-16 UNCONTROLLED COPY Page 2 of 6

Revision: A Revision Date: 09-21-16

OPERATION

Open the tool by squeezing the handles together, at the end of the closing stroke, the ratchet mechanism will release the handles, and the hand tool will spring open.

Preparing Terminals for Crimping

The terminals must be cut from the reel as shown. See Figure 3. The carrier strip hole is used to assist in loading the terminal in position over the crimp anvils. The carrier strip will help maintain terminal position during crimping and can be broken off after the crimp is complete.

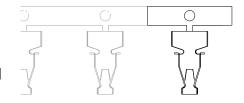



Figure 3

Figure 5

ANVIL

Crimping Terminals

- 1. Load the terminal with carrier strip into the proper crimp profile. Make sure the carrier strip pilot hole fits over the positioning pin.
- 2. Push the Insulation stop down onto the terminal.
- 3. Place the properly stripped wire into the profile, making sure all the wire strands are captured inside the insulation stop/slot. Push the wire into the tool until the end of the insulation contacts the insulation stop. See Figures 4 and 5.
- 4. While holding the wire with one hand, slowly squeeze the tool handles together to close the tool jaws until the ratchet mechanism releases. At this point the handles can be released and will spring open.
- 5. Remove the crimped terminal and inspect for acceptable crimp attributes.

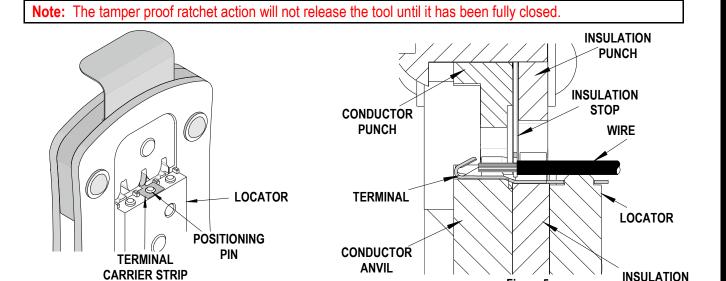

Maintenance

It is recommended that each operator of the tool be made aware of, and responsible for, the following maintenance steps:

- 1. Remove dust, moisture, and other contaminants with a clean brush, or soft, lint free cloth.
- 2. Do not use any abrasive materials that could damage the tool.

Figure 4

3. Make certain all pins; pivot points and bearing surfaces are protected with a thin coat of high quality machine oil. Do not oil excessively. The tool was engineered for durability but like any other equipment it needs cleaning and lubrication for a maximum service life of trouble free crimping. Light oil (such as 30 weight automotive oil) used at the oil points, every 5,000 crimps or 3 months, will significantly enhance the tool life.

Doc No: ATS-6382789HM Release Date: 09-21-16 UNCONTROLLED COPY Page 3 of 6

Revision: A Revision Date: 09-21-16

- 4. Wipe excess oil from hand tool, particularly from crimping area. Oil transferred from the crimping area onto certain terminations may affect the electrical characteristics of an application.
- 5. When tool is not in use, keep the handles closed to prevent objects from becoming lodged in the crimping dies, and store the tool in a clean, dry area.

Miscrimps or Jams

Should this tool ever become stuck or jammed in a partially closed position, **Do Not** force the handles open or closed. The tool will open easily by lifting the ratchet release lever. See Figure 9.

Warranty

This tool is for electrical terminal crimping purposes only. This tool is made of the best quality materials. All vital components are long life tested. All tools are warranted to be free of manufacturing defects for a period of 30 days. Should such a defect occur, we will repair or exchange the tool free of charge. This repair or exchange will not be applicable to altered, misused, or damaged tools. This tool is designed for hand use only. Any clamping, fixturing, or use of handle extensions voids this warranty.

CAUTION: Repetitive use of this tool should be avoided.

CAUTIONS:

- 1. Manually powered hand tools are intended for low volume or field repair. This tool is NOT intended for production use. Repetitive use of this tool should be avoided.
- 2. Insulated rubber handles are not protection against electrical shock.
- 3. Wear eye protection at all times.
- 4. Use only the Molex terminals specified for crimping with this tool.



CAUTION:

Molex tooling crimp specifications are valid only when used with Molex terminals and tooling manufactured by Molex or authorized distributors ("Molex Tooling"). When using tooling other than Molex Tooling with specific Molex specific connector systems listed in our ATS documents, the Molex tooling qualification does not apply and the responsibility for full qualification of the connector system is that of the customer. Molex accepts no liability for connector performance or tooling support where tooling other than Molex Tooling is used, or where Molex Tooling is modified.



CAUTION:

A-620 and other industry standards do not supersede the manufacturer's specifications. Some terminals designed over 20 years ago may not meet the desired physical attributes for some of today's standards. However, these terminals will still perform electrically at an acceptable quality level based on the qualification testing and years of successful performance in the field.

Doc No: ATS-6382789HM Release Date: 09-21-16 **UNCONTROLLED COPY** Page 4 of 6 Revision: A Revision Date: 09-21-16

Applications for the Modular Crimp Head

WARNING: *NEVER* operate, service, install, or adjust this Modular Crimp Head without proper instruction and without first reading and understanding the instructions in the proper Manual or Specification Sheet. See Chart below for the correct Manual or Specification Sheet.


WARNING: *NEVER* install tooling or service this tool while it is into any power source. Disconnect the power by unplugging or turn off the Actuator from its power source.

CAUTION: Keep fingers away from the crimping area when operating this tool. It may cause severe injury.

CAUTION: Wear safety glasses when operating or servicing this tool.

The chart below shows all applications for this Modular Crimp Head.


Modular Crimp Head		Tool	Adapter	Adapter	Figure
Order No.	Order no.	Description	Order No.	Description	No.
	63816-0000	Hand Crimp Frame (Short)	N/A	N/A	6
	63816-0050	Hand Crimp Frame (Long)	N/A	N/A	6
63827-8970	63816-0200	Battery Power Tool (110 V)	63816-0600	Battery Power Crimp Adapter	7
	63816-0250	Battery Power Tool (220 V)	63816-0600	Battery Power Crimp Adapter	7
	63816-0100	Air Power Tool	63816-0700	Air Power Crimp Adapter	8

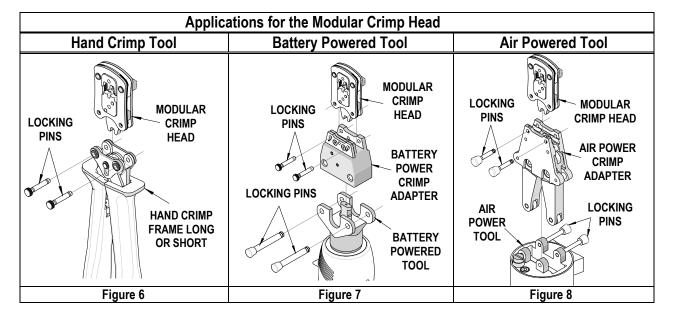

Doc No: ATS-6382789HM Release Date: 09-21-16 **UNCONTROLLED COPY** Page 5 of 6 Revision: A Revision Date: 09-21-16

PARTS LIST

Item	Order Number	Description	Quantity	
1	63827-8970	Modular Crimp Head	1 (Ref)	
2	63816-0000	Hand Crimp Frame (Short)	1 (Ref)	
3	63827-8975	Locator Plate	1	
4	63816-0001	Locking Pin	2	
5	63600-0525	Handle Spring	1	
6	63600-0520	Crimping Spring	2	

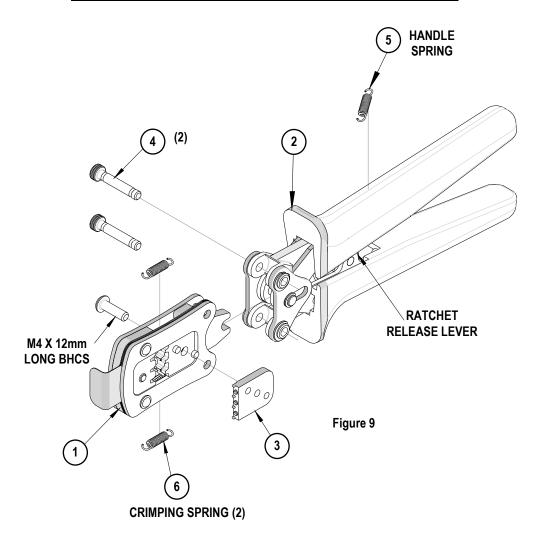

Application Tooling Support 2200 Wellington Court Lisle, IL 60532 USA Direct +1-402-458-TOOL (8665)

Visit our website at www.molex.com/applicationtooling

Doc No: ATS-6382789HM Revision: A Release Date: 09-21-16 Revision Date: 09-21-16

ПОСТАВКА ЭЛЕКТРОННЫХ КОМПОНЕНТОВ

многоканальный

Общество с ограниченной ответственностью «МосЧип» ИНН 7719860671 / КПП 771901001 Адрес: 105318, г.Москва, ул.Щербаковская д.3, офис 1107

Данный компонент на территории Российской Федерации Вы можете приобрести в компании MosChip.

Для оперативного оформления запроса Вам необходимо перейти по данной ссылке:

http://moschip.ru/get-element

Вы можете разместить у нас заказ для любого Вашего проекта, будь то серийное производство или разработка единичного прибора.

В нашем ассортименте представлены ведущие мировые производители активных и пассивных электронных компонентов.

Нашей специализацией является поставка электронной компонентной базы двойного назначения, продукции таких производителей как XILINX, Intel (ex.ALTERA), Vicor, Microchip, Texas Instruments, Analog Devices, Mini-Circuits, Amphenol, Glenair.

Сотрудничество с глобальными дистрибьюторами электронных компонентов, предоставляет возможность заказывать и получать с международных складов практически любой перечень компонентов в оптимальные для Вас сроки.

На всех этапах разработки и производства наши партнеры могут получить квалифицированную поддержку опытных инженеров.

Система менеджмента качества компании отвечает требованиям в соответствии с ГОСТ Р ИСО 9001, ГОСТ РВ 0015-002 и ЭС РД 009

Офис по работе с юридическими лицами:

105318, г. Москва, ул. Щербаковская д. 3, офис 1107, 1118, ДЦ «Щербаковский»

Телефон: +7 495 668-12-70 (многоканальный)

Факс: +7 495 668-12-70 (доб.304)

E-mail: info@moschip.ru

Skype отдела продаж:

moschip.ru moschip.ru_6 moschip.ru 4 moschip.ru 9