

3-Pin Hotswap Controller

Introduction

The Supertex HV100DB1 demo board contains all necessary circuitry to demonstrate the features of the HV100 hotswap controller. Intended primarily as a negative hotswap controller, the HV100 controls the negative supply path.

Included on board is a 100µF capacitor (C₃) to provide a capacitive load for testing. Additional capacitance may be connected to the V_{OUT-} terminals. Or the 100µF may be removed altogether


The board may be modified to meet custom requirements. Instructions are provided on the next page for modifications.

Specifications

Input Voltage	10V to 72V
Peak Inrush Limit	1.4A typ
Max Short Circuit Current ¹	4A typ
Circuit Breaker Response Time ¹	1ms typ
Auto Retry	2.5s typ
On Resistance	210mW_ max
Undervoltage Trip	37V on, 34V off

¹ During inrush limiting

Board Layout and Connections

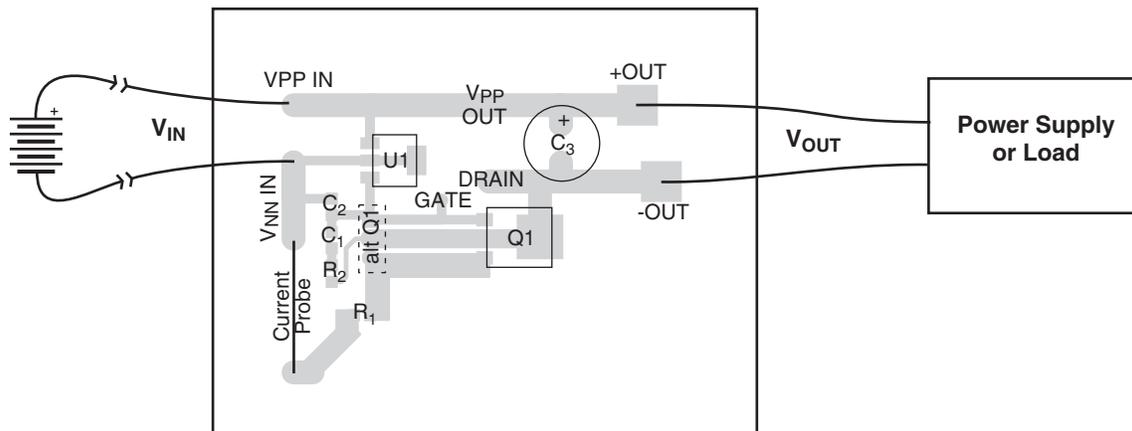

V_{IN}

Connect the supply voltage to these terminals. Supply voltage may range from 10 volts to 72 volts.

A high source impedance may cause oscillations when the input voltage is near the undervoltage trip point. A high source impedance results in a large voltage drop when loaded, causing undervoltage lockout to kick in, disconnecting the load. With the load removed, input voltage rises, causing undervoltage to release and reconnecting the load. The cycle repeats, resulting in oscillations. Source impedance must be less than the following to avoid oscillations:

$$R_{SOURCE} = \frac{1.5V}{I_{LOAD}}$$


V_{OUT}

Connect the power supply or other load to these terminals. V_{OUT+} is connected to V_{IN+}, it is V_{OUT-} that is switched.

Application of a DC load during start-up and/or additional load capacitance extends the time inrush limiting is active. If this time exceeds 100ms, the HV100 shuts off, retrying 2.5s later. For this reason, DC load at start-up should be less than 900mA. Note that DC start-up load limitation decreases with added load capacitance.

Note that the circuit breaker functions during inrush only.

HV100 Demo Board Schematic

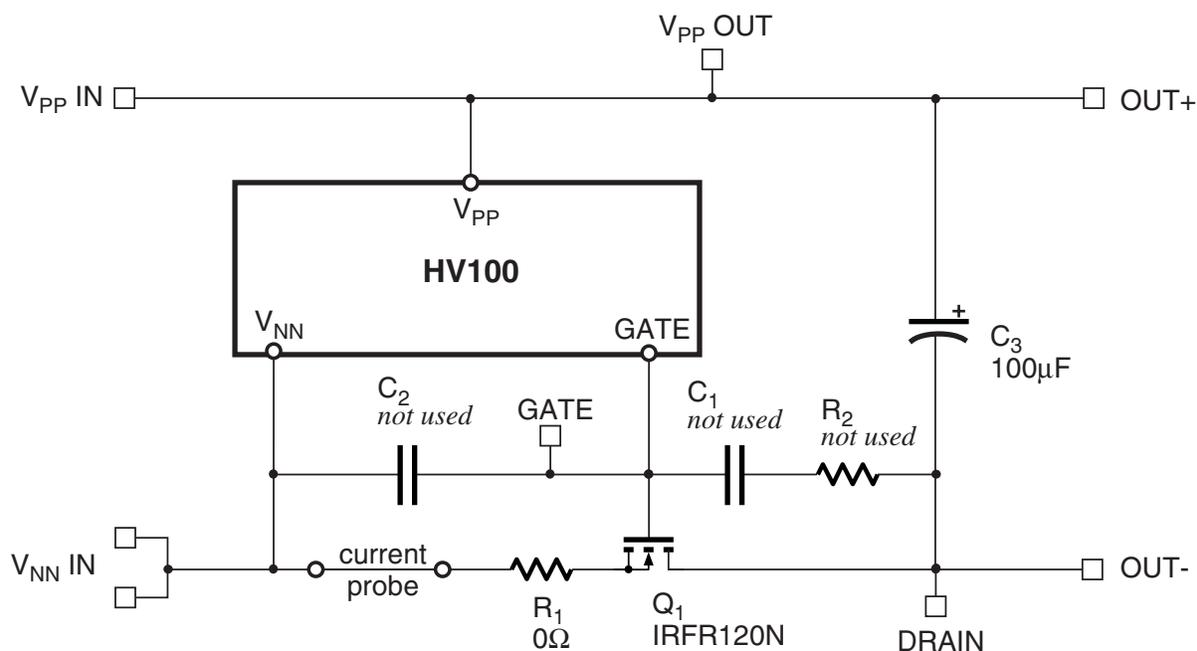

A very high dV/dt on the input can overload the HV100's internal gate clamp, causing turn-on transients. A capacitor in the C_2 position may be used to clamp the gate, preventing the transients. A 1nF value is usually adequate. Voltage rating should be 16 volts.

To limit short-at-turn-on current, zero-ohm resistor R_1 may be replaced with a low value resistor. This resistor causes a voltage drop that tends to cancel-out the applied gate voltage, thus limiting drain current.

To reduce peak inrush current, a capacitor from gate to drain (C_1) may be employed. A resistor (R_2) is also needed in this configuration for loop stability. Please refer to the HV100 data sheet for further information.

Note: When making positive-ground measurements, scope probe loading on the GATE pin may interfere with normal operation. To observe gate voltages, use negative-ground measurements.

This datasheet has been download from:

www.datasheetcatalog.com

Datasheets for electronics components.

Данный компонент на территории Российской Федерации

Вы можете приобрести в компании MosChip.

Для оперативного оформления запроса Вам необходимо перейти по данной ссылке:

<http://moschip.ru/get-element>

Вы можете разместить у нас заказ для любого Вашего проекта, будь то серийное производство или разработка единичного прибора.

В нашем ассортименте представлены ведущие мировые производители активных и пассивных электронных компонентов.

Нашей специализацией является поставка электронной компонентной базы двойного назначения, продукции таких производителей как XILINX, Intel (ex.ALTERA), Vicor, Microchip, Texas Instruments, Analog Devices, Mini-Circuits, Amphenol, Glenair.

Сотрудничество с глобальными дистрибьюторами электронных компонентов, предоставляет возможность заказывать и получать с международных складов практически любой перечень компонентов в оптимальные для Вас сроки.

На всех этапах разработки и производства наши партнеры могут получить квалифицированную поддержку опытных инженеров.

Система менеджмента качества компании отвечает требованиям в соответствии с ГОСТ Р ИСО 9001, ГОСТ РВ 0015-002 и ЭС РД 009

Офис по работе с юридическими лицами:

105318, г.Москва, ул.Щербаковская д.3, офис 1107, 1118, ДЦ «Щербаковский»

Телефон: +7 495 668-12-70 (многоканальный)

Факс: +7 495 668-12-70 (доб.304)

E-mail: info@moschip.ru

Skype отдела продаж:

moschip.ru

moschip.ru_4

moschip.ru_6

moschip.ru_9