

15V, 200mA Synchronous Buck-Boost DC/DC Converter with 1.3 μ A Quiescent Current

DESCRIPTION

Demonstration Circuit 1922A features the [LTC®3129](#), a high efficiency 200mA buck-boost DC/DC converter with a wide V_{IN} and V_{OUT} range.

The DC1922A demo board has two user selectable operating modes: Burst Mode® Operation and Fixed Frequency PWM (JP3). There is also an accurate programmable RUN pin which is used to ENABLE the converter (JP1). The LTC3129 also incorporates a maximum power point control function which can be enabled (JP2) for applications where the input source is a solar cell or is high impedance, such as intrinsically safe applications or high Z_{OUT} thermal electric generators (TEGs).

The DC1922A operates with a 2.42V to 15V input voltage range, and has been designed with the output voltage set to 5.0V. Once the converter is started the LTC3129 can operate with V_{IN} as low as 1.92V provided V_{CC} is back-fed. The demo board has optional provisions to back-feed V_{CC} (D1) in order to increase efficiency in some 5V

output applications, or to allow operation with V_{IN} down to 1.92V. Consult the data sheet for more information on these options.

The DC1922A demo board also incorporates a connector (J1) which can be used to connect to a Dust Networks Mote demo board.

Figure 1 shows typical demo board efficiency and Figure 2 shows typical step response.

The LTC3129 data sheet has detailed information about the operation, specification, and applications of the part. The data sheet should be read in conjunction with this quick start guide.

Design files for this circuit board are available at
<http://www.linear.com/demo>

LT, LT, LTC, LTM, Burst Mode, Linear Technology and the Linear logo are registered trademarks of Linear Technology Corporation. All other trademarks are the property of their respective owners.

PERFORMANCE SUMMARY

Specifications are at $T_A = 25^\circ\text{C}$


| PARAMETER | VALUE |
|------------------------|-------------------------------|
| Input Voltage Range | 2.42V to 15V |
| V_{OUT} | 5.0V |
| I_{OUT} (See Note 1) | 200mA, for $V_{IN} > V_{OUT}$ |
| Efficiency | See Figure 1 |

NOTE 1: The demo board output current is a function of V_{IN} . Please refer to the data sheet for more information.

DEMO MANUAL DC1922A

DESCRIPTION

DC1922A Efficiency vs Load, $V_{OUT} = 5V$

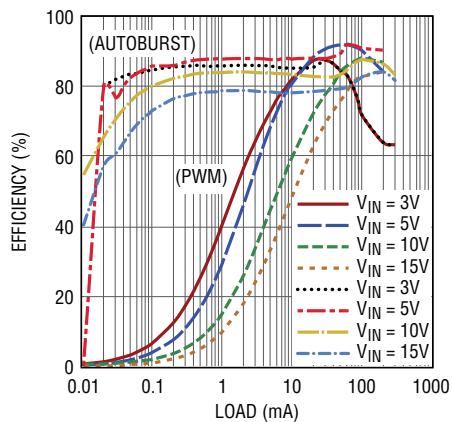

dc1922a F01

Figure 1. DC1922A Efficiency in AUTOBURST MODE

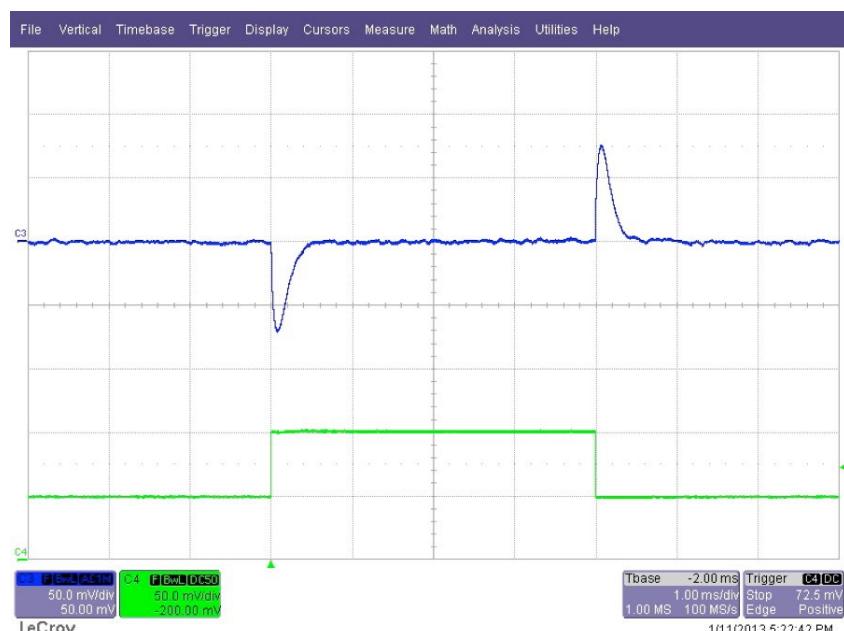


Figure 2. DC1922A Step Response

dc1922af

QUICK START PROCEDURE

Using short twisted pair leads for any power connections and with all loads and power supplies off, refer to Figure 3 for the proper measurement and equipment setup. The power supply (PS1) should not be connected to the circuit until told to do so in the procedure below.

When measuring the input or output voltage ripple, care must be taken to avoid a long ground lead on the oscilloscope probe. Measure the input or output voltage ripple by touching the probe tip directly across the V_{IN} or V_{OUT} and GND terminals (see Figure 4), or by using an oscilloscope probe tip jack.

1. Jumper, PS1 and LOAD settings to start:

PS1 = OFF

JP1 (RUN) = ON

JP2 (MPPC) = OFF

JP3 (PWM) = BURST MODE OPERATION

JP4 (DUST PWR) = NC

- With power OFF connect the power supply (PS1) as shown in Figure 3. If accurate current measurements are desired (for efficiency calculations for example) then connect an ammeter (AM1) in series with the supply as shown. The ammeter is not required however.
- Connect a 50mA load to V_{OUT} as shown in Figure 3 (100Ω for $V_{OUT} = 5V$). Connect an ammeter (AM2) if accurate current measurement or monitoring is desired.
- Turn on PS1 and slowly increase voltage until the voltage at V_{IN} is 4.0V.
- Verify V_{OUT} is $\sim 5.0V$.
- V_{IN} can now be varied between 2.42V and 15.0V. V_{OUT} should remain in regulation.

- Load current (I_{OUT}) can also be varied. The maximum I_{OUT} is a function of V_{IN} and the current limit. Consult the data sheet for more information on I_{OUT} vs V_{IN} . In general for $V_{IN} > V_{OUT}$ I_{OUT} can be increased to 200mA. For $V_{IN} < V_{OUT}$ I_{OUT} capability will be reduced.
- For operation in fixed frequency (PWM) mode move Jumper JP3 to FIXED FREQ. See the data sheet for more information on Burst Mode operation.
- NOTE: If V_{OUT} drops out of regulation, check to be sure that V_{IN} is not below the minimum value for regulation (see data sheet).

For USE with a Solar Cells/MPPC:

- With power OFF move jumper MPPC (JP2) to ON.
- If using a power supply as the source, place a minimum of 10Ω , 10W resistor in series with the input to simulate the source resistance. If using a solar cell (s) or high impedance source, no additional resistance should be needed.
- Set resistor R9 to a value which will set the MPPC pin to the desired voltage. See the data sheet section "Programming the MPPC Voltage" for more information.
- With no load and the MPPC voltage set, increase the source voltage above the MPPC set point. V_{OUT} should be in regulation. As the load is increased V_{IN} will drop until it reaches the MPPC set voltage. As the load is increased further, V_{OUT} will drop out of regulation, but V_{IN} will be regulated to the set point voltage. This is to prevent the input source from collapsing and to allow the maximum power to be extracted from the source.
- Consult the data sheet for more information on maximum power point control (MPPC) operation.

DEMO MANUAL DC1922A

QUICK START PROCEDURE

For USE with a DUST Networks MOTE demo board:

15. Connector J1 is designed to interface with a Dust Networks Mote demo board. Consult the Dust documentation for optimal V_{OUT} regulation setting. In general the Dust Networks Mote will operate with V_{OUT} set to 3.3V. However, care should be taken to not overvoltage the Mote. Newer Motes may require a different V_{OUT} . The DC1922A demo board can be configured for different V_{OUT} voltages by simply changing R2.
16. The DC1922A demo board can be configured for $V_{OUT} = 3.3V$ by changing resistor R2 to 1.1M for $R1 = 2M$.
17. Connect the DC1922A demo board to the power supply and with the power supply OFF connect DC1922A to the Dust Networks Mote demo board using J1. See Figure 5 and 6 for the proper connections and orientation. Move jumper JP4 to V_{OUT} .
18. Once the boards have been connected, turn on PS1 and increase the voltage to approximately 3V. V_{OUT} should now be in regulation. V_{IN} can now be varied over the operating range and V_{OUT} should remain in regulation.

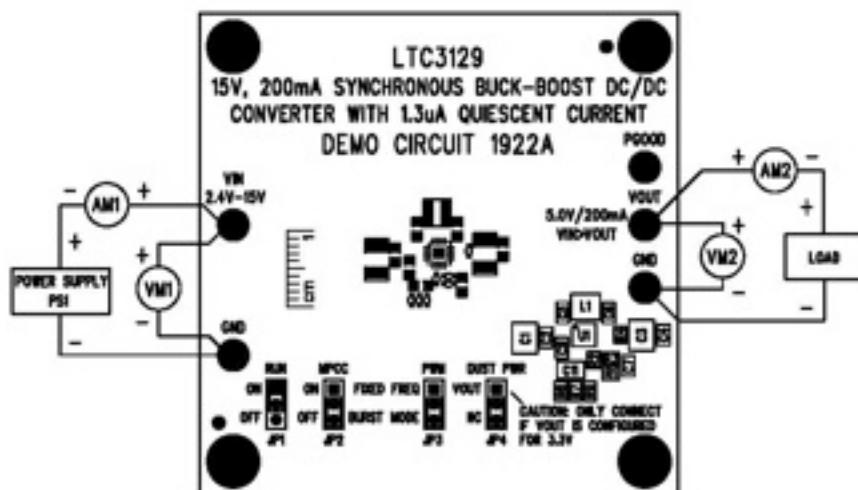


Figure 3. Proper Measurement Equipment Setup

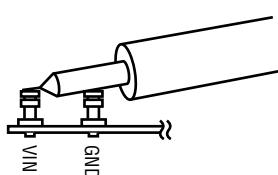


Figure 4. Measuring Input or Output Ripple

QUICK START PROCEDURE



Figure 5. DC1922A Connected to DC9003 Dust Mote (Top View)




Figure 6. DC1922A Connected to DC9003 Dust Mote (Bottom View)

DEMO MANUAL DC1922A

PARTS LIST

| ITEM | QTY | REFERENCE | PART DESCRIPTION | MANUFACTURER/PART NUMBER |
|---|-----|------------------------|--|---------------------------------|
| Required Circuit Components | | | | |
| 1 | 1 | C1 | CAP CER 22µF, 25V, X5R, 20%, 1210 | TDK, C3225X5R1E226M |
| 2 | 2 | C2, C4 | CAP CER 1.0µF, 25V, X5R, 20%, 0603 | TDK, C1608X5R1E105M |
| 3 | 1 | C3 | CAP CER 22µF, 10V, X5R, 20%, 1210 | TDK, C3225X5R1A226M |
| 4 | 2 | C5,C6 | CAP CER 22000pF, 50V, X7R, 10%, 0603 | TDK, C1608X7R1H223K |
| 5 | 1 | C7 | CAP CER 33pF, 50V, 5%, NPO 0603 | TDK, C1608C0G1H330J |
| 6 | 1 | C9 | CAP CER 2.2µF, 10V, X7R, 20%, 0603 | TDK, C1608X7R1A225M |
| 7 | 1 | C10 | CAP CER 10pF, 50V, NPO, ±0.25pF 0603 | TDK, C1608C0G1H100C |
| 8 | 1 | L1 | INDUCTOR, 10µH | COILCRAFT, EPL3015-103 |
| 9 | 1 | Q1 | N-CHANNEL MOSFET, 20V, SOT23 | DIODES/ZETEX, ZXMN2F30FHTA |
| 10 | 4 | R1, R4, R5, R6 | RES,CHIP, 2.0M, 1/16W, 1%, 0402 | VISHAY, CRCW04022M00FKED |
| 11 | 1 | R2 | RES, CHIP, 619k, 1/16W, 1%, 0402 | VISHAY, CRCW0402619KFED |
| 12 | 1 | R3 | RES, CHIP, 2.21k, 1/16W, 1%, 0402 | VISHAY, CRCW04022K21FKED |
| 13 | 1 | U1 | 15V, 200mA SYNCHRONOUS BUCK - BOOST DC / DC CONVERTER WITH 1.3µA QUIESCENT CURRENT | LINEAR TECHNOLOGY, LTC3129EUD |
| Additional Demo Board Circuit Components | | | | |
| 1 | 0 | C8 | CAP TANT 68µF, 20V, 10%, SMD 7343 (OPT) | OPT |
| 2 | 0 | C11 | CAP CER 6.3V, 0603 (OPT) | OPT |
| 3 | 0 | D1 | DIODE SCHOTTKY (OPT) | OPT |
| 4 | 0 | R7, R8, R9 | RES 1/10W, 1%, 0402 SMD (OPT) | OPT |
| Hardware: For Demo Board Only | | | | |
| 1 | 5 | E1, E2, E3, E4, E5 | TESTPOINT, TURRET 0.094" | MILLMAX 2501-2-00-80-00-00-07-0 |
| 2 | 1 | J1 | HEADER, 2 × 6, 12-PIN, SMT HORIZONTAL SOCKET W/KEY, 0.100" | SAMTEC, SMH-106-02-L-D-05 |
| 3 | 4 | JP1, JP2, JP3, JP4 | JMP, 0.079 SINGLE ROW HEADER, 3 PIN | SAMTEC, TMM-103-02-L-S |
| 4 | 4 | XJP1, XJP2, XJP3, XJP4 | SHUNT, .079" CENTER | SAMTEC, 2SN-BK-G |
| 5 | 4 | (STAND-OFFS) | STAND-OFF, NYLON 0.625" Tall | KEYSTONE, 8834(SNAP ON) |

SCHEMATIC DIAGRAM

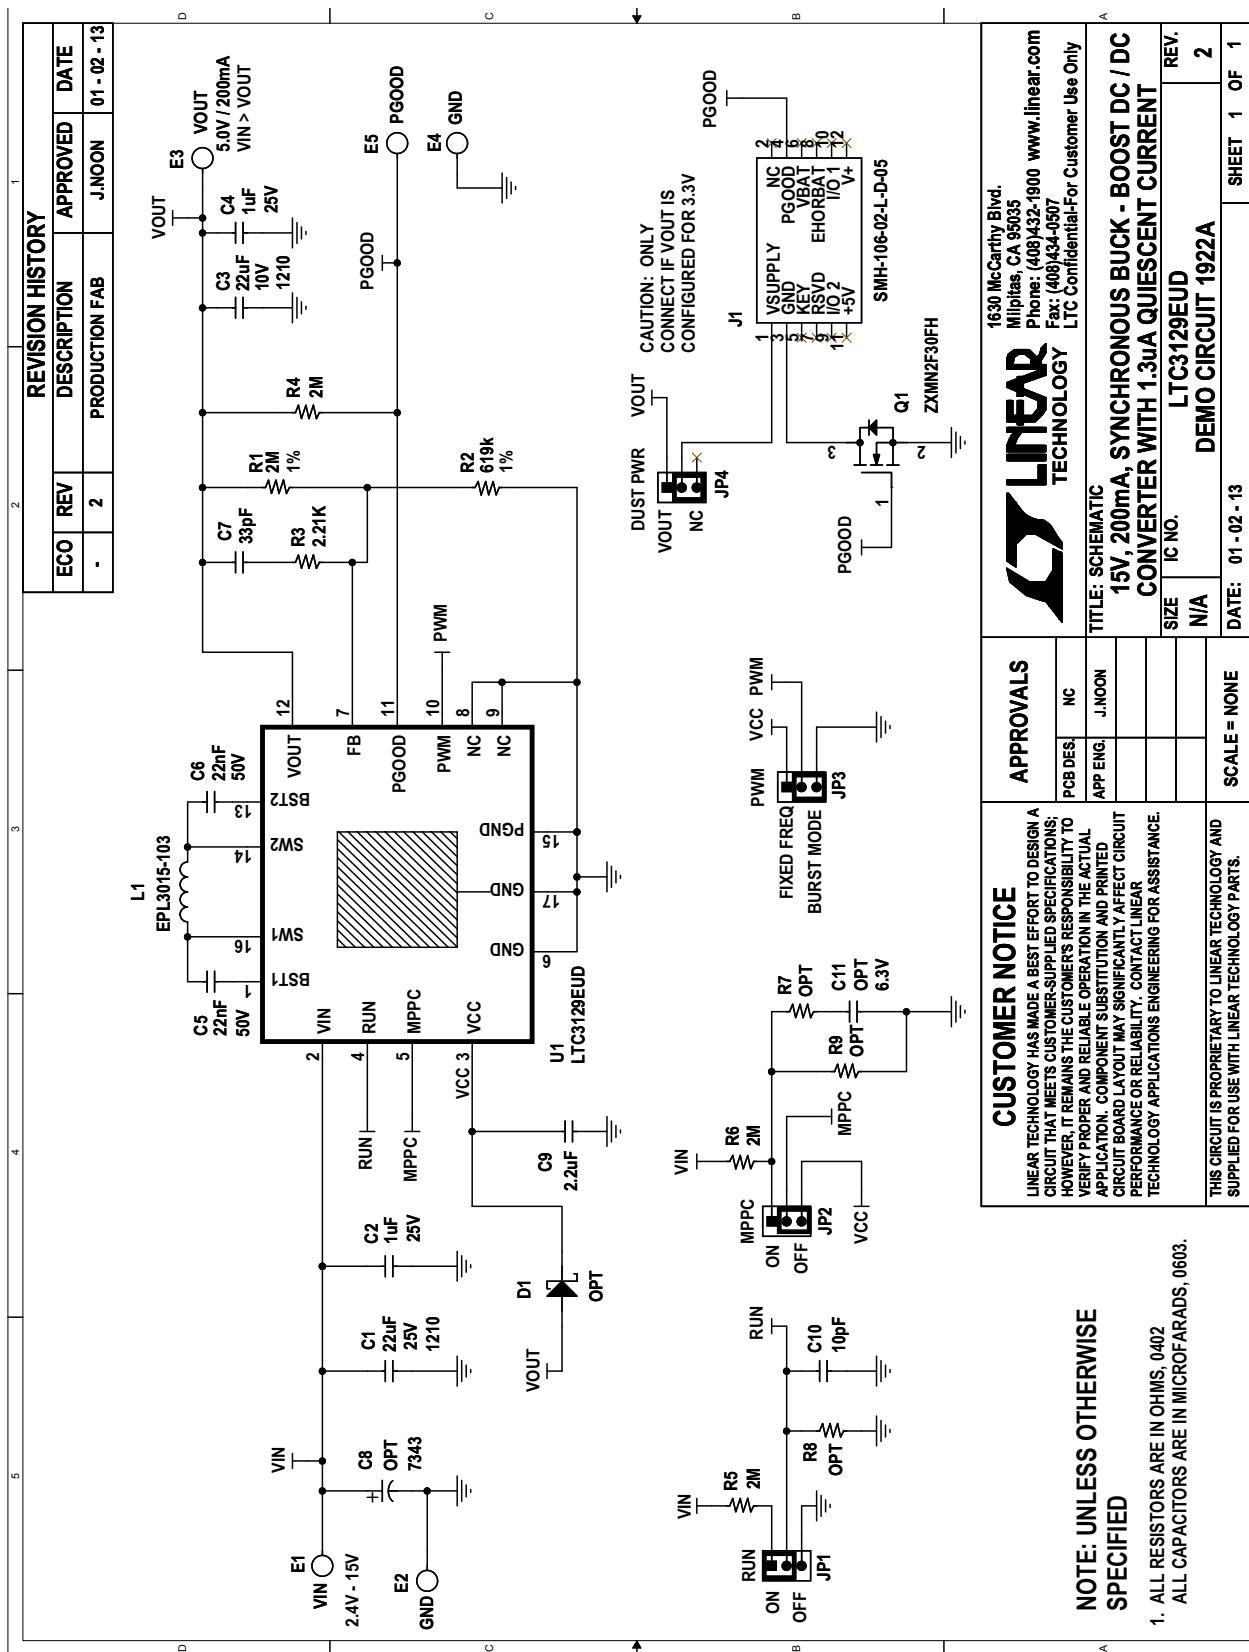

DEMO MANUAL DC1922A

DEMONSTRATION BOARD IMPORTANT NOTICE

Linear Technology Corporation (LTC) provides the enclosed product(s) under the following **AS IS** conditions:

This demonstration board (DEMO BOARD) kit being sold or provided by Linear Technology is intended for use for **ENGINEERING DEVELOPMENT OR EVALUATION PURPOSES ONLY** and is not provided by LTC for commercial use. As such, the DEMO BOARD herein may not be complete in terms of required design-, marketing-, and/or manufacturing-related protective considerations, including but not limited to product safety measures typically found in finished commercial goods. As a prototype, this product does not fall within the scope of the European Union directive on electromagnetic compatibility and therefore may or may not meet the technical requirements of the directive, or other regulations.

If this evaluation kit does not meet the specifications recited in the DEMO BOARD manual the kit may be returned within 30 days from the date of delivery for a full refund. **THE FOREGOING WARRANTY IS THE EXCLUSIVE WARRANTY MADE BY THE SELLER TO BUYER AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED, IMPLIED, OR STATUTORY, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE. EXCEPT TO THE EXTENT OF THIS INDEMNITY, NEITHER PARTY SHALL BE LIABLE TO THE OTHER FOR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES.**

The user assumes all responsibility and liability for proper and safe handling of the goods. Further, the user releases LTC from all claims arising from the handling or use of the goods. Due to the open construction of the product, it is the user's responsibility to take any and all appropriate precautions with regard to electrostatic discharge. Also be aware that the products herein may not be regulatory compliant or agency certified (FCC, UL, CE, etc.).

No license is granted under any patent right or other intellectual property whatsoever. **LTC assumes no liability for applications assistance, customer product design, software performance, or infringement of patents or any other intellectual property rights of any kind.**

LTC currently services a variety of customers for products around the world, and therefore this transaction **is not exclusive**.

Please read the DEMO BOARD manual prior to handling the product. Persons handling this product must have electronics training and observe good laboratory practice standards. **Common sense is encouraged.**

This notice contains important safety information about temperatures and voltages. For further safety concerns, please contact a LTC application engineer.

Mailing Address:

Linear Technology
1630 McCarthy Blvd.
Milpitas, CA 95035

Copyright © 2004, Linear Technology Corporation

dc1922af

Данный компонент на территории Российской Федерации**Вы можете приобрести в компании MosChip.**

Для оперативного оформления запроса Вам необходимо перейти по данной ссылке:

<http://moschip.ru/get-element>

Вы можете разместить у нас заказ для любого Вашего проекта, будь то серийное производство или разработка единичного прибора.

В нашем ассортименте представлены ведущие мировые производители активных и пассивных электронных компонентов.

Нашей специализацией является поставка электронной компонентной базы двойного назначения, продукции таких производителей как XILINX, Intel (ex.ALTERA), Vicor, Microchip, Texas Instruments, Analog Devices, Mini-Circuits, Amphenol, Glenair.

Сотрудничество с глобальными дистрибуторами электронных компонентов, предоставляет возможность заказывать и получать с международных складов практически любой перечень компонентов в оптимальные для Вас сроки.

На всех этапах разработки и производства наши партнеры могут получить квалифицированную поддержку опытных инженеров.

Система менеджмента качества компании отвечает требованиям в соответствии с ГОСТ Р ИСО 9001, ГОСТ Р В 0015-002 и ЭС РД 009

Офис по работе с юридическими лицами:

105318, г.Москва, ул.Щербаковская д.3, офис 1107, 1118, ДЦ «Щербаковский»

Телефон: +7 495 668-12-70 (многоканальный)

Факс: +7 495 668-12-70 (доб.304)

E-mail: info@moschip.ru

Skype отдела продаж:

moschip.ru

moschip.ru_4

moschip.ru_6

moschip.ru_9