


# Tool Kit Order No. 63825-6270



# **Application Tooling Specification Sheet**

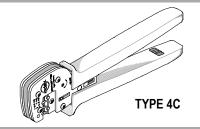

Hand Crimp Tool Order No. 63825-6200


#### **FEATURES**

- A full cycle ratcheting hand tool ensures complete crimps
- Ergonomically designed soft handles
- Precisely designed crimping profiles with simple contact positioning
- Easy handling due to outstanding force ratio
- Tool kits are easily installed into the Hand Crimp Tool or the 63816-0300 Power Crimp Head which is installed into the 63816-0200 (110 V) or the 63816-0250 (220 V) Battery Powered Tool.
- Many different Tool kits can be used with a single Battery Powered Tool.
- This tool is IPC/WHMA-A-620 Class 2 and RoHS compliant.

#### **SCOPE**

Products: CSP 6.3 Receptacle Terminal, 0.75mm<sup>2</sup> and 1.00mm<sup>2</sup> metric wires.

Terminal Series No.	Terminal Order No.	Wire Size		Insulation Diameter (Ref)		Strip Length	
Terminal Series No.	<b>★Reel Form Only</b>	Wire Style	mm²	mm	ln.	mm	ln.
98891	98891-1014	IR	0.75	1.70-1.90	.067075	5.50	.217
		IR	1.0	1.99-2.15	.078085		
*Customer to cut off terminal from reel: 0.30mm (.012") maximum Cut-off Tab.							

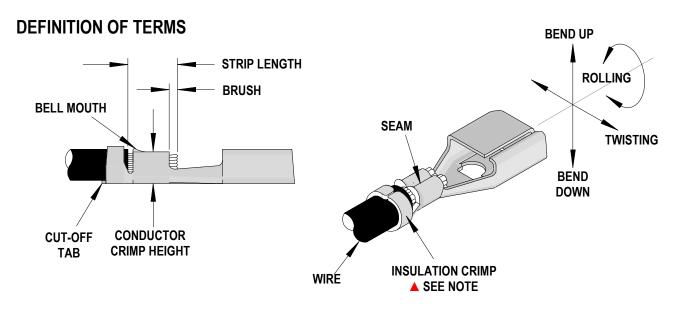

## ▲ Insulation Crimp Note:

Due to the terminal's insulation grip design and/or insulation diameter range, this tool uses "overlap" form geometry in the insulation punch. This produces an overlap insulation crimp (A620 – compliant). While the insulation punch profile may appear "lopsided", this is a normal condition for this tool. See figure to the right. (Some tools with multiple crimp pockets may not have the "overlap" profile on all pockets).

# OVERLAP FORM GEOMETRY OVERLAP INSULATION CRIMP ANVIL

#### **CONDITIONS:**

After crimping, the conductor profiles should measure the following (see notes below).

Terminal Series No.	Bell n	nouth	Conduct	or Brush	Bend up Bend Down Twis		Twist F	t Roll	
Terminal Series No.	mm	ln.	mm	ln.	Degree N	/laximum	Degree Max	ximum	
98891	0.20-0.40	.008016	0.20-1.80	.008070	3	3	3	10	

	Wire Cine		Conductor Crimp				
Terminal Series No.	Wire Size	Height		Width		Profile	
	mm²	mm	ln.	mm	ln.	Α	В
98891	0.75	1.42-1.48	.056058	2.20-2.30	.087091	Χ	
90091	1.00	1.47-1.53	.056060	2.20-2.30	.087091		Χ

Terminal Series No.	Wire Size		Insulatio	n Crimp	Pull Force		
	Wile Size	Hei	ght	Width M	aximum	Minimum	
	mm <sup>2</sup>	mm	ln.	mm	ln.	N	Lb.
98891	0.75	2.25-2.45	.089096	2.60-2.70	.102106	85.0	19.11
	1.00	2.35-2.55	.093-1.00	2.60-2.70	.102106	108.0	24.28

#### **Tool Qualification Notes:**

- 1. Pull Force should be measured with no influence from the insulation crimp.
- 2. The above specifications are guidelines to an optimum crimp.


#### Note:

A crimp height chart is provided with this manual as <u>Reference Only.</u> Due to the wide range of wires, strands, insulation diameters, and durometers, actual crimp height measurements may very slightly. An occasional, destructive, pull force test should be preformed to check hand tool crimp. Pull Force value <u>must</u> exceed the minimum pull force specifications listed.

**CAUTION:** Install only Molex terminals listed above with this tool. Do not crimp hardened objects as damage can occur to the tool or die.

#### INSTALLATION

To install the Tool Kit into the Power Crimp Head follow the steps below:

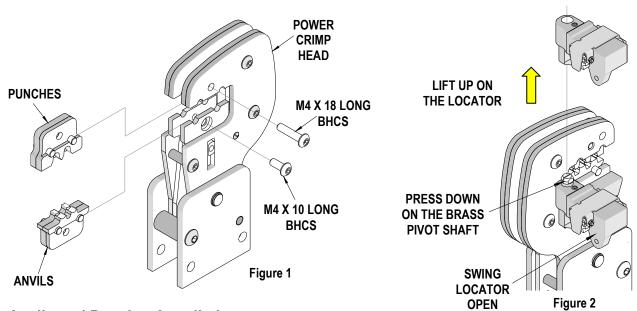

#### **Anvils and Punches Installation**

- 1. Insert the Anvils into the bottom slots of the nest. Install the M4 x 10 long BHCS and tighten in place.
- 2. Insert the Punches into the top slots of the nest. Install the M4 x 18 long BHCS and tighten in place. See Figure 1.

#### Locator Installation and Removal

Follow the steps below to install or replace the locator. See Figure 2.

#### To install the locator


1. Position the locator with the hole over the brass pivot shaft and snap it into place.

#### To remove the locator

- 1. Open the crimp hand tool.
- 2. Swing the existing locator open and away from the hand tool.
- 3. Firmly press down on the brass pivot shaft with your thumb, while pulling the locator up. Slip the locator off the top of the brass pivot shaft.

#### OPERATION


Open the tool by squeezing the handles together, at the end of the closing stroke, the ratchet mechanism will release the handles, and the hand tool will spring open.

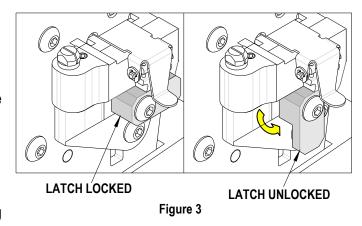


# **Crimping Terminals**

- 1. Select the desired terminal listed in the preceding charts.
- 2. Turn the Locator Lock Latch down to unlock. See Figure 3.
- 3. Swing the terminal locator away from the crimp tool as shown in Figure 4.
- 4. Press down on the wire stop on the locator and insert the proper terminal into the nest opening
- 5. Return the locator to its original position.

Doc No: ATS-6382562HM Release Date: 10-21-13 **UNCONTROLLED COPY** Page 3 of 8 Revision: A Revision Date: 10-21-13

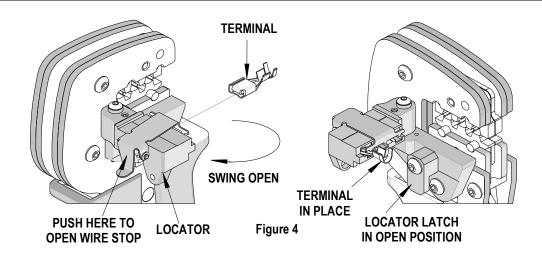

- 6. Turn the Locator Lock Latch up to lock. Make sure that the terminal is visually centered over the punch.
- 7. Insert the proper wire over the terminal.
- 8. Gently touch the end of the wire against the wire stop in the locator. See Figures 5 and 6.

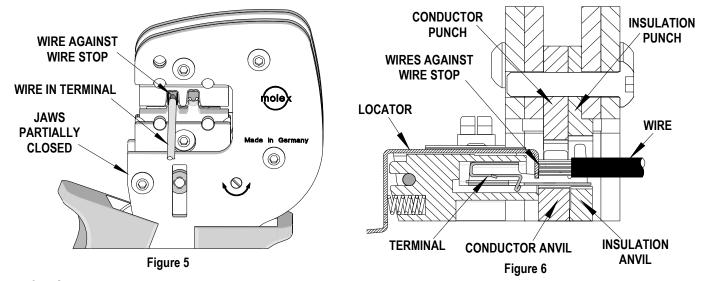

- Compress the terminal by squeezing the tool handles until the ratchet mechanism cycle has been completed. Release handles to open the jaws.
- 10. Remove the crimped terminal from the terminal locator by pressing down on the wire stop and gently pulling on the wire. The terminal locator can be in either position.
- 11. Visually inspect the crimped terminal for proper crimp location.

Note: The tamper proof ratchet action will not release the tool until it has been fully closed.

# For the Battery Power Tool:

- 1. Cycle the Battery Power Tool to crimp the terminal to the wire.
- 2. Remove the crimped terminal from the terminal locator by pressing down on the wire stop and gently pulling on the wire. The terminal locator can be in either position.
- 3. Visually inspect the crimped terminal for proper crimp location.

Doc No: ATS-6382562HM Release Date: 10-21-13 **UNCONTROLLED COPY** Page 4 of 8 Revision: A Revision Date: 10-21-13

# Maintenance

It is recommended that each operator of the tool be made aware of, and responsible for, the following maintenance steps:

- Remove dust, moisture and other contaminants with a clean brush, or soft, lintfree cloth.
- 2. Do not use any abrasive materials that could damage the tool.
- Make certain all pins; pivot points and bearing surfaces in the tool head are protected with a thin coat of high quality machine oil. Do not oil excessively. This

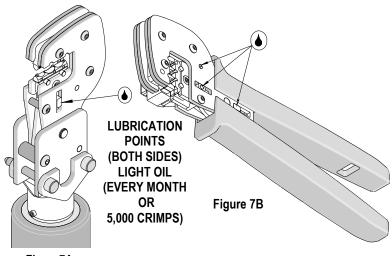


Figure7A

- machine oil. Do not oil excessively. This tool was engineered for durability, but like any fine piece of equipment, it needs cleaning and lubrication for a maximum service life of trouble-free crimping. The use of light oil, such as 30 weight automotive oil, every 5,000 crimps or monthly, will significantly enhance the tool life and ensure a stable calibration. See Figure 7A or 7B for lubrication points.
- 4. Store the tool in a clean and dry area when not in use.

# Miscrimps or Jams for Crimp Hand Tools Only (See Figure 10)

Should this tool ever become stuck or jammed in a partially closed position, **Do Not** force the handles open or closed. The tool will open easily by rotating the small slotted screw marked with an arrow. See Figure 10.

# Warranty

This tool kit is for electrical terminal crimping purposes only. This tool kit is made of the best quality materials. All vital components are long life tested. All tools are warranted to be free of manufacturing defects for a period of 30 days. Should such a defect occur, we will repair or exchange the tool kit free of charge. This repair or exchange will not be applicable to altered, misused, or damaged tools.

**CAUTION**: Molex crimp specifications are valid only when used with Molex terminals and tooling.

### **CAUTIONS**

- 1. Manually powered hand tools are intended for low volume or field repair. This tool is NOT intended for production use. Repetitive use of this tool should be avoided.
- 2. Insulated rubber handles are not protection against electrical shock.
- 3. Wear eye protection at all times.
- 4. Use only the Molex terminals specified for crimping with this tool.

**CAUTION:** Repetitive use of this tool should be avoided.

#### Certification


Molex does not certify or re-certify commercial grade hand tools but rather supplies the following guidelines for customers to re-certify hand tools.

Doc No: ATS-6382562HM Release Date: 10-21-13 **UNCONTROLLED COPY** Page 5 of 8 Revision: A Revision Date: 10-21-13

- This tool is qualified to pull force only. To re-certify, crimp a terminal to a wire, which has been stripped 12.7mm (1/2") long, so there is no crimping of the insulation. Pull the terminal and wire at a rate no faster than 25mm (1.00") per minute. See the Molex web site for the Quality Crimp Handbook for more information on pull testing.
- When the hand tool is no longer capable of achieving minimum pull force, it should be taken out of service and replaced.
- This tool is very difficult to disassemble and reassemble. Customer repair is not recommended.

The chart below shows all applications for this Tool Kit.

Tool Kit Order No.	Tool Order No.	Tool Description	Power Head Order No.	Adapter Description	Figure No.
63825-6270	63810-1050	Hand Crimp Frame (Short)	N/A	N/A	8
	63810-1000	Hand Crimp Frame (Long)	N/A	N/A	8
	63816-0200	Battery Power Tool (110 V)	63816-0300	Power Crimp Head	9
	63816-0250	Battery Power Tool (220 V)	63816-0300	Power Crimp Head	9

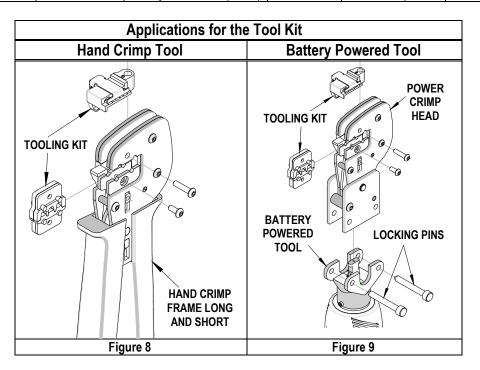

**WARNING**: *NEVER* operate service, install tool kits, or adjust the Power Crimp Head without proper instruction and without first reading and understanding the instructions in the proper Manual or Specification Sheet. See Chart above for the correct Manual or Specification Sheet.

**WARNING**: *NEVER* install tooling or service this tool while it is into any power source. Make sure the power is turned off.


**CAUTION:** Keep fingers away from the crimping area when operating this tool. It may cause severe injury.

**CAUTION:** Wear safety glasses when operating or serving this tool.

Doc No: ATS-6382562HM Release Date: 10-21-13 **UNCONTROLLED COPY** Page 6 of 8 Revision: A Revision Date: 10-21-13


# HAND TOOL PARTS LIST

Item Number	Order Number	Description	Quantity
1	63810-1000	Hand Crimp Frame (Long)	1
2	63825-6270	Tool Kit with Locator	1
3	63823-0573	Locator Base	1
4	63825-6275	Locator (only)	REF

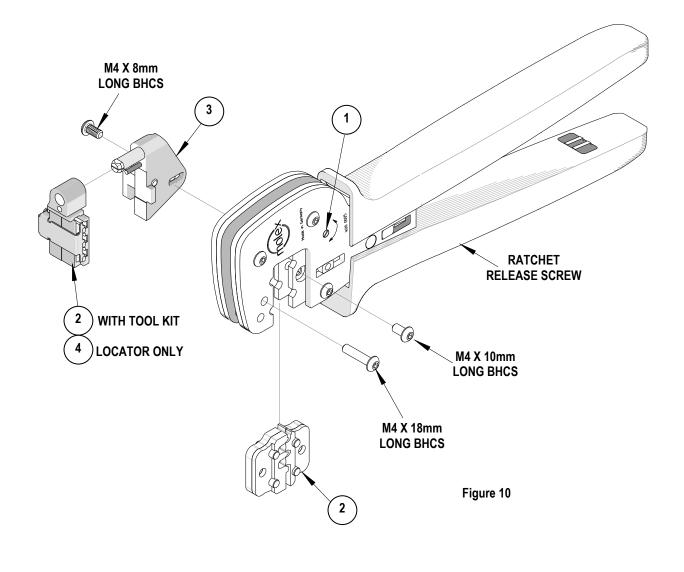

# **POWER HEAD PARTS LIST**

It	em	Order No	Engineering No.	Description	Quantity
1	1	63816-0300	63816-0300	Power Crimp Head	1
2	2	63825-6270	63825-6270	Tool Kit	1

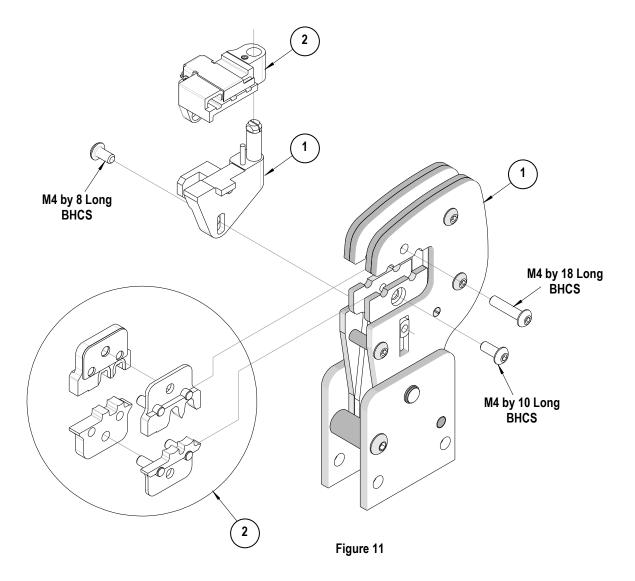

Visit our Web site at http://www.molex.com

# **ПОСТАВКА** ЭЛЕКТРОННЫХ КОМПОНЕНТОВ

Общество с ограниченной ответственностью «МосЧип» ИНН 7719860671 / КПП 771901001 Адрес: 105318, г.Москва, ул.Щербаковская д.3, офис 1107

# Данный компонент на территории Российской Федерации Вы можете приобрести в компании MosChip.

Для оперативного оформления запроса Вам необходимо перейти по данной ссылке:

## http://moschip.ru/get-element

Вы можете разместить у нас заказ для любого Вашего проекта, будь то серийное производство или разработка единичного прибора.

В нашем ассортименте представлены ведущие мировые производители активных и пассивных электронных компонентов.

Нашей специализацией является поставка электронной компонентной базы двойного назначения, продукции таких производителей как XILINX, Intel (ex.ALTERA), Vicor, Microchip, Texas Instruments, Analog Devices, Mini-Circuits, Amphenol, Glenair.

Сотрудничество с глобальными дистрибьюторами электронных компонентов, предоставляет возможность заказывать и получать с международных складов практически любой перечень компонентов в оптимальные для Вас сроки.

На всех этапах разработки и производства наши партнеры могут получить квалифицированную поддержку опытных инженеров.

Система менеджмента качества компании отвечает требованиям в соответствии с ГОСТ Р ИСО 9001, ГОСТ РВ 0015-002 и ЭС РД 009

## Офис по работе с юридическими лицами:

105318, г. Москва, ул. Щербаковская д. 3, офис 1107, 1118, ДЦ «Щербаковский»

Телефон: +7 495 668-12-70 (многоканальный)

Факс: +7 495 668-12-70 (доб.304)

E-mail: info@moschip.ru

Skype отдела продаж:

moschip.ru moschip.ru\_6 moschip.ru 4 moschip.ru 9