


AMP SEATING TOOL 58279
 -1 (268 POSN, 67 per Row)
 -2 (100 POSN, 25 per Row)
 -3 (240 POSN, 60 per Row)
 -4 (120 POSN, 30 per Row)
 -5 (180 POSN, 45 per Row)
 -6 (300 POSN, 75 per Row)
 -7 (260 POSN, 65 per Row)
 -8 (128 POSN, 32 per Row)
 -9 (140 POSN, 35 per Row)

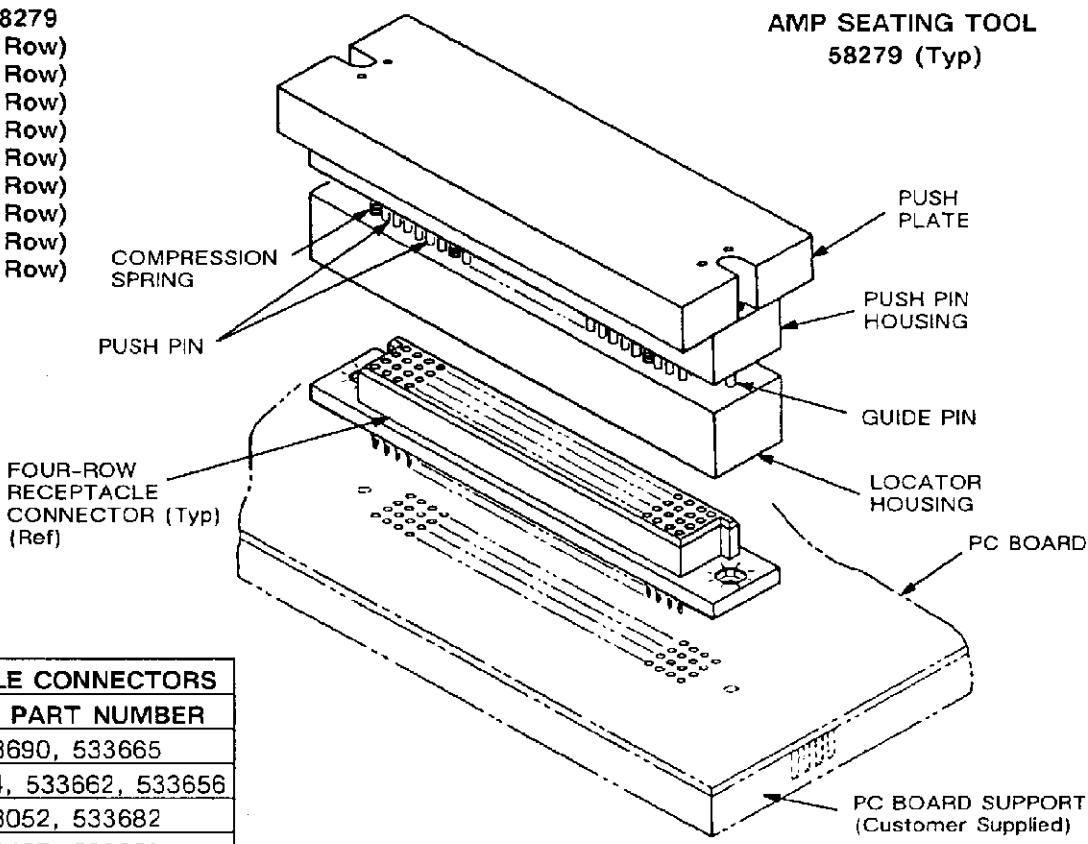

FOUR-ROW RECEPTACLE CONNECTORS	
POST LENGTH	BASE PART NUMBER
.733	533690, 533665
.550	533694, 533662, 533656
.375	533052, 533682
.250	533427, 533659

Fig. 1

1. INTRODUCTION


This instruction sheet (IS) covers the application and maintenance of AMP Seating Tools with base part number 58279 shown in Figure 1. The tools are used to seat four-row receptacle connectors, loaded with ACTION PIN contacts on .100 by .100 centerlines, into printed circuit (pc) boards. Four-row connectors are designed with 100 to 300 contact positions and a choice of three post lengths. Note that each tool dash number is assigned to a specific connector size (any post length) and can only be used to seat that size. Contact AMP Incorporated concerning additional seating tool sizes. Read these instructions carefully before using the tool.

NOTE

All dimensions on this instruction sheet are in inches.

NOTE

MAKE SURE that the tool dash number corresponds to the correct connector size. For example, a seating tool with 100 push pins should be used to seat only a 100-position connector.

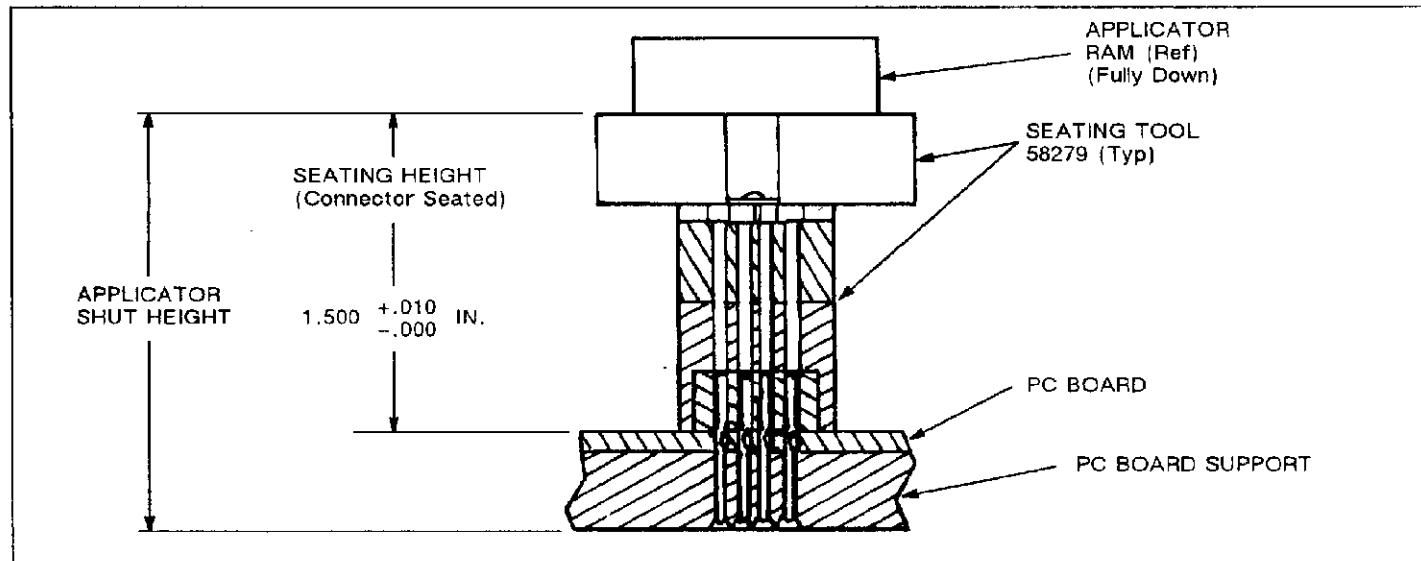

NOTE: IN FIGURE 2, SHUT HEIGHT EQUALS SEATING HEIGHT PLUS THICKNESS OF PC BOARD AND PC BOARD SUPPORT.

Fig. 2

3. REQUIREMENTS

A. PC Board Support (Customer Supplied)

A pc board fixture is required to ensure that: 1) each connector is aligned with the tool during the seating process, and 2) posts are protected during the procedures. Fixtures are not furnished by AMP, and must be supplied by the customer.

B. Application Tooling

The seating tool shown in Figure 1 is designed for use in AMP applicator assemblies, or similar manual applicators with sufficient ram surface and capability of applying an insertion force of 40 pounds (max) per contact post. A pneumatic machine can also be used, provided the machine is equipped with positive shut-height stops.

C. Seating Height

Seating height — the distance from the bottom surface of the ram to the top of the pc board when the ram is DOWN — must be set at 1.50 in. before starting the seating procedure. See Figure 2.

4. SEATING PROCEDURE

When setting up equipment to seat connectors, pay particular attention to the following:

- Make sure that the number of rows and positions in the connector is identical to the number of rows and push pins in the tool.
- Be sure that the seating tool and connector are properly aligned before cycling the application tooling.

CAUTION

If tool and connector are incompatible or improperly aligned in the equipment, damage could occur to tooling, connector, or both.

After the tool has been installed and the equipment has been set up with the pc board fixture in place, proceed as follows:

1. Place a pc board with proper hole pattern onto board support fixture.
2. Insert contact posts of connector(s) into the board until the compliant pin areas of the post start to enter the board holes.
3. Position the locator housing of the tool over the connector to be seated.
4. Center the tool and connector under the push surface of the ram.
5. Lower the ram slowly and verify alignment of the tool to the connector.
6. Apply force to the tool push plate to seat the connector to the pc board. (The tool will compress and the push pins will seat the contact posts into the pc board.)
7. Manually retract the ram, and carefully remove the seating tool.
8. Continue seating connectors as described in Steps 3 through 7 until all connectors have been seated.
9. Remove pc board with seated connectors from pc board fixture.

This completes the seating procedure.

5. TOOL INSPECTION

Each seating tool is assembled and inspected before shipment. AMP recommends that the tool be inspected immediately upon its arrival in your plant to ensure that it has not been damaged during shipment, and that it conforms to the dimensions given in Figure 3.

6. MAINTENANCE/QUALITY CONTROL

A. Daily Maintenance

It is recommended that each operator be made aware of, and responsible for, the following steps of daily maintenance:

1. Remove dust, moisture, and other contaminants with a clean, soft brush or lint-free cloth. Do NOT use objects that could damage the push pins or other tool components.
2. Ensure that the proper pins and rings are in place and secured.
3. When the tool is not in use, store it in a clean, dry area.

B. Periodic Inspection


Regular inspections should be performed by quality control personnel. A record of scheduled inspections should remain with the tool or be supplied to supervisory personnel responsible for the tool. The inspection frequency should be based on the amount of use, working conditions, operator training and skill, and established company standards.

7. REPAIR

The parts listed in Figure 3 are customer-replaceable. A complete inventory may be stocked and controlled to prevent lost time when replacement of parts becomes necessary. The tool may also be returned to AMP for evaluation and repair, if desired. For repairs, send the tool with a written description of the problem to:

AMP Incorporated
Customer Repair
1523 North 4th Street
Harrisburg, PA 17102-1604

or a wholly-owned subsidiary of AMP Incorporated.

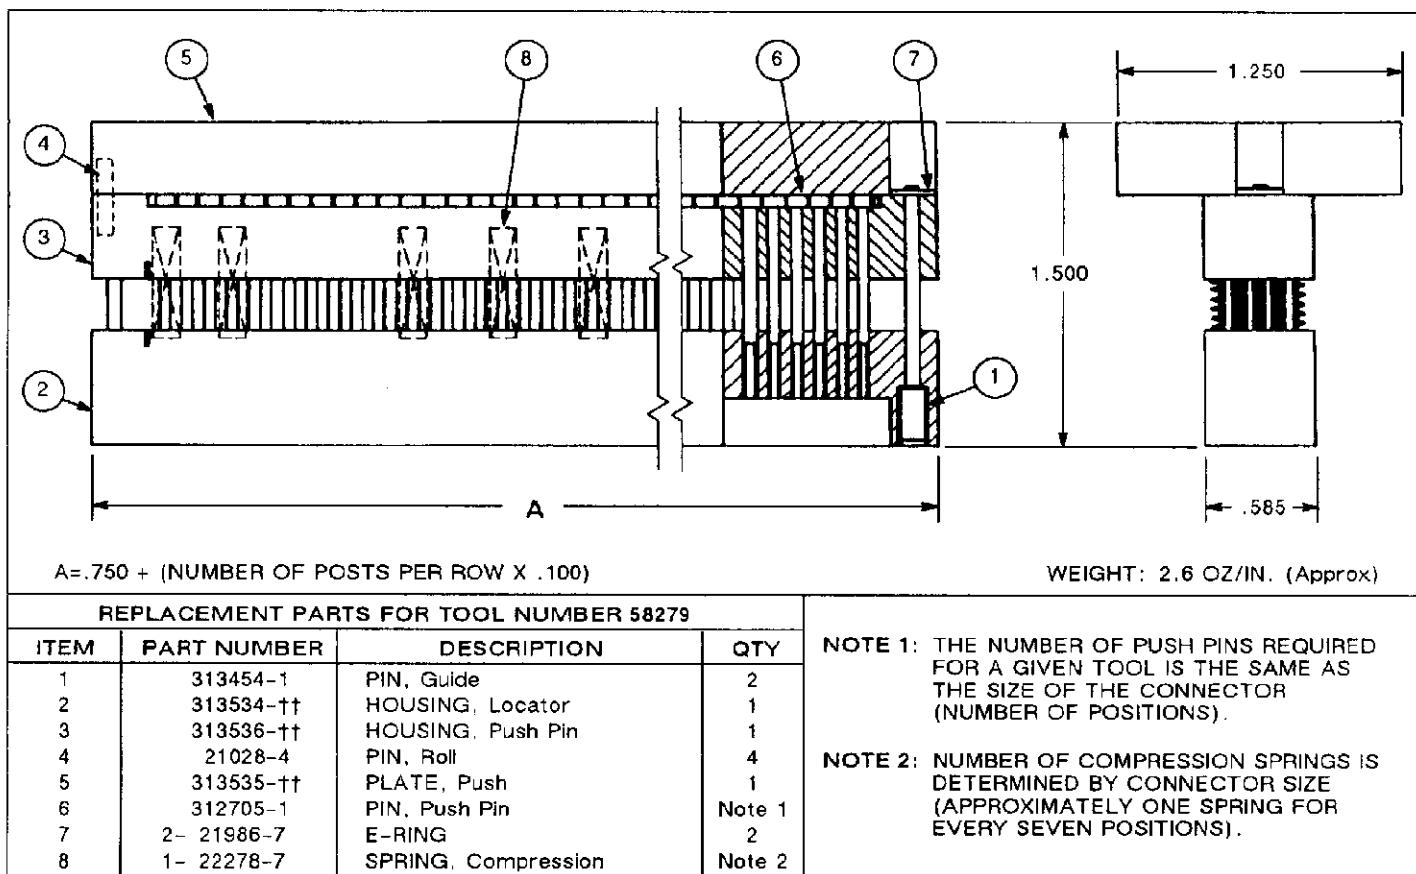

†† ITEM DASH NUMBER IS THE SAME AS TOOL DASH NUMBER:-1, -2, OR -3, FOR EXAMPLE, CONTACT AMP INCORPORATED CONCERNING ADDITIONAL TOOL DASH NUMBERS AND CONNECTOR SIZES.

Fig. 3

Данный компонент на территории Российской Федерации**Вы можете приобрести в компании MosChip.**

Для оперативного оформления запроса Вам необходимо перейти по данной ссылке:

<http://moschip.ru/get-element>

Вы можете разместить у нас заказ для любого Вашего проекта, будь то серийное производство или разработка единичного прибора.

В нашем ассортименте представлены ведущие мировые производители активных и пассивных электронных компонентов.

Нашей специализацией является поставка электронной компонентной базы двойного назначения, продукции таких производителей как XILINX, Intel (ex.ALTERA), Vicor, Microchip, Texas Instruments, Analog Devices, Mini-Circuits, Amphenol, Glenair.

Сотрудничество с глобальными дистрибуторами электронных компонентов, предоставляет возможность заказывать и получать с международных складов практически любой перечень компонентов в оптимальные для Вас сроки.

На всех этапах разработки и производства наши партнеры могут получить квалифицированную поддержку опытных инженеров.

Система менеджмента качества компании отвечает требованиям в соответствии с ГОСТ Р ИСО 9001, ГОСТ Р В 0015-002 и ЭС РД 009

Офис по работе с юридическими лицами:

105318, г.Москва, ул.Щербаковская д.3, офис 1107, 1118, ДЦ «Щербаковский»

Телефон: +7 495 668-12-70 (многоканальный)

Факс: +7 495 668-12-70 (доб.304)

E-mail: info@moschip.ru

Skype отдела продаж:

moschip.ru
moschip.ru_4

moschip.ru_6
moschip.ru_9