

MCP1662 LED Driver Evaluation Board User's Guide

Note the following details of the code protection feature on Microchip devices:

- Microchip products meet the specification contained in their particular Microchip Data Sheet.
- Microchip believes that its family of products is one of the most secure families of its kind on the market today, when used in the intended manner and under normal conditions.
- There are dishonest and possibly illegal methods used to breach the code protection feature. All of these methods, to our knowledge, require using the Microchip products in a manner outside the operating specifications contained in Microchip's Data Sheets. Most likely, the person doing so is engaged in theft of intellectual property.
- Microchip is willing to work with the customer who is concerned about the integrity of their code.
- Neither Microchip nor any other semiconductor manufacturer can guarantee the security of their code. Code protection does not
 mean that we are guaranteeing the product as "unbreakable."

Code protection is constantly evolving. We at Microchip are committed to continuously improving the code protection features of our products. Attempts to break Microchip's code protection feature may be a violation of the Digital Millennium Copyright Act. If such acts allow unauthorized access to your software or other copyrighted work, you may have a right to sue for relief under that Act.

Information contained in this publication regarding device applications and the like is provided only for your convenience and may be superseded by updates. It is your responsibility to ensure that your application meets with your specifications. MICROCHIP MAKES NO REPRESENTATIONS OR WARRANTIES OF ANY KIND WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL, STATUTORY OR OTHERWISE, RELATED TO THE INFORMATION. INCLUDING BUT NOT LIMITED TO ITS CONDITION, QUALITY, PERFORMANCE, MERCHANTABILITY OR FITNESS FOR PURPOSE. Microchip disclaims all liability arising from this information and its use. Use of Microchip devices in life support and/or safety applications is entirely at the buyer's risk, and the buyer agrees to defend, indemnify and hold harmless Microchip from any and all damages, claims, suits, or expenses resulting from such use. No licenses are conveyed, implicitly or otherwise, under any Microchip intellectual property rights.

Trademarks

The Microchip name and logo, the Microchip logo, dsPIC, FlashFlex, flexPWR, JukeBlox, KEELoQ, KEELoQ logo, Kleer, LANCheck, MediaLB, MOST, MOST logo, MPLAB, OptoLyzer, PIC, PICSTART, PIC³² logo, RightTouch, SpyNIC, SST, SST Logo, SuperFlash and UNI/O are registered trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

The Embedded Control Solutions Company and mTouch are registered trademarks of Microchip Technology Incorporated in the U.S.A.

Analog-for-the-Digital Age, BodyCom, chipKIT, chipKIT logo, CodeGuard, dsPICDEM, dsPICDEM.net, ECAN, In-Circuit Serial Programming, ICSP, Inter-Chip Connectivity, KleerNet, KleerNet logo, MiWi, MPASM, MPF, MPLAB Certified logo, MPLIB, MPLINK, MultiTRAK, NetDetach, Omniscient Code Generation, PICDEM, PICDEM.net, PICkit, PICtail, RightTouch logo, REAL ICE, SQI, Serial Quad I/O, Total Endurance, TSHARC, USBCheck, VariSense, ViewSpan, WiperLock, Wireless DNA, and ZENA are trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

 $\ensuremath{\mathsf{SQTP}}$ is a service mark of Microchip Technology Incorporated in the U.S.A.

Silicon Storage Technology is a registered trademark of Microchip Technology Inc. in other countries.

GestIC is a registered trademarks of Microchip Technology Germany II GmbH & Co. KG, a subsidiary of Microchip Technology Inc., in other countries.

All other trademarks mentioned herein are property of their respective companies.

© 2014, Microchip Technology Incorporated, Printed in the U.S.A., All Rights Reserved.

ISBN: 978-1-63276-351-8

QUALITY MANAGEMENT SYSTEM CERTIFIED BY DNV = ISO/TS 16949=

Microchip received ISO/TS-16949:2009 certification for its worldwide headquarters, design and wafer fabrication facilities in Chandler and Tempe, Arizona; Gresham, Oregon and design centers in California and India. The Company's quality system processes and procedures are for its PIC® MCUs and dsPIC® DSCs, KEELOQ® code hopping devices, Serial EEPROMs, microperipherals, nonvolatile memory and analog products. In addition, Microchip's quality system for the design and manufacture of development systems is ISO 9001:2000 certified.

Object of Declaration: MCP1662 LED Driver Evaluation Board

EU Declaration of Conformity

This declaration of conformity is issued by the manufacturer.

The development/evaluation tool is designed to be used for research and development in a laboratory environment. This development/evaluation tool is not a Finished Appliance, nor is it intended for incorporation into Finished Appliances that are made commercially available as single functional units to end users under EU EMC Directive 2004/108/EC and as supported by the European Commission's Guide for the EMC Directive 2004/108/EC (8th February 2010).

This development/evaluation tool complies with EU RoHS2 Directive 2011/65/EU.

For information regarding the exclusive, limited warranties applicable to Microchip products, please see Microchip's standard terms and conditions of sale, which are printed on our sales documentation and available at www.microchip.com.

Signed for and on behalf of Microchip Technology Inc. at Chandler, Arizona, USA

Derek Carlson

Derek Carlson

VP Development Tools

16-July - 2013 Date

| WICP1662 LED Driver Evaluation Board User's Guide | | | | | | |
|---|--|--|--|--|--|--|
| NOTES: | | | | | | |
| | | | | | | |
| | | | | | | |
| | | | | | | |
| | | | | | | |
| | | | | | | |
| | | | | | | |
| | | | | | | |
| | | | | | | |
| | | | | | | |
| | | | | | | |
| | | | | | | |
| | | | | | | |
| | | | | | | |
| | | | | | | |
| | | | | | | |
| | | | | | | |
| | | | | | | |
| | | | | | | |
| | | | | | | |



Table of Contents

| Preface | 7 |
|---|----|
| Introduction | |
| Document Layout | |
| Conventions Used in this Guide | |
| Recommended Reading | |
| The Microchip Web Site | |
| Customer Support | |
| Document Revision History | |
| Chapter 1. Product Overview | |
| 1.1 Introduction | 11 |
| 1.2 MCP1662 Short Overview | 11 |
| 1.3 What is the MCP1662 LED Driver Evaluation Board? | 12 |
| 1.4 What the MCP1662 LED Driver Evaluation Board Kit Contains | 12 |
| Chapter 2. Installation and Operation | |
| 2.1 Introduction | 13 |
| 2.2 Features | 13 |
| 2.3 Getting Started | 14 |
| Appendix A. Schematic and Layouts | |
| A.1 Introduction | 17 |
| A.2 Board – Schematic | 18 |
| A.3 Board – Top Silk | |
| A.4 Board – Top Silk And Copper | |
| A.5 Board – Bottom Copper | |
| Appendix B. Bill of Materials (BOM) | |
| Worldwide Sales and Service | າາ |





Preface

NOTICE TO CUSTOMERS

All documentation becomes dated, and this manual is no exception. Microchip tools and documentation are constantly evolving to meet customer needs, so some actual dialogs and/or tool descriptions may differ from those in this document. Please refer to our web site (www.microchip.com) to obtain the latest documentation available.

Documents are identified with a "DS" number. This number is located on the bottom of each page, in front of the page number. The numbering convention for the DS number is "DSXXXXXXXA", where "XXXXXXX" is the document number and "A" is the revision level of the document.

For the most up-to-date information on development tools, see the MPLAB[®] IDE online help. Select the Help menu, and then Topics to open a list of available online help files.

INTRODUCTION

This chapter contains general information that will be useful to know before using the MCP1662 LED Driver Evaluation Board. Items discussed in this chapter include:

- · Document Layout
- · Conventions Used in this Guide
- Recommended Reading
- The Microchip Web Site
- Customer Support
- Document Revision History

DOCUMENT LAYOUT

This document describes how to use the MCP1662 LED Driver Evaluation Board as a development tool. The manual layout is as follows:

- Chapter 1. "Product Overview" Important information about the MCP1662 LED Driver Evaluation Board.
- Chapter 2. "Installation and Operation" Includes instructions on how to get started with this user's guide and a description of the user's guide.
- Appendix A. "Schematic and Layouts" Shows the schematic and layout diagrams for the MCP1662 LED Driver Evaluation Board.
- Appendix B. "Bill of Materials (BOM)" Lists the parts used to build the MCP1662 LED Driver Evaluation Board.

MCP1662 LED Driver Evaluation Board User's Guide

CONVENTIONS USED IN THIS GUIDE

This manual uses the following documentation conventions:

DOCUMENTATION CONVENTIONS

| Description Represents | | Examples | |
|--|---|--|--|
| Arial font: | | | |
| Italic characters | Referenced books | MPLAB [®] IDE User's Guide | |
| | Emphasized text | is the only compiler | |
| Initial caps | A window | the Output window | |
| | A dialog | the Settings dialog | |
| | A menu selection | select Enable Programmer | |
| Quotes | A field name in a window or dialog | "Save project before build" | |
| Underlined, italic text with right angle bracket | A menu path | File>Save | |
| Bold characters | A dialog button | Click OK | |
| | A tab | Click the Power tab | |
| N'Rnnnn | A number in verilog format, where N is the total number of digits, R is the radix and n is a digit. | 4'b0010, 2'hF1 | |
| Text in angle brackets < > | A key on the keyboard | Press <enter>, <f1></f1></enter> | |
| Courier New font: | | | |
| Plain Courier New | Sample source code | #define START | |
| | Filenames | autoexec.bat | |
| | File paths | c:\mcc18\h | |
| | Keywords | _asm, _endasm, static | |
| | Command-line options | -0pa+, -0pa- | |
| | Bit values | 0, 1 | |
| | Constants | 0xff, 'A' | |
| Italic Courier New | A variable argument | file.o, where file can be any valid filename | |
| Square brackets [] | Optional arguments | mcc18 [options] file [options] | |
| Curly brackets and pipe character: { } | Choice of mutually exclusive arguments; an OR selection | errorlevel {0 1} | |
| Ellipses | Replaces repeated text | <pre>var_name [, var_name]</pre> | |
| | Represents code supplied by user | <pre>void main (void) { }</pre> | |

RECOMMENDED READING

This user's guide describes how to use MCP1662 LED Driver Evaluation Board. Other useful documents are listed below. The following Microchip documents are available and recommended as supplemental reference resources.

- MCP1662 Data Sheet "High-Voltage Step-Up LED Driver with UVLO and Open Load Protection" (DS20005316)
- MCP1661 Data Sheet "High-Voltage Integrated Switch PWM Boost Regulator with UVLO" (DS20005315)

THE MICROCHIP WEB SITE

Microchip provides online support via our web site at www.microchip.com. This web site is used as a means to make files and information easily available to customers. Accessible by using your favorite Internet browser, the web site contains the following information:

- Product Support Data sheets and errata, application notes and sample programs, design resources, user's guides and hardware support documents, latest software releases and archived software
- General Technical Support Frequently Asked Questions (FAQs), technical support requests, online discussion groups, Microchip consultant program member listing
- Business of Microchip Product selector and ordering guides, latest Microchip press releases, listing of seminars and events, listings of Microchip sales offices, distributors and factory representatives

CUSTOMER SUPPORT

Users of Microchip products can receive assistance through several channels:

- · Distributor or Representative
- · Local Sales Office
- Field Application Engineer (FAE)
- Technical Support

Customers should contact their distributor, representative or field application engineer (FAE) for support. Local sales offices are also available to help customers. A listing of sales offices and locations is included in the back of this document.

Technical support is available through the web site at: http://www.microchip.com/support.

DOCUMENT REVISION HISTORY

Revision A (June 2014)

· Initial Release of this Document.

| MCP1662 LED Driver Evaluation Board User's Guide | | | | |
|--|--|--|--|--|
| NOTES: | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |



Chapter 1. Product Overview

1.1 INTRODUCTION

This chapter provides an overview of the MCP1662 and covers the following topics:

- MCP1662 Short Overview
- · What is the MCP1662 LED Driver Evaluation Board?
- What the MCP1662 LED Driver Evaluation Board Kit Contains

1.2 MCP1662 SHORT OVERVIEW

The MCP1662 is a compact, battery operated, fixed frequency, step-up DC/DC converter optimized as an LED constant current generator. This product provides an easy-to-use power supply solution for LEDs, with a minimum number of external components for applications powered by two-cell or three cell alkaline, NiCd or NiMH batteries, one-cell Li-lon or Li-Polymer batteries.

The MCP1662 is a boost device with PWM-only functionality that operates at a fixed 500 kHz switching frequency. The device has an operating input voltage range from 2.4V to 5.5V (with a typical undervoltage of 2.3V to start and 1.85V to stop). Compared to its counterpart, the MCP1661, the reference voltage is only 300 mV in order to minimize the losses on the sense resistor and increase the overall efficiency of the application.

The LED can be turned on and off with a variable duty cycle applied to the EN pin for applications that require current dimming (variable lighting). Compared to its counterpart, the MCP1661, which is designed to be a voltage source, the start-up time for the MCP1662 has been decreased in order to obtain higher dimming frequencies.

The MCP1662 can supply up to 100 mA of current for a string of four white LEDs (LED forward voltage of 3.2V) from a 3V or higher input voltage source. More detailed information regarding the current capabilities of the MCP1662 are available in the data sheet.

In order to obtain a compact solution, the device is available in a small 5-Lead SOT-23 and an 8-Lead 2X3 TDFN package.

MCP1662 LED Driver Evaluation Board User's Guide

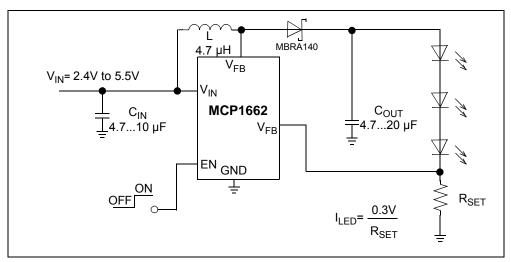


FIGURE 1-1: Typical MCP1662 LED Driver Boost Converter Application.

1.3 WHAT IS THE MCP1662 LED DRIVER EVALUATION BOARD?

The MCP1662 LED Driver Evaluation Board is used to evaluate and demonstrate Microchip Technology's MCP1662 product. This board demonstrates the MCP1662 in a boost-converter application supplied by two AA batteries, or from an external voltage source, which drives a string of LEDs with three selectable currents. The MCP1662 LED Driver Evaluation Board was developed to help engineers reduce the product design cycle time.

Three output currents can be selected: 30 mA, 60 mA and 90 mA. The output current can be changed with a dual switch that changes the external LED current sense equivalent resistance ($R_{\rm SFT}$).

An enable switch is used to enable and disable the converter. When enabled, the MCP1662 will regulate the output current; when disabled, the current consumed from the battery by the device is typically less than 20 nA.

1.4 WHAT THE MCP1662 LED DRIVER EVALUATION BOARD KIT CONTAINS

This MCP1662 LED Driver Evaluation Board kit includes:

- MCP1662 LED Driver Evaluation Board (ADM00555)
- · Important Information Sheet



Chapter 2. Installation and Operation

2.1 INTRODUCTION

The MCP1662 has been developed for applications that require driving a string of LEDs from a low-voltage source. Using a peak current mode control the MCP1662 offers good line and load step responses over a wide output range (up to 32V total output voltage or 10 white LEDs). The integration of compensation and protection circuitry is an important feature that minimizes the required number of additional components.

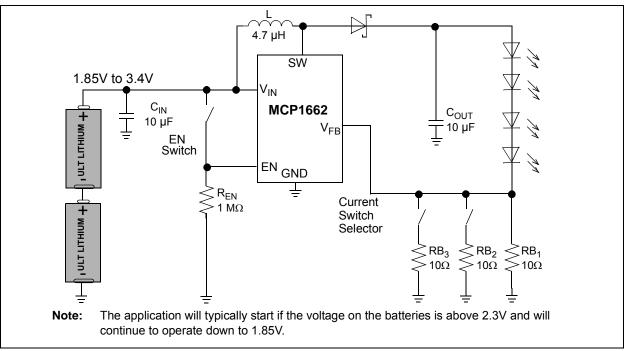


FIGURE 2-1: MCP1662 Boost 30, 60, 90 mA Constant Current Application.

2.2 FEATURES

The MCP1662 LED Driver Evaluation Board has the following features:

- It can be powered by two-cell Alkaline, NiCd, NiMH or Lithium AA cell batteries
- Input Voltage range (V_{IN}): 2.4V to 5.5V, with V_{IN} < V_{OUT}
- Undervoltage Lockout: 2.3V to Start; 1.85V to Stop
- Adjustable Output Current: 30 mA, 60 mA or 90 mA, selected using a dual switch on-board
- · PWM Switching Frequency: 500 kHz
- · Enable converter using switch on board
- · 1.3A Peak Input Current Limit
- Overtemperature Protection (if the die temperature exceeds +150°C, with 15°C hysteresis)
- Open Load Protection in case of: LED fail or FB disconnected/fault

2.3 GETTING STARTED

The MCP1662 LED Driver Evaluation Board is fully assembled and tested to evaluate and demonstrate the MCP1662 product. This board requires the use of external lab supplies or two AA batteries.

2.3.1 Power Input and Output Connection

2.3.1.1 POWERING THE MCP1662 LED DRIVER EVALUATION BOARD

Soldered test points are available for input voltage connections. The maximum input voltage should not exceed 5.5V. The output current will not remain in regulation for input voltages that are greater than or equal to the forward voltage of the LEDs.

The MCP1662 LED Driver Evaluation Board was designed to help the engineer validate the MCP1662 device. The package selected for the MCP1662 LED Driver Evaluation Board is 5-Lead SOT-23.

SW1 is the enable switch, which gives the state of the converter, On or Off. A soldered test point is also available for the EN pin, that can be used for PWM dimming. The second switch is used to modify the value of the sense resistor, in order to modify the LED current and achieve analog dimming.

2.3.1.2 BOARD POWER UP PROCEDURE:

- 1. Connect input supply as shown in Figure 2-2 or insert two AA batteries in the battery holder on the bottom side of the board. Respect the polarity of the batteries.
- 2. Using the EN switch, the state of the converter is changed from On to Off.
- 3. Change the value of the output current using the Current Switch Selector. There are three available currents: 30 mA, 60 mA and 90 mA. When changing the positions of the Current Switch Selector, the value of the sense resistor is modified and the brightness of the LEDs change.

Additional test points are available to visualize different signals (SW, output current, FB) or to modify the output current by dimming, using the EN pin.

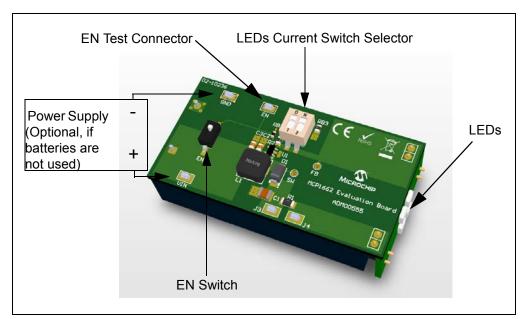


FIGURE 2-2: MCP1662 LED Driver Evaluation Board Setup.

2.3.1.3 ADJUSTABLE LED CURRENT BY RECALCULATING THE SENSE RESISTOR (ANALOG DIMMING)

The Sense Resistor (R_{SET}) is used to modify the value of the output current. The value for the resistor can be calculated using Equation 2-1:

EQUATION 2-1:

$$R_{SET} = \left[\frac{V_{FB}}{I_{LED}}\right]$$

Where: $V_{FB} = 0.300V$

Note: If the Sense Resistor is recalculated, the Current Switch Selector will not have the same functionality, as the Sense Resistor will add a resistor in parallel with the calculated component and the value of the current will be different than the one specified in the User Guide. The Sense Resistor will be used in place of the RB_X resistors.

2.3.1.4 ADJUSTABLE LED CURRENT BY USING THE EN PIN (PWM DIMMING)

The MCP1662 allows PWM dimming by turning the LED on and off with a variable duty cycle PWM signal applied to the EN pin. The maximum frequency for dimming is limited by the start-up and the load. By varying the duty cycle of the PWM signal applied on the EN input, the LED current changes linearly. An example of PWM dimming can be observed in Figure 2-3.

By removing the 0 Ohms R1 Resistor, the soldered connectors (J3 and J4) can be used to either insert a multimeter to measure the LED current or to create a loop through which, with the help of an oscilloscope current probe, the current through the LED can be visualized.

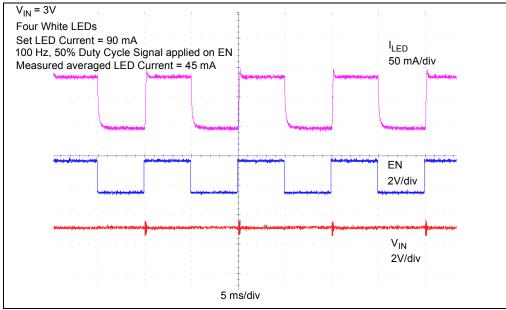


FIGURE 2-3: PWM Dimming with MCP1662.

| MCP1662 LED Driver Evaluation Board User's Guide | | | | | |
|--|--|--|--|--|--|
| NOTES: | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |




Appendix A. Schematic and Layouts


A.1 INTRODUCTION

This appendix contains the following schematics and layouts for the MCP1662 LED Driver Evaluation Board:


- Board Schematic
- Board Top Silk
- Board Top Silk And Copper
- Board Bottom Copper

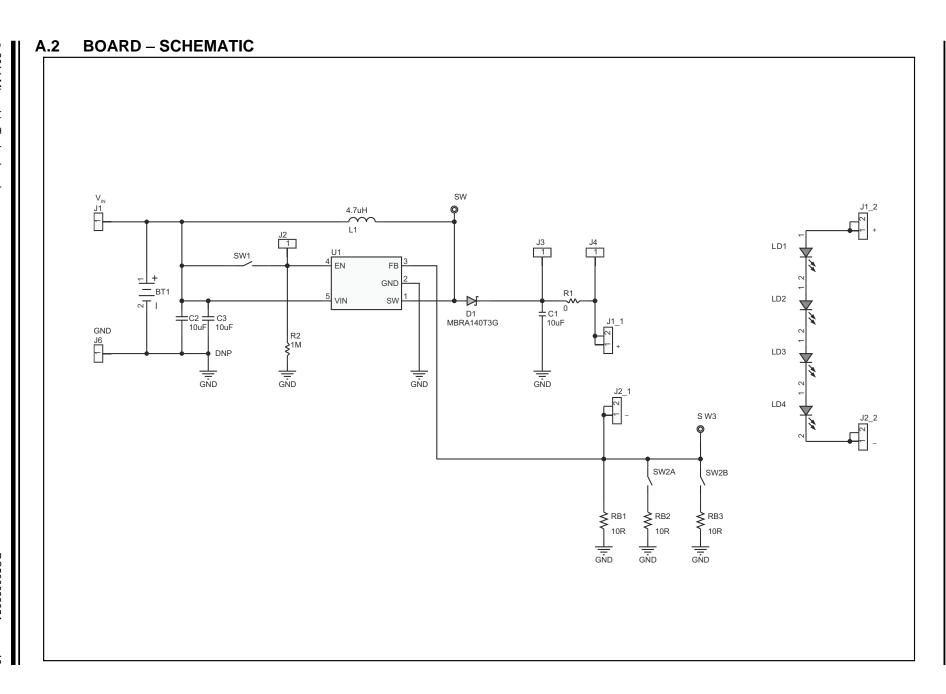


A.3 BOARD - TOP SILK

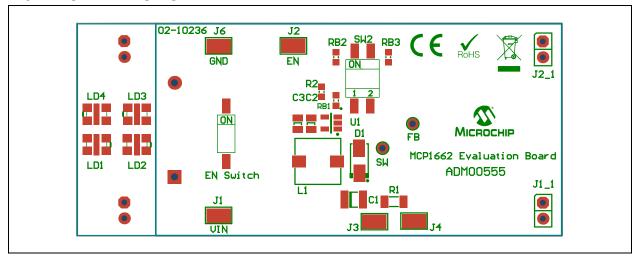

A.4 BOARD - TOP SILK AND COPPER

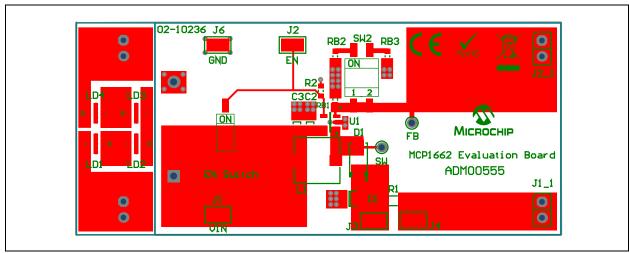

A.5 BOARD – BOTTOM COPPER

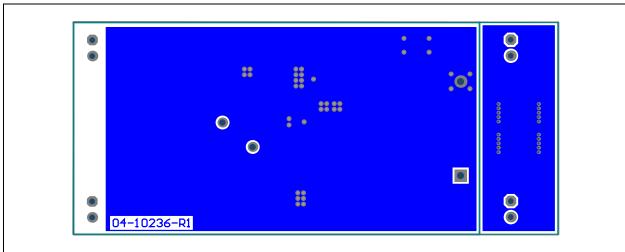

MCP1662 LED Driver Evaluation Board User's Guide

NOTES:



Appendix B. Bill of Materials (BOM)

TABLE B-1: BILL OF MATERIALS (BOM)

| Qty. | Reference | Description | Manufacturer | Part Number |
|------|-----------------------|--|-----------------------------|-----------------------|
| 1 | BT1 | Battery Holder | Keystone Electronics Corp. | 2462 |
| 1 | C1 | Cap. Ceramic 10 µF 50V X7S 1210 | TDK Corporation | C3225X7S1H106M |
| 1 | C2 | Cap. Ceramic 10 μF 10V 10% X7R SMD 0805 | Murata Electronics® | GRM21BR71A106KE51L |
| 1 | C3 | Cap. Ceramic 10 μF 10V 10% X7R SMD 0805 - DO NOT POPULATE | Murata Electronics® | GRM21BR71A106KE51L |
| 1 | D1 | Diode Schottky 40V 1A SMA | ON Semiconductor® | MBRA140T3G |
| 2 | J1_2, J2_2 | Header 2.54 mm, Pin, THT, R/A, 2-Way | Wurth Elektronik | 61300211021 |
| 5 | J1, J2, J3, J4, J6 | Conn. TP Loop Tin SMD | Harwin Plc. | S1751-46R |
| 1 | L1 | Choke, SMD, 4.7 µH | Wurth Elektronik | 7447779004 |
| 4 | LD1, LD2, LD3, LD4 | LED, HI BRIGHT, 51.7LM, Warm White | Cree, Inc. | MLEAWT-A1-R250-0004E5 |
| 1 | R1 | Resistor, 1206 0R0 | Welwyn Components | WCR1206-R005JI |
| 1 | R2 | Resistor 1 MΩ 1/10W 1% 0603 SMD | Panasonic® - ECG | ERJ-3EKF1004V |
| 3 | RB1, RB2, RB3 | Resistor TKF 10R 1% 1/10W SMD 0603 | Stackpole Electronics, Inc. | RMCF0603FT10R0 |
| 1 | SW1 | 2.54 mm SW_SMD_DIP X1 | Wurth Elektronik | 418121270801 |
| 1 | SW2 | 2.54mm SW_SMD_DIP X2 | Wurth Elektronik | 418121270802 |
| 1 | U1 | Led Driver, Boost Converter | Microchip Technology Inc. | MCP1662T-E/OT |

Note 1: The components listed in this Bill of Materials are representative of the PCB assembly. The released BOM used in manufacturing uses all RoHS-compliant components.



Worldwide Sales and Service

AMERICAS

Corporate Office 2355 West Chandler Blvd. Chandler, AZ 85224-6199

Tel: 480-792-7200 Fax: 480-792-7277 Technical Support:

http://www.microchip.com/

support
Web Address:

www.microchip.com

Atlanta Duluth, GA

Tel: 678-957-9614 Fax: 678-957-1455

Austin, TX Tel: 512-257-3370

Boston

Westborough, MA Tel: 774-760-0087 Fax: 774-760-0088

Chicago Itasca, IL

Tel: 630-285-0071 Fax: 630-285-0075

Cleveland

Independence, OH Tel: 216-447-0464 Fax: 216-447-0643

Dallas Addison, TX

Tel: 972-818-7423 Fax: 972-818-2924

Detroit Novi. MI

Tel: 248-848-4000

Houston, TX Tel: 281-894-5983

Indianapolis Noblesville, IN Tel: 317-773-8323

Fax: 317-773-5453 Los Angeles

Mission Viejo, CA Tel: 949-462-9523

Fax: 949-462-9608 New York, NY

Tel: 631-435-6000 San Jose, CA

Tel: 408-735-9110

Canada - Toronto
Tel: 905-673-0699

Tel: 905-673-0699 Fax: 905-673-6509

ASIA/PACIFIC

Asia Pacific Office

Suites 3707-14, 37th Floor Tower 6, The Gateway Harbour City, Kowloon Hong Kong

Tel: 852-2943-5100 Fax: 852-2401-3431

Australia - Sydney Tel: 61-2-9868-6733 Fax: 61-2-9868-6755

China - Beijing Tel: 86-10-8569-7000 Fax: 86-10-8528-2104

China - Chengdu Tel: 86-28-8665-5511 Fax: 86-28-8665-7889

China - Chongqing Tel: 86-23-8980-9588 Fax: 86-23-8980-9500

China - Hangzhou Tel: 86-571-8792-8115 Fax: 86-571-8792-8116

China - Hong Kong SAR Tel: 852-2943-5100 Fax: 852-2401-3431

China - Nanjing Tel: 86-25-8473-2460 Fax: 86-25-8473-2470

China - Qingdao Tel: 86-532-8502-7355 Fax: 86-532-8502-7205

China - Shanghai Tel: 86-21-5407-5533 Fax: 86-21-5407-5066

China - Shenyang Tel: 86-24-2334-2829 Fax: 86-24-2334-2393

China - Shenzhen Tel: 86-755-8864-2200 Fax: 86-755-8203-1760

China - Wuhan Tel: 86-27-5980-5300 Fax: 86-27-5980-5118

China - Xian Tel: 86-29-8833-7252 Fax: 86-29-8833-7256

China - Xiamen Tel: 86-592-2388138 Fax: 86-592-2388130

China - Zhuhai Tel: 86-756-3210040 Fax: 86-756-3210049

ASIA/PACIFIC

India - Bangalore Tel: 91-80-3090-4444 Fax: 91-80-3090-4123

India - New Delhi Tel: 91-11-4160-8631 Fax: 91-11-4160-8632

India - Pune Tel: 91-20-3019-1500

Japan - Osaka Tel: 81-6-6152-7160 Fax: 81-6-6152-9310

Japan - Tokyo Tel: 81-3-6880- 3770 Fax: 81-3-6880-3771

Korea - Daegu Tel: 82-53-744-4301 Fax: 82-53-744-4302

Korea - Seoul

Tel: 82-2-554-7200 Fax: 82-2-558-5932 or 82-2-558-5934

Malaysia - Kuala Lumpur Tel: 60-3-6201-9857 Fax: 60-3-6201-9859

Malaysia - Penang Tel: 60-4-227-8870 Fax: 60-4-227-4068

Philippines - Manila Tel: 63-2-634-9065 Fax: 63-2-634-9069

Singapore Tel: 65-6334-8870 Fax: 65-6334-8850

Taiwan - Hsin Chu Tel: 886-3-5778-366 Fax: 886-3-5770-955

Taiwan - Kaohsiung Tel: 886-7-213-7830

Taiwan - Taipei Tel: 886-2-2508-8600 Fax: 886-2-2508-0102 **Thailand - Bangkok**

Tel: 66-2-694-1351 Fax: 66-2-694-1350

EUROPE

Austria - Wels Tel: 43-7242-2244-39

Fax: 43-7242-2244-39

Denmark - Copenhagen Tel: 45-4450-2828

Fax: 45-4485-2829
France - Paris

Tel: 33-1-69-53-63-20 Fax: 33-1-69-30-90-79

Germany - Dusseldorf Tel: 49-2129-3766400

Germany - Munich Tel: 49-89-627-144-0 Fax: 49-89-627-144-44

Germany - Pforzheim Tel: 49-7231-424750

Italy - Milan Tel: 39-0331-742611 Fax: 39-0331-466781

Italy - Venice Tel: 39-049-7625286

Netherlands - Drunen Tel: 31-416-690399 Fax: 31-416-690340

Poland - Warsaw Tel: 48-22-3325737

Spain - Madrid Tel: 34-91-708-08-90 Fax: 34-91-708-08-91

Sweden - Stockholm Tel: 46-8-5090-4654

UK - Wokingham Tel: 44-118-921-5800 Fax: 44-118-921-5820

03/25/14

ПОСТАВКА ЭЛЕКТРОННЫХ КОМПОНЕНТОВ

Общество с ограниченной ответственностью «МосЧип» ИНН 7719860671 / КПП 771901001 Адрес: 105318, г.Москва, ул.Щербаковская д.3, офис 1107

Данный компонент на территории Российской Федерации Вы можете приобрести в компании MosChip.

Для оперативного оформления запроса Вам необходимо перейти по данной ссылке:

http://moschip.ru/get-element

Вы можете разместить у нас заказ для любого Вашего проекта, будь то серийное производство или разработка единичного прибора.

В нашем ассортименте представлены ведущие мировые производители активных и пассивных электронных компонентов.

Нашей специализацией является поставка электронной компонентной базы двойного назначения, продукции таких производителей как XILINX, Intel (ex.ALTERA), Vicor, Microchip, Texas Instruments, Analog Devices, Mini-Circuits, Amphenol, Glenair.

Сотрудничество с глобальными дистрибьюторами электронных компонентов, предоставляет возможность заказывать и получать с международных складов практически любой перечень компонентов в оптимальные для Вас сроки.

На всех этапах разработки и производства наши партнеры могут получить квалифицированную поддержку опытных инженеров.

Система менеджмента качества компании отвечает требованиям в соответствии с ГОСТ Р ИСО 9001, ГОСТ РВ 0015-002 и ЭС РД 009

Офис по работе с юридическими лицами:

105318, г. Москва, ул. Щербаковская д. 3, офис 1107, 1118, ДЦ «Щербаковский»

Телефон: +7 495 668-12-70 (многоканальный)

Факс: +7 495 668-12-70 (доб.304)

E-mail: info@moschip.ru

Skype отдела продаж:

moschip.ru moschip.ru_6 moschip.ru 4 moschip.ru 9