






# **Application Tooling Specification Sheet**

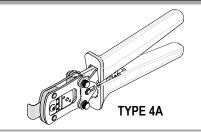

Hand Crimp Tool Order No. 63823-8000


# **FEATURES**

- A full cycle ratcheting hand tool ensures complete crimps
- Ergonomically designed soft handles
- Precisely designed crimping profiles with simple contact positioning
- Easy handling due to outstanding force ratio
- A-620 Class 2 compliant and RoHS compliant
- Modular Crimp Head is removable and can be use in the Air Powered Tool Order No.63816-0100, accompanied by Air Powered Crimp Adapter (Order No. 63816-0700).
- Can also be used in the Battery Powered Tool Order No.63816-0200 (110 V) or 63816-0250 (220 V), accompanied by Battery Powered Crimp Adapter (Order No. 63816-0600).

## **SCOPE**

Products: 2.5mm (.098") Pitch Wire to Wire Male Terminal, 22-28 AWG.

Terminal Series No.	Terminal Order No.		Wire Size		*Insulation	on Diameter	Strip Length		
Terminal Series No.	◆ Reel	Loose	AWG	mm²	mm	ln.	mm	ln.	
50397	50397-8000	50397-8100	22-28	0.35-0.08	1.05-1.90	0.043075	2.6-3.1	0.102-0.122	
50398	50398-8000	50398-8100	22-28	0.35-0.08	1.05-1.90	0.043075	2.6-3.1	0.102-0.122	
★See Conditions on page 2.									
◆Customer to cut off terminal from reel, 0.20mm (.008") maximum cut-off tab.									

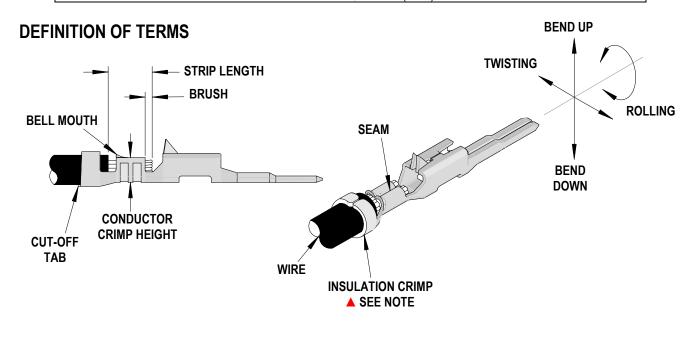

Doc No: ATS-6382380HM Release Date: 02-15-11 Revision: C Revision Date: 03-27-14

# ▲ Insulation Crimp Note:

Due to the terminal's insulation grip design and/or insulation diameter range, this tool uses "overlap" form geometry in the insulation punch. This produces an overlap insulation crimp (A620 – compliant). While the insulation punch profile may appear "lopsided", this is a normal condition for this tool. See figure to the right. (Some tools with multiple crimp pockets may not have the "overlap" profile on all pockets).

# OVERLAP FORM GEOMETRY OVERLAP INSULATION CRIMP WIRE

### **CRIMP SPECIFICATION**

After crimping, the crimp profiles should measure the following (see notes on page 4).

Terminal Wire Size		6:-0	Conductor Crimp			Insulation Crimp			Pull Force		*Profile					
Order No			Height (Ref)		Width (Ref)		Height (Ref)		Width (Max.)		Minimum		* FIOIIIE			
	AWG	mm²	mm	ln.	mm	ln.	mm	ln.	mm	ln.	N	Lb.	Α	В	С	D
	22	0.35	0.84-0.89	.033035	1.20	.047	1.90-2.00	.075079	1.85	.073	39.2	8.8	Χ			
E0207	24	0.20	0.76-0.81	.030032	1.20	.047	1.90-2.00	.075079	1.80	.071	29.4	6.6		Χ		
50397	26	0.12	0.71-0.76	.028030	1.20	.047	1.60-1.70	.063067	1.75	.069	19.6	4.4			Χ	
	28	80.0	0.67-0.72	.026-028	1.20	.047	1.60-1.70	.063067	1.75	.069	9.8	2.2				Χ
	22	0.35	0.84-0.89	.033035	1.20	.047	1.90-2.00	.075079	1.85	.073	39.2	8.8	Χ			
E0200	24	0.20	0.76-0.81	.030032	1.20	.047	1.90-2.00	.075079	1.80	.071	29.4	6.6		Χ		
50398	26	0.12	0.71-0.76	.028030	1.20	.047	1.60-1.70	.063067	1.75	.069	19.6	4.4			Χ	
	28	0.08	0.67-0.72	.026-028	1.20	.047	1.60-1.70	.063067	1.75	.069	9.8	2.2				Χ

\*To Achieve IPC-A-620 Class 2 Crimps, the following over-all wire insulation diameter ranges are recommended:

Profile A: 1.35-1.70mm (.053-.067")

Profile B: 1.35-1.70mm (.053-.067")

Profile D: 1.15-1.40mm (.045-.055")


#### Tool Qualification Notes:

- 1. Pull Force should be measured with no influence from the insulation crimp.
- 2. The above specifications are guidelines to an optimum crimp.

#### **OPERATION**

Open the tool by squeezing the handles together, at the end of the closing stroke, the ratchet mechanism will release the handles, and the hand tool will spring open.


- 1. With the hand tool in the open position, pivot the terminal locator open by pulling up on the locator knob and lift the wire stop blade up. See Figure 1.
- 2. Insert the terminal into the correct profile until the terminal is fully seated and stops. Make sure the wire stop blade is fully seated on the terminal behind the conductor grip section.
- 3. Gently pivot the locator closed.
- 4. Bring down the wire stop blade.

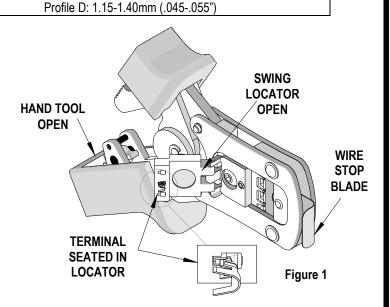

Doc No: ATS-6382380HM Release Date: 02-15-11 **UNCONTROLLED COPY** Page 2 of 6 Revision: C Revision Date: 03-27-14

- 5. Slide the pre-stripped wire into the terminal; make sure to aim the wire brush towards the tip point on the wire stop blade. See Figure 2. Align the wire so that it is parallel and sitting into the terminal. Maintain a light and constant pressure on the wire that is seated in the terminal at all times. (Do not let go of the wire.) Be sure to hold the wire and terminal in place until the terminal is fully crimped. See Figure 3.
- 6. Close the tool until the ratchet releases.
- 7. Lift the wire stop blade up.
- 8. Carefully remove the crimped terminal.

**Note:** To maintain good brush control and a consistent bell mouth the crimping instructions must be followed.

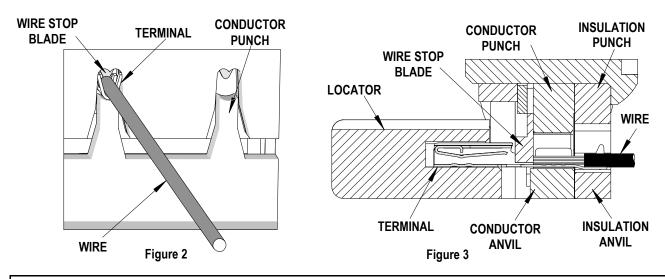

Note: The tamper proof ratchet action will not release the tool until it has been fully closed.

Note: To maintain good brush control and a consistent bell mouth the crimping instructions must be followed.

# **Terminal Locator Replacement/Change Over**

This section describes the procedure for changing locators.

# Removal

- 1. With the tool in the open position, pivot the terminal locator outward.
- 2. Remove the M4 BHCS. See Figure 4.

#### Installation

- 1. Place the proper locator, (See Chart on page 2), on the hand tool. Install the M4 BHCS. See Figure 4.
- 2. Tighten the screw enough to hold the locator. Make sure the locator can still float freely with hand pressure.
- Insert the proper terminal fully into the correct profile slot until the terminal is fully seated and stops. Then gently pivot the locator closed.
- 4. With hand pressure, slowly slide the locator to the correct position. See Figure 5.
- 5. Gently pivot the locator open without disturbing the location.
- 6. Hold the locator firmly in place and slowly tighten the M4 BHCS.

Doc No: ATS-6382380HM Release Date: 02-15-11 **UNCONTROLLED COPY** Page 3 of 6 Revision: C Revision Date: 03-27-14


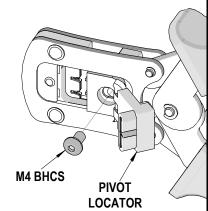


Figure 4

#### Maintenance

 It is recommended that each operator of the tool be made aware of, and responsible for, the following maintenance steps:

- 1. Remove dust, moisture, and other contaminants with a clean brush, or soft, lint free cloth.
- 2. Do not use any abrasive materials that could damage the



**CORRECT** 

INCORRECT

**INCORRECT** 

- 4. Wipe excess oil from hand tool, particularly from crimping area. Oil transferred from the crimping area onto certain terminations may affect the electrical characteristics of an application.
- 5. When tool is not in use, keep the handles closed to prevent objects from becoming lodged in the crimping dies. and store the tool in a clean, dry area.

# **Miscrimps or Jams**

Should this tool ever become stuck or jammed in a partially closed position, **Do Not** force the handles open or closed. The tool will open easily by lifting the ratchet release lever. See Figure 9.

# Warranty

This tool is for electrical terminal crimping purposes only. This tool is made of the best quality materials. All vital components are long life tested. All tools are warranted to be free of manufacturing defects for a period of 30 days. Should such a defect occur, we will repair or exchange the tool free of charge. This repair or exchange will not be applicable to altered, misused, or damaged tools. This tool is designed for hand use only. Any clamping, fixturing, or use of handle extensions voids this warranty.

**CAUTION:** Repetitive use of this tool should be avoided.

# **CAUTIONS:**

- 1. Manually powered hand tools are intended for low volume or field repair. This tool is NOT intended for production use. Repetitive use of this tool should be avoided.
- 2. Insulated rubber handles are not protection against electrical shock.
- 3. Wear eye protection at all times.
- 4. Use only the Molex terminals specified for crimping with this tool.

### Notes:

- 1. This tool should only be used for the terminals and wire gauges specified on this sheet.
- 2. This tool is not adjustable for crimp height; however crimp force is adjustable (See instructions above). Variations in tools, terminals, wire stranding, and insulation types may affect crimp height.
- 3. This tool is intended for standard conductor sizes. It may not give a good insulation crimp support for all insulation sizes.
- 4. Molex does not repair hand tools (see warranty above). The replacement parts listed are the only parts available for repair. If the handles or crimp tooling is damaged or worn, a new tool must be purchased.

**UNCONTROLLED COPY** Doc No: ATS-6382380HM Release Date: 02-15-11 Page 4 of 6 Revision Date: 03-27-14

Revision: C

- 5. Pull force should be used as the final criteria for an acceptable crimp. Pull force is measured with no influence from the insulation crimp. The insulation should be stripped long (1/2 in.) so the insulation grips on the terminal do not grip the wire insulation or the conductor. Refer to Molex Quality Crimping Handbook 63800-0029 for additional information on crimping and crimp testing.
- 6. Molex does not certify crimp hand tools.

**CAUTION**: Molex crimp specifications are valid only when used with Molex terminals and tooling.

# **Applications for the Modular Crimp Head**

WARNING: NEVER operate, service, install, or adjust this Modular Crimp Head without proper instruction and without first reading and understanding the instructions in the proper Manual or Specification Sheet. See Chart below for the correct Manual or Specification Sheet.

**WARNING**: *NEVER* install tooling or service this tool while it is into any power source. Disconnect the power by unplugging or turn off the Actuator from its power source.

**CAUTION:** Keep fingers away from the crimping area when operating this tool. It may cause severe injury.

**CAUTION:** Wear safety glasses when operating or serving this tool.

The chart below shows all applications for this Modular Crimp Head.

Modular Crimp Head	Tool	Tool	Adapter	Adapter	Figure
Order No.	Order no.	Description Order No. Description		Description	No.
	63816-0000	Hand Crimp Frame (Short)	N/A	N/A	6
63823-8070	63816-0050	Hand Crimp Frame (Long)	N/A	N/A	6
	63816-0200	Battery Power Tool (110 V)	63816-0600	Battery Power Crimp Adapter	7
	63816-0250	6-0250 Battery Power Tool (220 V) 63816-0		Battery Power Crimp Adapter	7
	63816-0100	Air Power Tool	63816-0700	Air Power Crimp Adapter	8


Applications for the Modular Crimp Head							
Hand Crimp Tool	Battery Powered Tool	Air Powered Tool					
LOCKING PINS HEAD  HAND CRIMP FRAME LONG OR SHORT	LOCKING PINS  BATTERY POWER CRIMP ADAPTER  BATTERY POWERED TOOL	LOCKING PINS CRIMP HEAD  AIR POWER CRIMP ADAPTER  LOCKING POWER TOOL					
Figure 6	Figure 7	Figure 8					

**UNCONTROLLED COPY** Doc No: ATS-6382380HM Release Date: 02-15-11 Page 5 of 6

Revision: C Revision Date: 03-27-14

# **PARTS LIST**

Hand Crimp Tool 63823-8000							
Item	Order Number	Description	Quantity				
1	63823-8070	Modular Crimp Head	1				
2	63816-0000	Hand Crimp Frame (Short)	1				
3	63823-8075	Locator	1				
4	63816-0001	Locking Pin	2				
5	63600-0525	Handle Spring	1				
6	63600-0520	Crimping Spring	2				

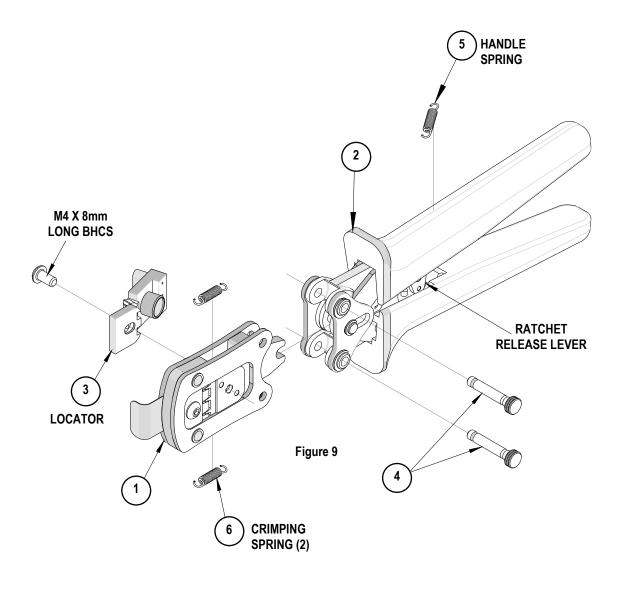

Visit our Web site at http://www.molex.com

Doc No: ATS-6382380HM Revision: C Release Date: 02-15-11 Revision Date: 03-27-14

# **ПОСТАВКА** ЭЛЕКТРОННЫХ КОМПОНЕНТОВ

многоканальный

Общество с ограниченной ответственностью «МосЧип» ИНН 7719860671 / КПП 771901001 Адрес: 105318, г.Москва, ул.Щербаковская д.3, офис 1107

# Данный компонент на территории Российской Федерации Вы можете приобрести в компании MosChip.

Для оперативного оформления запроса Вам необходимо перейти по данной ссылке:

# http://moschip.ru/get-element

Вы можете разместить у нас заказ для любого Вашего проекта, будь то серийное производство или разработка единичного прибора.

В нашем ассортименте представлены ведущие мировые производители активных и пассивных электронных компонентов.

Нашей специализацией является поставка электронной компонентной базы двойного назначения, продукции таких производителей как XILINX, Intel (ex.ALTERA), Vicor, Microchip, Texas Instruments, Analog Devices, Mini-Circuits, Amphenol, Glenair.

Сотрудничество с глобальными дистрибьюторами электронных компонентов, предоставляет возможность заказывать и получать с международных складов практически любой перечень компонентов в оптимальные для Вас сроки.

На всех этапах разработки и производства наши партнеры могут получить квалифицированную поддержку опытных инженеров.

Система менеджмента качества компании отвечает требованиям в соответствии с ГОСТ Р ИСО 9001, ГОСТ РВ 0015-002 и ЭС РД 009

# Офис по работе с юридическими лицами:

105318, г. Москва, ул. Щербаковская д. 3, офис 1107, 1118, ДЦ «Щербаковский»

Телефон: +7 495 668-12-70 (многоканальный)

Факс: +7 495 668-12-70 (доб.304)

E-mail: info@moschip.ru

Skype отдела продаж:

moschip.ru moschip.ru\_6 moschip.ru 4 moschip.ru 9