



Grove - Piezo Vibration Sensor

Release date: 9/20/2015

Version: 1.0

Wiki: [http://www.seeedstudio.com/wiki/Grove- Piezo Vibration Sensor](http://www.seeedstudio.com/wiki/Grove-_Piezo_Vibration_Sensor)

Bazaar: <http://www.seeedstudio.com/depot/Grove-Piezo-Vibration-Sensor-p-1411.html>

Document Revision History

Revision	Date	Author	Description
1.0	Sep 21, 2015	Victor.He	Create file

Contents

Document Revision History	2
1. Introduction	2
2. Features	3
3. Applications	4
4. Usage	5
4.1 With Arduino	5
4.2 With Raspberry Pi	7
5. Resource	9

Disclaimer

For physical injuries and possessions loss caused by those reasons which are not related to product quality, such as operating without following manual guide, natural disasters or force majeure, we take no responsibility for that.

Under the supervision of Seeed Technology Inc., this manual has been compiled and published which covered the latest product description and specification. The content of this manual is subject to change without notice.

Copyright

The design of this product (including software) and its accessories is under tutelage of laws. Any action to violate relevant right of our product will be penalized through law. Please consciously observe relevant local laws in the use of this product.

1. Introduction

Grove- Piezo Vibration Sensor is suitable for measurements of flexibility, vibration, impact and touch. The module is based on PZT film sensor LDT0-028. When the sensor moves back and forth, a certain voltage will be created by the voltage comparator inside of it. A wide dynamic range (0.001Hz~1000MHz) guarantees an excellent measuring performance. And, you can adjust its sensitivity by adjusting the on-board potentiometer with a screw.



2. Features

- Standard grove socket
- Wide dynamic range: 0.1Hz~180Hz
- Adjustable sensitivity
- High receptivity for strong impact

3. Applications

- Vibration Sensing in Washing Machine
- Low Power Wakeup Switch
- Low Cost Vibration Sensing
- Car Alarms
- Body Movement
- Security Systems

4. Usage

4.1 With Arduino

The Grove - Piezo Vibration Sensor outputs a logic HIGH when vibration was detected. We can use any of Arduino pins to read the data. Here is an example of Piezo Vibration Sensor controlling LED. When the vibration was detected, this sensor outputs a logic high signal (the sensitivity can be changed by adjusting the potentiometer), an LED lights up.

Note: It may output low level even though originally output high level when you increase the threshold voltage by clockwise adjusting the potentiometer.

1. Connect the module to the Analog port 0 of base shield using the 4-pin grove cable and connect LED to Pin 12.

2. Plug the Grove - Basic Shield into Arduino.


3. Connect Arduino to PC by using a USB cable.

4. Copy and paste code below to a new Arduino sketch. Please click [here](#) if you do not know how to upload.

```
const int ledPin=12;
void setup() {
  Serial.begin(9600);
  pinMode(ledPin,OUTPUT);
}

void loop() {
  int sensorValue = analogRead(A0);
  Serial.println(sensorValue);
  delay(1000);
  if(sensorValue==1023)
  {
    digitalWrite(ledPin,HIGH);
  }
  else
  {
    digitalWrite(ledPin,LOW);
  }
}
```

5. Touch the piezo sensor to make it vibrate, of course, any way to make it vibrate would be OK too. The LED would be on when vibration detected. You can also Open the serial monitor to see the sensor outputs.

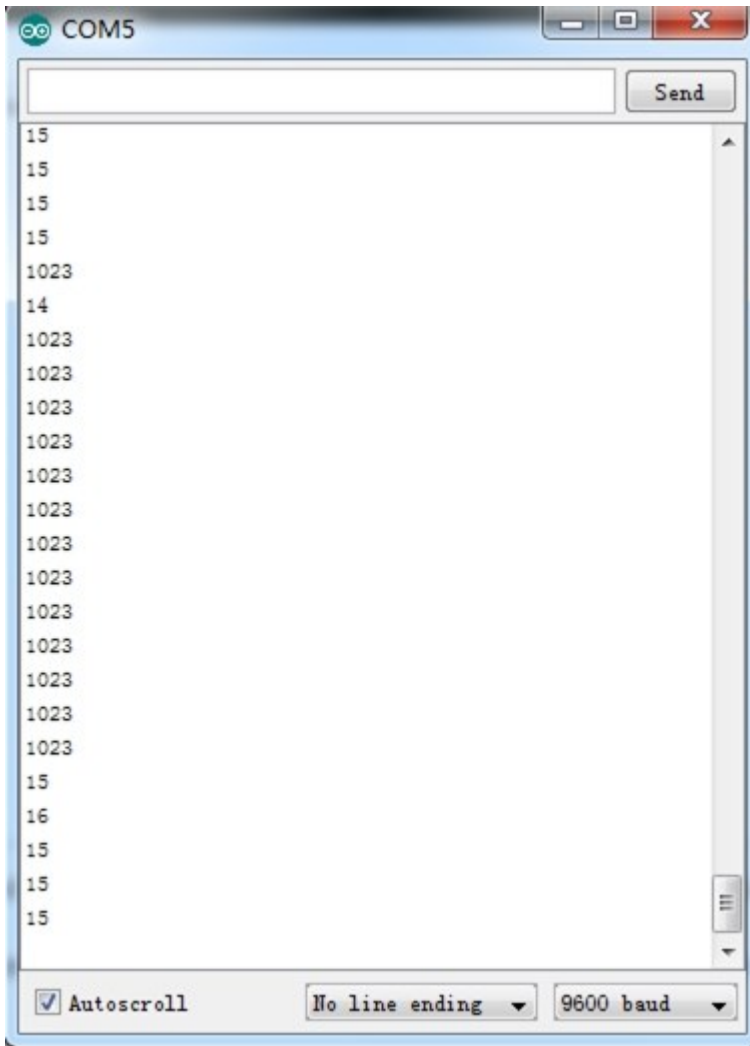

You can directly use a digital pin, take D5 of base shield as an example, and connect LED to Pin 12.

```
const int ledPin=12;
void setup() {
  Serial.begin(9600);
  pinMode(ledPin,OUTPUT);
}
void loop() {
  int sensorState = digitalRead(5);
  Serial.println(sensorState);
  delay(1000);
  if(sensorState == HIGH)
  {
    digitalWrite(ledPin,HIGH);
  }
}
```

```
else
{
    digitalWrite(ledPin,LOW);
}
}
```

4.2 With Raspberry Pi

1. You should have got a raspberry pi and a grovepi or grovepi+.
2. You should have completed configuring the development environment, otherwise follow [here](#).
3. Connection

- Plug the sensor to grovepi socket A0 by using a grove cable.

4. Navigate to the demos' directory:

```
cd yourpath/GrovePi/Software/Python/
```

- To see the code

```
nano grove_piezo_vibration_sensor.py # "Ctrl+x" to exit #
```

```
import time
import grovepi

# Connect the Grove Piezo Vibration Sensor to analog port A0
# OUT,NC,VCC,GND
piezo = 0

grovepi.pinMode(piezo,"INPUT")

while True:
    try:
        # When vibration is detected, the sensor outputs a logic high
        signal
        print grovepi.analogRead(piezo)
        time.sleep(.5)

    except IOError:
        print "Error"          print "Error"
```

5. Run the demo.

```
sudo python grove_piezo_vibration_sensor.py
```

5. Resource

[Grove - Piezo Vibration Sensor Eagle File](#)

[Grove - Piezo Vibration Sensor PDF File](#)

[Piezo Vibration Sensor Datasheet](#)

Данный компонент на территории Российской Федерации

Вы можете приобрести в компании MosChip.

Для оперативного оформления запроса Вам необходимо перейти по данной ссылке:

<http://moschip.ru/get-element>

Вы можете разместить у нас заказ для любого Вашего проекта, будь то серийное производство или разработка единичного прибора.

В нашем ассортименте представлены ведущие мировые производители активных и пассивных электронных компонентов.

Нашей специализацией является поставка электронной компонентной базы двойного назначения, продукции таких производителей как XILINX, Intel (ex.ALTERA), Vicor, Microchip, Texas Instruments, Analog Devices, Mini-Circuits, Amphenol, Glenair.

Сотрудничество с глобальными дистрибьюторами электронных компонентов, предоставляет возможность заказывать и получать с международных складов практически любой перечень компонентов в оптимальные для Вас сроки.

На всех этапах разработки и производства наши партнеры могут получить квалифицированную поддержку опытных инженеров.

Система менеджмента качества компании отвечает требованиям в соответствии с ГОСТ Р ИСО 9001, ГОСТ РВ 0015-002 и ЭС РД 009

Офис по работе с юридическими лицами:

105318, г.Москва, ул.Щербаковская д.3, офис 1107, 1118, ДЦ «Щербаковский»

Телефон: +7 495 668-12-70 (многоканальный)

Факс: +7 495 668-12-70 (доб.304)

E-mail: info@moschip.ru

Skype отдела продаж:

moschip.ru

moschip.ru_4

moschip.ru_6

moschip.ru_9