


 
Exploded view diagram of the terminal support assembly. The diagram shows the following components and their assembly sequence:

- Terminal Support Location:** Indicated by a dashed line and the text "TERMINAL SUPPORT LOCATION".
- Terminal Support (8 REF):** The main support structure, shown in two views (top and side).
- Terminal Support Bracket (34 REF):** A bracket that fits onto the terminal support.
- Terminal Support Mounting Bracket (37):** A bracket that fits onto the terminal support.
- Terminal Support Mounting Bracket (38):** A bracket that fits onto the terminal support.
- Terminal Support Mounting Bracket (39):** A bracket that fits onto the terminal support.
- Terminal Support Mounting Bracket (63):** A bracket that fits onto the terminal support.
- Terminal Support Mounting Bracket (45):** A bracket that fits onto the terminal support.
- Terminal Support Mounting Bracket (53):** A bracket that fits onto the terminal support.
- Terminal Support Mounting Bracket (20):** A bracket that fits onto the terminal support.
- Terminal Support Mounting Bracket (50):** A bracket that fits onto the terminal support.
- Terminal Support Mounting Bracket (52):** A bracket that fits onto the terminal support.
- Terminal Support Mounting Bracket (51):** A bracket that fits onto the terminal support.
- Terminal Support Mounting Bracket (44):** A bracket that fits onto the terminal support.
- Terminal Support Mounting Bracket (1):** A bracket that fits onto the terminal support.
- Terminal Support Mounting Bracket (2):** A bracket that fits onto the terminal support.
- Terminal Support Mounting Bracket (3):** A bracket that fits onto the terminal support.
- Terminal Support Mounting Bracket (4):** A bracket that fits onto the terminal support.
- Terminal Support Mounting Bracket (28):** A bracket that fits onto the terminal support.
- Terminal Support Mounting Bracket (5):** A bracket that fits onto the terminal support.
- Terminal Support Mounting Bracket (41):** A bracket that fits onto the terminal support.
- Terminal Support Mounting Bracket (20):** A bracket that fits onto the terminal support.
- Terminal Support Mounting Bracket (21):** A bracket that fits onto the terminal support.
- Terminal Support Mounting Bracket (22):** A bracket that fits onto the terminal support.
- Terminal Support Mounting Bracket (19):** A bracket that fits onto the terminal support.
- Terminal Support Mounting Bracket (33):** A bracket that fits onto the terminal support.
- Terminal Support Mounting Bracket (24):** A bracket that fits onto the terminal support.
- Terminal Support Mounting Bracket (3):** A bracket that fits onto the terminal support.
- Terminal Support Mounting Bracket (4):** A bracket that fits onto the terminal support.
- Terminal Support Mounting Bracket (28):** A bracket that fits onto the terminal support.
- Terminal Support Mounting Bracket (5):** A bracket that fits onto the terminal support.
- Terminal Support Mounting Bracket (41):** A bracket that fits onto the terminal support.
- Terminal Support Mounting Bracket (20):** A bracket that fits onto the terminal support.
- Terminal Support Mounting Bracket (21):** A bracket that fits onto the terminal support.
- Terminal Support Mounting Bracket (22):** A bracket that fits onto the terminal support.
- Terminal Support Mounting Bracket (19):** A bracket that fits onto the terminal support.
- Terminal Support Mounting Bracket (33):** A bracket that fits onto the terminal support.
- Terminal Support Mounting Bracket (24):** A bracket that fits onto the terminal support.
- Terminal Support Mounting Bracket (3):** A bracket that fits onto the terminal support.
- Terminal Support Mounting Bracket (4):** A bracket that fits onto the terminal support.
- Terminal Support Mounting Bracket (28):** A bracket that fits onto the terminal support.
- Terminal Support Mounting Bracket (5):** A bracket that fits onto the terminal support.
- Terminal Support Mounting Bracket (41):** A bracket that fits onto the terminal support.

Exploded view diagram of a mechanical assembly. The diagram shows various components and their assembly sequence, indicated by numbered callouts (1 through 67). The components include a main housing (44), a motor (38), a terminal support (8), a base (2), and various mounting brackets and fasteners. The diagram is divided into several sections by dashed lines, indicating different assembly stages or sub-assemblies. A separate diagram at the top right shows the terminal support location, labeled '8 REF' and '34 REF', with the text 'TERMINAL SUPPORT LOCATION' below it.

* WARNING
ON INSTALLATION, SET WIRE
DISC TO LARGEST WIRE SIZE
SETTING. USE OF SETTINGS
BELOW MIN. REQUIRED CRIMP
HEIGHT SETTING WILL CAUSE
DAMAGE TO CRIMP TOOLING.

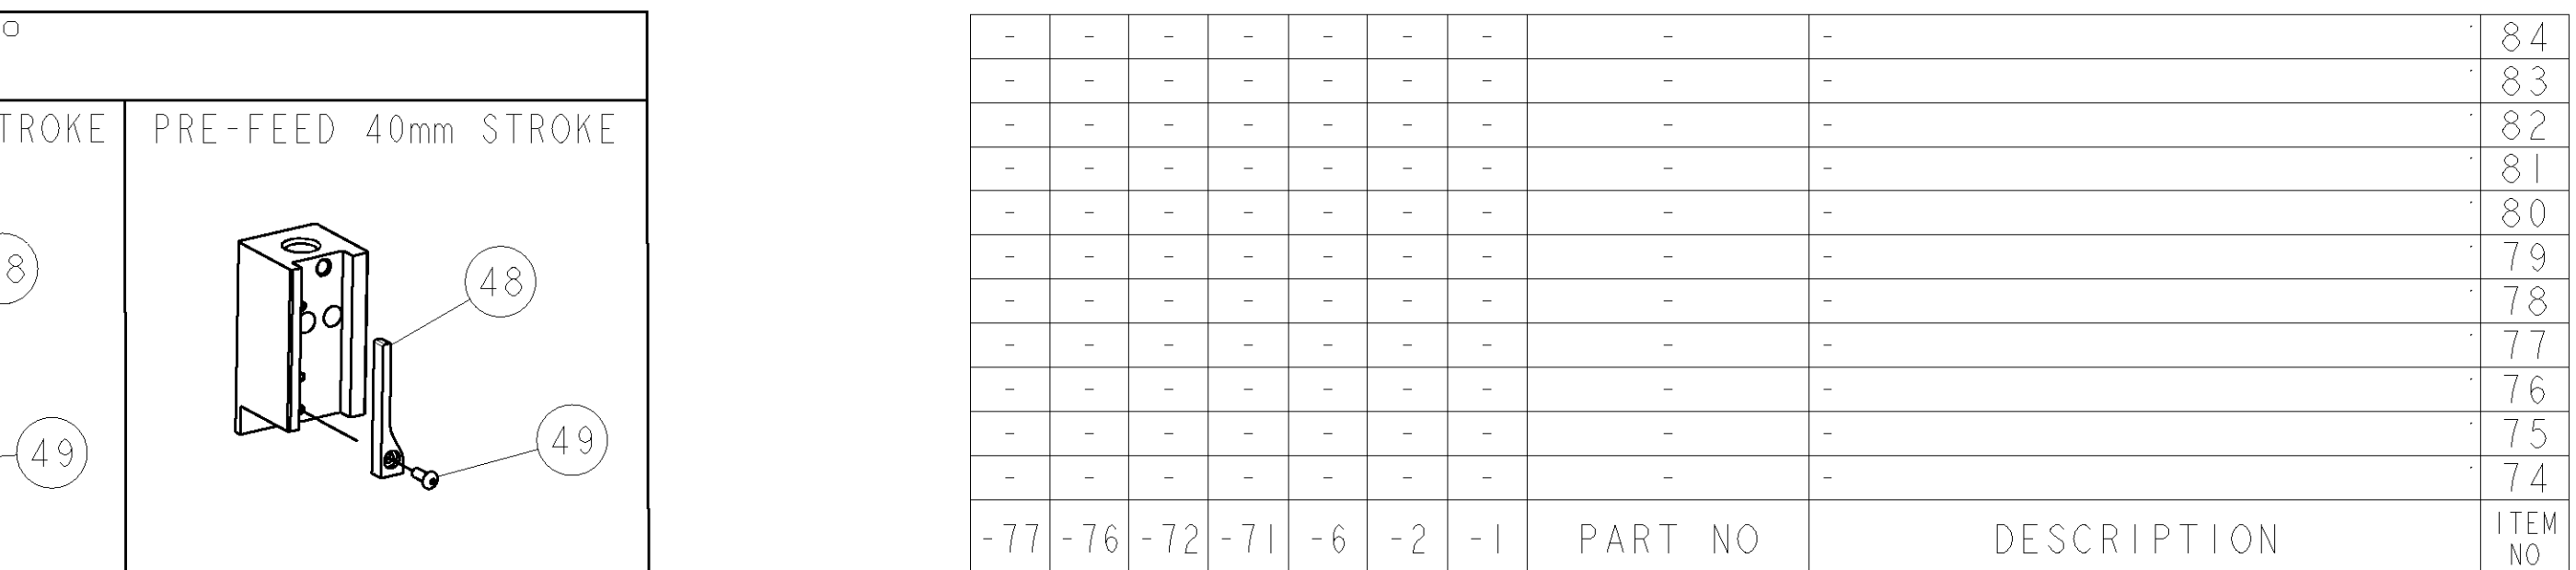

SET UP GAGE 458637-3										LOC A	DIST 66	REVISIONS				
P		LTR		DESCRIPTION					DATE	DWN	APVD					
		A		SEE ECO-07-005696					12MAR2007	DP	MC					
-	-	-	-	-	-	-	-	-		73						
-	-	-	-	-	-	-	-	-		72						
-	I	I	I	I	I	I	1338705-3	DOCUMENTATION PACKAGE		71						
-	-	-	-	-	-	-	-	-		70						
-	-	-	-	-	-	-	-	-		69						
-	-	-	-	-	-	-	-	-		68						
-	I	I	I	I	I	I	461264-5	PLATE, IDENTIFICATION		67						
-	2	2	2	2	2	2	21017-2	SCREW, DRIVE		66						
-	-	-	-	-	-	-	-	-		65						
-	-	-	-	-	-	-	-	-		64						
-	I	I	I	I	I	I	3-18031-0	SCR, SET, CUP POINT M6 X 6.0		63						
-	-	-	-	-	-	-	-	-		62						
-	2	2	2	2	2	2	2-18032-5	SCR, SET, FLT POINT M5 X 20.0		61						
-	I	I	I	I	I	I	18024-7	SCR, BTN SKT HD CAP (M4 X 10.0)		60						
-	I	I	I	I	I	I	5-18022-2	SCR, HEX HD CAP M4 X 8.0		59						
-	-	-	-	-	-	-	-	-		58						
-	-	-	-	-	-	-	-	-		57						
-	I	I	I	I	I	I	1338685-1	PAWL, FEED		56						
-	-	-	-	-	-	-	-	-		55						
-	4	4	4	4	4	4	18024-8	SCR, BTN SKT HD CAP (M4 X 12.0)		54						
-	2	2	2	2	2	2	1-18023-2	SCR, SKT HD CAP M4 X 12.0		53						
-	I	I	I	I	I	I	18030-1	NUT, HEX, REG M3		52						
-	I	I	I	I	I	I	811242-6	BUMPER, HOLD DOWN		51						
-	I	I	I	I	I	I	690753-2	SPACER, TONKER		50						
-	I	I	I	I	I	I	18024-3	SCR, BTN SKT HD CAP (M3 X 10.0)		49						
-	-	-	-	-	-	-	1338675-1	CAM, UNIVERSAL PRE FEED		48						
-	I	-	I	I	-	I	1338676-1	CAM, UNIVERSAL POST-FEED		47						
-	I	I	I	I	I	I	1320999-3	APPLICATOR SUBASSEMBLY, HDI		46						
-	I	I	I	I	I	I	690191-1	PLUG, NYLON		45						
-	I	I	I	I	I	I	1338660-1	RAM		44						
-	-	-	-	-	-	-	-	-		43						
-	-	-	-	-	-	-	-	-		42						
-	I	I	I	I	I	I	2-18024-6	SCR, BTN SKT HD CAP (M8 X 25.0)		41						
-	-	-	-	-	-	-	-	-		40						
-	I	I	I	I	I	I	690125-1	SHIM SUB-ASSY		39						
-	I	I	I	I	I	I	469367-1	SHIM		38						
-	I	I	I	I	I	I	879103-2	FINE ADJUST HEAD ASSEMBLY		37						
-	-	-	-	-	-	-	-	-		36						
-	-	-	-	-	-	-	-	-		35						
-	I	I	I	I	I	I	2-1320934-8	SUPPORT, TERMINAL		34						
-	2	2	2	2	2	2	1-18024-0	SCR, BTN SKT HD CAP (M4 X 20.0)		33						
-	I	I	I	I	I	I	18027-2	WASHER, FLAT, REG M4		32						
-	I	I	I	I	I	I	1-18023-2	SCR, SKT HD CAP M4 X 12.0		31						
-	I	I	I	I	I	I	1-1320908-0	SPACER, STRIP GUIDE		30						
-	I	I	I	I	I	I	1633073-2	STRIP GUIDE ASSEMBLY		29						
-	I	I	I	I	I	I	2-455888-2	SPACER, CRIMPER		28						
-	2	2	2	2	2	2	1-22284-0	SPRING, COMPRESSION		27						
-	I	I	I	I	I	I	356835-1	LEVER, DRAG RELEASE		26						
-	I	I	I	I	I	I	240792-1	DRAG, TERMINAL		25						
-	I	I	I	I	I	I	1320928-2	PLATE, STRIP GUIDE		24						
-	I	I	I	I	I	I	980371-4	SCR, SKT HD SHLDR 5.0 DIA X 6.0		23						
-	I	-	I	I	-	I	690472-2	STRIPPER		22						
-	I	I	I	I	I	I	1-18023-1	SCR, SKT HD CAP M4 X 10.0		21						
-	4	4	4	4	4	4	18025-2	WASHER, SPRG LOCK, REG M4		20						
-	-	-	-	-	-	-	690472-1	STRIPPER		19						
-	-	-	-	-	-	-	-	-		18						
-	I	-	-	-	I	-	1338684-1	SHEAR HOLDER, FRONT		17						
-	-	-	-	-	-	-	-	-		16						
-	-	-	-	-	-	-	-	-		15						
-	-	-	-	-	-	-	-	-		14						
-	-	-	-	-	-	-	-	-		13						
-	I	I	I	I	I	I	3-22280-3	SPRING, COMPRESSION		12						
-	I	I	I	I	I	I	356885-4	STOP, SHEAR		11						
-	-	-	I	-	I	I	1320921-1	SHEAR HOLDER, FRONT, CUT		10						
-	I	I	I	I	I	I	454276-1	FLOATING SHEAR, FRONT		9						
I	2	2	2	I	I	I	3-1633131-6	ANVIL, COMBINATION .080		8						
-	-	-	-	-	-	-	-	-		7						
-	-	-	-	-	-	-	-	-		6						
-	I	I	I	I	I	I	1-455889-4	DEPRESSOR, SHEAR		5						
-	I	I	I	I	I	I	238011-8	BLOCK, CRIMPER SPACER		4						
I	2	2	2	I	I	I	2-854830-1	CRIMPER, INSULATION SPECIAL		3						
-	I	I	I	I	I	I	455888-5	SPACER, CRIMPER		2						
I	2	2	2	I	I	I	3-456405-9	CRIMPER, WIRE PREMIUM		1						
-77	-76	-72	-71	-6	-2	-1	PART NO		DESCRIPTION	ITEM NO						
TYP. DIMENSIONS & TOLERANCES TO BE USED FOR IDENTIFICATION INFORMATION TYP. DIMENSIONS & TOLERANCES TO BE USED FOR IDENTIFICATION INFORMATION SHOULD BE CONTACTED FOR THE LATEST REVISION.																
DIMENSIONS		TOLERANCES UNLESS OTHERWISE SPECIFIED:		DWN	15FEB2007		tyco Electronics									
mm (IN)		0 PLC ± 1 PLC ± 2 PLC ± 3 PLC ± 4 PLC ±		CHN	L LOFFHOUSE		Tycos Electronics Harrisburg, PA 17105-3608									
				APVD	15FEB2007		NAME									
				PRODUCT SPEC				FINE ADJUST SIDE FEED HDI APPLICATOR								
				APPLICATION SPEC		See Table		SIZE								
				WEIGHT				CAGE CODE								
				CUSTOMER DRAWING				DRAWING NO								
								RESTRICTED TO								
								SCALE								
								SHEET								
								OF								
								REV								

Данный компонент на территории Российской Федерации

Вы можете приобрести в компании MosChip.

Для оперативного оформления запроса Вам необходимо перейти по данной ссылке:

<http://moschip.ru/get-element>

Вы можете разместить у нас заказ для любого Вашего проекта, будь то серийное производство или разработка единичного прибора.

В нашем ассортименте представлены ведущие мировые производители активных и пассивных электронных компонентов.

Нашей специализацией является поставка электронной компонентной базы двойного назначения, продукции таких производителей как XILINX, Intel (ex.ALTERA), Vicor, Microchip, Texas Instruments, Analog Devices, Mini-Circuits, Amphenol, Glenair.

Сотрудничество с глобальными дистрибьюторами электронных компонентов, предоставляет возможность заказывать и получать с международных складов практически любой перечень компонентов в оптимальные для Вас сроки.

На всех этапах разработки и производства наши партнеры могут получить квалифицированную поддержку опытных инженеров.

Система менеджмента качества компании отвечает требованиям в соответствии с ГОСТ Р ИСО 9001, ГОСТ РВ 0015-002 и ЭС РД 009

Офис по работе с юридическими лицами:

105318, г.Москва, ул.Щербаковская д.3, офис 1107, 1118, ДЦ «Щербаковский»

Телефон: +7 495 668-12-70 (многоканальный)

Факс: +7 495 668-12-70 (доб.304)

E-mail: info@moschip.ru

Skype отдела продаж:

moschip.ru

moschip.ru_4

moschip.ru_6

moschip.ru_9