



The diagram illustrates the construction of a Flexible Flat Cable (FFC) tape. It shows a cross-section of the tape with various layers and a ground plate. The layers are labeled as follows:

- GROUND PLATE
- SHIELDED AREA
- SHIELDING MATERIAL
- CONDUCTIVE ADHESIVE
- COPPER FILM (TIN PLATED)
- ADHESIVE
- BASE MATERIAL
- ADHESIVE
- INSULATED LAYER
- ADHESIVE
- SOFT COPPER FILM (NICKEL UNDER PLATED / GOLD PLATED)

The diagram also includes a table of material specifications:


MATERIAL NAME	MATERIAL
SHIELDING MATERIAL	POLYESTER TYPE
CONDUCTIVE ADHESIVE	POLYESTER TYPE
COPPER FILM (TIN PLATED)	ACRYLIC TYPE
ADHESIVE	POLYESTER TYPE
BASE MATERIAL	POLYESTER TYPE
ADHESIVE	POLYESTER TYPE
INSULATED LAYER	POLYESTER TYPE
ADHESIVE	POLYESTER TYPE
SOFT COPPER FILM (NICKEL UNDER PLATED / GOLD PLATED)	



MATERIAL NAME	MATERIAL	TOTAL THICKNESS AT GROUND PLATE (μm)	TOTAL THICKNESS AT CONDUCTOR EN (μm)
SHIELDING MATERIAL			
CONDUCTIVE ADHESIVE	POLYESTER TYPE		
COPPER FILM (TIN PLATED)		70	6
ADHESIVE	ACRYLIC TYPE	24	6
BASE MATERIAL	POLYESTER TYPE	12	6
ADHESIVE	ACRYLIC TYPE	24	6
INSULATED LAYER	POLYESTER TYPE	25	
ADHESIVE	POLYESTER TYPE	35	
SOFT COPPER FILM (NICKEL UNDER PLATED / GOLD PLATED)		35	35
ADHESIVE	POLYESTER TYPE	35	35
INSULATED LAYER	POLYESTER TYPE	25	25
ADHESIVE	POLYESTER TYPE	30	30
STIFFENER	POLYESTER TYPE	188	188
	TOTAL	503	313

- NOTES ⑤ PLEASE OVERLAP SHIELD AREA ON GROUND PLATE.
⑥ PLEASE INQUIRE OF HIROSE WHEN YOU WANT TO CHANGE THE SPECIFICATION AND THE THICKNESS COMPOSITION IN THIS PART.

Jul.1.2019 Copyright 2019 HIROSE ELECTRIC CO., LTD. All Rights Reserved.
In case of consideration for using Automotive equipment / device which demand high reliability, kindly contact our sales window correspondents.

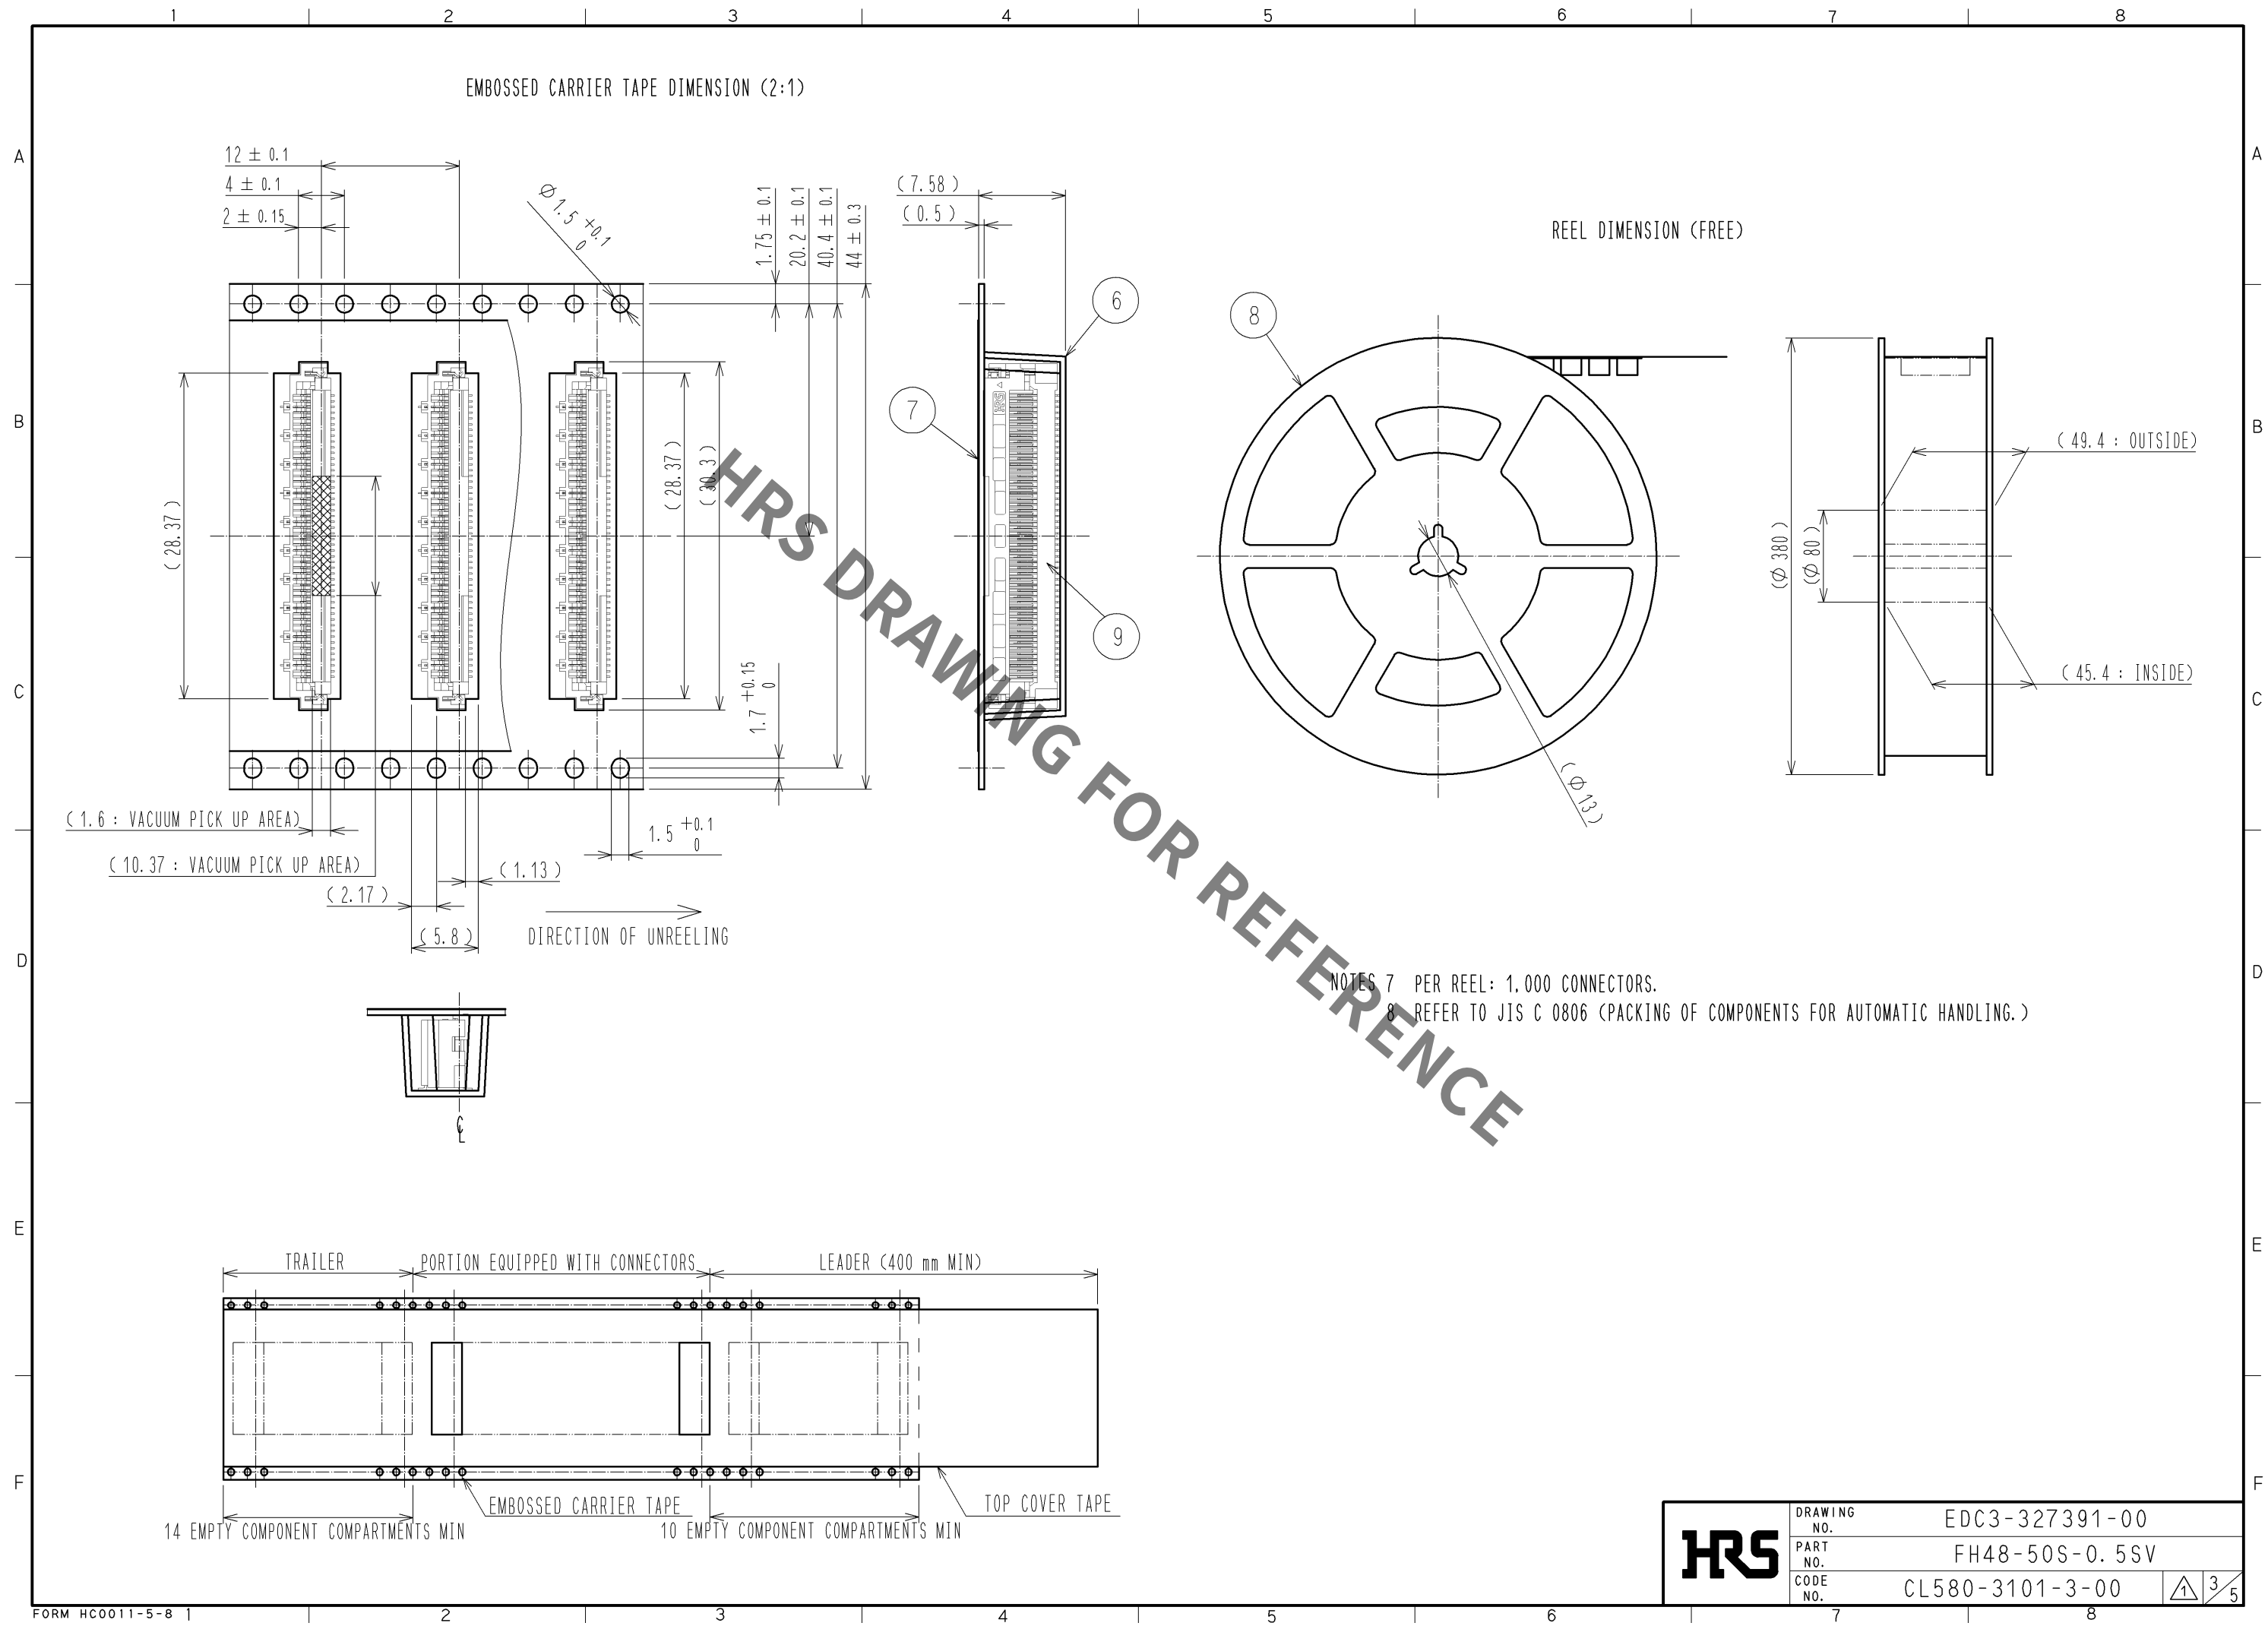

This connector requires delicate and careful handling.
Read through the instructions shown below and handle the connector properly.
Each values indicating here are for reference and may differ from standard value.

【 INSTRUCTIONS FOR MOUNTING ON THE BOARD 】

◆Warp of Board

Minimize warp of the board as much as possible.
Lead co-planarity is 0.1 mm or less.
Too much warp of the board may result in a soldering failure.

⚠ ◆Load to Connector

Do not add 1N or greater external force when unreel or pick and place the connector etc.
or it may get broken.
In addition, do not insert the FPC or operate the connector before mounting it.

⚠ 【 INSTRUCTIONS FOR PCB HANDLING AFTER MOUNTING THE CONNECTOR 】


◆Load to Board

- Splitting a large board into several pieces
- Screwing the board

Avoid the handling described above so that no force is exerted on the board during the assembly process.
Otherwise, the connector may become defective.

◆Amount of Warp

The warp of a 100 mm wide board should be 1 mm or less.
The warp of board suffers stress on connector and the connector may become defective.

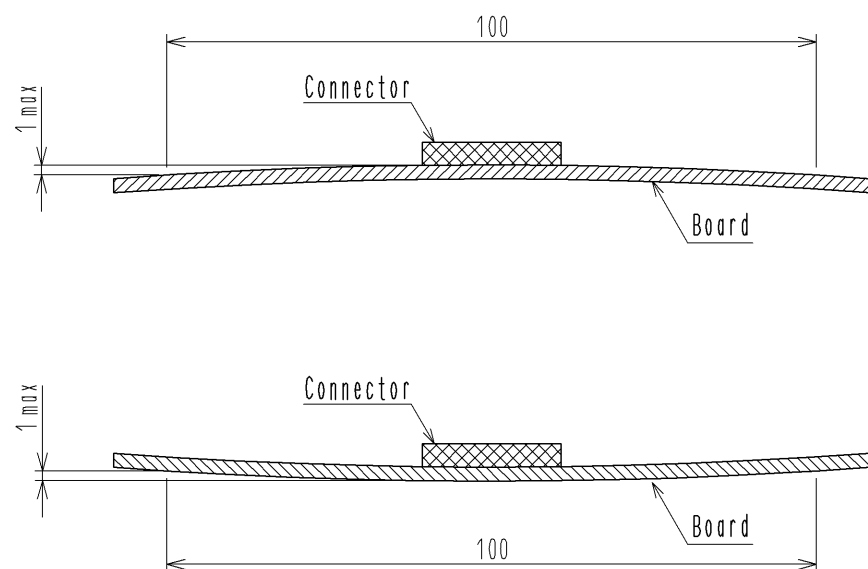


【 INSTRUCTIONS ON INSERTING FFC AND CONNECTION 】

◆Actuator position

Actuator position as delivered is ready for FFC insertion.
FFC locked position is that the FFC is inserted and the actuator is rotated by 90° .
Do not rotate the actuator before FFC is inserted.


◆Direction of contacts

Insert the FFC in a way that the FFC circuit exposed side faces to the housing,
and FFC stiffener side to the actuator.

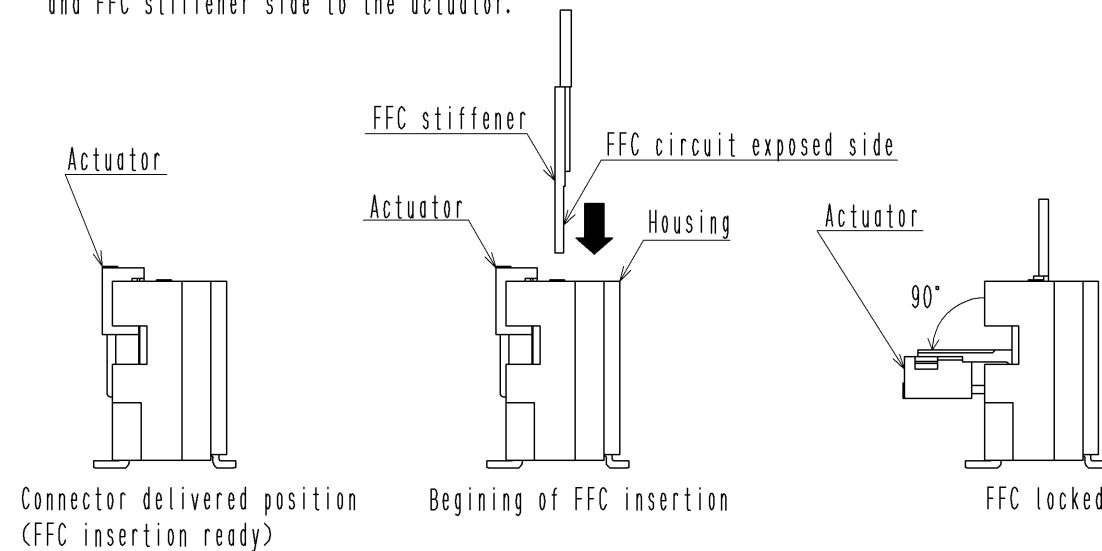

◆Inserting the FFC

Insert the FFC at a right angle to the connector and properly to the very end.

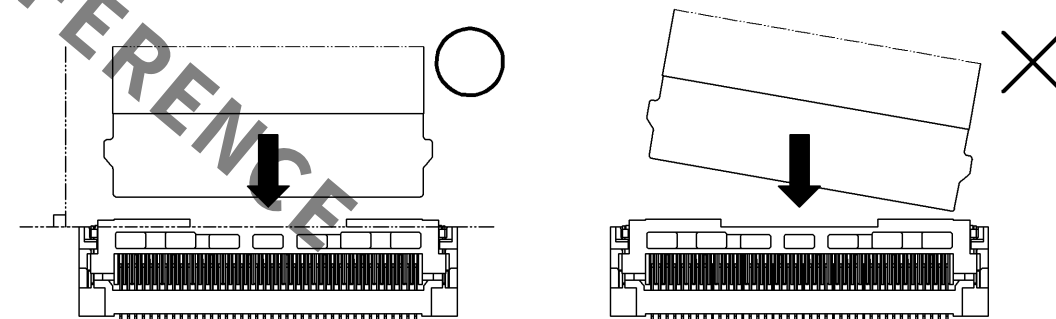

< INSTRUCTION MANUAL (1) >


HRS

DRAWING NO.	EDC3-327391-00
PART NO.	FH48-50S-0.5SV
CODE NO.	CL580-3101-3-00

4/5


◆Use of the actuator

1. The actuator rotates around the rotational axis as shown below. Rotate the actuator.
2. The actuator will not open more than 90°. Do not apply any force backward beyond this point.
It may cause contact deformation and actuator breakage.
3. Do not pinch or pick the actuator to lift it as shown below. Otherwise, it may break.
(Do not carry out any operation other than rotating the actuator as shown above.)

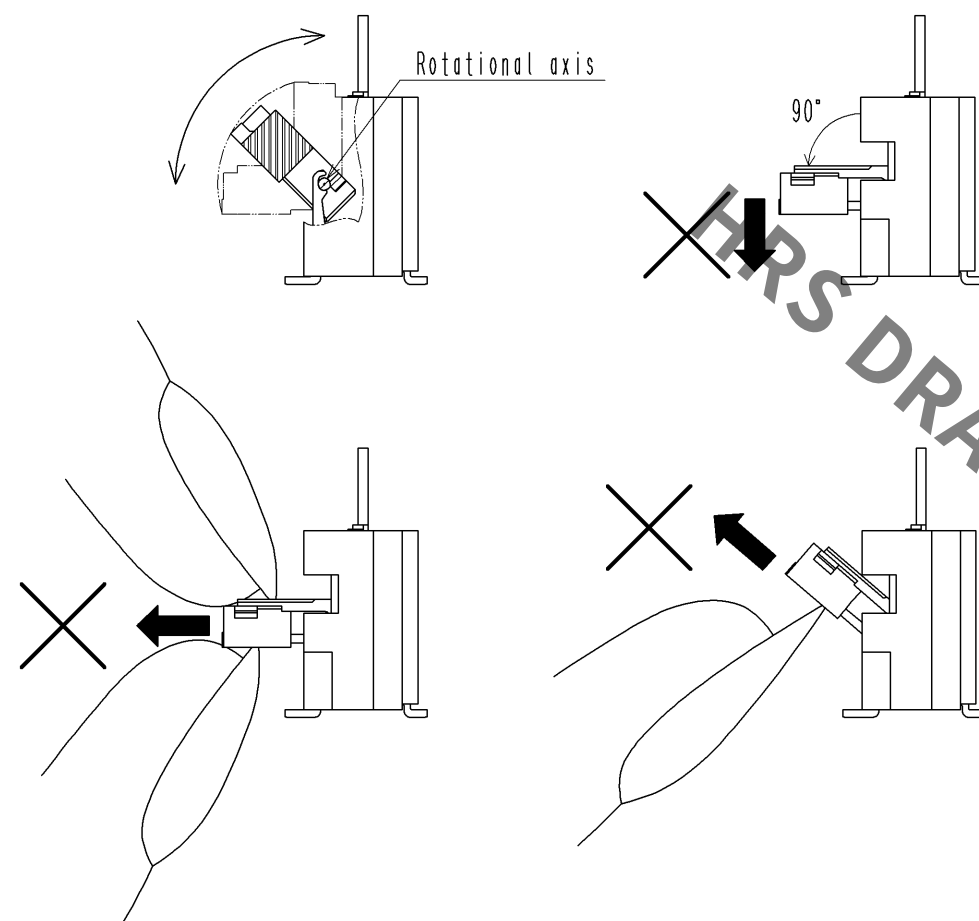

◆Checking the Locking Condition


1. In the locked condition, make sure that the actuator is horizontal on the board surface.
2. After FFC is locked, make sure the position of TAB and guides.

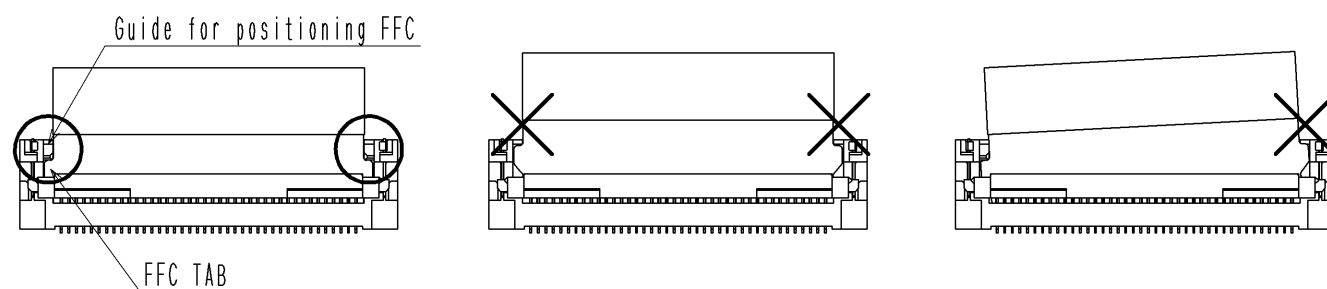

【 INSTRUCTION ON FFC LAYOUT CONNECTION 】


◆Load to FFC

Be very careful not to apply force to the connector directly after inserting FFC.
Otherwise, the connector or the FFC may break.
In particular, design the FFC layout with care not to bend it sharply in a direction of the actuator side near the insertion operating.

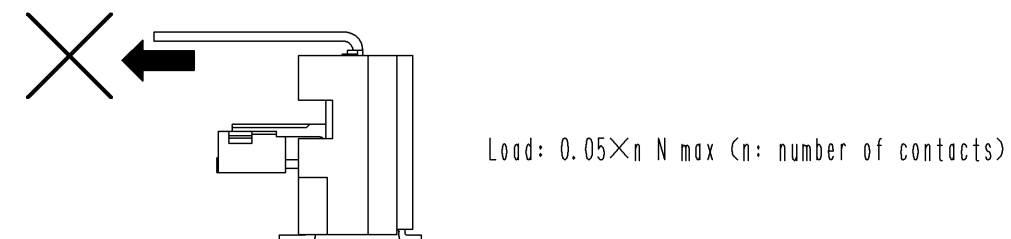

【 INSTRUCTIONS ON REMOVING FFC 】

- ◆For FFC removal, remove the FFC after unlocking the actuator.
Remove the FFC by about 7 degrees perpendicular to PCB.

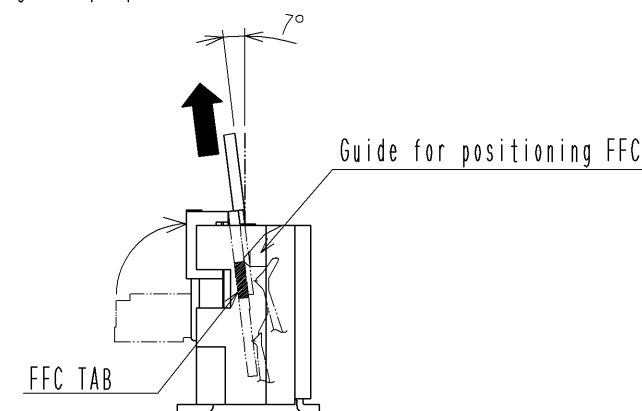

【 OTHER INSTRUCTIONS 】

◆Instructions on Manual Soldering

Follow the instructions shown below when soldering the connector manually during repair work, etc.

1. Do not perform reflow soldering or manual soldering with the FFC inserted into the connector.
2. Do not heat the connector excessively. Be very careful not to let the soldering iron contact any parts other than connector leads. Otherwise, the connector may be deformed or melt.
3. Do not use excessive solder (or flux).
If excessive solder (or flux) is used on the terminals, solder or flux may adhere to the contacts or rotating parts of the actuator, resulting in poor contact or a rotation failure of the actuator.

<INSTRUCTION MANUAL (2)>

HRS

DRAWING NO.	EDC3-327391-00
PART NO.	FH48-50S-0.5SV
CODE NO.	CL580-3101-3-00

Данный компонент на территории Российской Федерации

Вы можете приобрести в компании MosChip.

Для оперативного оформления запроса Вам необходимо перейти по данной ссылке:

<http://moschip.ru/get-element>

Вы можете разместить у нас заказ для любого Вашего проекта, будь то серийное производство или разработка единичного прибора.

В нашем ассортименте представлены ведущие мировые производители активных и пассивных электронных компонентов.

Нашей специализацией является поставка электронной компонентной базы двойного назначения, продукции таких производителей как XILINX, Intel (ex.ALTERA), Vicor, Microchip, Texas Instruments, Analog Devices, Mini-Circuits, Amphenol, Glenair.

Сотрудничество с глобальными дистрибьюторами электронных компонентов, предоставляет возможность заказывать и получать с международных складов практически любой перечень компонентов в оптимальные для Вас сроки.

На всех этапах разработки и производства наши партнеры могут получить квалифицированную поддержку опытных инженеров.

Система менеджмента качества компании отвечает требованиям в соответствии с ГОСТ Р ИСО 9001, ГОСТ РВ 0015-002 и ЭС РД 009

Офис по работе с юридическими лицами:

105318, г.Москва, ул.Щербаковская д.3, офис 1107, 1118, ДЦ «Щербаковский»

Телефон: +7 495 668-12-70 (многоканальный)

Факс: +7 495 668-12-70 (доб.304)

E-mail: info@moschip.ru

Skype отдела продаж:

moschip.ru

moschip.ru_4

moschip.ru_6

moschip.ru_9