

QUICK START GUIDE FOR DEMONSTRATION CIRCUIT 542

DUAL PHASE, DUAL OUTPUT SYNCHRONOUS BUCK CONVERTER

LTC3728EG

DESCRIPTION

Demonstration circuit 542 is a dual output, dual phase step down converter, which is controlled by the LTC3728EG. Output #1 can be configured for either 5.0V or 3.3V and output #2 can be configured for either 3.3V or 2.5V. The maximum load for both rails is 12A. The input voltage range of the DC542 is 8V to 24V.

The DC542 also contains a footprint for a 5.5V boost converter bias supply whose output is connected to EXTVCC. See the “Optional Bias Supply” section for more details.

Design files for this circuit board are available. Call the LTC factory.

Table 1. Performance Summary

PARAMETER	CONDITION	VALUE
Minimum Input Voltage		8V
Maximum Input Voltage		24V
V _{OUT1}	V _{IN} = 8V to 24V, I _{OUT} = 0A to 12A	5.0V ± 3% / 3.3V ± 3%
V _{OUT2}	V _{IN} = 8V to 24V, I _{OUT} = 0A to 12A	3.3V ± 3% / 2.5V ± 3%

QUICK START PROCEDURE

Demonstration circuit 542 is easy to set up. Refer to Figure 1 for the proper setup of the measurement equipment and follow the procedure below:

1. With power off, connect the input voltage source and the load. The load cables should be sized for 12 Amps and the input cables should be sized for 15 Amps.
2. The jumpers should be placed in their default positions as shown in Figure 1.
3. If a constant current electronic load is used, preset the load current to about 1A or less before applying power to the input. Otherwise, the foldback current limit function of the LTC3728 may be triggered during startup.
4. Apply power to the input and set the input voltage to 12V. The voltage for output #1 should be 5.0V ± 3% and the voltage for out-

put #2 should be 3.3V ± 3%. Increase the load on both rails to 12.0A. The two outputs should still be within regulation.

5. Keep the input voltage at 12.0V and the load at 12.0A for both rails. Measure the DC input current. It should be less than 9.4A.
6. Remove input power from the converter. Set the voltage for output #1 to 3.3V using jumper JP5 and the voltage for output #2 to 2.5V using JP4. Repeat step #4. The voltage for output #1 should be 3.3V ± 3% and the voltage for output #2 should be 2.5V ± 3%.
7. Adjust the input voltage and load current to the desired levels within their limits and observe the regulation, output ripple, load step response, efficiency and other parameters.

QUICK START GUIDE FOR DEMONSTRATION CIRCUIT 542

DUAL PHASE, DUAL OUTPUT SYNCHRONOUS BUCK CONVERTER

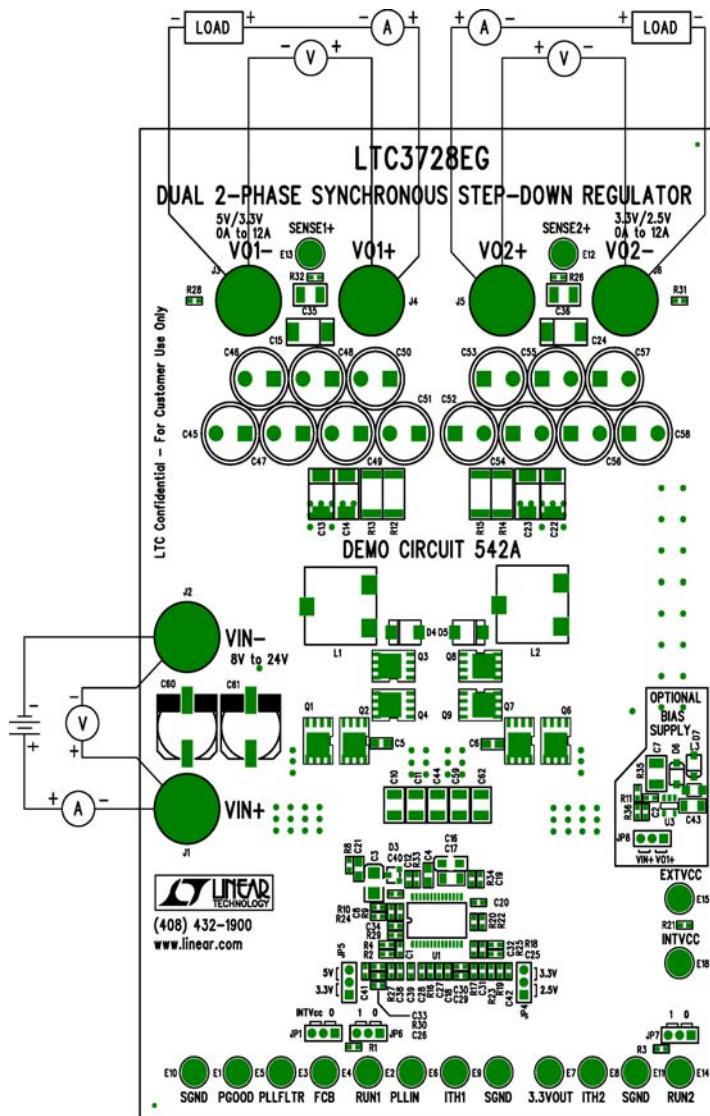


Figure 1. Setup for measurement equipment.

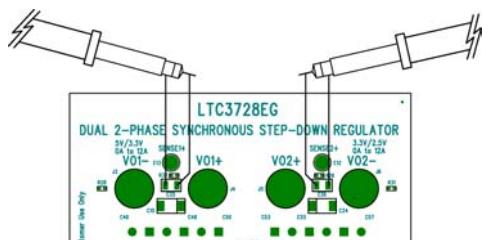


Figure 2. Output ripple measurement.

Note: When measuring the output voltage ripple, care must be taken to avoid a long ground lead on the oscilloscope probe. Connect the probe tip to VOUT and the probe's ground ring to GND. Make the connections as short as possible. For output #1, measure the ripple directly across C35 and for output #2, measure across C36. See Figure 2.

QUICK START GUIDE FOR DEMONSTRATION CIRCUIT 542

DUAL PHASE, DUAL OUTPUT SYNCHRONOUS BUCK CONVERTER

OPTIONAL BIAS SUPPLY

The DC542 also contains a footprint for a 5.5V boost converter bias supply whose output is connected to EXTVCC. The input of this bias supply can be connected to one of the following:

- 1) VIN, if $VIN < 5V$
- 2) VOUT1 for $VOUT1 < 5V$ and $VIN > 5V$.

The latter connection will provide higher efficiency. If this bias supply is stuffed, please keep the following points in mind:

- 1) If the input voltage of the optional bias supply is connected to VIN, then the board will need to be slightly modified to ensure that the voltage on the EXTVCC pin of the LTC3728EG does not exceed the voltage on the VIN pin. These are the modifications:
 - a) Remove resistor R8.
 - b) Tie the (+) end of C3 to the (+) end of C21.
- 2) If the input voltage of the optional bias supply is connected to output #1, precautions need


to be taken to make sure that the voltage on the EXTVCC pin of the LTC3728EG does not exceed the voltage on the VIN pin during turn-on of the main converter. Follow the steps below:

- a) Put jumper JP6 in the "0" position to tie the RUN1 signal to ground.
 - b) Turn-on the main input voltage and set to desired level.
 - c) Put jumper JP6 in the "1" position to turn-on output #1.
- 3) If a different power MOSFET configuration is used or the switching frequency is increased, then be sure to measure the current flowing into the EXTVCC pin and make sure the current will not exceed the maximum output current of the bias supply. At 3.3V input, the maximum output current of the bias supply is 200mA.

For further assistance, contact the factory.


QUICK START GUIDE FOR DEMONSTRATION CIRCUIT 542

DUAL PHASE, DUAL OUTPUT SYNCHRONOUS BUCK CONVERTER

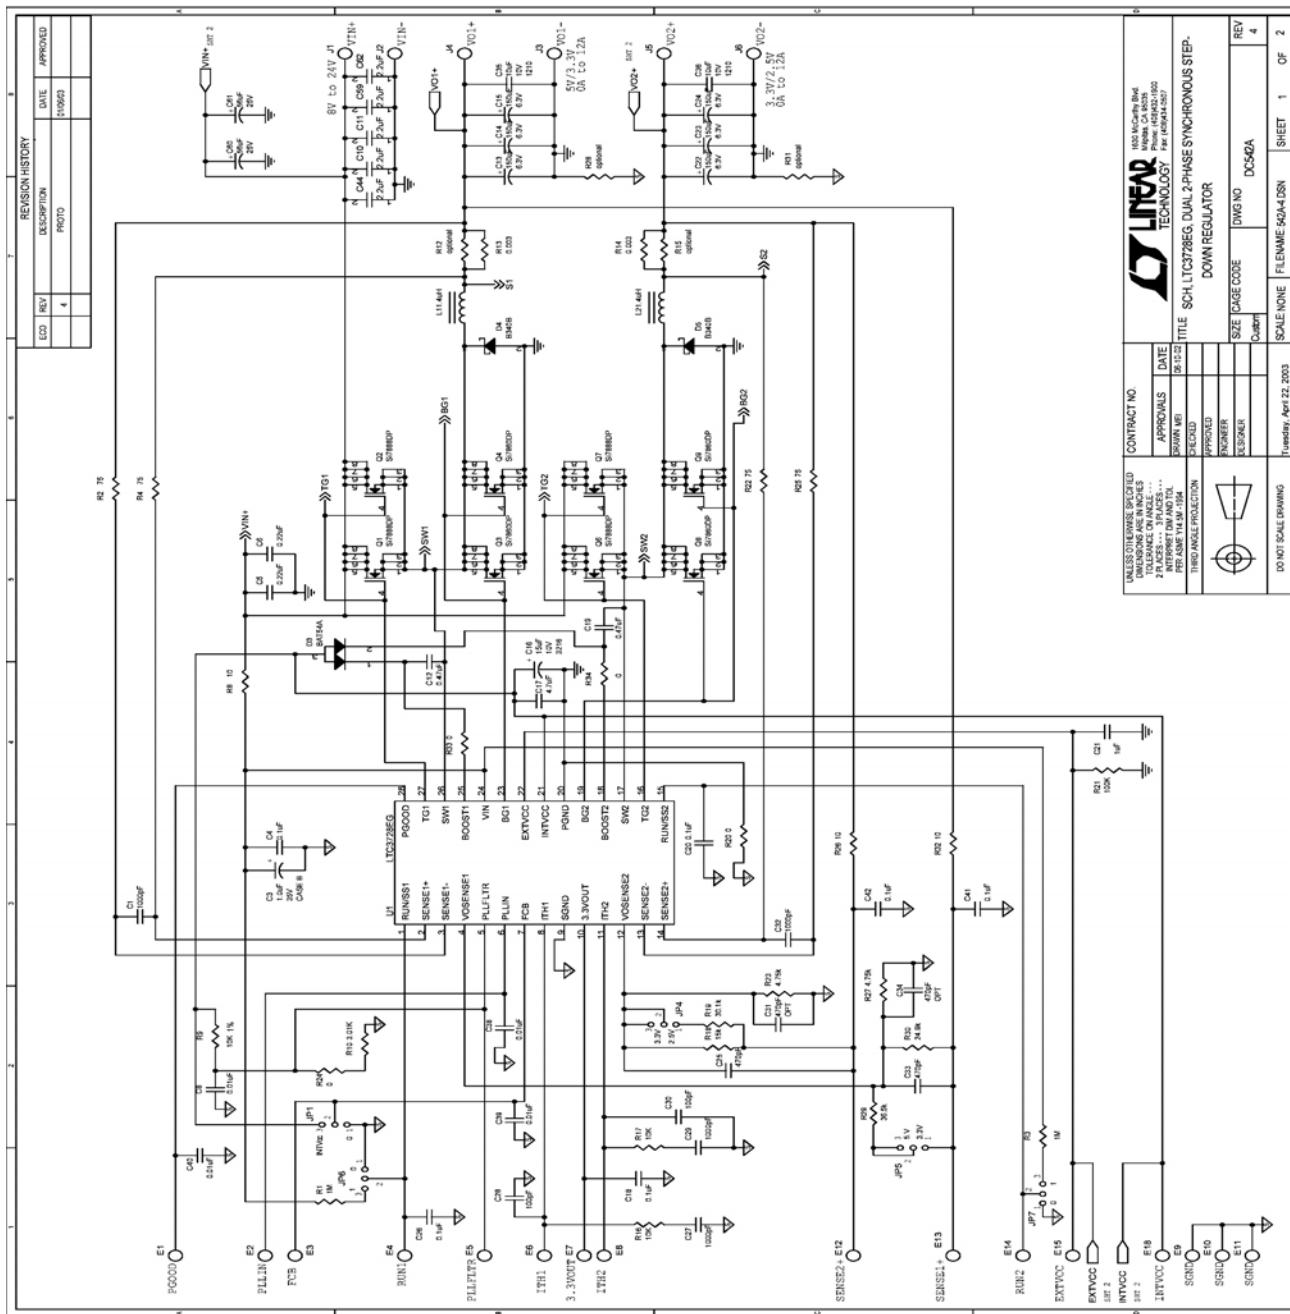

QUICK START GUIDE FOR DEMONSTRATION CIRCUIT 542

DUAL PHASE, DUAL OUTPUT SYNCHRONOUS BUCK CONVERTER

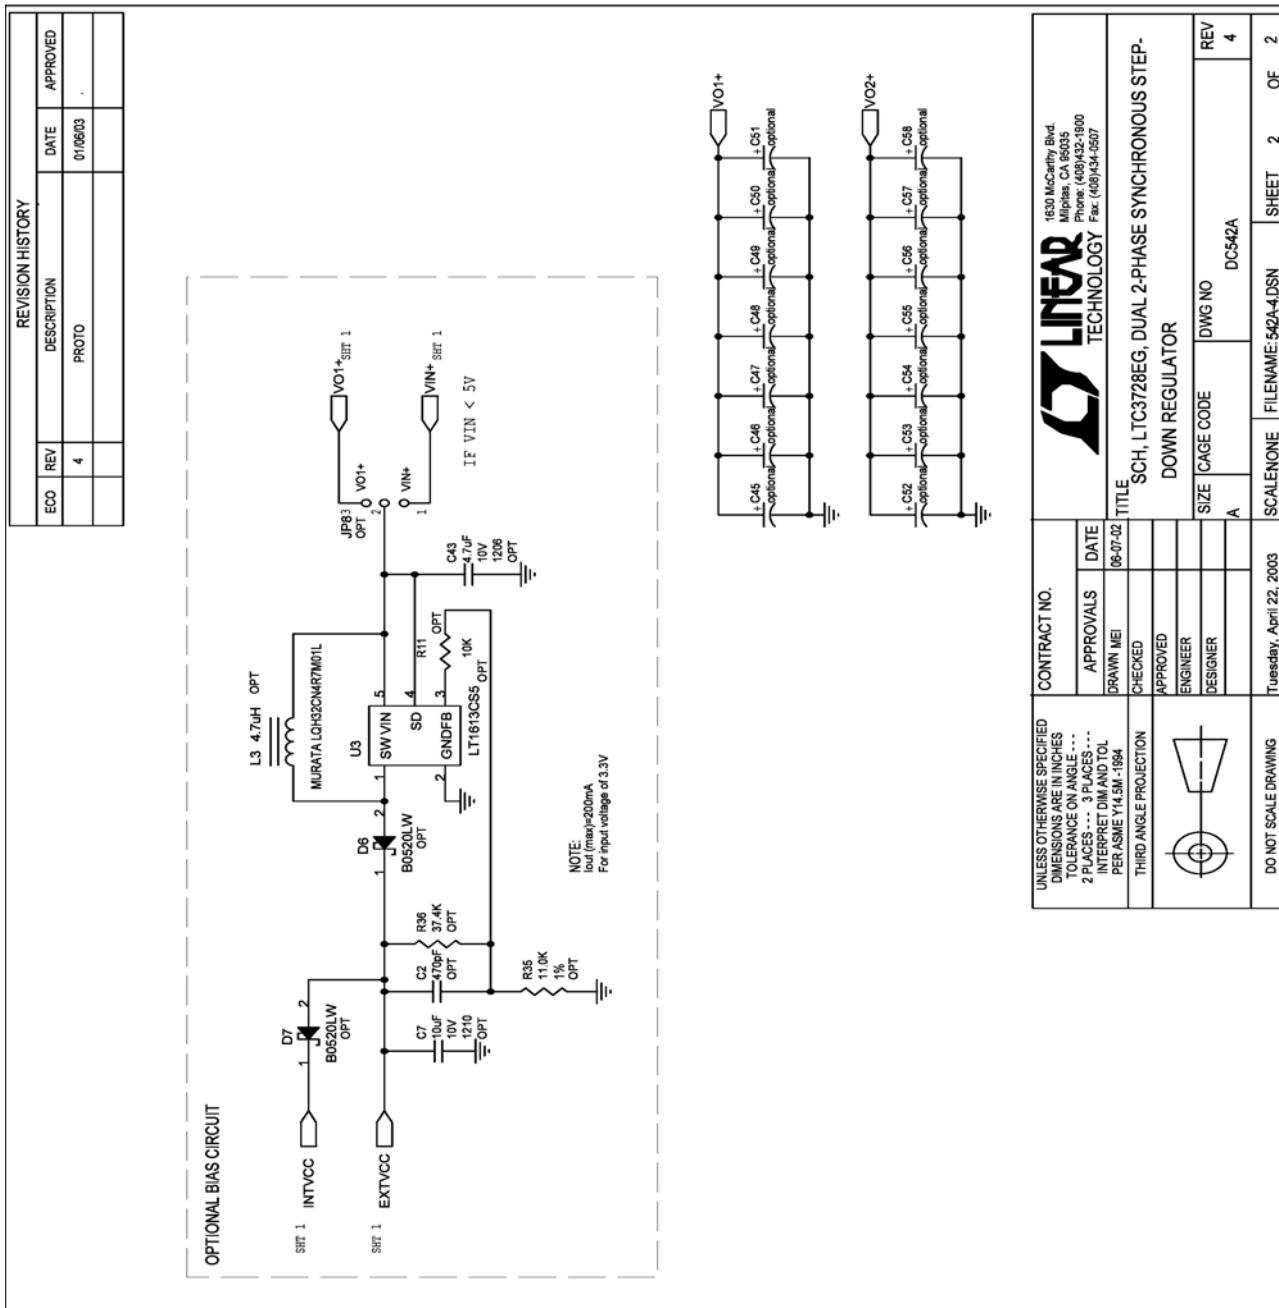

Данный компонент на территории Российской Федерации**Вы можете приобрести в компании MosChip.**

Для оперативного оформления запроса Вам необходимо перейти по данной ссылке:

<http://moschip.ru/get-element>

Вы можете разместить у нас заказ для любого Вашего проекта, будь то серийное производство или разработка единичного прибора.

В нашем ассортименте представлены ведущие мировые производители активных и пассивных электронных компонентов.

Нашей специализацией является поставка электронной компонентной базы двойного назначения, продукции таких производителей как XILINX, Intel (ex.ALTERA), Vicor, Microchip, Texas Instruments, Analog Devices, Mini-Circuits, Amphenol, Glenair.

Сотрудничество с глобальными дистрибуторами электронных компонентов, предоставляет возможность заказывать и получать с международных складов практически любой перечень компонентов в оптимальные для Вас сроки.

На всех этапах разработки и производства наши партнеры могут получить квалифицированную поддержку опытных инженеров.

Система менеджмента качества компании отвечает требованиям в соответствии с ГОСТ Р ИСО 9001, ГОСТ Р В 0015-002 и ЭС РД 009

Офис по работе с юридическими лицами:

105318, г.Москва, ул.Щербаковская д.3, офис 1107, 1118, ДЦ «Щербаковский»

Телефон: +7 495 668-12-70 (многоканальный)

Факс: +7 495 668-12-70 (доб.304)

E-mail: info@moschip.ru

Skype отдела продаж:

moschip.ru
moschip.ru_4

moschip.ru_6
moschip.ru_9