

PROPER USE GUIDELINES

Cumulative Trauma Disorders can result from the prolonged use of manually powered hand tools. Hand tools are intended for occasional use and low volume applications. A wide selection of powered application equipment for extended-use, production operations is available.

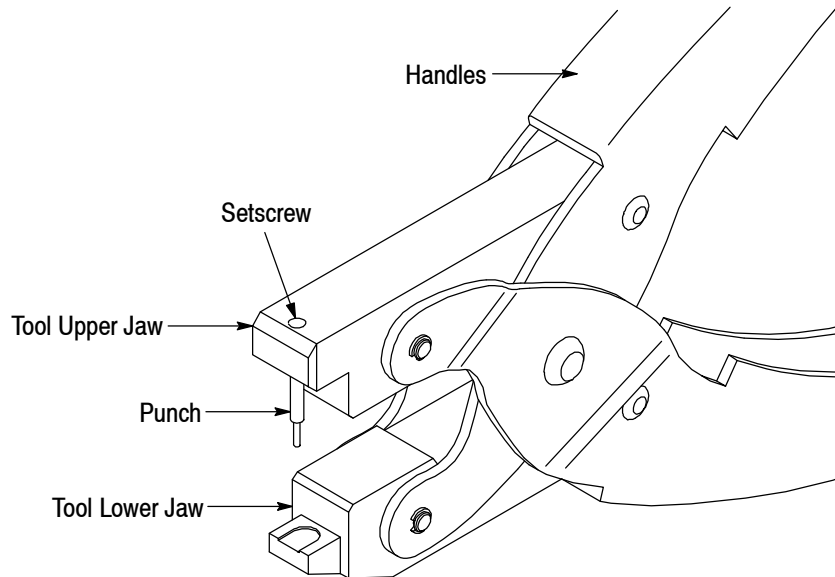


Figure 1

1. INTRODUCTION

Clinching Tool 91117-6 is designed to install external keys into Mini-Box pin headers to provide polarization of mating connectors. Read these instructions thoroughly before using the tool.

NOTE



Dimensions in this instruction sheet are in metric units [with U.S. customary units in brackets]. Figures are not drawn to scale.

Reasons for reissue of this instruction sheet are provided in Section 6, REVISION SUMMARY.

handles and measure the distance between the punch tip and the lower jaw. If necessary, adjust the setscrew to obtain a clearance of 0.508 mm [.020 in.]. See Figure 2.

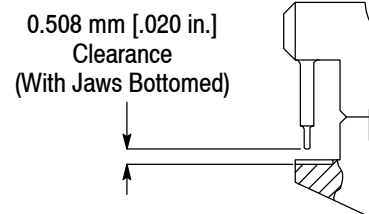


Figure 2

2. DESCRIPTION (Figure 1)

The clinching tool features an upper jaw and a lower jaw. The upper jaw contains a replaceable punch which clinches the key in the pin header. The lower jaw supports the rivet and header when the tool handles are closed.

3. CLINCHING PROCEDURE

Before starting, be sure that the pin header and external key are compatible. Also, close the tool

Refer to Figure 3, and proceed as follows:

1. Determine the keying position required.
2. Place key into cavity at desired position.

CAUTION



The clinching tool can be used for simultaneous installation of key and rivet into brown pin headers. However, for black or gray pin headers, the key must be inserted using Clinching Tool 91117-2 (see 408-7894), before securing key with rivet using this clinching tool.

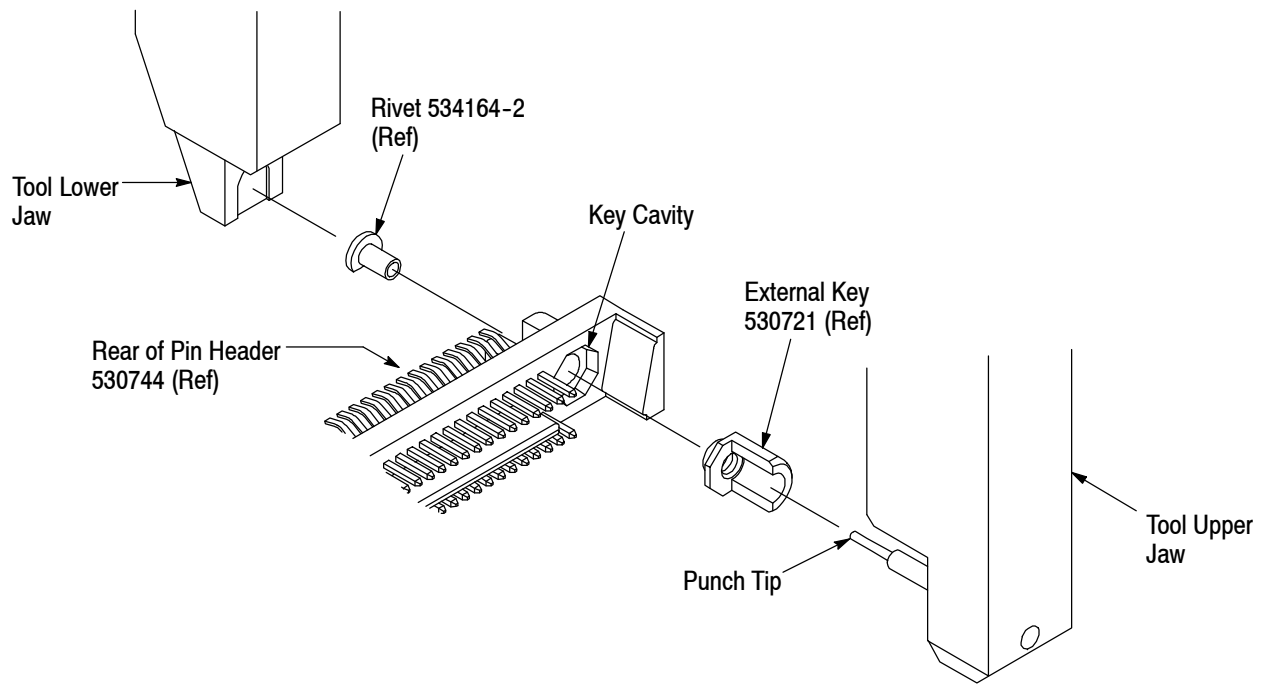


Figure 3

3. Open tool handles and position tool perpendicular to pin header.
4. Place lower jaw against rivet and rear of header, and close tool punch tip through key mounting hole.
5. Squeeze tool handles together until key presses into cavity and jaws are bottomed.
6. Remove tool and, if required, repeat these procedures on the other end of header. *Be sure that the key is properly oriented.*

4. MAINTENANCE AND INSPECTION

The clinching tool should be inspected immediately upon arrival at your facility to ensure that the tool has not been damaged during handling. The tool should also be inspected at regularly scheduled intervals to ensure proper operation of the tool.

4.1. Daily Maintenance

It is recommended that each operator of the tool be made aware of—and responsible for—the following steps of daily maintenance.

1. Remove dust, moisture, and other contaminants with a clean brush, or a soft lint-free cloth.
2. Make sure that the proper retaining pins are in place and secured with the proper retaining rings.

3. Be sure all pins, pivot points, and bearing surfaces are protected with a THIN coat of SAE 20 motor oil. DO NOT oil excessively.

5. REPLACEMENT AND REPAIR

Customer-replaceable parts are listed in Figure 4. A complete inventory should be stocked and controlled to prevent lost time when replacement of parts is necessary. Parts other than those listed should be replaced by Tyco Electronics to ensure quality and reliability. Order replacement parts through your representative, or call 1-800-526-5142, or send a facsimile of your purchase order to 717-986-7605, or write to:


CUSTOMER SERVICE (038-035)
TYCO ELECTRONICS CORPORATION
PO BOX 3608
HARRISBURG PA 17105-3608

For customer repair service, call 1-800-526-5136.

6. REVISION SUMMARY

Revisions to this instruction sheet include:

- Updated document to corporate requirements

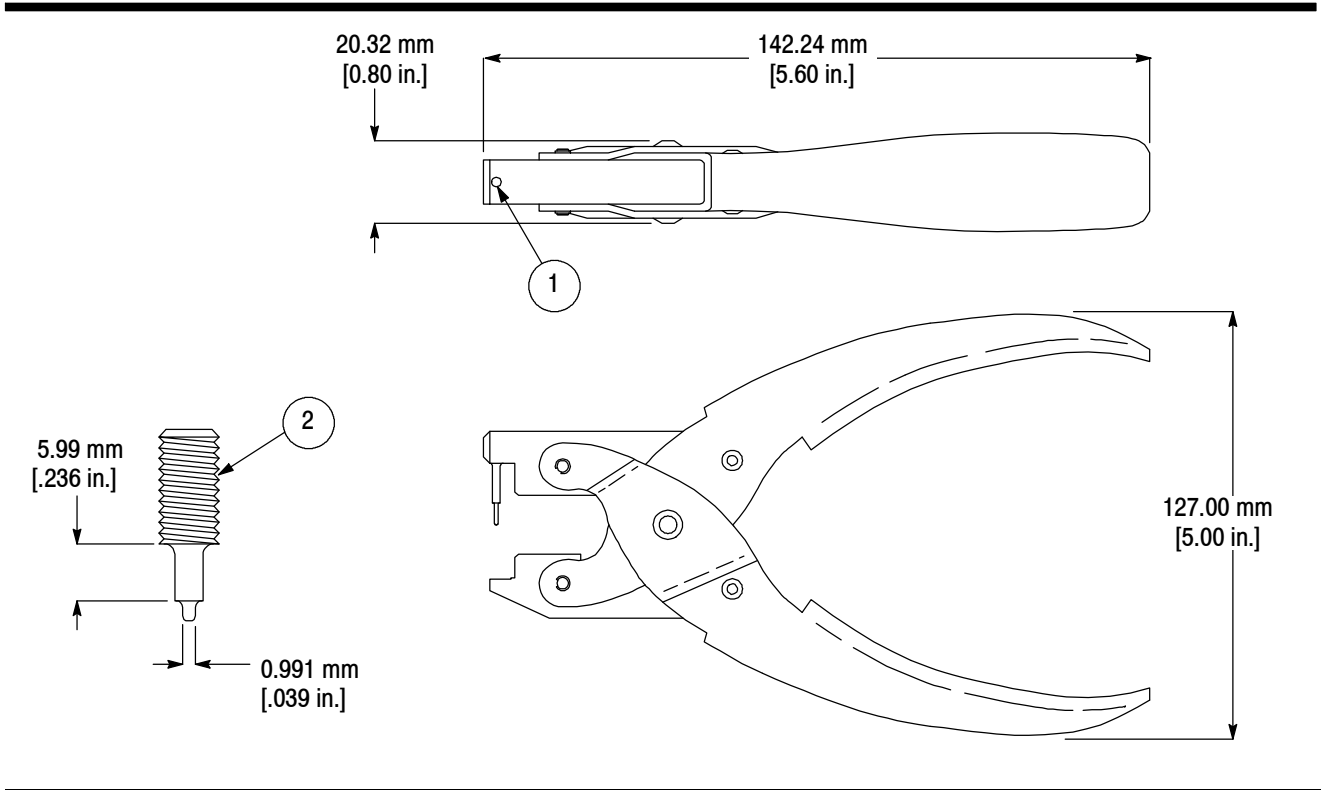

CUSTOMER-REPLACEABLE PARTS			
ITEM	PART NUMBER	DESCRIPTION	QTY PER TOOL
1	2-21006-7	SETSCREW, Socket Head, 6-32	1
2	313497-1	PUNCH	1

Figure 4

Данный компонент на территории Российской Федерации

Вы можете приобрести в компании MosChip.

Для оперативного оформления запроса Вам необходимо перейти по данной ссылке:

<http://moschip.ru/get-element>

Вы можете разместить у нас заказ для любого Вашего проекта, будь то серийное производство или разработка единичного прибора.

В нашем ассортименте представлены ведущие мировые производители активных и пассивных электронных компонентов.

Нашей специализацией является поставка электронной компонентной базы двойного назначения, продукции таких производителей как XILINX, Intel (ex.ALTERA), Vicor, Microchip, Texas Instruments, Analog Devices, Mini-Circuits, Amphenol, Glenair.

Сотрудничество с глобальными дистрибьюторами электронных компонентов, предоставляет возможность заказывать и получать с международных складов практически любой перечень компонентов в оптимальные для Вас сроки.

На всех этапах разработки и производства наши партнеры могут получить квалифицированную поддержку опытных инженеров.

Система менеджмента качества компании отвечает требованиям в соответствии с ГОСТ Р ИСО 9001, ГОСТ РВ 0015-002 и ЭС РД 009

Офис по работе с юридическими лицами:

105318, г.Москва, ул.Щербаковская д.3, офис 1107, 1118, ДЦ «Щербаковский»

Телефон: +7 495 668-12-70 (многоканальный)

Факс: +7 495 668-12-70 (доб.304)

E-mail: info@moschip.ru

Skype отдела продаж:

moschip.ru

moschip.ru_4

moschip.ru_6

moschip.ru_9