

customer manual

ORIGINAL INSTRUCTIONS

SAFETY PRECAUTIONS READ THIS FIRST!	2
1. INTRODUCTION	3
2. DESCRIPTION	4
2.1. Functional Description	4
2.2. Electrical Description	6
2.3. Machine Guard	7
3. RECEIVING INSPECTION AND INSTALLATION	7
3.1. Receiving Inspection	7
3.2. Installation	7
3.3. Considerations Affecting Placement of Bench Machines (Figure 8)	8
4. OPERATION	9
4.1. Control Panel Operation	9
4.2. Applicator Installation	9
4.3. Setup	10
4.4. Mode Selection and Operation	10
4.5. Adjusting the Motor Speed	12
4.6. Crimp Height Adjustment	12
4.7. End-Feed/Side-Feed Applicator Conversion	12
5. PREVENTATIVE MAINTENANCE	12
5.1. Cleaning	13
5.2. Lubrication	13
6. ADJUSTMENTS	14
6.1. Measuring the Shut Height	14
6.2. Shut-Height Adjustment	14
6.3. Crimp Height Adjustment Using Precision Adjustment Mechanism	15
6.4. Guard Insert Adjustment	16
7. MACHINE OPTIONS AND INSTALLATION OF THE AIR FEED VALVE ASSEMBLY	17
8. TROUBLESHOOTING	19
8.1. Error Codes	19
8.2. Diagnostics	19
9. SOFTWARE VERSION IDENTIFICATION	20
10. DISPOSAL	20
11. REPLACEMENT AND REPAIR	20
12. RoHS INFORMATION	20
13. REVISION SUMMARY	20

SAFETY PRECAUTIONS — AVOID INJURY

Safeguards are designed into this application equipment to protect operators and maintenance personnel from most hazards during equipment operation. However, certain safety precautions must be taken by the operator and repair personnel to avoid personal injury, as well as damage to the equipment. For best results, application equipment must be operated in a dry, dust-free environment. Do not operate equipment in a gaseous or hazardous environment.

Carefully observe the following safety precautions before and during operation of the equipment:



Always wear approved eye protection while operating equipment.



Always wear appropriate ear protection while using equipment.



Moving parts can crush and cut. Always keep guard(s) in place during normal operation.



Always insert power plug into a properly grounded receptacle to avoid electrical shock.



Always turn off the main power switch and disconnect the electrical cord from the power source when performing repair or maintenance on the equipment.



Do not operate the equipment without guards in place.



Lift point for equipment.



Use caution when working with this equipment.



Never insert hands into installed equipment. Never wear loose clothing or jewelry that may catch in moving parts of the equipment.



Never alter, modify, or misuse the equipment.



Never enter the electrical enclosure immediately after turning off the machine power switch and disconnecting the electrical cord from the power source. High residual voltages may be present in the electrical enclosure. Read the warning label on the electrical enclosure lid before entering the enclosure.



Never stare at the bright light used for machine lighting. Bright light can damage the eye.



Never use the machine for other than what it is designed, which is crimping terminals to wire. Do not use the machine for crushing any items.

TOOLING ASSISTANCE CENTER

CALL TOLL FREE 1-800-722-1111 (CONTINENTAL UNITED STATES AND PUERTO RICO ONLY)

The **Tooling Assistance Center** offers a means of providing technical assistance when required. In addition, Field Service Specialists are available to provide assistance in the adjustment or repair of the application equipment when problems arise which your maintenance personnel are unable to correct.

INFORMATION REQUIRED WHEN CONTACTING THE TOOLING ASSISTANCE CENTER

When calling the Tooling Assistance Center regarding service to equipment, it is suggested that a person familiar with the device be present with a copy of the manual (and drawings) to receive instructions. Many difficulties can be avoided in this manner.

When calling the Tooling Assistance Center, be ready with the following information:

1. Customer name
2. Customer address
3. Person to contact (name, title, telephone number, and extension)
4. Person calling
5. Equipment number (and serial number if applicable)
6. Product part number (and serial number if applicable)
7. Urgency of request
8. Nature of problem
9. Description of inoperative component(s)
10. Additional information/comments that may be helpful



CQM II
Host Module



TERMINATOR	DESCRIPTION
2217000-1	AMP-O-ELECTRIC Model G II
2217000-2	AMP-O-ELECTRIC Model G II (With CQM II)

Figure 1

1. INTRODUCTION



Read and understand the entire manual before using the equipment.

When reading this manual, pay particular attention to DANGER, CAUTION, and NOTE statements.



DANGER

Denotes an imminent hazard that may result in moderate or severe injury.



CAUTION

Denotes a condition that may result in product or equipment damage.



NOTE

Highlights special or important information.

This manual contains information on operation, preventive maintenance, and adjustments of the AMP-O-LECTRIC Model G II Terminator, PN 2217000-[]. See Figure 1.

Descriptions in this manual pertain to the controls and adjustments on the AMP-O-LECTRIC Model G II Terminator machines only.

The various applicators that can be used in the machines are covered in applicator instruction sheets packaged with each applicator. Applicator instruction sheets provide information on applicator installation, care, and adjustment.

The specifications and requirements for the AMP-O-LECTRIC Model G II Terminator Machine are as listed below:

- **Deflection:** 0.13 mm [.0046 in.] Maximum per 4,448 Newtons [1,000 lb] Crimp Force
- **Noise:** Less than 82 dBa Typical at operator position with standard mechanical feed applicator
- **Weight:** 77.3 Kilograms [230 lb]
- **Height:** 585 mm [23 in.] without reel supports
- **Electrical:** 100-240 Vac, 50/60 Hz, Single-Phase Current. Operating current is 3 amp.
- **Air:** 620-760 kPa [90-100 psi], 2.83 liters/sec (6 scfm) When required for use with air-feed applicators
- **Physical Environment: Temperature:** 4.45° to 40°C [40° to 104°F]
Relative Humidity: Less than 95% (non-condensing)
Transportation and Storage: Store in a clean, dry environment after coating all surfaces lightly with a rust preventing oil.

2. DESCRIPTION

The AMP-O-LECTRIC Model G II Terminator Machine was designed to be used as stand-alone semi-automatic bench units. They are assembled with metric hardware.



NOTE

Measurements are in metric units [followed by U.S. customary units in brackets] unless otherwise indicated. Some commercial items may contain non-metric hardware.

These machines accept a wide variety of miniature (mini) quick-change applicators, with minor adjustments, thus providing a great selection of terminals for many applications. Figure 2 lists changeover cams required to run 1 1/8-in. stroke cams (for AMP-O-LECTRIC Model “K” terminating machines).

ORIGINAL APPLICATOR	FEED TYPE	CHANGEOVER CAMS FOR THE MACHINES (1 5/8-in. [41.25mm] Stroke Machines)
1 1/8-in. Stroke Applicator for Model “K” Terminating Machine	Pre-Feed	690602-6
	Post-Feed	690501-4
Heavy-Duty Industrial (HD-I) Applicator	Pre-Feed/Post-Feed	Refer to the HD-I Applicator customer drawing for part numbers.

Figure 2

2.1. Functional Description

These machines provide the force required to crimp terminals in the applicator. A terminal is attached to the wire by placing the wire in the crimp area and pressing the foot switch. The machine consists of four functional areas:

1. The **motor group** includes an AC motor which drives a crankshaft. See Figure 3 and Figure 4. The motor is activated each cycle and rotates the crankshaft one full revolution. A nut on the crankshaft allows the motor and crankshaft to be cycled manually. The nut is accessed via an interlocked panel in the top cover.

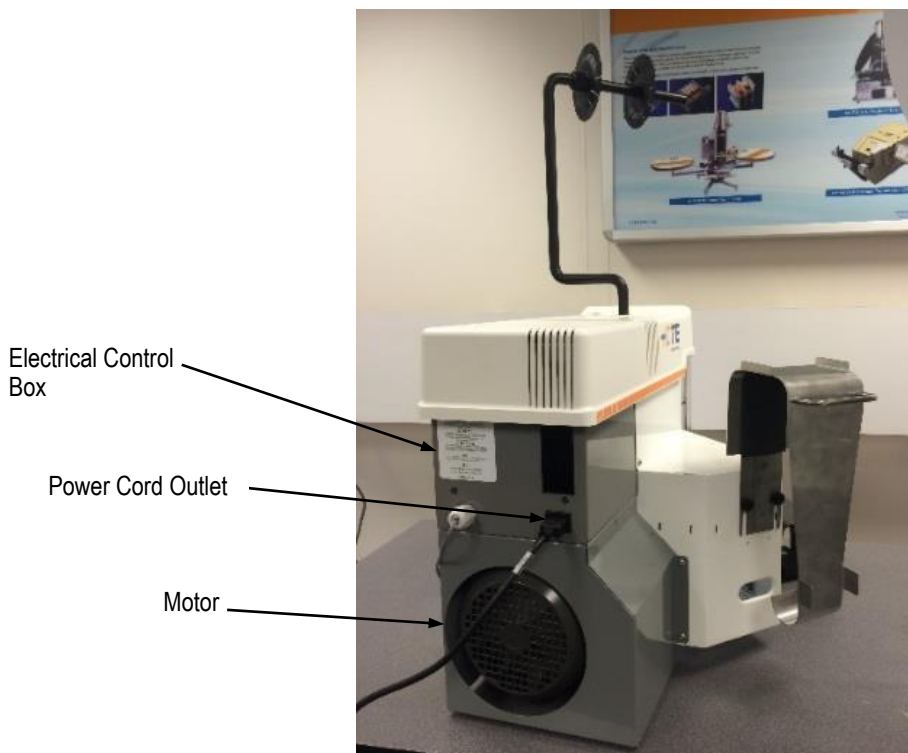


Figure 3



Figure 4

2. The **crankshaft-ram group** conveys the motor rotational force to the up-and-down action of the ram for driving the applicator during the crimping cycle.
3. The **base plate** provides the mounting surface on which the applicator is installed. The quick-release latching feature permits fast, easy installation and removal of the applicator. See Figure 5.
4. The **crimp height adjustment group** uses an eccentric located in the ram linkage, along with detented stops in the mechanism to adjust the crimp height. Indexing the mechanism in either direction will change the crimp height in increments of approximately 0.01 mm [.0004 in.] per step. Refer to Figure 5 for the Precision Crimp Height Adjustment Mechanism.

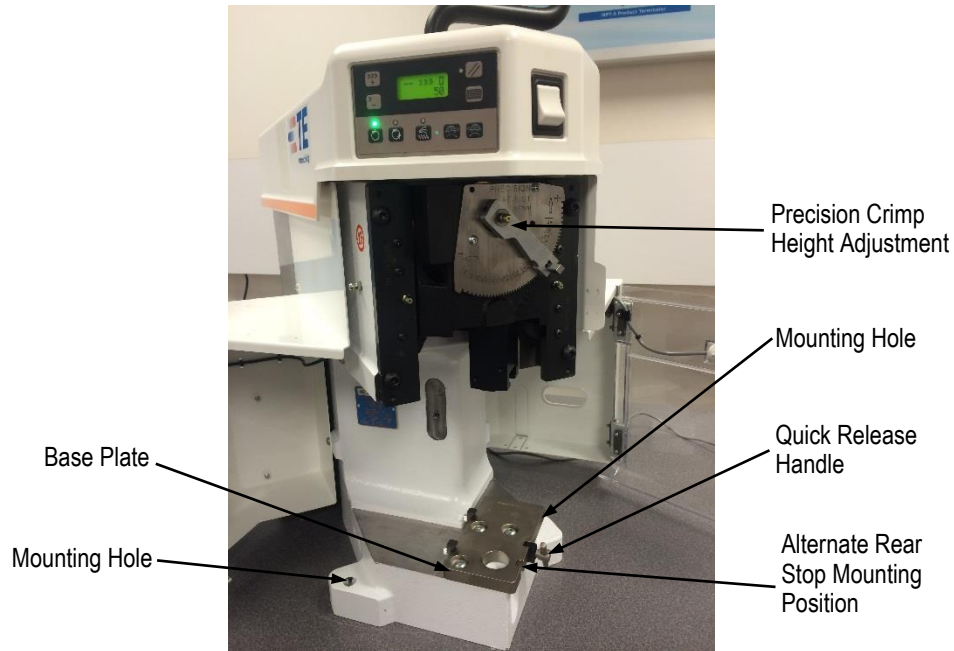


Figure 5

2.2. Electrical Description

The 2217000-[] machine electrical components consist of the operator control panel, the motor, and the CPU/motor controller and safety circuit package. The machine operates on 100-240 Vac, 50-60 Hz, single-phase current with ground. The machine will automatically detect the supply voltage and adjust the controller accordingly.

The operator control panel (Figure 6) is mounted on the top of the machine frame. The control panel consists of a nine button membrane key pad and a two line by eight column display. The membrane key pad has icons representing the function of each button.

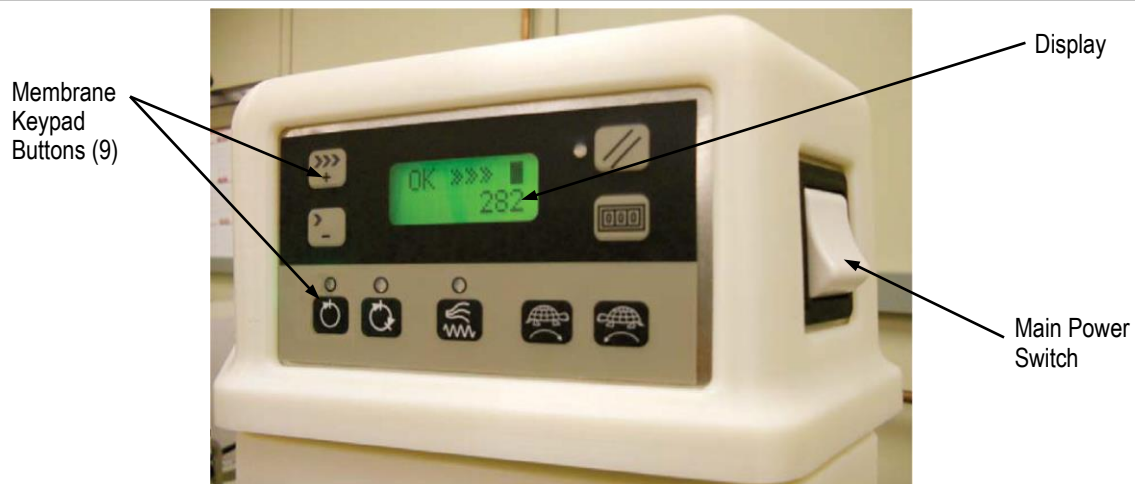


Figure 6

A main power switch/circuit breaker (Figure 6) is located on the front of the control panel. The main power switch/circuit breaker connects ac power to the control system. The CPU/motor controller and safety circuit are located in the electrical control box.

2.3. Machine Guard

A two-piece guard is installed to provide protection for the operator while maintaining proper visibility of the work area. The guard swings open to allow easy access for applicator installation and setup. A safety switch on the guard prevents machine operation if the guard door is open.

3. RECEIVING INSPECTION AND INSTALLATION

3.1. Receiving Inspection

These machines are thoroughly inspected during and after assembly. A final series of inspections is made to insure the proper machine functioning before packaging and shipping.

To protect against damage that may have occurred during shipment, remove the machine from the crate (Paragraph 3.2) and carefully inspect the machine for damage. If damage is evident, file a claim against the carrier and notify TE immediately.

3.2. Installation

Remove all mounting bolts securing the machine to the shipping pallet. The lift point of the machine is accessible from the top of the machine cover. Install lift ring (see Figure 7) on top of the machine.

**NOTE**

Lift ring (M12 x 20 eye bolt) is customer supplied (Ref TE part number 1428156-1).



Lift point for equipment.

**CAUTION**

Install the lift ring carefully. A 19.05-mm [.75-in.] thread length engagement is required for the lift ring to support the machine.

Attach a suitable hoist to the lift ring, lift the machine, and place it in the selected operating location.

Insert the reel support post into the appropriate hole on top of the machine until the roll pin engages a groove in the machine frame.

Lift Ring Location



Figure 7

Attach the terminal strip guide included with the machine with the two thumbscrews supplied. Mount the guide on the left guard for side-feed applicators. Mount the guide on the right guard for end-feed applicators.

Connect the power cord to a suitable electrical supply.

**NOTE**

The machine will automatically detect the supply voltage and adjust the controller accordingly.

3.3. Considerations Affecting Placement of Bench Machines (Figure 8)

The location of the machine in relation to the operator's position is extremely important in terms of both safety and maximum efficiency. Studies have repeatedly shown that operator fatigue will be reduced, and greater efficiency achieved, if:

1. the bench is of appropriate height, preferably with sound-deadening rubber mounts;
2. the machine is properly located on the bench with ample work areas on both sides to facilitate work flow;
3. the operator uses a swivel chair with padded seat and back rest which are independently adjustable; and
4. the foot switch, on machines so equipped, is placed on a rubber mat to maintain its movability, while preventing it from sliding unintentionally

Figure 8 illustrates proper machine location, operator position, and recommended foot switch position.

A. Bench

The bench to be used should be of sturdy construction, preferably with rubber mounts to minimize noise. A height of 762 to 812.8 mm [30 to 32 in.] is the most suitable for operator comfort and convenience. This height allows the operator to rest both feet on the floor, thereby providing for the shifting of weight and leg position.

Machine Location and Operator Position



Materials Locations—Plan View

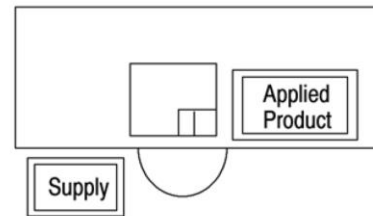


Figure 8

B. Machine Mounting and Location on Bench

The machine should be located near the front of the bench with the "target area" (tooling area where the product is applied) not more than 152.4 to 203.2 mm [6 to 8 in.] -- minimum 50.8 mm [2 in.] from the front edge. This location will eliminate unnecessary operator motion and help to avoid back strain and fatigue.

Orientation of the machine should be such that the "target area" is facing the front of the bench and is parallel to the front edge (access to the back of the machine MUST also be provided).



DANGER

Machines should be securely bolted to the bench using the machine mounting holes shown in Figure 5. Hardware is customer supplied. Machines should not extend beyond the front of the bench.

C. Operator's Chair

The operator's chair should swivel, and should have independent seat height and back rest adjustments. The seat and back rest should be padded, and the back rest should be large enough to provide support both above and below the waist line.

In use, the chair should be far enough under the bench so that the operator's back is straight and is supported by the back rest.

D. Foot Switch

When the operator is correctly positioned in front of a machine equipped with a foot switch, the foot should rest on the switch comfortably. The foot switch should be movable, so that its location can be readily changed when the operator shifts position to minimize fatigue. Placing the switch on a rubber mat keeps it movable while preventing unintentional sliding.

The preferred foot switch location varies to some extent among operators. Some operators prefer the switch located so that their foot rests on the switch when their feet are in the natural sitting position (calf of leg perpendicular to the foot). Others prefer the leg to be slightly in front of the natural position. The important thing to remember is that the foot should be at approximately 90° (right angle) to the calf when resting on the switch. Those operators who prefer the foot switch slightly in front of the natural position may require a wedge-shaped block placed under it.

E. Scrap Removal

A suggested method of scrap removal: place a tray on the right side of the machine, under the cast slot in the frame, to capture the scrap chips.

4. OPERATION

4.1. Control Panel Operation

The basic control panel operation is as described in Figure 9. The control panel will be used to set up and operate the machine (see Paragraph 4.3 and Paragraph 4.4).

4.2. Applicator Installation

Install the proper applicator in the quick-change mounting base as follows:



CAUTION

Make sure that the precision adjustment lever has been returned to the "0" position before installing the applicator. Be sure that the applicator has the proper feed cam prior to installation.



NOTE

Applicators from AMP-O-LECTRIC Model "K" terminating machines and Model "T" terminating machines can be used in these machines by using a special replacement cam. Refer to Figure 2.

1. Loosen the quick-release T-handle (see Figure 5) and slide the applicator base clamp down.
2. Place the applicator on the quick-change base plate, then slide it back until the two notches in the applicator base engage the stops at the back of the quick-change base plate. At the same time, guide the ram post into the ram post adapter.
3. Slide the applicator base clamp UP and re-tighten the quick-release T-handle to secure the applicator in place.



NOTE

When using Applicator 567200-2 (originally intended for use with AMP-O-LECTRIC Model "K" terminating machine), loosen the quick-release T-handle, slide down the applicator base clamp, and remove the rear stop located on the left side of the base plate. Install the rear stop (PN 354561-1), supplied with the air feed kit, at the alternate mounting position on the base plate. See Figure 5.

4. Set the crimp height and insulation crimp discs so that the letters and numbers on the applicator pad align with the front pad on the ram post adapter.
5. If the applicator is an air-feed type, make sure the front door cover is closed, then connect the airlines to the valves located on the back of the machine.



NOTE

Quick Disconnect Coupling 23238-1 is required to run air-feed applicators.

6. Adjust the reel support for side-feed or end-feed product, depending on the applicator being used.

7. Mount the terminal strip guide on the left sheet metal guard for side-feed product, or on the right sheet metal guard for end-feed product, depending on the applicator being used.
8. Mount the terminal reel on the reel support. Thread the terminal strip through the guard and into the applicator according to the instruction sheet included with the applicator. If necessary, adjust the lubricator bowl.
9. Align the product reel to the applicator by adjusting the reel flanges.
10. Close the guard.

**NOTE**

The guard door must be closed in order to operate the machine. See Paragraph 4.4.C.

4.3. Setup

Install a miniature applicator and terminals according to Paragraph 4.2.

1. Turn on the main power using the switch located on the front of the control panel.
2. Be sure the guard is closed.
3. Jog the machine (as described in Paragraph 4.3, B) through a complete crimp cycle.

**NOTE**

Machine should be able to jog through the terminal and wire at maximum jog speed to determine crimp capacity.

4. Inspect the crimped terminal to verify that the terminal is being positioned properly within the applicator.
5. Correct for any positioning errors according to the applicator instruction sheet, and repeat Steps 2 and 3 until a terminal is properly positioned.
6. Place a prepared wire in the crimp area and press the foot switch.
7. Inspect the completed crimp and make adjustments as necessary.

4.4. Mode Selection and Operation


The three basic modes of operation for this machine includes: Full-Cycle, Split Cycle, and Jog.

A. Full-Cycle Mode (Figure 9)

Depressing the footswitch (with the guard closed) causes the crankshaft to be rotated (at a speed defined by the speed control buttons), through a complete revolution. This completes one full machine cycle.

B. Split Cycle Mode (Figure 9)

Depressing the footswitch once (with the guard closed) causes the crankshaft to be rotated (at a speed defined by the speed control buttons), to the split cycle position. Depressing the footswitch a second time causes the crankshaft to be rotated through the bottom position and back to the top position to complete the machine cycle.

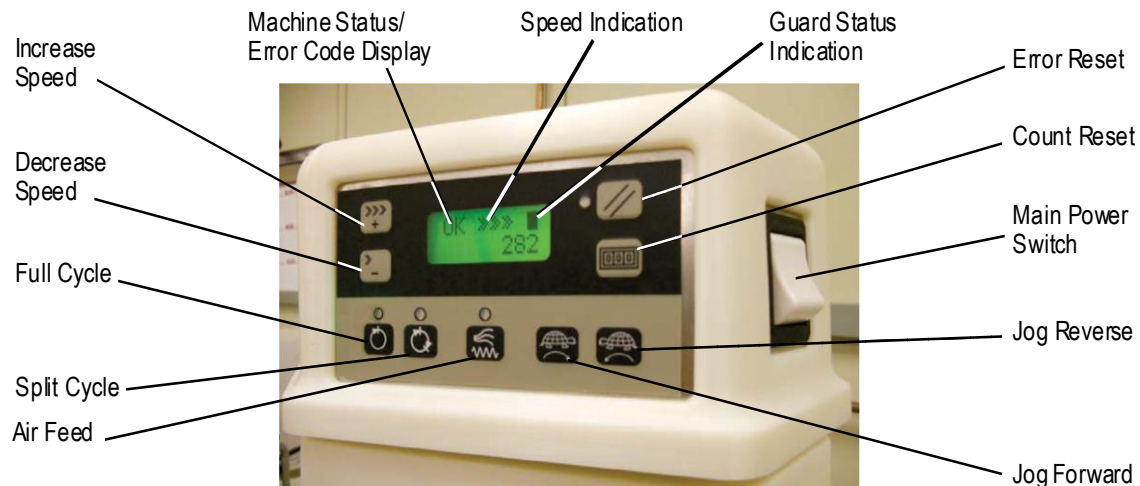

Decrease Speed - Decrease the motor speed for normal cycle operation and for jogging.



Increase Speed - Increase the motor speed for normal cycle operation and for jogging.



Error Reset - Clears the displayed error code.



Count Reset - Clears the batch count to 0.



Jog Forward - Causes the motor to rotate in the forward direction at the jog speed set by the Increase/Decrease speed buttons.



Jog Reverse - Causes the motor to rotate in the reverse direction at the jog speed set by the Increase/Decrease speed buttons.



Air Feed - Toggles the Air Feed Output on and off. The LED indicates the current condition.



Full Cycle - Places the terminator in full cycle mode so that the terminator rotates one full cycle when the footswitch is pressed. The LED indicates that this mode of operation is selected.



Split Cycle - Places the terminator in split cycle mode so that the terminator rotates to the down position on the first press of the footswitch, and then completes the cycle on the second press of the footswitch. The LED indicates that this mode of operation is selected.

Speed Indication -- Each ">" represents a portion of the full operation or jog speed setting. Minimum speed is denoted with a single ">". Maximum speed is denoted by ">>>>>".

Machine Status/ Error Code Display -- Displays "OK" if there is no error code being displayed or "ERRxxx" when an error has occurred. The "xxx" represents a number corresponding to an error described in the error code table (Figure 17).

Guard Status Indication -- A solid "■" indicates that the guard and top interlocks are closed. An open icon in this display indicates that one of the interlocks is open. The motor will not run when the guard interlocks are open.

Figure 9

C. Jog Mode, Forward/Reverse (Figure 9)

Pressing either Jog button causes the crankshaft to be rotated at a reduced speed in the forward or reverse direction until the Jog button is released or the crankshaft completes the cycle. If the Jog button is released in mid-cycle and pressed again, the crankshaft will continue to rotate in the forward or reverse direction at the reduced speed. If the machine does not complete the cycle, either adjust the speed control buttons (as described below), or complete the cycle using the footswitch (at a speed determined by the speed control buttons) after the Jog button has been pressed and released.

Holding the Jog button down for an extended period without completing the cycle will cause an error. To clear the error, clear the problem area, and then press the Error Reset button. If the motor is stalled, it may be necessary to manually cycle the machine to the home position. Refer to the CAUTION and DANGER statements below for the proper manual cycling procedure.



CAUTION

While in the Jog mode, attempting to complete a crimp cycle with terminals and wire in the applicator may cause the motor to stall. Although the machine can terminate some smaller terminals and wire, it may be necessary to turn "off" the machine and manually cycle the machine to the home position. Manually cycle the machine by opening the top interlocked cover and placing a customer supplied (22 mm) wrench on the crankshaft nut. Use the wrench to manually rotate the crankshaft. Be sure to remove the wrench and re-install the top cover before attempting to operate the machine. The machine will not run with cover removed. See Figure 3.

4.5. Adjusting the Motor Speed

The speed of the motor is adjusted using the Decrease Speed and Increase Speed buttons on the membrane keypad (see Figure 9). The Decrease and Increase buttons are used to adjust the motor speed for Full-Cycle, Split Cycle, and Jog modes. The speed setting in Full and Split Cycle modes is independent from the speed setting used in the Jog mode. Both speed settings are retained in memory by the CPU / motor controller. During Full and Split Cycle modes the last set motor speed is on the display. When the Jog button is pressed, the display will change to show the last set Jog mode speed. The Jog mode speed will continue to be displayed until the footswitch is pressed to change to Full or Split Cycle modes.

In Full and Split Cycle modes, a single ">" shown on the display indicates the motor speed is set for 60% of the maximum operating speed value. Each additional ">" on the display increases the motor speed by 8%.

In Jog mode, a single ">," shown on the display indicates the motor speed is set for 10% of the maximum operating speed value: each additional ">" shown increases the motor speed by 10%.

4.6. Crimp Height Adjustment

Refer to the instructions provided with the applicator to perform this adjustment. Refer to Paragraph 6.3 for procedures to adjust the crimp height using the machine precision adjustment feature.

4.7. End-Feed/Side-Feed Applicator Conversion

When changing from an end-feed applicator to a side-feed applicator (or from a side-feed applicator to an end-feed applicator), the reel support assembly must be moved to the opposite side of the machine. With the terminal reel removed, lift and rotate the reel support bar to the opposite side of the machine. Mount the terminal reel on the reel support and load the terminal strip into the applicator. Remove the metal terminal lead-in and thumbscrews and move to the opposite side of the machine. Move the machine lubricator bowl to the opposite side of the machine as required.



NOTE

Lubricator Bowl Assembly 354550-1 is an optional accessory.

5. PREVENTATIVE MAINTENANCE

Preventive maintenance will keep the machine in good working order and ensure maximum reliability and service from all of its components.



DANGER

To avoid personal injury, electrical and pneumatic power must be DISCONNECTED at the source prior to maintenance.



DANGER

The CPU/motor controller assembly contains a high voltage which remains for a short period of time, even after power has been removed. Disconnect the electrical power source and wait several minutes before removing the screws to access the CPU/motor controller assembly.


NOTE

A monthly mandatory safety check includes checking that opening the guard door during a cycle shuts down the machine and prevents the terminator from cycling until the guard door is closed. This practice should also be checked on the interlock on the top cover.

5.1. Cleaning

Clean any debris from the applicator area daily.


DANGER

Compressed air used for cleaning must be reduced to less than 207 kPa [30 psi] and effective chip guarding and personal protective equipment (including eye protection) must be used.

If an air-feed assembly is installed, check and replace the air filter element if necessary.

Wipe off the guards with a clean soft cloth.


CAUTION

DO NOT USE ANY SOLVENT TO CLEAN THE GUARDS. Solvent could damage the guards.

5.2. Lubrication

The moving parts of the machine require regular lubrication to ensure reliable service and long life. Use only a good grade NLGI† No. 2 grease.


NOTE

Contact TE engineering for preferred lubricants.


NOTE

For operation in temperatures below 10°C [50°F], it will be necessary to use a No. 1 grease.

Using a grease gun, apply grease every 250,000 cycles to the fittings at the following locations and as shown in Figure 10:

- the left side of the ram assembly;
- the right side of the ram assembly;
- the left side of the frame just behind the ram assembly; and


NOTE

Give one pump of grease while the ram is near the top of its stroke and one pump of grease while the ram is near the bottom of its stroke for best distribution of grease around the bearing.

- the crimp height adjuster pivot pin

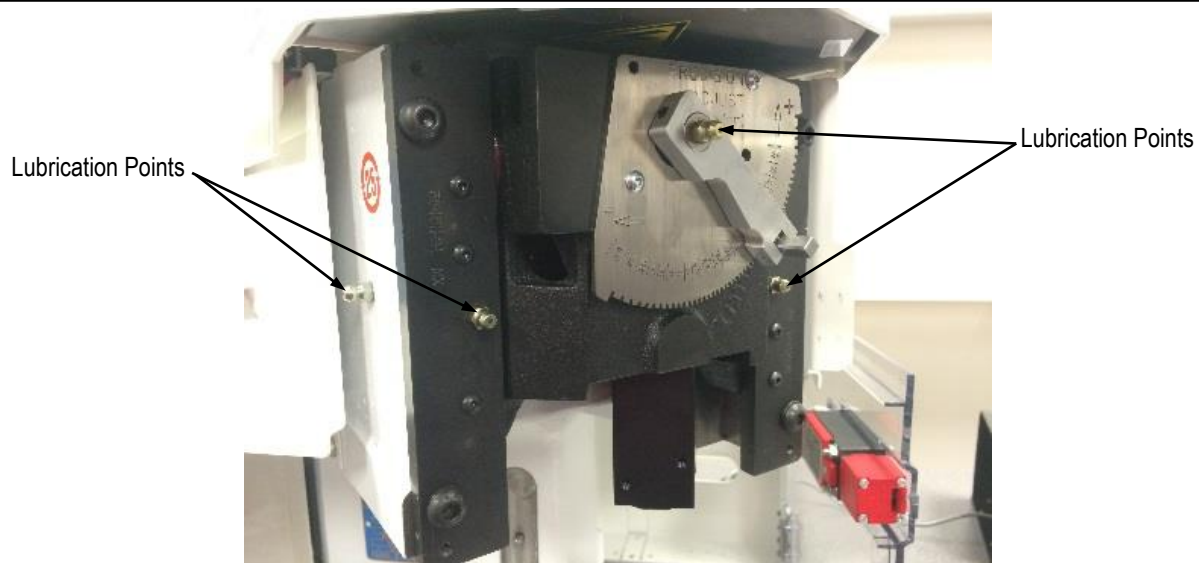


Figure 10

† NLGI is the National Lubrication and Grease Institute.

6. ADJUSTMENTS

The following adjustments are necessary to maintain the machine in operating condition, and to set up the machine after replacing parts.



DANGER

To avoid personal injury, ALWAYS disconnect electrical and air supplies before performing adjustments.

6.1. Measuring the Shut Height

The shut height is the distance between the bottom surface of the ram post adaptor and the top surface of the machine base plate as shown in Figure 11.



NOTE

Shut Height Gage 679655-2 (see the table in Figure 11) is recommended for measuring shut height (refer to 408-8535 for instructions on use of the gage).


1. If installed, adjust the manual precision adjustment lever to the "0" setting.
2. Remove the top interlocked cover by pulling straight up.
3. Place a customer supplied (22 mm) wrench on the crankshaft nut. Use the wrench to manually rotate the crankshaft.



NOTE

Be sure to remove the wrench and re-install the top interlocked cover before operating the machine. The machine will not run until the cover is in place.

4. Follow the procedure for measuring the shut height as described in 408-8535.

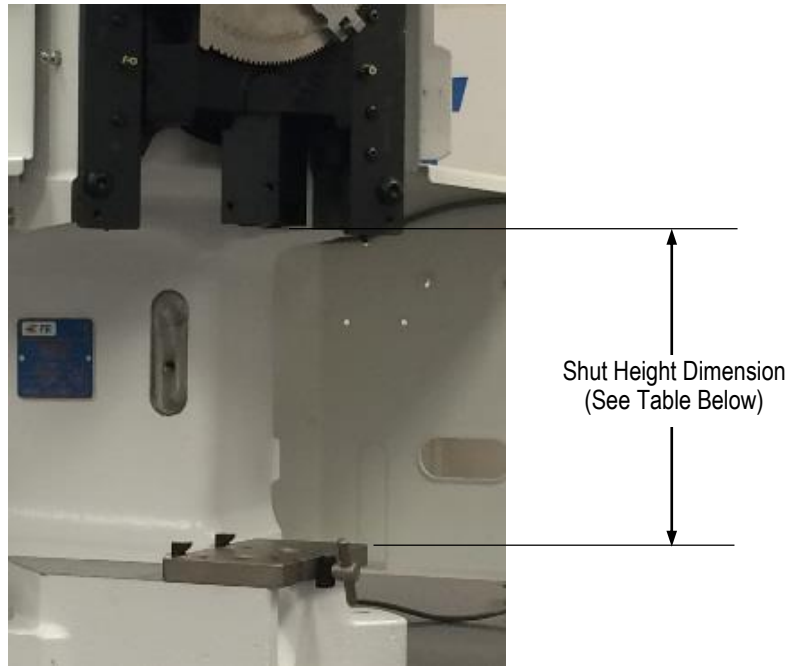

SHUT HEIGHT GAGE	MACHINE PART NUMBERS	SHUT HEIGHT DIMENSIONS	APPLICATOR TYPE
679655-2	2161400-[] AND 2161500-[]	135.79 $\pm$ 0.025 [5.346 $\pm$.0010]	TE-Type

Figure 11

6.2. Shut-Height Adjustment

The shut height is pre-set at the factory and should not require further adjustment unless it is necessary to replace parts. Before you make any changes to the machine, contact your local Field Service Representative, or call the Tooling Assistance Center at 1-800-722-1111.

**CAUTION**

NEVER attempt to adjust the shut height without FIRST trying an applicator that is known to produce terminations of the correct crimp height. If this applicator produces correct terminations, the trouble is in the original applicator and the shut height MUST NOT BE CHANGED.

If it is determined that the shut height must be adjusted, use the following procedure:

**DANGER**

To avoid personal injury, ALWAYS turn "off" the machine and disconnect the power supply to the machine before making any adjustments. If applicator is an air-feed type, DISCONNECT air lines to valve located on the right side of the machine.

1. Check shut height as described in Paragraph 6.1.
2. If the shut height is incorrect, proceed as follows:
 - a. Remove the two socket head cap screws which secure the ram post adaptor. Remove the ram post adaptor and shims. Change the shim thickness as required to adjust the shut height. Shims contain .051-mm [.002-in.] peel-type laminations.

**NOTE**

If additional shims are required, they can be ordered using the numbers 1338618-1.

- b. Re-install the ram post adaptor. Insert both screws in the ram post adaptor and place the shims over the screws and onto the adaptor post.
 - c. Re-install the socket head cap screws into the ram assembly to secure the ram post adaptor. Re-tighten the screws.
3. Repeat Steps 1 and 2 as necessary until the proper shut height is attained.

**NOTE**

The miniature applicator is an integrated assembly consisting of upper tooling, lower tooling, and adjustment capability. The applicator requires a fixed shut height; that is, the distance between the bottom of the ram and the base mount when the ram is FULLY bottomed. The required adjustments for crimp height are made by using the wire and insulation discs within the applicator. Refer to the instruction sheet supplied with the applicator for adjustment procedures.

6.3. Crimp Height Adjustment Using Precision Adjustment Mechanism

**CAUTION**

To avoid damaging the applicator, ALWAYS return the precision adjustment lever to the "0" position when finished using the applicator.

1. Adjust the manual precision adjustment lever to "0" by pulling the lever away from the pivot pin. Lock the lever in place by releasing it.
2. Install the applicator into the machine as described in Paragraph 4.2.
3. Cycle the machine to crimp three sample terminations. Check the crimp height of the samples. If the crimp heights are not correct, adjust the crimp height according to Step 4.
4. Adjust the crimp height by moving the precision adjustment lever (Figure 12):
 - a. to the right to increase the crimp height; or
 - b. to the left to decrease the crimp height

**NOTE**

Moving the precision adjustment lever in either direction will change the crimp height by approximately 0.010 mm [.0004 in.] per step.

5. Repeat Steps 3 and 4 until the appropriate crimp height is obtained.

**CAUTION**

To avoid damaging the applicator, ALWAYS return the manual precision adjustment lever to the "0" position when finished using the applicator.

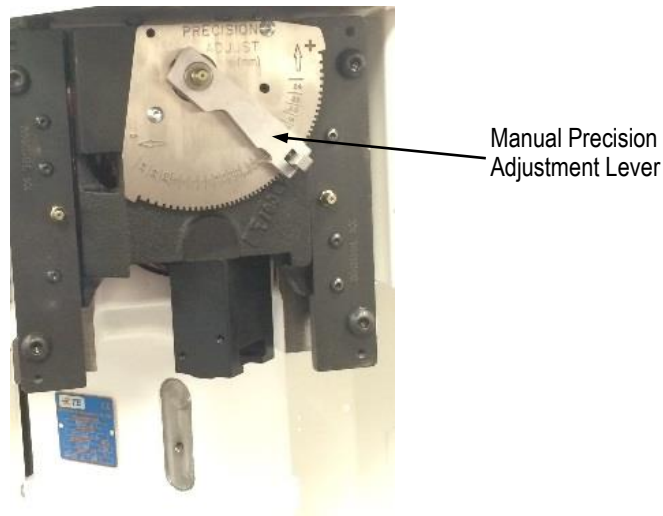



Figure 12

6.4. Guard Insert Adjustment

A guard insert is supplied with the machine. Some applications may require a special insert. See Figure 13 for available guard inserts.

The guard contains two slots into which the inserts can be placed: the rear slot places the insert close to the applicator; the front slot places the insert farther away from the applicator. The type of insert used determines which slot is to be used. An insert placed into the wrong slot cannot be secured in place.

i NOTE Some special inserts are designed to mount in the standard insert slot. These inserts have the threaded holes at the top corners and should be installed according to the instructions for the standard insert.

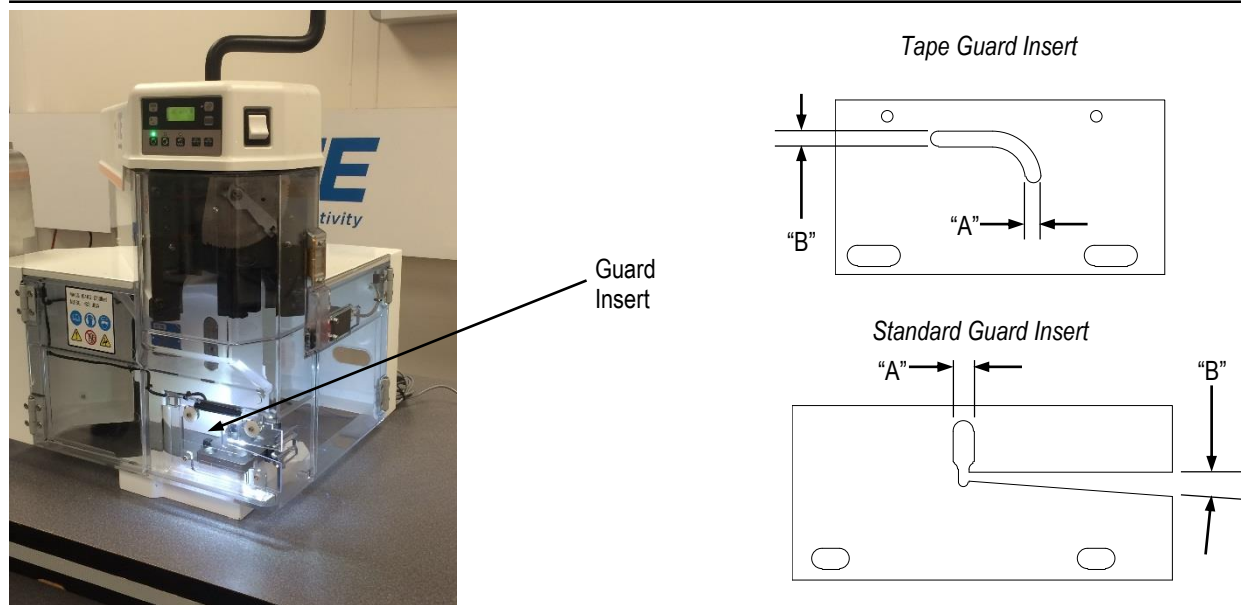

GUARD INSERT		DIMENSION	
PART NUMBER	DESCRIPTION	A	B
354529-2	Standard (Away from the Applicator)	7.80 [.307]	6.35 [.250]
1-679532-0	Standard (Close to the Applicator) - Shipped with the Machine	6.22 [.245]	5.08 [.200]
679994-2	Near Tape	6.35 [.250]	6.35 [.250]
679995-2	Away from Tape	8.74 [.344]	6.35 [.250]

Figure 13

A. Standard Guard Insert 1-679532-0 and Guard Insert 679994-2

1. Slide the insert into the rear slot of the guard door. Secure the insert to the door with two screws placed through the large square holes in the left guard door and into the threaded holes in the top of the insert. Do not tighten the screws.
2. Move the insert horizontally and vertically as needed to align the slot with the crimp area of applicator.
3. Tighten the screws.

B. Guard Insert 354529-2 and Guard Insert 679995-2

1. Slide the insert into the front slot of the guard door. Secure the insert to the door with two screws placed through the large square holes of the insert and into the threaded holes in the bottom of the left guard door. Do not tighten the screws.
2. Move the insert horizontally and vertically as needed to align slot with crimp area of the applicator.
3. Tighten the screws.

7. MACHINE OPTIONS AND INSTALLATION OF THE AIR FEED VALVE ASSEMBLY

The following machine options are available for the AMP-O-LECTRIC Model G II Terminator Machine:

PART NUMBER	DESCRIPTION	PURPOSE
2217339-1	Air Feed Valve Kit	Required to run certain air-feed type applicators
354550-3	Lubricator Bowl Assembly	Pre-lubricates the strip
1428156-1	Shoulder Eye Bolt	Provides a lift point for machine installation

Figure 14

To install the Air Feed Kit 2217339-1, proceed as follows:



DANGER

To avoid personal injury, be sure to turn "off" the machine, and disconnect it from the power source.

Follow Step 2 "Installation Procedure for Customer Use" on the air feed kit print 2217339 included with Air Feed Kit 2217339-1 (Figure 15).

1. Disconnect power.
2. Remove reel and reel support.
3. Loosen thumbscrews and remove terminal lead-in.
4. Remove four motor guard screws and motor guard.
5. Remove air feed kit guard knockouts - save piece with holes in it.
6. Remove top cover access panel.
7. Remove four recessed screws from top cover.
8. Carefully lift top cover, flip over, and lay on right side guard.
9. Remove four screws from electrical box cover and cover.
10. Mount item 100 (air feed kit) to inside of right side guard with filter going through knockout to exterior of guard.
11. Assemble knockout piece to bottom of right side guard shown using items 103 (screw) and 102 (nut).
12. Cut wire tie holding door interlock wire and using item 104 (wire tie), bundle door interlock wire and item 101 (air feed cable) to right side guard.
13. Route item 101 (air feed cable) through gap in right side guard with door interlock cable.
14. Unscrew indicated cable gland using care not to damage existing wire going through it.
15. Route item 101 (air feed cable) through cable gland into electrical box.
16. Plug item 101 (air feed cable) into connector J17 on pc board.

17. Retighten cable gland securing air feed cable, use care not to over tighten and damage wire.
18. If applicable for assembly, attach items 200 (rear stop) and 201 (screw) to baseplate as shown - remove back left base plate clamp.
19. Reverse procedure to reassemble cover and guards.
20. Install air feed applicator onto baseplate and connect to applicable ports.
21. Make sure slide valve is off - pulled away from filter.
22. For metric air line fittings, remove item 13 (adapter).
23. Attach air supply hose to air valve assembly.
24. To turn air on, slide item 12 (slide valve) towards item 10 (filter). To turn air off, slide item 12 (slide valve) away from item 10 (filter). Make sure item 15 (lockout) is not connected to slide valve.
25. To lock air in off position, turn air off and clamp item 15 (lockout) in location shown. Secure lockout with a lock (customer supplied).


NOTE

The air can be turned "off" by moving the slide valve away from the filter.

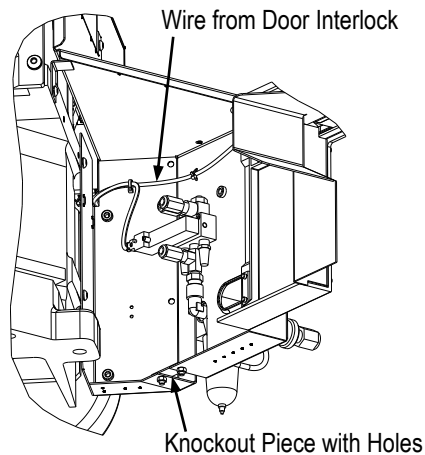


Figure 15

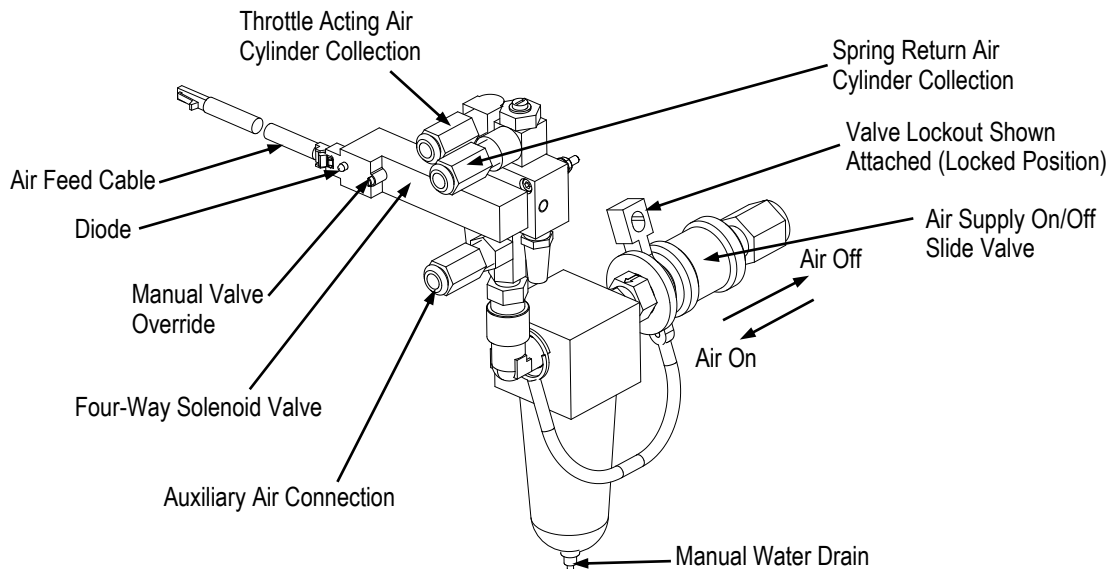


Figure 16

8. TROUBLESHOOTING

Contact the Tooling Assistance Center at 1-800-722-1111.

8.1. Error Codes

See the table in Figure 17 for a listing of error codes.

ERROR CODE	ERROR DESCRIPTION
E001	The host is inhibiting operation.
E002	The guard interlock is open.
E003	The insert interlock is open
E004	The safety circuit is not operational.
E005	The control panel is not communicating with the CPU board.
E020	Movement of the TDC switch was not detected.
E021	The TDC switch was not made.
E050	No Modbus Communications with motor drive.
E051	The top interlock is open.
E052	The motor drive indicates the safety circuit is open.
E053	The motor drive indicates it has detected an internal safety fault.
Ennn54	The motor drive indicates it has a fault. nnn represents the fault number. Contact TE engineering for details.
E099	Host Module not detected
E100	Stuck keypad button
E101	Footswitch input stuck on

Figure 17

8.2. Diagnostics


The control panel can be placed in a Diagnostics Mode to check operation of the machine inputs. To place the control panel in the Diagnostics Mode:

1. Press and release Error Reset to clear any error.
2. Press and hold Error Reset for five seconds, until the control panel software version is displayed.
3. Release the Error Reset.

A screen similar to the one in Figure 18 will be presented. Each of the inputs is shown with an input identifier, followed by an input status symbol. The input identifiers are listed in Figure 18 along with corresponding input description. A solid dot indicates the input is "on." A hollow dot indicates the input is "off."

Some identifiers have more than one associated input, and therefore have multiple input status symbols.

Press Error Reset to exit the diagnostic mode.

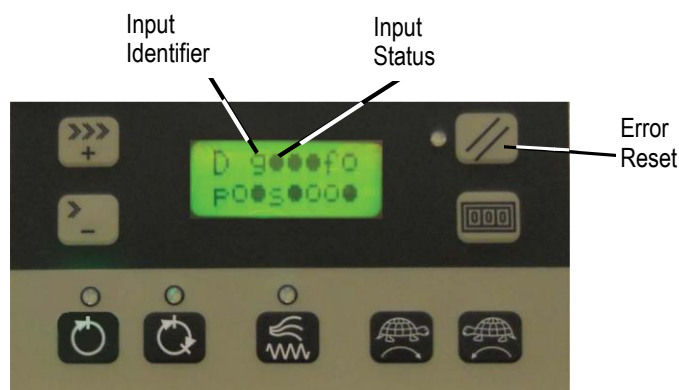

INPUT IDENTIFIER	INPUT DESCRIPTION
G	Interlocks: Guard, Top, Insert
F	Footswitch
[p]	Crankshaft Switches: Position, Braking
[S]	Internal Inputs: Safety +24, Motor Safety Stop, Motor Fault, Motor Not E Safe

Figure 18

9. SOFTWARE VERSION IDENTIFICATION

1. Be sure the machine is turned off.
2. Turn the power to the machine on.

When the display on the control panel turns on, the control panel software version will be displayed briefly, followed by the G II software version. Both versions follow the format "X.XX.XX."

10. DISPOSAL

Contact TE for disposal.

11. REPLACEMENT AND REPAIR

See drawing and documentation package to identify parts. Order replacement parts through your TE representative, or call 1-800-526-5142, or send a facsimile of your purchase order to 717-986-7605,

Or write to:

CUSTOMER SERVICE (038-035)
TYCO ELECTRONICS CORPORATION
PO BOX 3608
HARRISBURG PA 17105-3608

For customer repair service, call 1-800-526-5136.

12. RoHS INFORMATION

Information on the presence and location of any substances subject to RoHS (Restriction on Hazardous Substances) can be found at the following website:

<http://www.tycoelectronics.com/customersupport/rohssupportcenter/>

Click on "Find Compliance Status" and enter equipment part number.

13. REVISION SUMMARY

Initial release of customer manual

Данный компонент на территории Российской Федерации

Вы можете приобрести в компании MosChip.

Для оперативного оформления запроса Вам необходимо перейти по данной ссылке:

<http://moschip.ru/get-element>

Вы можете разместить у нас заказ для любого Вашего проекта, будь то серийное производство или разработка единичного прибора.

В нашем ассортименте представлены ведущие мировые производители активных и пассивных электронных компонентов.

Нашей специализацией является поставка электронной компонентной базы двойного назначения, продукции таких производителей как XILINX, Intel (ex.ALTERA), Vicor, Microchip, Texas Instruments, Analog Devices, Mini-Circuits, Amphenol, Glenair.

Сотрудничество с глобальными дистрибьюторами электронных компонентов, предоставляет возможность заказывать и получать с международных складов практически любой перечень компонентов в оптимальные для Вас сроки.

На всех этапах разработки и производства наши партнеры могут получить квалифицированную поддержку опытных инженеров.

Система менеджмента качества компании отвечает требованиям в соответствии с ГОСТ Р ИСО 9001, ГОСТ РВ 0015-002 и ЭС РД 009

Офис по работе с юридическими лицами:

105318, г.Москва, ул.Щербаковская д.3, офис 1107, 1118, ДЦ «Щербаковский»

Телефон: +7 495 668-12-70 (многоканальный)

Факс: +7 495 668-12-70 (доб.304)

E-mail: info@moschip.ru

Skype отдела продаж:

moschip.ru

moschip.ru_4

moschip.ru_6

moschip.ru_9