




# **Application Tooling Specification Sheet**

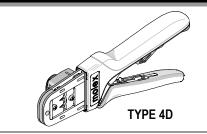

Order No. 63825-8100

#### **FEATURES**


- A full cycle ratcheting hand tool ensures complete crimps
- Ergonomic soft grip handles for comfortable crimping
- A precision user-friendly terminal locator wire stop holds terminals in the proper crimping position
- Right and Left handed applications
- This tool is IPC/WHMA A-620 Class 2 compliant as indicated.
- This tool is RoHS compliant, however RoHS compliant is not required

#### **SCOPE**

Products: C-Grid III™ Female Crimp Terminals, 22-24 AWG

Terminal Order No.		Wire Size		◆Insulatio	n Diameter	Strip Length		
Loose Piece	*Reel	AWG	mm²	mm	ln.	mm	ln.	
90119-2109 90119-2110 90119-2111	90119-0109 90119-0110 90119-0111	22-24	0.35-0.20	1.02-1.47	.040058	2.80-3.30	.110130	
*Customer to cut off terminal from reel: 0.15mm (.006") maximum Cut-off Tab.								
(, (,	00119-2109 90119-2110 90119-2111	xeel           90119-2109         90119-0109           90119-2110         90119-0110           90119-2111         90119-0111           9ustomer to cut off terminal frame	xoose Piece         *Reel         AWG           90119-2109         90119-0109         90119-0110           90119-2110         90119-0111         22-24           90119-2111         90119-0111	xoose Piece         *Reel         AWG         mm²           90119-2109         90119-0109         22-24         0.35-0.20           90119-2111         90119-0111         22-24         0.35-0.20           9ustomer to cut off terminal from reel: 0.15mm (.0         0.15mm (.0         0.15mm (.0	Noose Piece         *Reel         AWG         mm²         mm           90119-2109         90119-0109         22-24         0.35-0.20         1.02-1.47           90119-2111         90119-0111         22-24         0.35-0.20         1.02-1.47	Noose Piece         *Reel         AWG         mm²         mm         In.           90119-2109         90119-0109         22-24         0.35-0.20         1.02-1.47         .040058           90119-2111         90119-0111         22-24         0.35-0.20         1.02-1.47         .040058           sustomer to cut off terminal from reel: 0.15mm (.006") maximum Cut-off Ta	Noose Piece         *Reel         AWG         mm²         mm         In.         mm           90119-2109         90119-0109         90119-0110         22-24         0.35-0.20         1.02-1.47         .040058         2.80-3.30           90119-2111         90119-0111         90119-0111         90119-0111         0.15mm (.006") maximum Cut-off Tab.	

#### **DEFINITION OF TERMS**

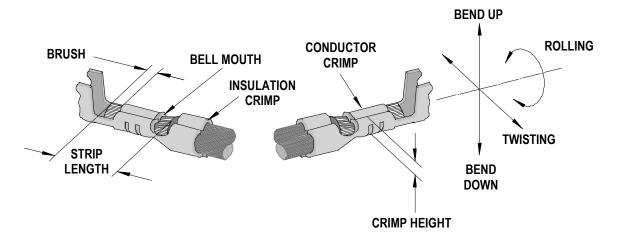

The above terminal drawing is a generic terminal representation. It is not an image of a terminal listed in the scope.

Doc No: ATS-638258100 Release Date: 11-27-12 **UNCONTROLLED COPY** Page 1 of 7 Revision: A Revision Date: 11-27-12

#### **CONDITIONS:**

After crimping, the conductor profiles should measure the following.

Terminal Wire Size		Conductor Crimp				Insulation Crimp				Pull Force		<b>◆</b> Profile		
Series No	es No Wille Size		Hei	ight Width (Ref.)		Height (Ref.) Wid		Width	Width (Ref.)		mum	<b>▼</b> FIOIII <b>e</b>		
	AWG	mm <sup>2</sup>	mm	ln.	mm	ln.	mm	ln.	mm	ln.	N	Lb.	22	24
90119	22	0.35	0.75-0.80	.030032	1.40	.055	1.60	.063	1.60	.063	39.2	8.82	Χ	
	24	0.20	0.68-0.73	.027029	1.40	.055	1.70	.067	1.70	.067	29.4	6.61		Χ

◆ To Achieve IPC-A-620 Class 2 Crimps, the following over-all wire insulation diameter ranges are recommended:

Profile 22: 1.15 – 1.30mm (.045-.051 inch) Profile 24: 1.25 – 1.40mm (.049-.055 inch)

#### **OPERATION**

**CAUTION:** Install only Molex terminals listed above with this tool. Do not crimp hardened objects as damage can occur to the tool or die.

Open the tool by squeezing the handles together. At the end of the closing stroke, the ratchet mechanism will release the handles and the hand tool will spring open. See Figure 1.

# **Crimping Terminals**

- 1. Select the desired terminal listed in the preceding charts.
- 2. Make sure the center of the locator is in the down position. With the locator attached, push the locator button on the back of the hand tool to bring the locator forward through the tooling. See Figure 2.
- 3. While holding the locator button in, load the terminal into the proper nest opening in the locator based on the wire gauge or terminal type markings on the hand tooling. See Figure 3.



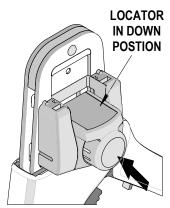



Figure 2 PUSH ON THE LOCATOR BUTTON

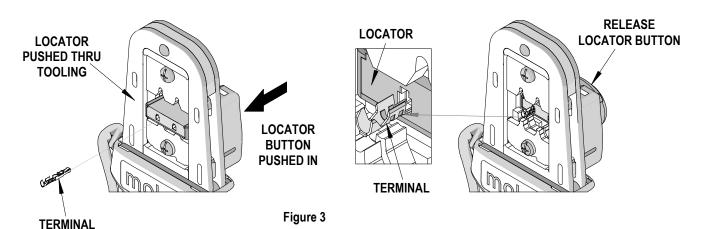

Doc No: ATS-638258100 Release Date: 11-27-12 **UNCONTROLLED COPY** Page 2 of 7 Revision: A Revision Date: 11-27-12


- 4. Release the locator button, allowing the locator to return to the crimping position.
- 5. Close the tool handle until the first ratchet position engages. See Figure 4.
- Insert the properly stripped wire through the terminal and against the wire stop. See Figure 5.
- 7. Crimp the terminal by squeezing the tool handles until the ratchet mechanism cycle has been completed. Release the handles to open the jaws.

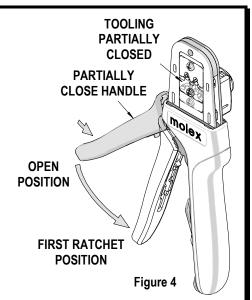

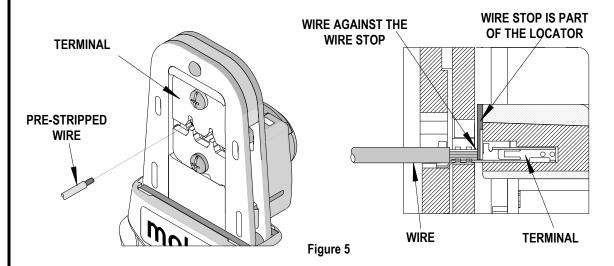

Note: The tamper proof ratchet action will not release the tool until it has been fully closed.

- 8. Remove the crimped terminal from the terminal locator by pulling on the wire.
- 9. Visually inspect the crimped terminal for proper crimp location.
- 10. On some large O.D. wires, it may not be possible to insert the wire with the tool partially closed. Those wires should be inserted with the hand tool in the open position. Insert the wire above the terminal in the punch and against the wire stop then close the tool. See Figure 6.

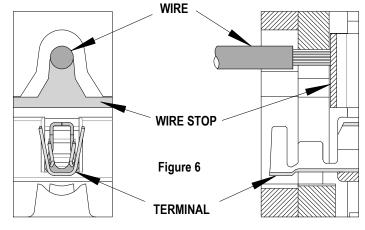

Doc No: ATS-638258100 Release Date: 11-27-12 **UNCONTROLLED COPY** Page 3 of 7 Revision: A Revision Date: 11-27-12

#### Note:


A crimp height chart is provided with this manual as <u>Reference Only.</u> Due to the wide range of wires, strands, insulation diameters, and durometers available, actual crimp height measurements may very slightly. An occasional, destructive, pull force test should be performed to check hand tool crimp. Pull Force value <u>Must</u> exceed the Minimum pull force specifications listed.

# **Locator Replacement**

See the parts list on the last page of this document for the proper locator order number. Follow the steps below to replace the locator.

- 1. Open the crimp hand tool.
- Squeeze gently on the lower area shown in Figure 7A with your thumb and index finger. The lower tabs of the locator should disengage from the hand tool.
- 3. Lift and pull away from the hand tool. The top locator hooks should slip out of the top slots easily. See Figure 7A.
- 4. To reinstall the new locator, make sure the hand tool is in the open position.
- 5. Press the red insert down as far as it will go as shown in Figure 7B.
- 6. Holding onto the lower part of the locator with your thumb and index finger, insert the locators top hooks (2) into the hand tool top slots.

7. Rotate the locator down and press the lower tabs into the two bottom slots of the hand tool. To secure the locator into place, the lower tabs must snap into place on the hand tool frame.

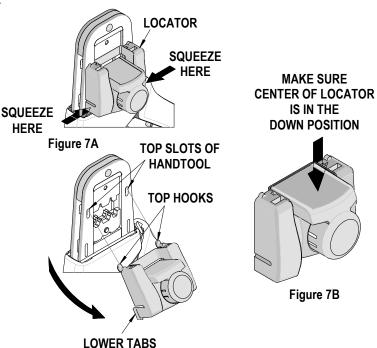

**JAWS OPEN** 

**TOOLING** 

**PULL OPEN** 

Figure 8

**TOOLING** 

M3 BHCS

# Right or Left Hand Operation

This hand tool has an added feature that can be converted from a right handed application to a left handed application. It is necessary to reverse the tooling if using the left handed application along with the locator. Follow the steps below:

- 1. The locator must be removed before reversing the tooling.
- 2. Remove the M3 BHCS which is holding the upper tooling.
- 3. Flip the upper tooling to the opposite side and replace the M3 BHCS. Make sure the small markings on the front and back of the hand tool frame, match up and are on the outside of the hand tool frame. See Figure 8 and 9.


Doc No: ATS-638258100 Release Date: 11-27-12 UNCONTROLLED COPY Page 4 of 7

Revision: A Revision Date: 11-27-12


- 4. Do the same thing with the lower tooling and tighten the M3 screws. Be sure the small markings line up.
- 5. Reinstall the locator by following the Instructions in the locator replacement section.

#### **Maintenance**

It is recommended that each operator of the tool be made aware of, and responsible for, the following maintenance steps:

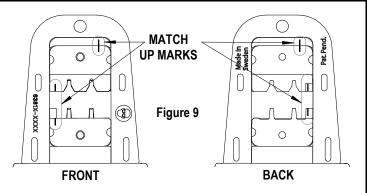

- 1. Remove dust, moisture, and other contaminants with a clean brush, or soft, lint free cloth.
- 2. Do not use any abrasive materials that could damage the tool.
- 3. Make certain all pins; pivot points and bearing surfaces are protected with a thin coat of high quality machine oil. Do not oil excessively. The tool was engineered for durability but like any other equipment it needs cleaning and lubrication for a maximum service life of trouble free crimping. Light oil (such as 30 weight automotive oil) used at the oil points, every 5,000 crimps or 3 months, will significantly enhance the tool life.
- 4. Wipe excess oil from hand tool, particularly from crimping area. Oil transferred from the crimping area onto certain terminations may affect the electrical characteristics of an application.
- 5. When tool is not in use, keep the handles closed to prevent objects from becoming lodged in the crimping dies, and store the tool in a clean, dry area.

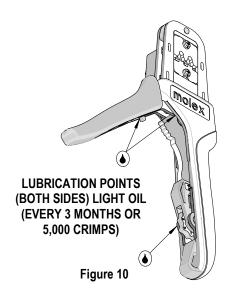


# **Miscrimps or Jams**

Should this tool ever become stuck or jammed in a partially closed position, **Do Not** force the handles open or closed. The tool will open easily by pressing up on the ratchet release lever in the movable handle. See Figure 11.

# How to Adjust Tool Preload (See Figure 12)

This hand tool is factory preset to 25-45 LBS. preload. It may be necessary over the life of the tool to adjust tool handle preload force. Listed below are the steps required to adjust the crimping force of the hand tool to obtain proper crimp conditions:

Hold the hand tool in the palm of your hand as shown in Figure 10.
 Using the index finger squeeze the link towards the top of the hand tool frame. This will release the preload adjustment wheel.

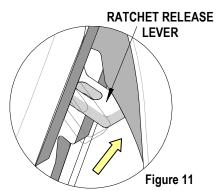


Doc No: ATS-638258100 Release Date: 11-27-12 UNCONTROLLED COPY Page 5 of 7

Revision: A Revision Date: 11-27-12

- 2. Rotate the setting wheel counter-clockwise (CCW) to increase handle force. The numbers will display higher. To decrease handle force rotate the setting wheel clockwise (CW).
- 3. Release the link to lock the setting wheel in place.
- 4. Check the crimp specifications or conduct a pull test after tool handle preload force is adjusted.

# Warranty

This tool is for electrical terminal crimping purposes only. This tool is made of the best quality materials. All vital components are long life tested. All tools are warranted to be free of manufacturing defects for a period of 30 days. Should such a defect occur, we will repair or exchange the tool free of charge. This repair or exchange will not be applicable to altered, misused, or damaged tools. This tool is designed for hand use only.

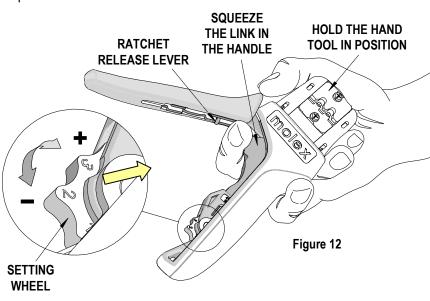

Any clamping, fixturing, or use of handle extensions voids this warranty.

**CAUTION**: Molex crimp specifications are valid only when used with Molex terminals and tooling.

### **CAUTIONS:**

- 1. Manually powered hand tools are intended for low volume or field repair. This tool is NOT intended for production use. Repetitive use of this tool should be avoided.
- 2. Insulated rubber handles are not protection against electrical shock.
- 3. Wear eye protection at all times.
- 4. Use only the Molex terminals specified for crimping with this tool.

#### Certification


Molex does not certify or re-certify hand tools but rather supplies the following guidelines for customers to re-certify hand tools.

- This tool is qualified to pull force only. To re-certify, crimp a terminal to a wire, which has been stripped 12.7mm (1/2") long, so there is no crimping of the insulation. Pull the terminal and wire at a rate no faster than 25mm (1.00") per minute. See the Molex web site for the Quality Crimp Handbook for more information on pull testing.
- % If the tool does not meet minimum pull force values, handle preload should be increased and the pull test rerun, (See How to Adjust Preload).
- When the hand tool is no longer capable of achieving minimum pull force, it should be taken out of service and replaced.

Doc No: ATS-638258100 Release Date: 11-27-12 **UNCONTROLLED COPY** Page 6 of 7 Revision: A Revision Date: 11-27-12

# **PARTS LIST**

Item Number	Order Number	Description	Quantity
REF	63825-8100	Hand Crimp Tool	Figure 13
1	63825-8175	Locator Assembly	1
2	63810-0104	Spring, Return	1
3	63810-0105	Spring, Ratchet	1

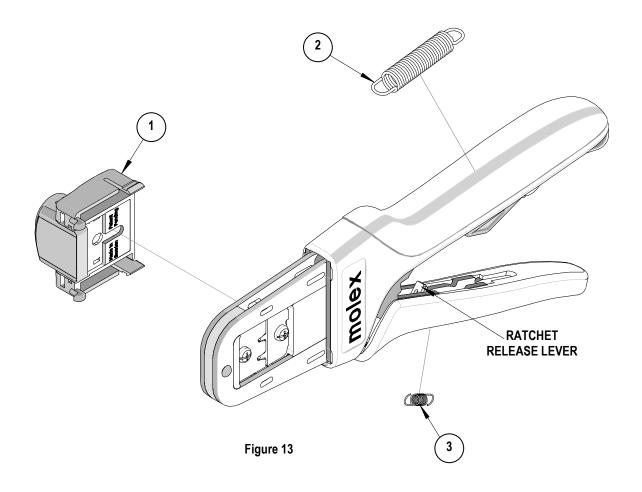

http://www.molex.com

Doc No: ATS-638258100 Release Date: 11-27-12 Revision: A Revision Date: 11-27-12

Release Date: 11-27-12 UNCONTROLLED COPY

# **ПОСТАВКА** ЭЛЕКТРОННЫХ КОМПОНЕНТОВ

многоканальный

Общество с ограниченной ответственностью «МосЧип» ИНН 7719860671 / КПП 771901001 Адрес: 105318, г.Москва, ул.Щербаковская д.3, офис 1107

# Данный компонент на территории Российской Федерации Вы можете приобрести в компании MosChip.

Для оперативного оформления запроса Вам необходимо перейти по данной ссылке:

### http://moschip.ru/get-element

Вы можете разместить у нас заказ для любого Вашего проекта, будь то серийное производство или разработка единичного прибора.

В нашем ассортименте представлены ведущие мировые производители активных и пассивных электронных компонентов.

Нашей специализацией является поставка электронной компонентной базы двойного назначения, продукции таких производителей как XILINX, Intel (ex.ALTERA), Vicor, Microchip, Texas Instruments, Analog Devices, Mini-Circuits, Amphenol, Glenair.

Сотрудничество с глобальными дистрибьюторами электронных компонентов, предоставляет возможность заказывать и получать с международных складов практически любой перечень компонентов в оптимальные для Вас сроки.

На всех этапах разработки и производства наши партнеры могут получить квалифицированную поддержку опытных инженеров.

Система менеджмента качества компании отвечает требованиям в соответствии с ГОСТ Р ИСО 9001, ГОСТ РВ 0015-002 и ЭС РД 009

#### Офис по работе с юридическими лицами:

105318, г. Москва, ул. Щербаковская д. 3, офис 1107, 1118, ДЦ «Щербаковский»

Телефон: +7 495 668-12-70 (многоканальный)

Факс: +7 495 668-12-70 (доб.304)

E-mail: info@moschip.ru

Skype отдела продаж:

moschip.ru moschip.ru\_6 moschip.ru 4 moschip.ru 9