



Infrared Remote Control Transmitter

PT2560

Description

PT2560 is an infrared remote control transmitter utilizing CMOS technology housed in a 20-pin DIP or SO package. A 4 x 8 key matrix and extension bit inputs allow the transmission of up to 256 instructions. The transmission code consists of 16 bits code (8 bits custom code and 8 bits data code) and a leader code. PT2560 is functionally compatible with M50560. However, there is a slight difference in their application circuits. If you are to replace M50560 with PT2560, you do not need to connect an external capacitor to Pin No.3 (SEL Pin).

Pin assignments and application circuit of PT2560 are optimized for easy PCB layout and cost saving advantage for remote control applications.

Features

- ☐ CMOS Technology
- ☐ Low Power Consumption: 2.0 ~ 4.0 V
- ☐ Least External Components
- ☐ LED Power Dissipation is less during the transmission of instructions


Applications

- ☐ Audio Equipment
- ☐ Television
- ☐ Video Cassette Recorder
- ☐ Air Conditioner



Infrared Remote Control Transmitter

PT2560

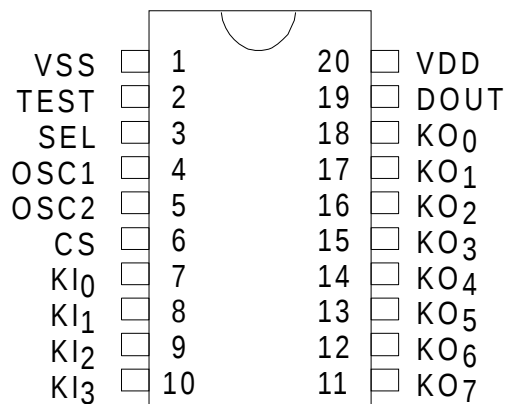Pin Configuration**PT2560****Order Information**


Valid Part Number	Package
PT2560-001	20 Pins, DIP Package (300 mil)
PT2560S-001	20 Pins, SO Package (300 mil)
PT2560-002	20 Pins, DIP Package (300 mil)
PT2560S-002	20 Pins, SO Package (300mil)
PT2560-003	20 Pins, DIP Package (300 mil)
PT2560S-003	20 Pins, SO Package (300 mil)



Infrared Remote Control Transmitter

PT2560

Application Circuit 1

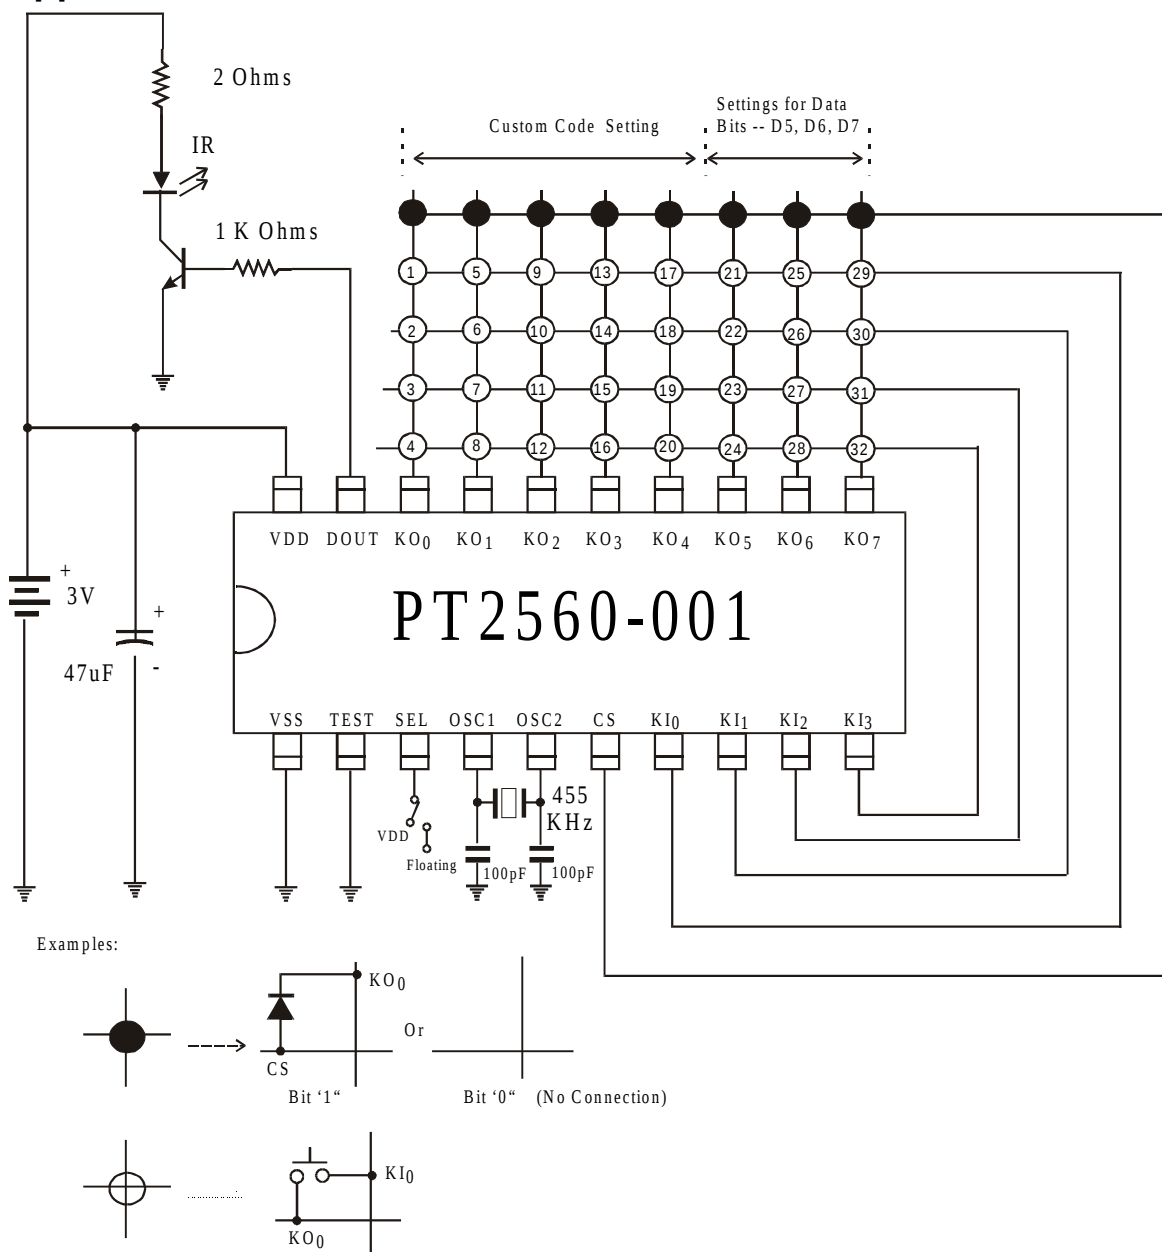


Note: Please take note that if you are replacing M50560 with PT2560, you do not need to connect an external capacitor to PT2560's Pin No. 3 (SEL PIN). PT2560 SEL Pin must either be "floating" or connected to VDD.



Infrared Remote Control Transmitter

PT2560

Application Circuit 2

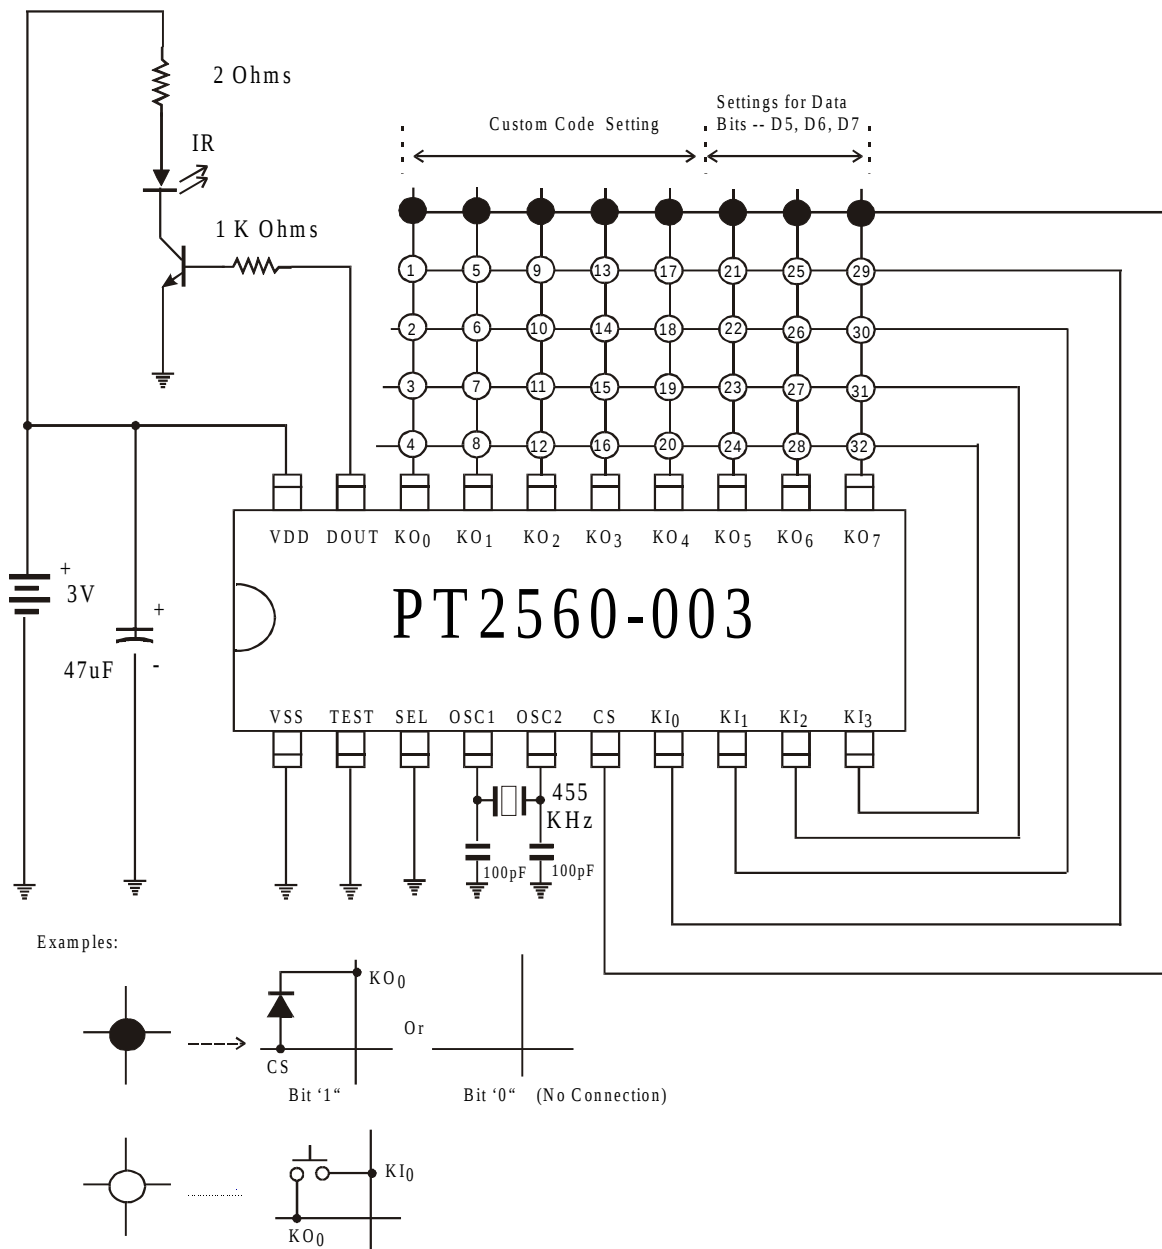


Note: Please take note that if you are replacing M50560 with PT2560, you do not need to connect an external capacitor to PT2560's Pin No. 3 (SEL PIN). PT2560 SEL Pin must be connected to the Ground.



Infrared Remote Control Transmitter

PT2560

Application Circuit 1 & 2 Key Table

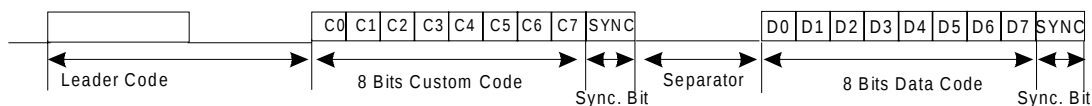

PT2560-001/ PT2560-003 Custom Code Table for Application Circuit 1/2

Input	KO Lines					Custom Codes							
CS	KO ₀	KO ₁	KO ₂	KO ₃	KO ₄	C0	C1	C2	C3	C4	C5	C6	C7
						0	0	0	0	0	0/1	0	0
*	*					1	0	0	0	0	0/1	0	0
*		*				0	1	0	0	0	0/1	0	0
*	*	*				1	1	0	0	0	0/1	0	0
*			*			0	0	1	0	0	0/1	0	0
*	*		*			1	0	1	0	0	0/1	0	0
*		*	*			0	1	1	0	0	0/1	0	0
*	*	*	*			1	1	1	0	0	0/1	0	0
*				*		0	0	0	1	0	0/1	0	0
*	*			*		1	0	0	1	0	0/1	0	0
*		*		*		0	1	0	1	0	0/1	0	0
*	*	*		*		1	1	0	1	0	0/1	0	0
*			*	*		0	0	1	1	0	0/1	0	0
*	*		*	*		1	0	1	1	0	0/1	0	0
*		*	*	*		0	1	1	1	0	0/1	0	0
*	*	*	*	*		1	1	1	1	0	0/1	0	0
*					*	0	0	0	0	1	0/1	0	0
*	*				*	1	0	0	0	1	0/1	0	0
*		*			*	0	1	0	0	1	0/1	0	0
*	*	*			*	1	1	0	0	1	0/1	0	0
*			*		*	0	0	1	0	1	0/1	0	0
*	*		*		*	1	0	1	0	1	0/1	0	0
*		*	*		*	0	1	1	0	1	0/1	0	0
*	*	*	*		*	1	1	1	0	1	0/1	0	0
*				*	*	0	0	0	1	1	0/1	0	0
*	*			*	*	1	0	0	1	1	0/1	0	0
*		*		*	*	0	1	0	1	1	0/1	0	0
*	*	*		*	*	1	1	0	1	1	0/1	0	0
*			*	*	*	0	0	1	1	1	0/1	0	0
*	*		*	*	*	1	0	1	1	1	0/1	0	0
*		*	*	*	*	0	1	1	1	1	0/1	0	0
*	*	*	*	*	*	1	1	1	1	1	0/1	0	0

Note: * = CS connected to the respective KO Line

For PT2560-001, Custom Code Bit 5 (C5) = "0".

For PT2560-003 Custom Code Bit 5 (C5) = "1".



Infrared Remote Control Transmitter

PT2560

PT2560-001/PT2560-003 Data Code Table for Application Circuit 1/2

No.	KI Lines				KO Lines								Data Code				
	KI ₀	KI ₁	KI ₂	KI ₃	KO ₀	KO ₁	KO ₂	KO ₃	KO ₄	KO ₅	KO ₆	KO ₇	D0	D1	D2	D3	D4
1	*				*								0	0	0	0	0
2		*			*								1	0	0	0	0
3			*		*								0	1	0	0	0
4				*	*								1	1	0	0	0
5	*					*							0	0	1	0	0
6		*				*							1	0	1	0	0
7			*			*							0	1	1	0	0
8				*		*							1	1	1	0	0
9	*						*						0	0	0	1	0
10		*					*						1	0	0	1	0
11			*				*						0	1	0	1	0
12				*			*						1	1	0	1	0
13	*							*					0	0	1	1	0
14		*						*					1	0	1	1	0
15			*					*					0	1	1	1	0
16				*				*					1	1	1	1	0
17	*								*				0	0	0	0	1
18		*							*				1	0	0	0	1
19			*						*				0	1	0	0	1
20				*					*				1	1	0	0	1
21	*									*			0	0	1	0	1
22		*								*			1	0	1	0	1
23			*							*			0	1	1	0	1
24				*						*			1	1	1	0	1
25	*										*		0	0	0	1	1
26		*									*		1	0	0	1	1
27			*								*		0	1	0	1	1
28				*							*		1	1	0	1	1
29	*											*	0	0	1	1	1
30		*										*	1	0	1	1	1
31			*									*	0	1	1	1	1
32				*								*	1	1	1	1	1

Input	KO Lines			Data Code		
	KO ₅	KO ₆	KO ₇	D5	D6	D7
CS				0	0	0
*	*			1	0	0
*		*		0	1	0
*	*	*		1	1	0
*			*	0	0	1
*	*		*	1	0	1
*		*	*	0	1	1
*	*	*	*	1	1	1




Infrared Remote Control Transmitter

PT2560

Application Circuit 3

(Extended Codes)

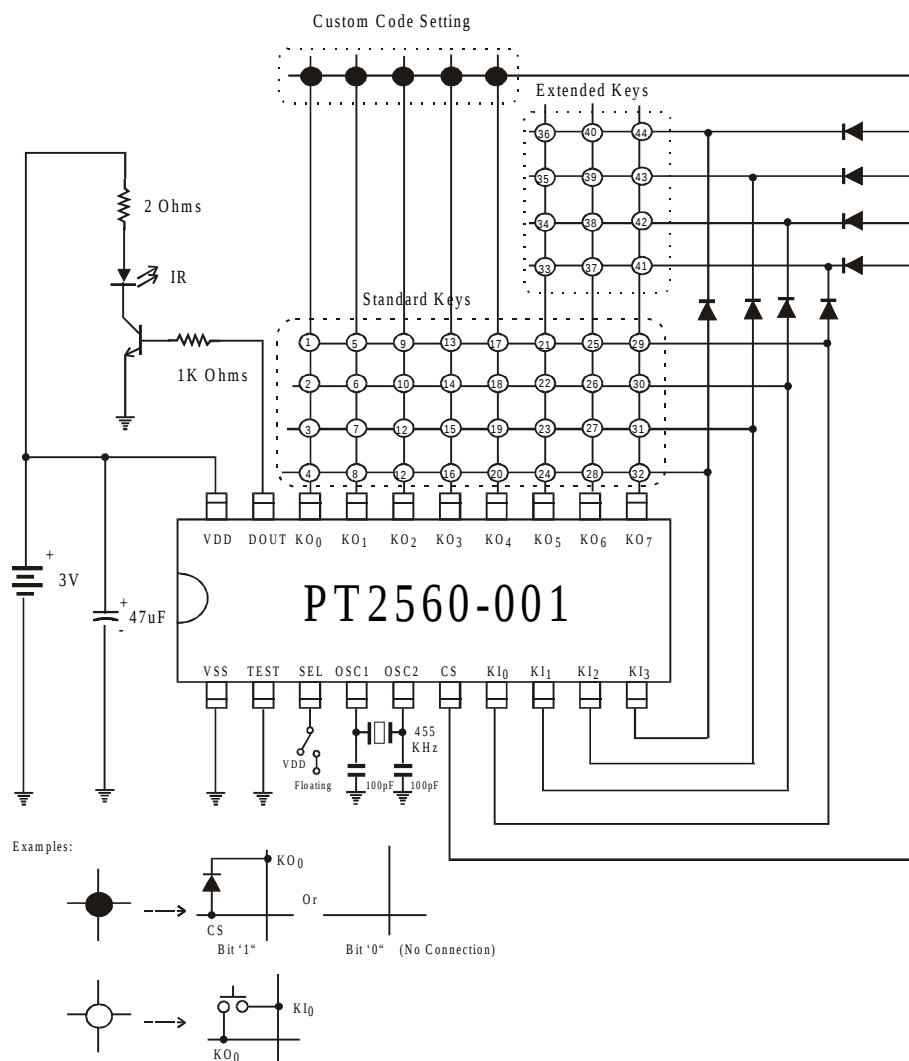

Note: Please take note that if you are replacing M50560 with PT2560, you do not need to connect an external capacitor to PT2560's Pin No. 3 (SEL PIN). PT2560 SEL Pin must either be "floating" or connected to VDD.




Infrared Remote Control Transmitter

PT2560

Application Circuit 4

(Extended Codes)

Note: Please take note that if you are replacing M50560 with PT2560, you do not need to connect an external capacitor to PT2560's Pin No. 3 (SEL PIN). PT2560 SEL Pin must connected to the Ground.

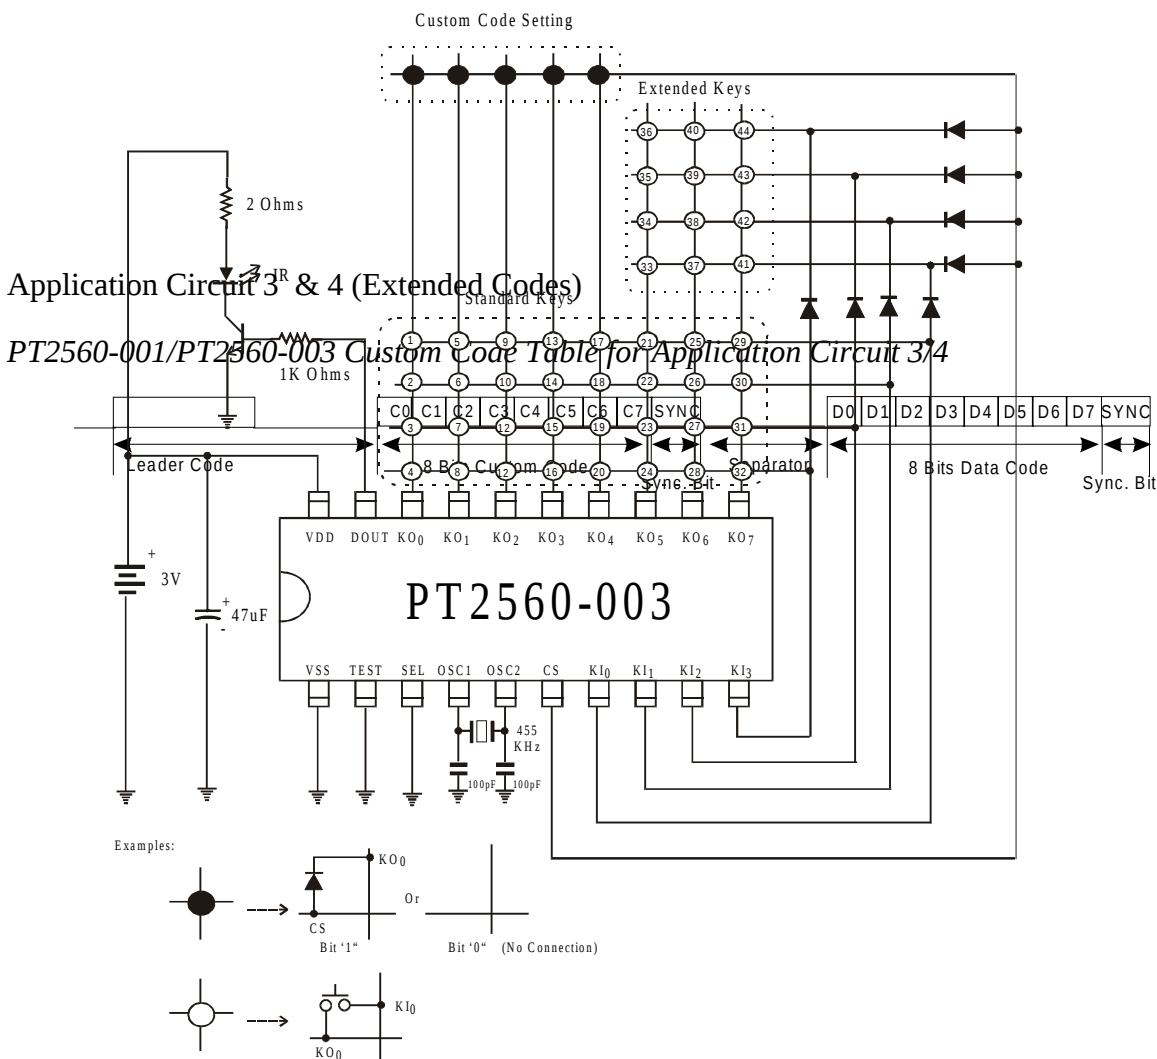



Infrared Remote Control Transmitter

PT2560

Input CS	KO Lines					Custom Codes							
	KO ₀	KO ₁	KO ₂	KO ₃	KO ₄	C0	C1	C2	C3	C4	C5	C6	C7
						0	0	0	0	0	0/1	0	0
*	*					1	0	0	0	0	0/1	0	0
*		*				0	1	0	0	0	0/1	0	0
*	*	*				1	1	0	0	0	0/1	0	0
*			*			0	0	1	0	0	0/1	0	0
*	*		*			1	0	1	0	0	0/1	0	0
*		*	*			0	1	1	0	0	0/1	0	0
*	*	*	*			1	1	1	0	0	0/1	0	0
*				*		0	0	0	1	0	0/1	0	0
*	*			*		1	0	0	1	0	0/1	0	0
*		*		*		0	1	0	1	0	0/1	0	0
*	*	*		*		1	1	0	1	0	0/1	0	0
*			*	*		0	0	1	1	0	0/1	0	0
*	*		*	*		1	0	1	1	0	0/1	0	0
*		*	*	*		0	1	1	1	0	0/1	0	0
*	*	*	*	*		1	1	1	1	0	0/1	0	0
*					*	0	0	0	0	1	0/1	0	0
*	*				*	1	0	0	0	1	0/1	0	0
*		*			*	0	1	0	0	1	0/1	0	0
*	*	*			*	1	1	0	0	1	0/1	0	0
*			*		*	0	0	1	0	1	0/1	0	0
*	*		*		*	1	0	1	0	1	0/1	0	0
*		*	*		*	0	1	1	0	1	0/1	0	0
*	*	*	*		*	1	1	1	0	1	0/1	0	0
*				*	*	0	0	0	1	1	0/1	0	0
*	*			*	*	1	0	0	1	1	0/1	0	0
*		*		*	*	0	1	0	1	1	0/1	0	0
*	*	*		*	*	1	1	0	1	1	0/1	0	0
*			*	*	*	0	0	1	1	1	0/1	0	0
*	*		*	*	*	1	0	1	1	1	0/1	0	0
*		*	*	*	*	0	1	1	1	1	0/1	0	0
*	*	*	*	*	*	1	1	1	1	1	0/1	0	0

Note: * = CS is connected to the respective KO Line.

For PT2650-001, Custom Code Bit 5 (C5) = "0".

For PT2560-003, Custom Code Bit 5 (C5) = "1".



Infrared Remote Control Transmitter

PT2560

PT2560-001/PT2560-003 Data Code Table for Application Circuit 3/4

No.	KI Lines				KO Lines								Data Code				
	KI ₀	KI ₁	KI ₂	KI ₃	KO ₀	KO ₁	KO ₂	KO ₃	KO ₄	KO ₅	KO ₆	KO ₇	D0	D1	D2	D3	D4
1	*				*								0	0	0	0	0
2		*			*								1	0	0	0	0
3			*		*								0	1	0	0	0
4				*	*								1	1	0	0	0
5	*					*							0	0	1	0	0
6		*				*							1	0	1	0	0
7			*			*							0	1	1	0	0
8				*		*							1	1	1	0	0
9	*						*						0	0	0	1	0
10		*					*						1	0	0	1	0
11			*				*						0	1	0	1	0
12				*			*						1	1	0	1	0
13	*							*					0	0	1	1	0
14		*						*					1	0	1	1	0
15			*					*					0	1	1	1	0
16				*				*					1	1	1	1	0
17	*								*				0	0	0	0	1
18		*							*				1	0	0	0	1
19			*						*				0	1	0	0	1
20				*					*				1	1	0	0	1
21	*									*			0	0	1	0	1
22		*								*			1	0	1	0	1
23			*							*			0	1	1	0	1
24				*						*			1	1	1	0	1
25	*										*		0	0	0	1	1
26		*									*		1	0	0	1	1
27			*								*		0	1	0	1	1
28				*							*		1	1	0	1	1
29	*											*	0	0	1	1	1
30		*										*	1	0	1	1	1
31			*									*	0	1	1	1	1
32				*								*	1	1	1	1	1

Input CS	KO Lines			Data Code		
	KO ₅	KO ₆	KO ₇	D5	D6	D7
				0	0	0
*	*			1	0	0
*		*		0	1	0
*	*	*		1	1	0
*			*	0	0	1
*	*		*	1	0	1
*		*	*	0	1	1
*	*	*	*	1	1	1



Infrared Remote Control Transmitter

PT2560

PT2560-001/PT2560-003 Data Code Table for Application Circuit 3/4 (Extended Keys)

No.	Input	KI Lines				KO Lines			Data Code							
	CS	KI ₀	KI ₁	KI ₂	KI ₃	KO ₅	KO ₆	KO ₇	D0	D1	D2	D3	D4	D5	D6	D7
33	*	*				*			0	0	1	0	1	1	0	0
34	*		*			*			1	0	1	0	1	1	0	0
35	*			*		*			0	1	1	0	1	1	0	0
36	*				*	*			1	1	1	0	1	1	0	0
37	*	*					*		0	0	0	1	1	0	1	0
38	*		*				*		1	0	0	1	1	0	1	0
39	*			*			*		0	1	0	1	1	0	1	0
40	*				*		*		1	1	0	1	1	0	1	0
41	*	*						*	0	0	1	1	1	0	0	1
42	*		*					*	1	0	1	1	1	0	0	1
43	*			*				*	0	1	1	1	1	0	0	1
44	*				*			*	1	1	1	1	1	0	0	1




Infrared Remote Control Transmitter

PT2560

Application Circuit 5

(Double Key Operation)

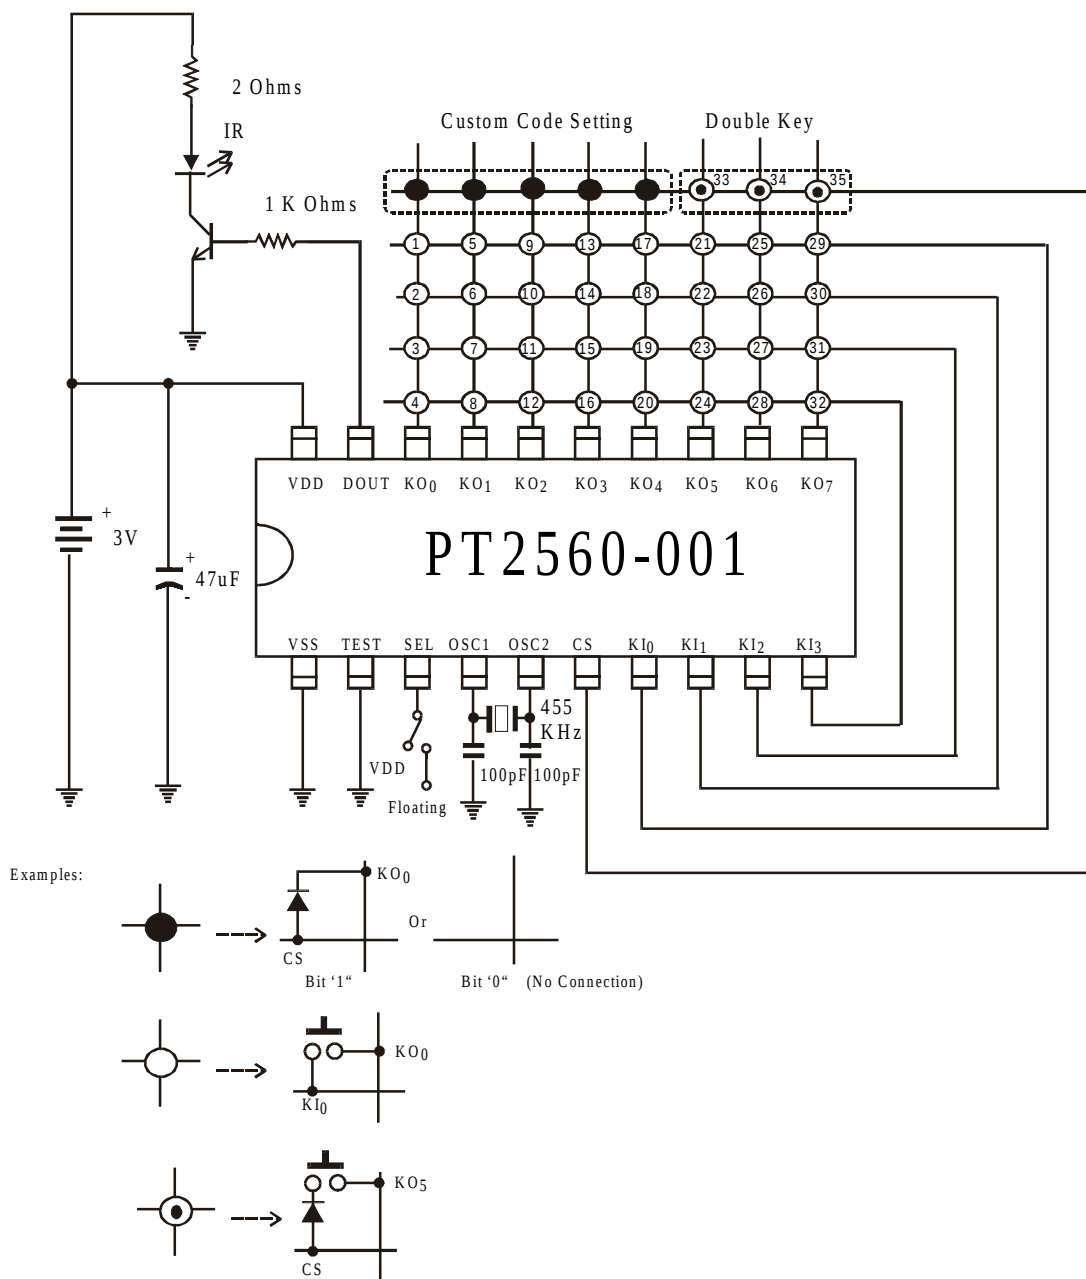

Note: Please take note that if you are replacing M50560 with PT2560, you do not need to connect an external capacitor to PT2560's Pin No. 3 (SEL PIN). PT2560 SEL Pin must either be "floating" or connected to VDD.




Infrared Remote Control Transmitter

PT2560

Application Circuit 6

(Double Key Operation)

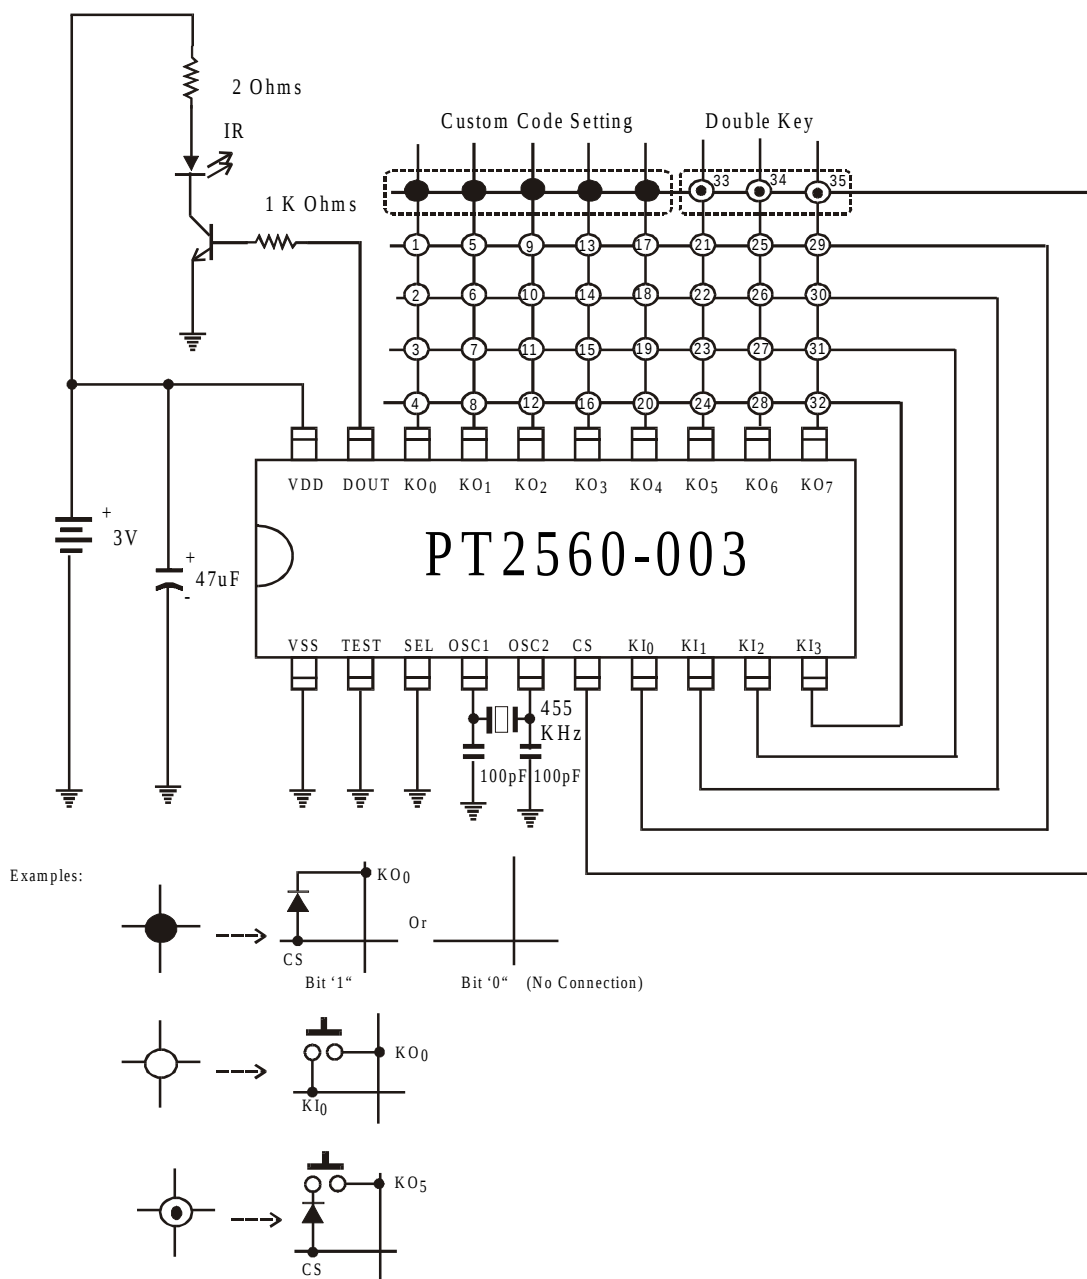


Note: Please take note that if you are replacing M50560 with PT2560, you do not need to connect an external capacitor to PT2560's Pin No. 3 (SEL PIN). PT2560 SEL Pin must be connected to the Ground.



Infrared Remote Control Transmitter

PT2560

Application Circuit 5 & 6 (Double Key Operation)



PT2560-001/PT2560-003 Custom Code Table for Application Circuit 5/6

Input	KO Lines					Custom Codes							
CS	KO ₀	KO ₁	KO ₂	KO ₃	KO ₄	C0	C1	C2	C3	C4	C5	C6	C7
						0	0	0	0	0	0/1	0	0
*	*					1	0	0	0	0	0/1	0	0
*		*				0	1	0	0	0	0/1	0	0
*	*	*				1	1	0	0	0	0/1	0	0
*			*			0	0	1	0	0	0/1	0	0
*	*		*			1	0	1	0	0	0/1	0	0
*		*	*			0	1	1	0	0	0/1	0	0
*	*	*	*			1	1	1	0	0	0/1	0	0
*				*		0	0	0	1	0	0/1	0	0
*	*			*		1	0	0	1	0	0/1	0	0
*		*		*		0	1	0	1	0	0/1	0	0
*	*	*		*		1	1	0	1	0	0/1	0	0
*			*	*		0	0	1	1	0	0/1	0	0
*	*		*	*		1	0	1	1	0	0/1	0	0
*		*	*	*		0	1	1	1	0	0/1	0	0
*	*	*	*	*		1	1	1	1	0	0/1	0	0
*					*	0	0	0	0	1	0/1	0	0
*	*				*	1	0	0	0	1	0/1	0	0
*		*			*	0	1	0	0	1	0/1	0	0
*	*	*			*	1	1	0	0	1	0/1	0	0
*			*		*	0	0	1	0	1	0/1	0	0
*	*		*		*	1	0	1	0	1	0/1	0	0
*		*	*		*	0	1	1	0	1	0/1	0	0
*	*	*	*		*	1	1	1	0	1	0/1	0	0
*				*	*	0	0	0	1	1	0/1	0	0
*	*			*	*	1	0	0	1	1	0/1	0	0
*		*		*	*	0	1	0	1	1	0/1	0	0
*	*	*	*	*	*	1	1	1	1	1	0/1	0	0

Note: * = CS is connected to the respective KO Line.

For PT2560-001, Custom Code Bit 5 (C5) = "0".

For PT2560-003, Custom Code Bit 5 (C5) = "1".



Infrared Remote Control Transmitter

PT2560

PT2560-001/PT2560-003 Data Code Table for Application Circuit 5/6

No.	KI Lines				KO Lines								Data Code				
	KI ₀	KI ₁	KI ₂	KI ₃	KO ₀	KO ₁	KO ₂	KO ₃	KO ₄	KO ₅	KO ₆	KO ₇	D0	D1	D2	D3	D4
1	*				*								0	0	0	0	0
2		*			*								1	0	0	0	0
3			*		*								0	1	0	0	0
4				*	*								1	1	0	0	0
5	*					*							0	0	1	0	0
6		*				*							1	0	1	0	0
7			*			*							0	1	1	0	0
8				*		*							1	1	1	0	0
9	*						*						0	0	0	1	0
10		*					*						1	0	0	1	0
11			*				*						0	1	0	1	0
12				*			*						1	1	0	1	0
13	*							*					0	0	1	1	0
14		*						*					1	0	1	1	0
15			*					*					0	1	1	1	0
16				*				*					1	1	1	1	0
17	*								*				0	0	0	0	1
18		*							*				1	0	0	0	1
19			*						*				0	1	0	0	1
20				*					*				1	1	0	0	1
21	*									*			0	0	1	0	1
22		*								*			1	0	1	0	1
23			*							*			0	1	1	0	1
24				*						*			1	1	1	0	1
25	*										*		0	0	0	1	1
26		*									*		1	0	0	1	1
27			*								*		0	1	0	1	1
28				*							*		1	1	0	1	1
29	*											*	0	0	1	1	1
30		*										*	1	0	1	1	1
31			*									*	0	1	1	1	1
32				*								*	1	1	1	1	1

PT2560-001/PT2560-003 Data Code Table for Double Key Operation

Double Keys Key Nos.	Input CS	KO Lines			Data Code		
		KO ₅	KO ₆	KO ₇	D5	D6	D7
					0	0	0
33	*	*			1	0	0
34	*		*		0	1	0
33+34	*	*	*		1	1	0
35	*			*	0	0	1
33+35	*	*		*	1	0	1
34+35	*		*	*	0	1	1
33+34+35	*	*	*	*	1	1	1



Infrared Remote Control Transmitter

PT2560

Example 1: When the Double Key Operation is NOT used and the Key No. 2 is pressed, then the Data Code will be:

D0	D1	D2	D3	D4	D5	D6	D7
1	0	0	0	0	<u>0</u>	<u>0</u>	<u>0</u>

Take note that since the Double Key Operation is NOT used, the value of data bits D5, D6, and D7 is "0".

Example 2: When only 1 Double Key (Key Nos. 33 + Key No. 2) is used, then the Data Code is


D0	D1	D2	D3	D4	D5	D6	D7
1	0	0	0	0	<u>1</u>	<u>0</u>	<u>0</u>

Example 3: When 2 Double Keys (Key Nos. [33 + 35] + Key No. 2) are used, the Data Code is

D0	D1	D2	D3	D4	D5	D6	D7
1	0	0	0	0	<u>1</u>	<u>0</u>	<u>1</u>

PT2560

(No Leader Code and Custom Code)

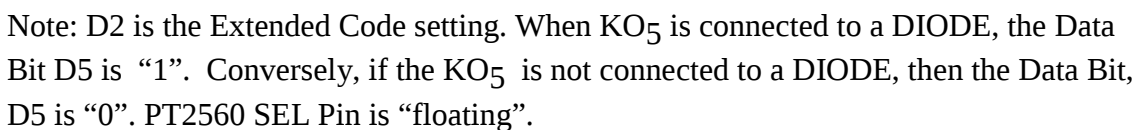



Infrared Remote Control Transmitter

PT2560

PT2560-002 Data Code Table for Application Circuit 7 (MODE B)

No.	KI Lines				KO Lines								Data Code					
	KI ₀	KI ₁	KI ₂	KI ₃	KO ₀	KO ₁	KO ₂	KO ₃	KO ₄	KO ₅	KO ₆	KO ₇	D0	D1	D2	D3	D4	D5
1	*				*								0	0	0	0	0	0/1
2		*			*								1	0	0	0	0	0/1
3			*		*								0	1	0	0	0	0/1
4				*	*								1	1	0	0	0	0/1
5	*					*							0	0	1	0	0	0/1
6		*				*							1	0	1	0	0	0/1
7			*			*							0	1	1	0	0	0/1
8				*		*							1	1	1	0	0	0/1
9	*						*						0	0	0	1	0	0/1
10		*					*						1	0	0	1	0	0/1
11			*				*						0	1	0	1	0	0/1
12				*			*						1	1	0	1	0	0/1
13	*							*					0	0	1	1	0	0/1
14		*						*					1	0	1	1	0	0/1
15			*					*					0	1	1	1	0	0/1
16				*				*					1	1	1	1	0	0/1
17	*								*				0	0	0	0	1	0/1
18		*							*				1	0	0	0	1	0/1
19			*						*				0	1	0	0	1	0/1
20				*					*				1	1	0	0	1	0/1
21	*									*			0	0	1	0	1	0/1
22		*								*			1	0	1	0	1	0/1
23			*							*			0	1	1	0	1	0/1
24				*						*			1	1	1	0	1	0/1
25	*										*		0	0	0	1	1	0/1
26		*									*		1	0	0	1	1	0/1
27			*								*		0	1	0	1	1	0/1
28				*							*		1	1	0	1	1	0/1
29	*											*	0	0	1	1	1	0/1
30		*										*	1	0	1	1	1	0/1
31			*									*	0	1	1	1	1	0/1
32				*								*	1	1	1	1	1	0/1

Данный компонент на территории Российской Федерации

Вы можете приобрести в компании MosChip.

Для оперативного оформления запроса Вам необходимо перейти по данной ссылке:

<http://moschip.ru/get-element>

Вы можете разместить у нас заказ для любого Вашего проекта, будь то серийное производство или разработка единичного прибора.

В нашем ассортименте представлены ведущие мировые производители активных и пассивных электронных компонентов.

Нашей специализацией является поставка электронной компонентной базы двойного назначения, продукции таких производителей как XILINX, Intel (ex.ALTERA), Vicor, Microchip, Texas Instruments, Analog Devices, Mini-Circuits, Amphenol, Glenair.

Сотрудничество с глобальными дистрибьюторами электронных компонентов, предоставляет возможность заказывать и получать с международных складов практически любой перечень компонентов в оптимальные для Вас сроки.

На всех этапах разработки и производства наши партнеры могут получить квалифицированную поддержку опытных инженеров.

Система менеджмента качества компании отвечает требованиям в соответствии с ГОСТ Р ИСО 9001, ГОСТ РВ 0015-002 и ЭС РД 009

Офис по работе с юридическими лицами:

105318, г.Москва, ул.Щербаковская д.3, офис 1107, 1118, ДЦ «Щербаковский»

Телефон: +7 495 668-12-70 (многоканальный)

Факс: +7 495 668-12-70 (доб.304)

E-mail: info@moschip.ru

Skype отдела продаж:

moschip.ru

moschip.ru_4

moschip.ru_6

moschip.ru_9