

Active load ASC-50W

General

The ASC-50W compact electronic DC load, is the first generation of small desktop loads with a power rating of 50 Wmax. It offers voltage, current and power ratings for a multitude of applications for daily use in laboratories, schools or workshops. This model supports the for now regulation modes constant current (CC) and constant power (CP). The core of the control circuit is a fast-high performance analog amplifier/multiplier supported by microcontroller which provides interesting features, such as a load step generator push buttons and display control. The display, together with push buttons and rotary potentiometers, enables the user an intuitive kind of manual operation and better overview.

Programmable Electronic DC Load



- Input power rating: 0...50 Wmax
- Input voltage: 0...50 Vmax
- Input current: 0...10 Amax
- Load step generator (100Hz fixed frequency)
- Adjustable trip point (UVLO)
- Operation modes: CC, CP
- LCD display
- Temperature dependent Fan control

Features

Front side view



1. Display
2. ON/OFF Push button
3. Pulse Push Button
4. Preset Push Button
5. I/P Push Button
6. Coarse Potentiometer
7. Fine Potentiometer
8. UVLO Potentiometer
9. PULSE Potentiometer
10. Preset LED (green)
Pulse LED (yellow)
ON/OFF LED (red)

Back side view



1. 4 mm Banana plugs
Red for positive and **Blue** for return line
2. Plug for external 12VDC Supply

ASC-50W device is standard delivered with external AC/DC wall plug adapter.

All various AC input plugs are included.
Manufacturer: XP Power
Type: VER12US120-JA

Handling (HMI)

Manual operation is done with a LCD display, four rotary potentiometers and four pushbuttons. The display shows all relevant set values and actual values at a glance. The display is operated only on English.

ON/OFF Button

Press the button to switch ON or OFF the load current or power. If Under Voltage Lock Out (UVLO) set value higher than supply voltage, pressing the ON/OFF button will bring device in to ready state only. If in ON or ready state, the red LED will light ON

I/P Button

Once device powered, by default will go in to Constant Current (CC) mode.

Press the button to change from (CC) in to Constant Power (CP) mode.

PULSE Button

This model includes a load step generator which can generate one typical function needed for power supply testing. Frequency generated is 100Hz with 50% duty cycle. The level of load step is defined by potentiometer "Pulse". This can be applied to current or power.

Press the button to enable or disable this function. If Under Voltage Lock Out (UVLO) set value higher than supply voltage, pressing the ON/OFF button will bring device in to ready state only.

Yellow LED blinking if generator enabled.

Under Voltage Lock Out

Very nice feature we included, is the possibility to set the trip point. This can be done by operating potentiometer UVLO. The level can be seen on display by pressing button "PRESET". The load will stay in OFF mode till the input voltage hits the threshold level. Once this happens, the load will be switched ON and regulate to set point. At the same time a hysteresis will be applied to this UVLO value to avoid oscillations. This is in range of 10% of the input voltage value.

Preset Button

Push the button to see UVLO adjustment and inactive load function:

if device operates in CC mode you will see CP mode setup and vice versa.

Pushing the PRESET button the green LED will light on


Coarse and Fine Potentiometers

Coarse is multiple turns potentiometer (10x), Fine is a single turn potentiometer. Operating it, it is possible to adjust current or power set point. Fine potentiometer allows you to have fine adjustments (in 10% range). Be aware, to get the maximum possible set point, both potentiometers must reach the maximum position.

Product specification

Supply Voltage	12VDC
Power Consumption	Max 2.5W
DC Voltage, Current Accuracy	<2%
Load Regulation	<2%
Cooling	Temperature controlled fan
Operation Temperature	0°C...40°C
Storage Temperature	-20°C...70°C
Dimensions (WxHxL)mm	70x122x190
Weight	950g
Certification	EN 61326-1

Layout dimensions

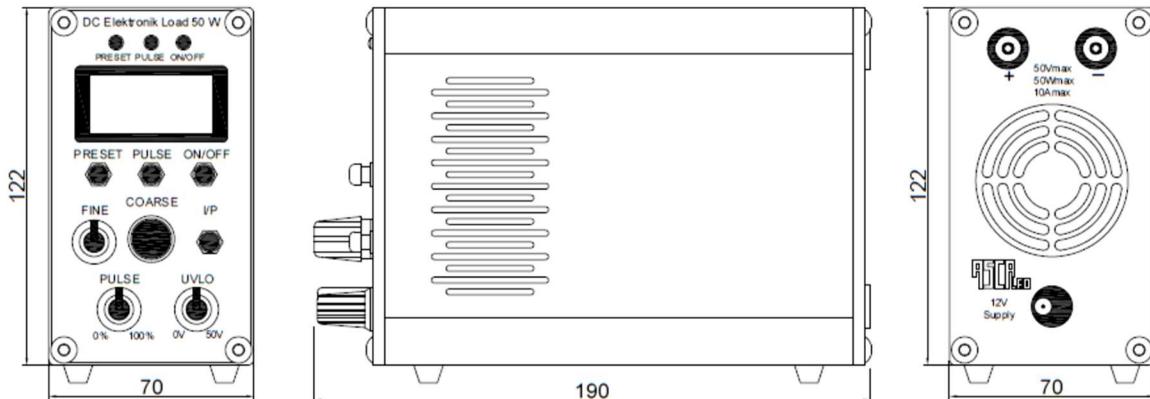

Customer support

For any details contact authorized local distributor or Ascalab directly:

Email: info@ascalab.com

Phone: +386 1 2350102

Warranty valid 1 year after purchase order.
We shall reply to you at earliest convenience.

Doc version	1.4
Date	5th January 2019

Данный компонент на территории Российской Федерации**Вы можете приобрести в компании MosChip.**

Для оперативного оформления запроса Вам необходимо перейти по данной ссылке:

<http://moschip.ru/get-element>

Вы можете разместить у нас заказ для любого Вашего проекта, будь то серийное производство или разработка единичного прибора.

В нашем ассортименте представлены ведущие мировые производители активных и пассивных электронных компонентов.

Нашей специализацией является поставка электронной компонентной базы двойного назначения, продукции таких производителей как XILINX, Intel (ex.ALTERA), Vicor, Microchip, Texas Instruments, Analog Devices, Mini-Circuits, Amphenol, Glenair.

Сотрудничество с глобальными дистрибуторами электронных компонентов, предоставляет возможность заказывать и получать с международных складов практически любой перечень компонентов в оптимальные для Вас сроки.

На всех этапах разработки и производства наши партнеры могут получить квалифицированную поддержку опытных инженеров.

Система менеджмента качества компании отвечает требованиям в соответствии с ГОСТ Р ИСО 9001, ГОСТ Р В 0015-002 и ЭС РД 009

Офис по работе с юридическими лицами:

105318, г.Москва, ул.Щербаковская д.3, офис 1107, 1118, ДЦ «Щербаковский»

Телефон: +7 495 668-12-70 (многоканальный)

Факс: +7 495 668-12-70 (доб.304)

E-mail: info@moschip.ru

Skype отдела продаж:

moschip.ru
moschip.ru_4

moschip.ru_6
moschip.ru_9