D5A

CSM_D5A_DS_E_2_1

High-precision Switch for Detecting Micron-unit Displacement

- Ideal for detecting and measuring wear of cutting tools or for original point of work.
- Ceramic plungers on M5, M8, and slim models for superior abrasion resistance and resistance to temperature changes.
- Direct input possible to microprocessors and programmable controllers.
- A version with screw-type cable connector available for easy installation and maintenance.




Be sure to read *Safety Precautions* on page 5 to 6 and *Safety Precautions for All Limit Switches*.




Application Examples

Origin Position Control of an X-Y Table




Origin can be set to a desired position and the origin position can be controlled using the D5A.

Coaxiality Inspection



The D5A can be mounted on a jig used for checking deviation to inspect its coaxiality.

Checking Turret Indexing Position



Set the D5A on the turret indexing position to check if the turret is engaged properly at the specified position.

Ordering Information

Contact Output Models (NC Contact)

Actuator	Tuno	Operation Indicator	Repeat accuracy	Operating force OF max.	Cable lead outlet		Degree of	Model
Actuator	Туре				Lead outlet	Length	protection	Model
			1 μm max.	0.29 N	Pre-wired	1	IP40	D5A-1100
	M5			0.49 N				D5A-1200
		Nana	3 μm max.	0.29 N				D5A-2100
Pin plunger				0.49 N				D5A-2200
Pin plunger		None	1 μm max.	0.49 N		1 m	IP67	D5A-3200
				0.98 N				D5A-3300
	Mac		0	0.45 N				D5A-7400
	M16	3 μm max. 2.45 N	Connector			D5A-7403		

Solid-state Output Models (PNP Transistor Output)

Astrotov	T	Operation	D	Operating force	Cable lead of	utlet	Degree of	Model
Actuator	Type	Indicator	Repeat accuracy	OF max.	Lead outlet	Length	protection	
	M8			0.49 N				D5A-3210
	IVIO	VIO	1 um may	0.98 N 0.49 N				D5A-3310
Pin plunger —	Slim		1 μm max.		Pre-wired	1 m		D5A-5210
Pili piuligei	Silm	M16		0.98 N		1 m		D5A-5310
	M16		3 μm max.	2.45 N			- IP67	D5A-7410
	IVITO		3 μπ παχ.	2.45 N	Connector	1		D5A-7413
		Provided			Pre-wired	3 m		D5A-8511
Top plunger \triangle	,					5 m		D5A-8512
Top plunger				3.92 N	Connector	3 m		D5A-8514
	Limit				Connector	5 m		D5A-8515
	Lillin		3 μm max.		Pre-wired	3 m		D5A-9511
Bevel plunger — 9					Fie-wired	5 m		D5A-9512
bever plunger				ļ	0	3 m		D5A-9514
				Connector	5 m	1	D5A-9515	

OMRON 1

Specifications


Ratings

Item	Electrical ratings		
Contact output models	M5, M8, M16 Type: 10 mA at 24 VAC 10 mA at 12 VDC		
Solid-state output models	100 mA at 5 to 24 VDC±10% Leakage current: 0.15 mA max. Residual voltage: 3 V max. Power consumption: 3 mW max.		

Engineering Data

Repeat Accuracy Examples (Reference Data) M5 Type (Contact Output) With Repeat Accuracy of 1 µm max.

D5A-1 □□□ Series

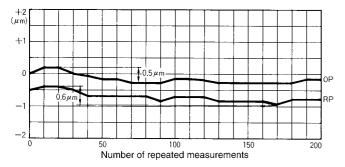


Characteristics

max.		
max.		
esis- C,		
100 $\text{M}\Omega$ min. (at 250 VDC) between each terminal and non-current-carrying metal part		
800 m Ω max. (initial) with 1 m cable, 2.4 Ω max. (initial) with 3 m cable, 4 Ω max. (initial) with 5 m cable		
1,000 VAC, 50/60 Hz for 1 min between each terminal and non-current-carrying metal part		

- Note: The above figures are initial values.
 *1. Contact your OMRON sales representative for measurement conditions of the repeat accuracy.
- *2. Durability values are calculated at an operating temperature of +5°C to +35°C, and an operating humidity of 40% to 70%RH. Contact your OMRON sales representative for more detailed information on other operating environments.
- $^{\star}3$. The value indicates the operating position change rate for a change of 1 $^{\circ}C$ in the ambient temperature. The specifications depend on the model. Contact your OMRON sales representative for details.


Structure and Nomenclature

Structure

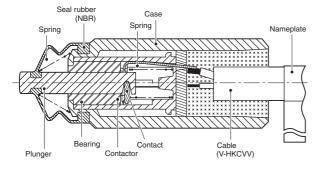


Contact Form/Output Circuit Diagram Contact Output Models

M5, M8, M16 type




Note: NO Switches are not available with contact output models.


Solid-state Output Models (PNP Transistor Output) M8, Slim, M16, Limit type

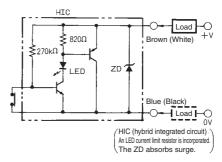



Note: The load may be connected to either the +V or 0 V terminal. Core wire colors have been changed accompanying changes in standards. The old core wire colors are given in parentheses.


(Unit: mm)

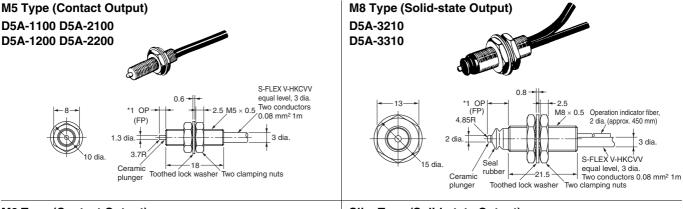

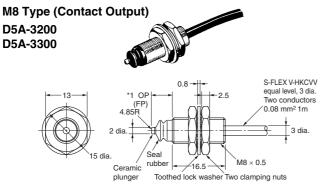

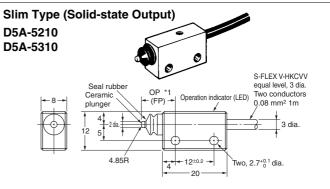

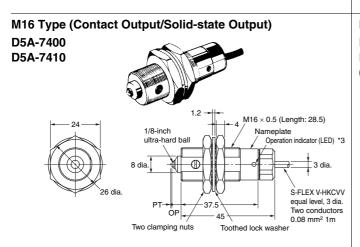

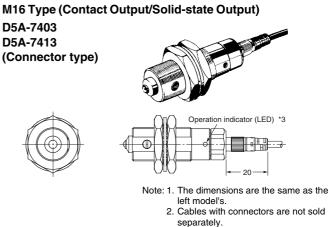

Note: 1. Unless otherwise specified, a tolerance of ± 0.4 mm applies to all dimensions.

2. Special screw dimensions apply to the case screws (pitch: 0.5 mm). Mounting is not possible with standard tapping. Use the provided special nuts.


Operating characteristics		Model	D5A-1100 *2 D5A-2100 *2	D5A-1200 *2 D5A-2200 *2	D5A-3200 _{*2} D5A-3210 ^{*2}	D5A-3300 _{*2} D5A-3310	D5A-5210 *2	D5A-5310 *2	D5A-7400, D5A-7410 D5A-7403, D5A-7413
Operating force Pretravel Overtravel Movement Differential	OF PT OT	max. max. min. max.	0.29 N 1.5 mm 5 μm	0.49 N 1.5 mm 5 μm	0.49 N 1.5 mm 5 μm	0.98 N 1.5 mm 5 μm	0.49 N 1.5 mm 5 μm	0.98 N 1.5 mm 5 μm	2.45 N 1 mm 2 mm 5 μm
Operating Position Free Position	OP FP	*1	(2 mm) 	(2 mm) 	(6.5 mm) 	(6.5 mm) 	10.5±0.4 mm	10.5±0.4 mm	(4.4 mm) (5 mm)


^{*1.} The operating position of these types is the same as the free position because of high sensitivity (repeat accuracy: 1 µm max.). This does not apply to M16 limit switch types.

OMRON

Total movement is 1.9 to 2.1 mm. Set the appropriate stroke (plunging depth) to 1.0 to 1.5 mm from the FP.


^{*3.} Not available in the contact output type.

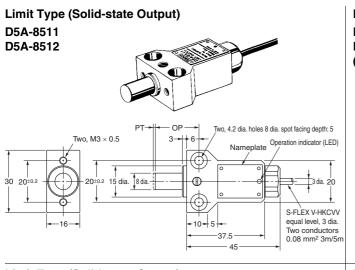


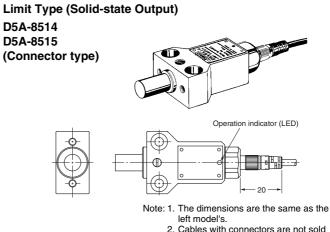

2. Cables with connectors are not sold

separately.

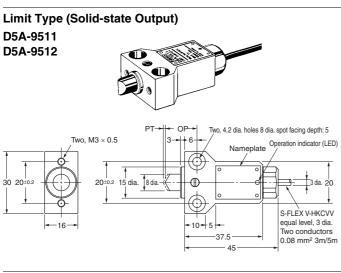

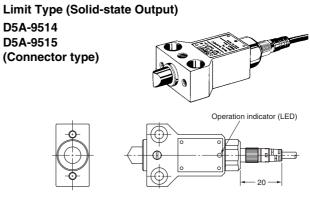

Note: 1. The dimensions are the same as the left model's.

2. Cables with connectors are not sold separately.

Note: Unless otherwise specified, a tolerance of ± 0.4 mm applies to all dimensions.

Operating characteristics	Model	D5A-8511, -8514 D5A-8512, -8515	D5A-9511, -9514 D5A-9512, -9515
Operating force	OF max.	3.93 N	3.93 N
Pretravel	PT max.	1 mm	1 mm
Overtravel	OT min.	5 mm	4 mm
Movement Differential	MD max.	5 μm	5 μm
Operating Position Free Position	OP FP	21.0±0.4 mm (21.8mm)	15.2±0.4 mm (15.8mm)

Safety Precautions

Refer to Safety Precautions for All Limit Switches.


Precautions for Correct Use

Handling of Fiber Cable

- Do not pull or impose any force exceeding 29.42 N on the fiber cable.
- Make sure that the bending radius of the fiber cable is as large as possible and at least R20 mm.
- The 40-mm portion of the fiber cable on the connector end as shown below must not be bent.



• Do not impose compressing loads on the fiber cable.

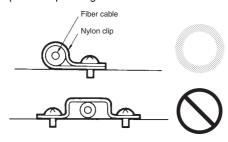

- The fiber cable can be cut with OMRON's E39-F4 Cutting Tool.
- Do not impose any force exceeding 29.42 N on the cable, otherwise the cord may break. Make sure that the bending radius of the cable is at least 20 mm.

Mounting

- The screw sections of cases for M5, M8, and M16 types have special dimensions. Do not use the mounting dimensions specified for standard types.
- For the mounting dimensions, refer to the following figures and tables.



Туре		IV	18		
Size	M5	Contact output	Solid-state output	M16	
A (Mounting hole)	5.2±0.1 mm dia.	8.2±0.1	mm dia.	16.2±0.1 mm dia.	
B (Panel thickness)	3 to 10 mm	5 to 8 mm	5 to 13 mm	10 to 17 mm	
C (Toothed lock washer)	1 1() mm dia		m dia.	26 mm dia.	




Si	Type ze	Slim	Limit		
Α	Mounting pitch	12±0.2 mm	20±0.2 mm		
В	Tapping	M2.6	M4		
. 0	Mounting hole	2.8 ±0.2 mm dia.	4.2 ±0.2 mm dia.		


• Do not tighten the nut with too much force. Be sure to apply the torque shown in this table.

Туре	Appropriate tightening torque
M5	0.98 N⋅m max.
M8	2.94 N⋅m max.
M16	9.81 N⋅m max.
Slim	0.29 N·m max. (M2.6 screw)
Limit	1.47 N⋅m max. (M4 screw)

 When mounting the Switch to a panel, be sure to use the toothed lock washer attached as an accessory (to M5, M8, and M16 types only). Use the washer on the panel surface opposite the object to be detected by the Switch.




Connection of Contact Output

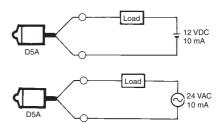

Consideration of polarity is not required.

Connection of Solid-state Output

- Be sure to connect the load to the power source in series.
- The operating state of the Switch can be checked by the LED operation indicator (lights when the Switch is in operation) incorporated in the solid-state output circuit.
- The output residual voltage is approximately 3 V. Therefore, exercise care when selecting the load and setting the supply voltage. The residual voltage, however, can be easily calculated because it is almost constant and is free from the influence of fluctuation in the load current.



Note: The lead wire colors of the D5A have been changed in compliance with the latest applicable JIS standards.

Colors in parentheses are previous ones.


[Example]

- (1) In the above circuit, suppose the MY relay rated at 12 VDC is used as the load. Since the must operate voltage of the relay is 80% or less than the rated voltage, it is 12 × 0.8 = 9.6 V. The supply voltage, in turn, is 3 + 9.6 = 12.6 V.
- Therefore, the relay may not operate with a 12 V power source.
- (2) However, if the relay rated at 24 VDC is employed, the must operate voltage and supply voltage of the relay are respectively 19.2 V and 22.2 V. The relay therefore can operate with a 24 V power source.
- When a solid-state circuit is turned OFF, leakage current of 0.15 mA (max.) flows, causing some voltages to remain in the load. For this reason, be sure to check the must release voltage of the load before using it.

5


Series Connection of Switches

The Solid-state Output-type Switches must not be connected in series. To obtain the same effect as a series connection, form an AND gate with a relay inserted between the Switch and load.

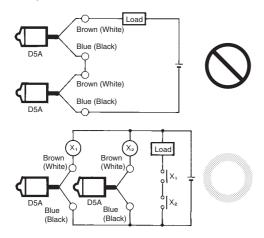


Parallel Connection of Switches

 In principle, two or more D5A's should not be used in an OR configuration.



 However, they can be connected in parallel provided that both switches A and B in the above figure do not operate at the same time and that the load does not have to be kept energized. In this circuit, however, the leakage current is increased, multiplied by the number of Switches connected in parallel. Consequently, the Switch may not release properly. To keep the load energized, connect a relay to each of the Switches as shown below.




Connection to Power Source

 Be sure to connect the Switch to the power source via the load. If directly connected to the power source, the internal elements of the Switch may be damaged.




 Correctly connect the white and black lead wires to the positive and negative sides, respectively, of the power source. Although the D5A will not be damaged even if the polarity is reversed by mistake, if this happens, the Switch maintains the ON state (i.e., the contact is kept open) regardless of the presence or absence of the object to be detected.




The core wire colors have been changed to meet new standards. Make sure that the wires are connected correctly.

Others

 Adjust the mounting of the D5A until the stroke of the pin plunger and top plunger is aligned with the stroke of the operating body.
 Special attention should be paid to the ceramic pushbutton unit. It might be damaged if undue shock is applied.

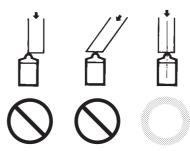


- The harder the material for the dog and the more solidly the mounting base is fitted, the more accurately a minute displacement is detected.
- When a limit switch type (D5A-8 \(\subseteq \), D5A-9 \(\subseteq \)) is used, apply grease to the dog to reduce friction between it and the plunger.
 Do not apply grease to pin plungers, otherwise the grease may stick to the contacts or generate gas that may cause contact failures.
- Be sure to use dogs made of hard materials for bevel or top plungers and apply grease to the surface of the dogs. The hardness (Hv) of a bevel plunger is 2,000 or over, for which it is recommended that a dog that has an Hv value of 1,000 or less be used
- Do not fail to provide a stopper so as to prevent the enclosure of the D5A from being used as the stoppers.




- Attach an appropriate cover for the protection of the D5A from machining oil or cuttings. No protective cover is, however, provided together with the Switch.
- Exercise care that excessive force is not applied to the ceramic plunger of M5, M8, or slim type.
 If the possibility exists that strong shock may be applied to the plunger when the Switch is being mounted, use a protective cap.
 The plunger may not release if it is depressed with too great a force.

Set its stroke by referring to the OT value indicated in Operating

Characteristics.



 Do not mount the Switch with its nameplate facing downwards (i.e., in the direction of gravity), otherwise the oil drain hole will not work effectively.



OMRON

Read and Understand This Catalog

Please read and understand this catalog before purchasing the products. Please consult your OMRON representative if you have any questions or comments.

Warranty and Limitations of Liability

WARRANTY

OMRON's exclusive warranty is that the products are free from defects in materials and workmanship for a period of one year (or other period if specified) from date of sale by OMRON.

OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, REGARDING NON-INFRINGEMENT, MERCHANTABILITY, OR FITNESS FOR PARTICULAR PURPOSE OF THE PRODUCTS. ANY BUYER OR USER ACKNOWLEDGES THAT THE BUYER OR USER ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE. OMRON DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED.

LIMITATIONS OF LIABILITY

OMRON SHALL NOT BE RESPONSIBLE FOR SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED ON CONTRACT, WARRANTY, NEGLIGENCE, OR STRICT LIABILITY

In no event shall the responsibility of OMRON for any act exceed the individual price of the product on which liability is asserted.

IN NO EVENT SHALL OMRON BE RESPONSIBLE FOR WARRANTY, REPAIR, OR OTHER CLAIMS REGARDING THE PRODUCTS UNLESS OMRON'S ANALYSIS CONFIRMS THAT THE PRODUCTS WERE PROPERLY HANDLED, STORED, INSTALLED, AND MAINTAINED AND NOT SUBJECT TO CONTAMINATION, ABUSE, MISUSE, OR INAPPROPRIATE MODIFICATION OR REPAIR.

Application Considerations

SUITABILITY FOR USE

OMRON shall not be responsible for conformity with any standards, codes, or regulations that apply to the combination of products in the customer's application or use of the products.

At the customer's request, OMRON will provide applicable third party certification documents identifying ratings and limitations of use that apply to the products. This information by itself is not sufficient for a complete determination of the suitability of the products in combination with the end product, machine, system, or other application or use.

The following are some examples of applications for which particular attention must be given. This is not intended to be an exhaustive list of all possible uses of the products, nor is it intended to imply that the uses listed may be suitable for the products:

- Outdoor use, uses involving potential chemical contamination or electrical interference, or conditions or uses not described in this catalog.
- Nuclear energy control systems, combustion systems, railroad systems, aviation systems, medical equipment, amusement machines, vehicles, safety equipment, and installations subject to separate industry or government regulations.
- Systems, machines, and equipment that could present a risk to life or property.

Please know and observe all prohibitions of use applicable to the products.

NEVER USE THE PRODUCTS FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCTS ARE PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

PROGRAMMABLE PRODUCTS

OMRON shall not be responsible for the user's programming of a programmable product, or any consequence thereof.

Disclaimers

CHANGE IN SPECIFICATIONS

Product specifications and accessories may be changed at any time based on improvements and other reasons.

It is our practice to change model numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the products may be changed without any notice. When in doubt, special model numbers may be assigned to fix or establish key specifications for your application on your request. Please consult with your OMRON representative at any time to confirm actual specifications of purchased products.

DIMENSIONS AND WEIGHTS

Dimensions and weights are nominal and are not to be used for manufacturing purposes, even when tolerances are shown.

PERFORMANCE DATA

Performance data given in this catalog is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of OMRON's test conditions, and the users must correlate it to actual application requirements. Actual performance is subject to the OMRON Warranty and Limitations of Liability.

ERRORS AND OMISSIONS

The information in this document has been carefully checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical, or proofreading errors, or omissions.

2008.11

In the interest of product improvement, specifications are subject to change without notice.



ПОСТАВКА ЭЛЕКТРОННЫХ КОМПОНЕНТОВ

Общество с ограниченной ответственностью «МосЧип» ИНН 7719860671 / КПП 771901001 Адрес: 105318, г.Москва, ул.Щербаковская д.3, офис 1107

Данный компонент на территории Российской Федерации Вы можете приобрести в компании MosChip.

Для оперативного оформления запроса Вам необходимо перейти по данной ссылке:

http://moschip.ru/get-element

Вы можете разместить у нас заказ для любого Вашего проекта, будь то серийное производство или разработка единичного прибора.

В нашем ассортименте представлены ведущие мировые производители активных и пассивных электронных компонентов.

Нашей специализацией является поставка электронной компонентной базы двойного назначения, продукции таких производителей как XILINX, Intel (ex.ALTERA), Vicor, Microchip, Texas Instruments, Analog Devices, Mini-Circuits, Amphenol, Glenair.

Сотрудничество с глобальными дистрибьюторами электронных компонентов, предоставляет возможность заказывать и получать с международных складов практически любой перечень компонентов в оптимальные для Вас сроки.

На всех этапах разработки и производства наши партнеры могут получить квалифицированную поддержку опытных инженеров.

Система менеджмента качества компании отвечает требованиям в соответствии с ГОСТ Р ИСО 9001, ГОСТ РВ 0015-002 и ЭС РД 009

Офис по работе с юридическими лицами:

105318, г. Москва, ул. Щербаковская д. 3, офис 1107, 1118, ДЦ «Щербаковский»

Телефон: +7 495 668-12-70 (многоканальный)

Факс: +7 495 668-12-70 (доб.304)

E-mail: info@moschip.ru

Skype отдела продаж:

moschip.ru moschip.ru_6 moschip.ru 4 moschip.ru 9