

8M x 16Bits x 4Banks Mobile Synchronous DRAM

Description

These IS42/45VM16320D are mobile 536,870,912 bits CMOS Synchronous DRAM organized as 4 banks of 8,388,608 words x 16 bits. These products are offering fully synchronous operation and are referenced to a positive edge of the clock. All inputs and outputs are synchronized with the rising edge of the clock input. The data paths are internally pipelined to achieve very high bandwidth. All input and output voltage levels are compatible with LVCMOS.

Features

- JEDEC standard 1.8V power supply
- · Auto refresh and self refresh
- · All pins are compatible with LVCMOS interface
- 8K refresh cycles every 16ms (A2 grade) or 64ms (Commercial, Industrial, A1 grade)
- · Programmable Burst Length and Burst Type
 - 1, 2, 4, 8 or Full Page for Sequential Burst
 - 4 or 8 for Interleave Burst
- · Programmable CAS Latency: 2,3 clocks
- All inputs and outputs referenced to the positive edge of the system clock
- · Data mask function by DQM

- Internal 4 banks operation
- · Burst Read Single Write operation
- · Special Function Support
 - PASR(Partial Array Self Refresh)
 - Auto TCSR(Temperature Compensated Self Refresh)
 - Programmable Driver Strength Control
 - Full Strength or 1/2, 1/4 or 1/8 of Full Strength
 - Deep Power Down Mode
- Automatic precharge, includes CONCURRENT Auto Precharge
 Mode and controlled Precharge


Copyright © 2010 Integrated Silicon Solution, Inc. All rights reserved. ISSI reserves the right to make changes to this specification and its products at any time without notice. ISSI assumes no liability arising out of the application or use of any information, products or services described herein. Customers are advised to obtain the latest version of this device specification before relying on any published information and before placing orders for products.

Integrated Silicon Solution, Inc. does not recommend the use of any of its products in life support applications where the failure or malfunction of the product can reasonably be expected to cause failure of the life support system or to significantly affect its safety or effectiveness. Products are not authorized for use in such applications unless Integrated Silicon Solution, Inc. receives written assurance to its satisfaction, that:

- a.) the risk of injury or damage has been minimized;
- b.) the user assume all such risks; and
- c.) potential liability of Integrated Silicon Solution, Inc is adequately protected under the circumstances



Figure1: 54Ball FBGA Ball Assignment

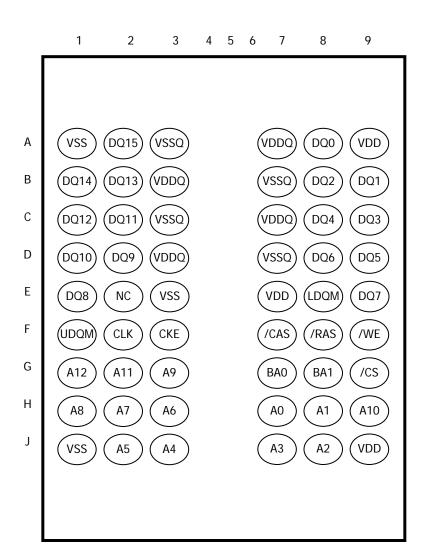

[Top View]



Table2: Pin Descriptions

Pin	Pin Name	Descriptions
CLK	System Clock	The system clock input. All other inputs are registered to the SDRAM on the rising edge CLK.
CKE	Clock Enable	Controls internal clock signal and when deactivated, the SDRAM will be one of the states among power down, suspend or self refresh.
/CS	Chip Select	Enable or disable all inputs except CLK, CKE and DQM.
BA0~BA1	Bank Address	Selects bank to be activated during RAS activity. Selects bank to be read/written during CAS activity.
A0~A12	Address	Row Address : RA0~RA12 Column Address : CA0~CA9 Auto Precharge : A10
/RAS, /CAS, /WE	Row Address Strobe, Column Address Strobe, Write Enable	RAS, CAS and WE define the operation. Refer function truth table for details.
LDQM,UDQM	Data Input/Output Mask	Controls output buffers in read mode and masks input data in write mode.
DQ0~DQ15	Data Input/Output	Multiplexed data input/output pin.
VDD/VSS	Power Supply/Ground	Power supply for internal circuits and input buffers.
VDDQ/VSSQ	Data Output Power/Ground	Power supply for output buffers.
NC	No Connection	No connection.





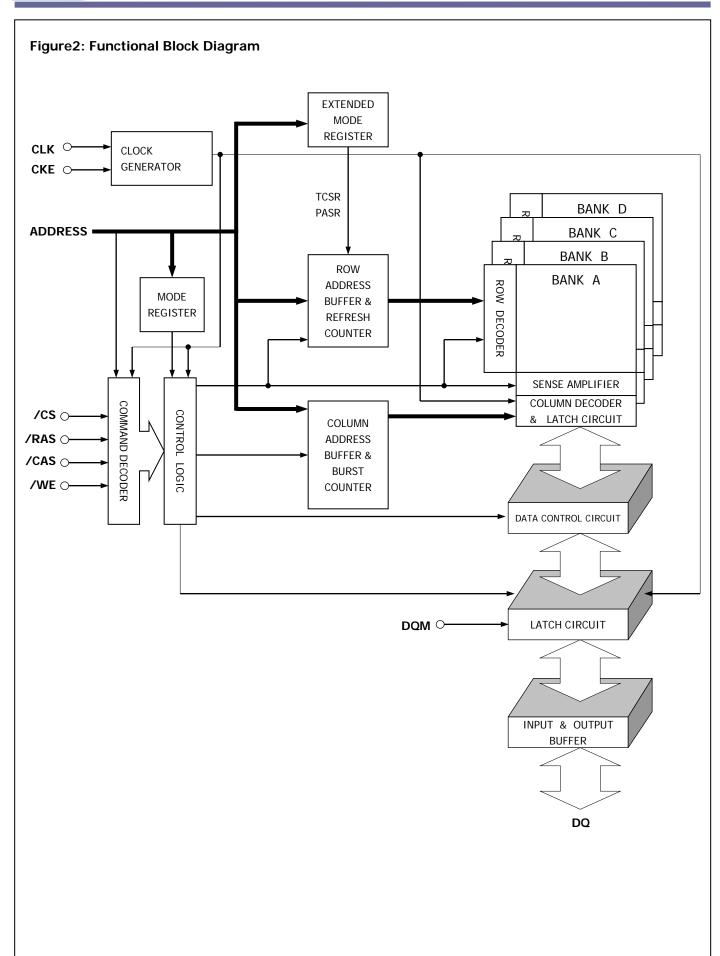




Figure 3: Simplified State Diagram



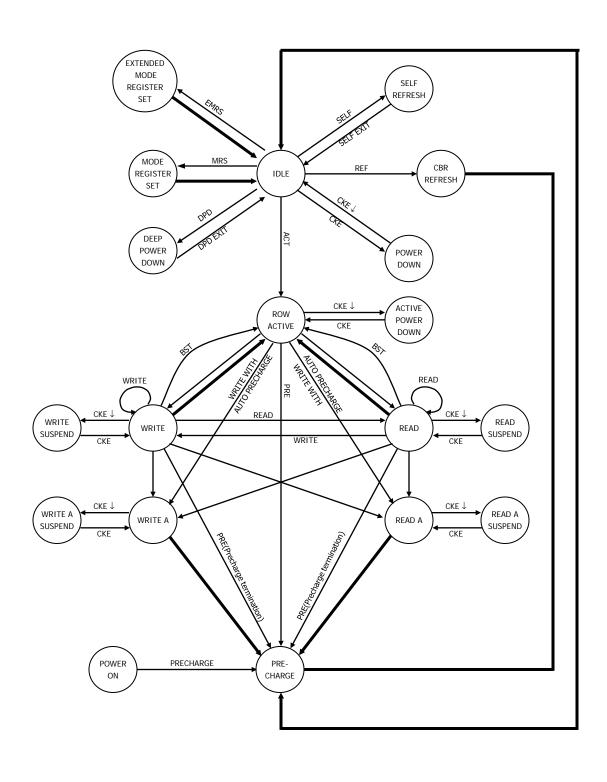

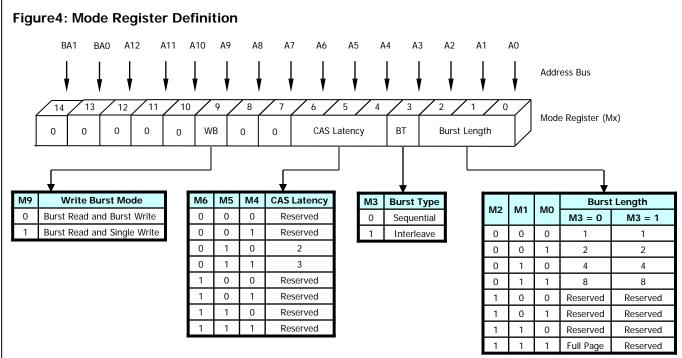

Note: M14(BA1) and M13(BA0) must be set to "0" to select Mode Register (vs. the Extended Mode Register)

Burst Type


Accesses within a given burst may be programmed to be either sequential or interleaved; this is referred to as the burst type and is selected via bit M3. The ordering of accesses within a burst is determined by the burst length, the burst type and the starting column address, as shown in Table 3.

Table 3: Burst Definition

Burst	Startin			Order of Acces	s Within a Burst
Length	A2	ddress A1	AO	Sequential	Interleaved
			0	0-1	0-1
2			1	1-0	1-0
		0	0	0-1-2-3	0-1-2-3
4		0	1	1-2-3-0	1-0-3-2
4		1	0	2-3-0-1	2-3-0-1
		1	1	3-0-1-2	3-2-1-0
	0	0	0	0-1-2-3-4-5-6-7	0-1-2-3-4-5-6-7
	0	0	1	1-2-3-4-5-6-7-0	1-0-3-2-5-4-7-6
	0	1	0	2-3-4-5-6-7-0-1	2-3-0-1-6-7-4-5
8	0	1	1	3-4-5-6-7-0-1-2	3-2-1-0-7-6-5-4
8	1	0	0	4-5-6-7-0-1-2-3	4-5-6-7-0-1-2-3
	1	0	1	5-6-7-0-1-2-3-4	5-4-7-6-1-0-3-2
	1	1	0	6-7-0-1-2-3-4-5	6-7-4-5-2-3-0-1
	1	1	1	7-0-1-2-3-4-5-6	7-6-5-4-3-2-1-0
Full Page	n=A0-9 (Location 0-1,023)		C_n , C_n+1 . C_n+2 , C_n+3 , C_n+4 C_n-1 , C_n	Not Supported	

- 1. For full-page accesses: y = 1024
- 2. For a burst length of two, A1-A9 select the blockof-two burst; A0 selects the starting column within the block.
- 3. For a burst length of four, A2-A9 select the block-of-four burst; A0-A1 select the starting column within the block.
- 4. For a burst length of eight, A3-A9 select the block-of-eight burst; A0-A2 select the starting column within the block.
- 5. For a full-page burst, the full row is selected and A0-A9 select the starting column.
- Whenever a boundary of the block is reached within a given sequence above, the following access wraps within the block.
- For a burst length of one, A0-A9 select the unique column to be accessed, and mode register bit M3 is ignored.



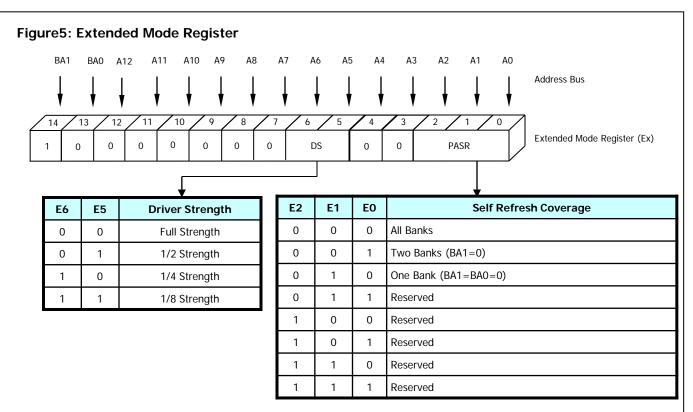

Note: E14(BA1) must be set to "1" and E13(BA0) must be set to "0" to select Extended Mode Register (vs. the base Mode Register)



Functional Description

In general, this 512Mb SDRAM (8M \times 16Bits \times 4banks) is a multi-bank DRAM that operates at 1.8V and includes a synchronous interface (all signals are registered on the positive edge of the clock signal, CLK). Each of the 134,217,728-bit banks is organized as 8,192 rows by 1,024 columns by 16-bits

Read and write accesses to the SDRAM are burst oriented; accesses start at a selected location and continue for a programmed number of locations in a programmed sequence. Accesses begin with the registration of an ACTIVE command, which is then followed by a READ or WRITE command. The address bits registered coincident with the ACTIVE command are used to select the bank and row to be accessed (BA0-BA1 select the bank, A0-A12 select the row). The address bits (BA0-BA1 select the bank, A0-A9 select the column) registered coincident with the READ or WRITE command are used to select the starting column location for the burst access. Prior to normal operation, the SDRAM must be initialized. The following sections provide detailed information covering device initialization, register definition, command descriptions and device operation.

Power up and Initialization

SDRAMs must be powered up and initialized in a predefined manner. Operational procedures other than those specified may result in undefined operation. Once power is applied to VDD and VDDQ(simultaneously) and the clock is stable(stable clock is defined as a signal cycling within timing constraints specified for the clock pin), the SDRAM requires a 200µs delay prior to issuing any command other than a COMMAND INHIBIT or NOP. CKE must be held high during the entire initialization period until the PRECHARGE command has been issued. Starting at some point during this 200µs period and continuing at least through the end of this period, COMMAND INHIBIT or NOP commands should be applied.

Once the 200µs delay has been satisfied with at least one COMMAND INHIBIT or NOP command having been applied, a PRECHARGE command should be applied. All banks must then be precharged, thereby placing the device in the all banks idle state.

Once in the idle state, two AUTO REFRESH cycles must be performed. After the AUTO REFRESH cycles are complete, the SDRAM is ready for mode register programming. Because the mode register will power up in an unknown state, it should be loaded prior to applying any operational command. And a extended mode register set command will be issued to program specific mode of self refresh operation(PASR). The following these cycles, the Mobile SDRAM is ready for normal operation.

Register Definition

Mode Register

The mode register is used to define the specific mode of operation of the SDRAM. This definition includes the selection of a burst length, a burst type, a CAS latency, an operating mode and a write burst mode. The mode register is programmed via the LOAD MODE REGISTER command and will retain the stored information until it is programmed again or the device loses power.

Mode register bits M0-M2 specify the burst length, M3 specifies the type of burst (sequential or interleaved), M4-M6 specify the CAS latency, M7 and M8 specify the operating mode, M9 specifies the write burst mode, and M10-M12 should be set to zero. M13 and M14 should be set to zero to prevent the setting of the extended mode register.

The mode register must be loaded when all banks are idle, and the controller must wait the specified time before initiating the subsequent operation. Violating either of these requirements will result in unspecified operation.

Extended Mode Register

The Extended Mode Register controls the functions beyond those controlled by the Mode Register. These additional functions are special features of the BATRAM device. They include Partial Array Self Refresh (PASR) and Driver Strength (DS).

The Extended Mode Register is programmed via the Mode Register Set command and retains the stored information until it is programmed again or the device loses power.

The Extended Mode Register must be programmed with E7 through E12 set to "0", and E14 must be set to "1" and E13 must be set to "0". The Extended Mode Register must be loaded when all banks are idle and no bursts are in progress, and the controller must wait the specified time before initiating any subsequent operation. Violating either of these requirements results in unspecified operation.



Burst Length

Read and write accesses to the SDRAM are burst oriented, with the burst length being programmable, as shown in Figure 1. The burst length determines the maximum number of column locations that can be accessed for a given READ or WRITE command. Burst lengths of 1, 2, 4 or 8 locations are available for both the sequential and the interleaved burst types, and a full-page burst is available for the sequential type. The full-page burst is used in conjunction with the BURST TERMINATE command to generate arbitrary burst lengths.

Reserved states should not be used, as unknown operation or incompatibility with future versions may result. When a READ or WRITE command is issued, a block of columns equal to the burst length is effectively selected. All accesses for that burst take place within this block, meaning that the burst will wrap within the block if a boundary is reached. The block is uniquely selected by A1-A9 when the burst length is set to two; by A2-A9 when the burst length is set to four; and by A3-A9 when the burst length is set to eight. The remaining (least significant) address bit(s) is (are) used to select the starting location within the block. Full-page bursts wrap within the page if the boundary is reached.

Bank(Row) Active

The Bank Active command is used to activate a row in a specified bank of the device. This command is initiated by activating CS, RAS and deasserting CAS, WE at the positive edge of the clock. The value on the BAO-BA1 selects the bank, and the value on the AO-A12 selects the row.

This row remains active for column access until a precharge command is issued to that bank. Read and write operations can only be initiated on this activated bank after the minimum tRCD time is passed from the activate command.

Read

The READ command is used to initiate the burst read of data. This command is initiated by activating CS, CAS, and deasserting WE, RAS at the positive edge of the clock. BAO-BA1 input select the bank, AO-A9 address inputs select the starting column location. The value on input A10 determines whether or not Auto Precharge is used. If Auto Precharge is selected the row being accessed will be precharged at the end of the READ burst; if Auto Precharge is not selected, the row will remain active for subsequent accesses. The length of burst and the CAS latency will be determined by the values programmed during the MRS command.

Write


The WRITE command is used to initiate the burst write of data. This command is initiated by activating CS, CAS, WE and deasserting RAS at the positive edge of the clock. BAO-BA1 input select the bank, AO-A9 address inputs select the starting column location. The value on input A10 determines whether or not Auto Precharge is used. If Auto Precharge is selected the row being accessed will be precharged at the end of the WRITE burst; if Auto Precharge is not selected, the row will remain active for subsequent accesses.




CAS Latency

The CAS latency is the delay, in clock cycles, between the registration of a READ command and the availability of the first piece of output data. The latency can be set to two or three clocks. If a READ command is registered at clock edge n, and the latency is m clocks, the data will be available by clock edge n + m. The DQs will start driving as a result of the clock edge one cycle earlier (n + m - 1), and provided that the relevant access times are met, the data will be valid by clock edge n + m. For example, assuming that the clock cycle time is such that all relevant access times are met, if a READ command is registered at T0 and the latency is programmed to two clocks, the DQs will start driving after T1 and the data will be valid by T2, as shown in Figure 6. Reserved states should not be used as unknown operation or incompatibility with future versions may result.

Figure6: CAS Latency

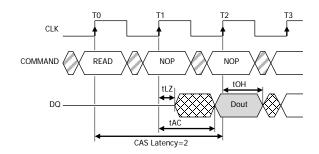

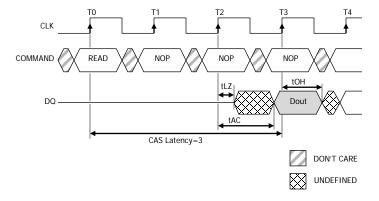

Operating Mode

The normal operating mode is selected by setting M7 and M8 to zero; the other combinations of values for M7 and M8 are reserved for future use and/or test modes. The programmed burst length applies to both READ and WRITE bursts. Test modes and reserved states should not be used because unknown operation or incompatibility with future versions may result.

Write Burst Mode

When M9 = 0, the burst length programmed via M0-M2 applies to both READ and WRITE bursts; when M9 = 1, the programmed burst length applies to READ bursts, but write accesses are single-location (nonburst) accesses.



Table4: Command Truth Table

Function	CKEn-1	CKEn	/CS	/RAS	/CAS	/WE	DQM	ADDR	A10	Note
Command Inhinit (NOP)	Н	Х	Н	Х	Х	Х	Х	Х	•	
No Operation (NOP)	Н	Х	L	Н	Н	Н	Х	Х		
Mode Register Set	Н	Х	L	L	L	L	Х	OP CODE		4
Extended Mode Register Set	Н	Х	L	L	L	L	Х	OP COI	DE	4
Active (select bank and activate row)	Н	Х	L	L	Н	Н	Х	Bank/R	ow	
Read	Н	Х	L	Н	L	Н	L/H	Bank/Col	L	5
Read with Autoprecharge	Н	Х	L	Н	L	Н	L/H	Bank/Col	Н	5
Write	Н	Х	L	Н	L	L	L/H	Bank/Col	L	5
Write with Autoprecharge	Н	Х	L	Н	L	L	L/H	Bank/Col	Н	5
Precharge All Banks	Н	Х	L	L	Н	L	Х	Х	Н	
Precharge Selected Bank	Н	Х	L	L	Н	L	Х	Bank	L	
Burst Stop	Н	Н	L	Н	Н	L	Х	Х		
Auto Refresh	Н	Н	L	L	L	Н	Х	Х		3
Self Refresh Entry	Н	L	L	L	L	Н	Х	Х		3
Self Refresh Exit	L	Н	H L	X	Х	X	X	х		2
			Н	Х	Х	Х				
Precharge Power Down Entry	Н	L	L	Н	Н	Н	X	Х		
			Н	Х	Х	Х				
Precharge Down Exit	L	Н	L	Н	Н	Н	X	Х		
			Н	Х	Х	Х	,,	х		
Clock Suspend Entry	Н	L	L	٧	V	V	X			
Clock Suspend Exit	L	Н			Х		Х	Х		
Deep Power Down Entry	Н	L	L	Н	Н	L	Х	Х		6
Deep Power Down Exit	L	Н			Х		Х	Х		

- 1. CKEn is the logic state of CKE at clock edge n; CKEn-1 was the state of CKE at the previous clock edge.
 - H: High Level, L: Low Level, X: Don't Care, V: Valid
- 2. Exiting Self Refresh occurs by asynchronously bringing CKE from low to high and will put the device in the all banks idle state once tXSR is met. Command Inhibit or NOP commands should be issued on any clock edges occuring during the tXSR period. A minimum of two NOP commands must be provided during tXSR period.
- 3. During refresh operation, internal refresh counter controls row addressing; all inputs and I/Os are "Don't Care" except for CKE.
- 4. A0-A12 define OP CODE written to the mode register, and BA [1:0] must be issued 0 in the mode register set, and 1 in the extended mode register set.
- 5. DQM "L" means the data Write/Ouput Enable and "H" means the Write inhibit/Output High-Z. Write DQM Latency is 0 CLK and Read DQM Latency is 2 CLK.
- 6. Standard SDRAM parts assign this command sequence as Burst Terminate. For Bat Ram parts, the Burst Terminate command is assigned to the Deep Power Down function.



Table5: Function Truth Table

Current					Comm	and		0.44	
State	/cs	/RAS	/CAS	/WE	ВА	A0-A12	Description	Action	Note
	L	L	L	L		OP CODE	Mode Register Set	Set the Mode Register	14
	L	L	L	Н	Х	Х	Auto or Self Refresh	Start Auto or Self Refresh	5
	L	L	Н	L	ВА	Х	Precharge	No Operation	
Idle	L	L	Н	Н	BA	Row Add.	Bank Activate	Activate the Specified Bank and Row	
	L	Н	L	L	BA	Col Add./ A10	Write/WriteAP	ILLEGAL	4
	L	Н	L	Н	ВА	Col Add./ A10	Read/ReadAP	ILLEGAL	4
	L	Н	Н	Н	Х	Х	No Operation	No Operation	3
	Н	Х	X	Х	Х	Х	Device Deselect	No Operation or Power Down	3
	L	L	L	L		OP CODE	Mode Register Set	ILLEGAL	13,14
	L	L	L	Н	Х	Х	Auto or Self Refresh	ILLEGAL	13
	L	L	Н	L	ВА	Х	Precharge	Precharge	7
	L	L	Н	Н	BA	Row Add.	Bank Activate	ILLEGAL	4
Row Active	L	Н	L	L	BA	Col Add./A10	Write/Write AP	Start Write : Optional AP(A10=H)	6
	L	Н	L	Н	BA	Col Add./A10	Read/Read AP	Start Read : Optional AP(A10=H)	6
	L	Н	Н	Н	Х	Х	No Operation	No Operation	
	Н	Х	Х	Х	Х	Х	Device Deselect	No Operation	
	L	L	L	L		OP CODE	Mode Register Set	ILLEGAL	13,14
	L	L	L	Н	Х	Х	Auto or Self Refresh	ILLEGAL	13
	L	L	Н	L	BA	Х	Precharge	Termination Burst : Start the Precharge	
	L	L	Н	Н	BA	Row Add.	Bank Activate	ILLEGAL	4
Read	L	Н	L	L	BA	Col Add./A10	Write/WriteAP	Termination Burst : Start Write(AP)	8,9
	L	Н	L	Н	BA	Col Add./A10	Read/Read AP	Terimination Burst : Start Read(AP)	8
	L	Н	Н	Н	Х	Х	No Operation	Continue the Burst	
	Н	Х	Х	Х	Х	Х	Device Deselect	Continue the Burst	



Table5: Function Truth Table

Current					Comm	and		Antino	NI-4-
State	/cs	/RAS	/CAS	/WE	ВА	A0-A12	Description	Action	Note
	L	L	L	L		OP CODE	Mode Register Set	ILLEGAL	13,14
	L	L	L	Н	Х	Х	Auto or Self Refresh	ILLEGAL	13
	L	L	Н	L	ВА	BA X Precharge		Termination Burst : Start the Precharge	10
	L	L	Н	Н	BA	Row Add.	Bank Activate	ILLEGAL	4
Write	L	Н	L	L	BA	Col Add./A10	Write/WriteAP	Termination Burst : Start Write(AP)	8
	L	Н	L	Н	BA	Col Add./A10	Read/ReadAP	Terimination Burst : Start READ(AP)	8,9
	L	Н	Н	Н	Х	Х	No Operation	Continue the Burst	
	Н	Х	Х	Х	Х	Х	Device Deselect	Continue the Burst	
	L	L	L	L		OP CODE Mode Register Set		ILLEGAL	13,14
	L	L	L	Н	Х	Х	Auto or Self Refresh	ILLEGAL	13
Dood	L	L	Н	L	ВА	Х	Precharge	ILLEGAL	4,12
Read with	L	L	Н	Н	BA	Row Add.	Bank Activate	ILLEGAL	4,12
Auto	L	Н	L	L	BA	Col Add./A10	Write/WriteAP	ILLEGAL	12
Precharge	L	Н	L	Н	BA	Col Add./A10	Read/ReadAP	ILLEGAL	12
	L	Н	Н	Н	Х	Х	No Operation	Continue the Burst	
	Н	Х	Х	Х	Х	Х	Device Deselect	Continue the Burst	
	L	L	L	L		OP CODE	Mode Register Set	ILLEGAL	13,14
	L	L	L	Н	Х	Х	Auto or Self Refresh	ILLEGAL	13
\\/rito	L	L	Н	L	ВА	Х	Precharge	ILLEGAL	4,12
Write with	L	L	Н	Н	BA	Row Add.	Bank Activate	ILLEGAL	4,12
Auto	L	Н	L	L	ВА	Col Add./A10	Write/WriteAP	ILLEGAL	12
Precharge	L	Н	L	Н	ВА	Col Add./A10	Read/ReadAP	ILLEGAL	12
	L	Н	Н	Н	Х	Х	No Operation	Continue the Burst	
	Н	Х	Х	Х	Х	Х	Device Deselect	Continue the Burst	



Table5: Function Truth Table

Current					Comm	nand		0.44	Nete
State	/cs	/RAS	/CAS	/WE	ВА	A0-A12	Description	Action	Note
	L	L	L	L		OP CODE	Mode Register Set	ILLEGAL	13,14
	L	L	L	Н	Х	Х	Auto or Self Refresh	ILLEGAL	13
	L	L	Н	L	BA	Х	Precharge	No Operation : Bank(s) Idle after tRP	
	L	L	Н	Н	ВА	Row Add.	Bank Activate	ILLEGAL	4,12
Precharging	L	Н	L	L	BA	Col Add./ A10	Write/WriteAP	ILLEGAL	4,12
	L	Н	L	Н	BA	Col Add./ A10	Read/ReadAP	ILLEGAL	4,12
	L	Н	Н	Н	Х	Х	No Operation	No Operation : Bank(s) Idle after tRP	
	Н	Х	Х	Х	Х	Х	Device Deselect	No Operation : Bank(s) Idle after tRP	
	L	L	L	L		OP CODE	Mode Register Set	ILLEGAL	13,14
	L	L	L	Н	Х	Х	Auto or Self Refresh	ILLEGAL	13
	L	L	Н	L	BA	Х	Precharge	ILLEGAL	4,12
	L	L	Н	Н	BA	Row Add.	Bank Activate	ILLEGAL	4,11,12
Row Activating	L	Н	L	L	BA	Col Add./A10	Write/Write AP	ILLEGAL	4,12
7.0g	L	Н	L	Н	BA	Col Add./A10	Read/Read AP	ILLEGAL	4,12
	L	Н	Н	Н	Х	Х	No Operation	No Operation : ROw Active after tRCD	
	Н	Х	Х	Х	Х	Х	Device Deselect	No Operation : ROw Active after tRCD	
	L	L	L	L		OP CODE	Mode Register Set	ILLEGAL	13,14
	L	L	L	Н	Х	Х	Auto or Self Refresh	ILLEGAL	13
	L	L	Н	L	BA	Х	Precharge	ILLEGAL	4,13
	L	L	Н	Н	ВА	Row Add.	Bank Activate	ILLEGAL	4,12
Write Recovering	L	Н	L	L	BA	Col Add./A10	Write/WriteAP	Start Write : Optional AP(A10=H)	
, is so voining	L	Н	L	Н	ВА	Col Add./A10	Read/Read AP	Start Write : Optional AP(A10=H)	9
	L	Н	Н	Н	Х	X	No Operation	No Operation : Row Active after tDPL	
	Н	Х	Х	Х	Х	Х	Device Deselect	No Operation : Row Active after tDPL	



Table5: Function Truth Table

Current					Comm	nand		0.44.5	Note
State	/cs	/RAS	/CAS	/WE	ВА	A0-A12	Description	Action	Note
	L	L	L	L		OP CODE	Mode Register Set	ILLEGAL	13,14
	L	L	L	Н	Х	Х	Auto or Self Refresh	ILLEGAL	13
	L	L	Н	L	ВА	Х	Precharge	ILLEGAL	4,13
Write Recovering	L	L	Н	Н	ВА	Row Add.	Bank Activate	ILLEGAL	4,12
with	L	Н	L	L	BA	Col Add./ A10	Write/WriteAP	ILLEGAL	4,12
Auto Precharge	L	Н	L	Н	ВА	Col Add./ A10	Read/ReadAP	ILLEGAL	4,9,12
ar a g	L	Н	Н	Н	Х	Х	No Operation	No Operation : Precharge after tDPL	
	Н	Х	Х	Х	Х	х	Device Deselect	No Operation : Precharge after tDPL	
	L	L	L	L		OP CODE	Mode Register Set	ILLEGAL	13,14
	L	L	L	Н	Х	Х	Auto or Self Refresh	ILLEGAL	13
	L	L	Н	L	ВА	Х	Precharge	ILLEGAL	13
	L	L	Н	Н	BA	Row Add.	Bank Activate	ILLEGAL	13
Refreshing	L	Н	L	L	BA	Col Add./A10	Write/Write AP	ILLEGAL	13
	L	Н	L	Н	BA	Col Add./A10	Read/Read AP	ILLEGAL	13
	L	Н	Н	Н	Х	х	No Operation	No Operation : Idle after tRC	
	Н	Х	Х	Х	Х	Х	Device Deselect	No Operation : Idle after tRC	
	L	L	L	L		OP CODE	Mode Register Set	ILLEGAL	13,14
	L	L	L	Н	Х	Х	Auto or Self Refresh	ILLEGAL	13
	L	L	Н	L	ВА	Х	Precharge	ILLEGAL	13
Mode	L	L	Н	Н	ВА	Row Add.	Bank Activate	ILLEGAL	13
Register	L	Н	L	L	ВА	Col Add./A10	Write/WriteAP	ILLEGAL	13
Accessing	L	Н	L	Н	ВА	Col Add./A10	Read/Read AP	ILLEGAL	13
	L	Н	Н	Н	Х	х	No Operation	No Operation : Idle after 2 Clock Cycle	
	Н	Х	Х	Х	Х	Х	Device Deselect	No Operation : Idle after 2 Clock Cycle	



- 1. H: Logic High, L: Logic Low, X: Don't care, BA: Bank Address, AP: Auto Precharge.
- 2. All entries assume that CKE was active during the preceding clock cycle.
- 3. If both banks are idle and CKE is inactive, then in power down cycle
- 4. Illegal to bank in specified states. Function may be legal in the bank indicated by Bank Address, depending on the state of that bank.
- 5. If both banks are idle and CKE is inactive, then Self Refresh mode.
- 6. Illegal if tRCD is not satisfied.
- 7. Illegal if tRAS is not satisfied.
- 8. Must satisfy burst interrupt condition.
- 9. Must satisfy bus contention, bus turn around, and/or write recovery requirements.
- 10. Must mask preceding data which don't satisfy tDPL.
- 11. Illegal if tRRD is not satisfied
- 12. Illegal for single bank, but legal for other banks in multi-bank devices.
- 13. Illegal for all banks.
- 14. Mode Register Set and Extended Mode Register Set is same command truth table except BA.



	C	CKE			Cor	nmand				
Current State	Prev Cycle	Current Cycle	/cs	/RAS	/CAS	/WE	ВА	A0-A12	Action	Note
	Н	Х	Х	Х	Х	Х	Х	Х	INVALID	2
	L	Н	Н	Х	Х	Х	х	Х	Exit Self Refresh with Device Deselect	3
Self	L	Н	L	Н	Н	Н	Х	Х	Exit Self Refresh with No Operation	3
Refresh	L	Н	L	Н	Н	L	Х	Х	ILLEGAL	3
	L	Н	L	Н	L	Х	Х	Х	ILLEGAL	3
	L	Н	L	L	Х	Х	Х	Х	ILLEGAL	3
	L	L	Х	Х	Х	Х	Х	Х	Maintain Self Refresh	
	Н	Х	Х	Х	Х	Х	Х	Х	INVALID	2
			Н	Х	Х	Х	Х	Х	Power Down Mode Exit, All	,
	L	Н	L	Н	Н	Н	Х	Х	Banks Idle	3
Power Down				L	Х	Х	Х	Х	ILLEGAL	
Bown	L	Н	L	Х	L	Х	Х	Х	1	3
				Х	Х	L	Х	Х]	
	L	L	Х	Х	Х	Х	Х	Х	Maintain Power Down Mode	
	Н	Х	Х	Х	Х	Х	Х	Х	INVALID	2
Deep Power	L	Н	Х	Х	Х	Х	Х	Х	Deep Power Down Mode Set	6
Down	L	L	Х	Х	Х	Х	Х	Х	Maintain Deep Power Down Mode	
	Н	Н	Н	Х	Х	Х			Refer to the Idle State	4
	Н	Н	L	Н	Х	Х			section of the Current State Truth Table	4
	Н	Н	L	L	Н	Х]	4
	Н	Н	L	L	L	Н	Х	Х	Auto Refresh	
All	Н	Н	L	L	L	L	(OP CODE	Mode Register Set	5
Banks	Н	L	Н	Х	Х	Х			Refer to the Idle State	4
Idle	Н	L	L	Н	Х	Х			section of the Current State Truth Table	4
	Н	L,	L	L	Н	Х]	4
	Н	L	L	L	L	Н	Х	Х	Entry Self Refresh	5
	Н	L,	L	L	L	L	(OP CODE	Mode Register Set	
	L	Х	Х	Х	Х	Х	Х	Х	Power Down	5
Any	Н	Н	Х	Х	Х	Х	Х	Х	Refer to Operations of the Current State Truth Table	
State other	Н	L	Х	Х	Х	Х	Х	Х	Begin Clock Suspend next cycle	
than listed above	L	Н	Х	Х	Х	Х	Х	Х	Exit Clock Suspend next cycle	
	L	L	Х	Х	Х	Х	Х	Х	Maintain Clock Suspend	



- 1. H: Logic High, L: Logic Low, X: Don't care
- 2. For the given current state CKE must be low in the previous cycle.
- 3. When CKE has a low to high transition, the clock and other inputs are re-enabled asynchronously. When exiting power down mode, a NOP (or Device Deselect) command is required on the first positive edge of clock after CKE goes high.
- 4. The address inputs depend on the command that is issued.
- 5. The Precharge Power Down mode, the Self Refresh mode, and the Mode Register Set can only be entered from the all banks idle state.
- 6. When CKE has a low to high transition, the clock and other inputs are re-enabled asynchronously.

 When exiting deep power down mode, a NOP (or Device Deselect) command is required on the first positive edge of clock after CKE goes high and is maintained for a minimum 300usec.



Table7: Absolute Maximum Rating

Parameter	Symbol	Rating	Unit
Ambient Operating Temperature (Industrial)		-40 ~ 85	
Ambient Operating Temperature (Automotive, A1)	T _A	-40 ~ 85	°C
Ambient Operating Temperature (Automotive, A2)		-40 ~ 105	
Storage Temperature	T _{STG}	-55 ~ 150	°C
Voltage on Any Pin relative to VSS	V _{IN} , V _{OUT}	-1.0 ~ 2.6	V
Voltage on VDD relative to VSS	VDD, VDDQ	-1.0 ~ 2.6	V
Short Circuit Output Current	I _{os}	50	mA
Power Dissipation	P_{D}	1	W

Stresses greater than those listed under "Absolute Maximum Ratings" may cause permanent damage to the device. This is a stress rating only, and functional operation of the device at these or any other conditions above those indicated in the operational sections of this specification is not implied. Exposure to absolute maximum rating conditions for extended periods may affect reliability.

Table8: Capacitance (T_A=25 °C, f=1MHz, VDD=1.8V)

Parameter	Pin	Symbol	Min	Max	Unit
	CLK	C _{I1}	2	4	pF
Input Capacitance	A0~A12, BA0~BA1, CKE, /CS, /RAS, /CAS, /WE, LDQM, UDQM	C ₁₂	2	4	pF
Data Input/Output Capacitance	DQ0~DQ15	C _{IO}	2	6	pF

Table9: DC Operating Condition (Voltage referenced to VSS=0V, T_A: within specified operating temperature range)


Parameter	Symbol	Min	Тур	Max	Unit	Note
Power Supply Voltage	VDD	1.7	1.8	1.95	V	
Tower Suppry Voltage	VDDQ	1.7	1.8	1.95	V	1
Input High Voltage	V_{IH}	0.8 x VDDQ	-	VDDQ+0.3	V	2
Input Low Voltage	V _{IL}	-0.3	0	0.3	V	3
Output High Voltage	V _{OH}	VDDQ - 0.2	-	-	V	I _{OH} = -0.1mA
Output Low Voltage	V_{OL}	-	-	0.2	V	I _{OL} = +0.1mA
Input Leakage Current	I _{LI}	-1	-	1	uA	4
Output Leakage Current	I _{LO}	-1.5		1.5	uA	5

- 1. VDDQ must not exceed the level of VDD
- 2. VIH(max) = 2.2V AC. The overshoot voltage duration is ≤ 3 ns.
- 3. VIL(min) = -1.0V AC. The overshoot voltage duration is \leq 3ns.
- 4. Any input $0V \le VIN \le VDDQ$.
 - Input leakage currents include Hi-Z output leakage for all bi-directional buffers with tri-state outputs.
- 5. DOUT is disabled, $0V \le VOUT \le VDDQ$.




 $\textbf{Table10: AC Operating Condition} \ (T_A: within specified operating temperature range, \ VDD = 1.8V, \ VSS=0V)$

Parameter	Symbol	Тур	Unit
AC Input High/Low Level Voltage	V _{IH} / V _{IL}	0.9 x VDDQ / 0.2	V
Input Timing Measurement Reference Level Voltage	V_{TRIP}	0.5 x VDDQ	V
Input Rise / Fall Time	t _R / t _F	1/1	ns
Output Timing Measurement Reference Level Voltage	V _{OUTREF}	0.5 x VDDQ	V
Output Load Capacitance for Access Time Measurement	C _L	30	pF

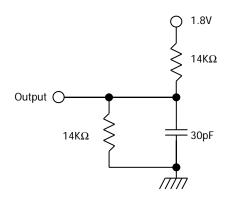

DC Output Load Circuit

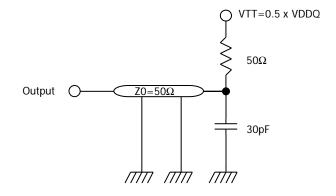

AC Output Load Circuit



Table11: DC Characteristic (DC operating conditions unless otherwise noted) (2)

Parameter			C	Test Condition		Speed		NI-4-
			Sym	lest Condition	-6	-75	Unit	Note
Operating Current			IDD1	Burst Length=1, One Bank Active, tRC ≥ tRC(min) IOL = 0 mA	70	65	mA	1
	Precharge Standby Current			IDD2P $CKE \le VIL(max)$, $tCK = 10ns$.4		
in Power Down Mode			IDD2PS	CKE & CLK ≤ VIL(max), tCK = ∞	0	.4	mA	
Precharge	Standby C	urrent	IDD2N	$CKE \ge VIH(min)$, $/CS \ge VIH(min)$, $tCK = 10ns$ Input signals are changed one time during 2 clks.			0	
in Non Power Down Mode			IDD2NS	$CKE \ge VIH(min)$, $CLK \le VIL(max)$, $tCK = \infty$ Input signals are stable.	2		mA	
Active Standby Current			IDD3P	CKE ≤ VIL(max), tCK = 10ns	6		mA	3,4
in Power Down Mode		IDD3PS	CKE & CLK ≤ VIL(max), tCK = ∞	6				
Active Standby Current in Non Power Down Mode			IDD3N	$CKE \ge VIH(min)$, $/CS \ge VIH(min)$, $tCK = 10ns$ Input signals are changed one time during 2 clks.	15 10		mA	3,4
			IDD3NS	$CKE \ge VIH(min)$, $CLK \le VIL(max)$, $tCK = \infty$ Input signals are stable.				
Burst Mod	Burst Mode Operating Current		IDD4	tCK>tCK(min), IOL = 0 mA, Page Burst All Banks Activated, tCCD = 1 clk	110	100	mA	1
Auto Refresh Current (8K Cycle)			IDD5	tRC ≥ tRFC(min), All Banks Active	90		mA	
	PASR	TCSR						
Self Refresh Current	4 banks	85°C	IDD6		800		uA	5
		40°C			560			
	2 Bank	85°C		CKE ≤ 0.2V	550			
		40°C			380			
	1 Bank	85°C			450			
1 Bank 40°C					310			
Deep Power Down Mode Current			IDD7		1	0	uA	5,6

- 1. Measured with outputs open.
- 2. Unless otherwise noted, input swing levels are CMOS (VIH = VDDQ, VIL = VSSQ).
- 3. Address and other input signals transition one time every two clocks.
- 4. For A2 temperature grade with Ta > 85°C: IDD3P, IDD3PS, IDD3N, and IDD3NS are derated to 50% above the values.
- 5. Self-refresh Mode and Deep Power Down Mode are not supported for A2 grade with TA > 85 °C.
- 6. Typical value at room temperature.



Table12: AC Characteristic (AC operation conditions unless otherwise noted)

	-6		6 -75		75			
Parameter	Sym	Min	Max	Min	Max	Unit	Note	
01// 0 1 71	CL = 3	tCK3	6	4000	7.5	4000		
CLK Cycle Time	CL = 2	tCK2	10	1000	10	1000		1
Assess these forces OLIV (once and one)	CL = 3	tAC3		5.4		6		_
Access time from CLK (pos. edge)	CL = 2	tAC2		8		8		2
CLK High-Level Width		tCH	2		2.5			3
CLK Low-Level Width		tCL	2		2.5			3
CKE Setup Time		tCKS	1.5		1.5			
CKE Hold Time		tCKH	1.0		1.0			
/CS, /RAS, /CAS, /WE, DQM Setup T	ime	tCMS	1.5		1.5			
/CS, /RAS, /CAS, /WE, DQM Hold Tir	ne	tCMH	1.0		1.0			
Address Setup Time		tAS	1.5		1.5			
Address Hold Time		tAH	1.0		1.0		ns	
Data-In Setup Time		tDS	1.5		1.5			
Data-In Hold Time		tDH	1.0		1.0			
Data-Out High-Impedance Time	CL = 3	tHZ3		5.4		6		
from CLK (pos.edge)	CL = 2	tHZ2		8		8		4
Data-Out Low-Impedance Time	tLZ	1.0		1.0				
Data-Out Hold Time (load)	tOH	2.5		3				
ACTIVE to PRECHARGE command	tRAS	42	100K	45	100K			
PRECHARGE command period		tRP	18		22.5			
ACTIVE bank a to ACTIVE bank a co	mmand	tRC	60		67.5			5
ACTIVE bank a to ACTIVE bank b co	tRRD	12		15				
ACTIVE to READ or WRITE delay		tRCD	18		22.5			
READ/WRITE command to READ/WI command	tCCD	1		1		CLK	6	
Data-in to PRECHARGE command	tDPL	15		15			7	
Data-in to ACTIVE command	tDAL	33		37.5		ns	7	
LOAD MODE REGISTER command to ACTIVE or REFRESH command		tMRD	2		2			8
Data-out to high-impedance from	CL = 3	tROH3	3		3			6
PRECHARGE command	CL = 2	tROH2	2		2		CLK	
Last data-in to burst STOP command	tBDL	1		1			6	
Last data-in to new READ/WRITE co	tCDL	1		1			6	
Refresh period (8,192 rows)	tREF		64		64	ms	10	
AUTO REFRESH period	tRFC	110		110			5	
Exit SELF REFRESH to ACTIVE comm	tXSR	110		110		ns	5	
Transition time	tT	0.5	1.2	0.5	1.2			



Note

- 1. The clock frequency must remain constant (stable clock is defined as a signal cycling within timing constraints specified for the clock pin) during access or precharge states (READ, WRITE, including tDPL, and PRECHARGE commands). CKE may be used to reduce the data rate.
- 2. tAC at CL = 3 with no load is 5.5ns and is guaranteed by design. Access time to be measured with input signals of 1V/ns edge rate, from 0.8V to 0.2V. If tR > 1ns, then (tR/2-0.5)ns should be added to the parameter.
- 3. AC characteristics assume tT = 1ns. If tR & tF > 1ns, then [(tR+tF)/2-1]ns should be added to the parameter.
- 4. tHZ defines the time at which the output achieves the open circuit condition; it is not a reference to VOH or VOL. The last valid data element will meet tOH before going High-Z.
- 5. Parameter guaranteed by design.
 - A. Target values listed with alternative values in parentheses.
 - B. tRFC must be less than or equal to tRC+1CLK tXSR must be less than or equal to tRC+1CLK
- 6. Required clocks are specified by JEDEC functionality and are not dependent on any timing parameter.
- 7. Timing actually specified by tDPL plus tRP; clock(s) specified as a reference only at minimum cycle rate
- 8. JEDEC and PC100 specify three clocks.
- 9. A new command can be given tRC after self refresh exit.
- 10. The specification in the table for tREF is applicable for all temperature grades with $TA \le +85^{\circ}C$. Only A2 automotive temperature grade supports operation with $TA > +85^{\circ}C$, and this value must be further constrained with a maximum tref of 16ms.



Special Operation for Low Power Consumption

Temperature Compensated Self Refresh

Temperature Compensated Self Refresh allows the controller to program the Refresh interval during SELF REFRESH mode, according to the case temperature of the Mobile SDRAM device. This allows great power savings during SELF REFRESH during most operating temperature ranges. Only during extreme temperatures would the controller have to select a TCSR level that will guarantee data during SELF REFRESH.

Every cell in the DRAM requires refreshing due to the capacitor losing its charge over time. The refresh rate is dependent on temperature. At higher temperatures a capacitor loses charge quicker than at lower temperatures, requiring the cells to be refreshed more often. Historically, during Self Refresh, the refresh rate has been set to accommodate the worst case, or highest temperature range expected.

Thus, during ambient temperatures, the power consumed during refresh was unnecessarily high, because the refresh rate was set to accommodate the higher temperatures.

This temperature compensated refresh rate will save power when the DRAM is operating at normal temperatures.

Partial Array Self Refresh

For further power savings during SELF REFRESH, the PASR feature allows the controller to select the amount of memory that will be refreshed during SELF REFRESH. The refresh options are All Banks, Two Banks, and One Bank. WRITE and READ commands can still occur during standard operation, but only the selected banks will be refreshed during SELF REFRESH. Data in banks that are disabled will be lost.

Deep Power Down

Deep Power Down is an operating mode to achieve maximum power reduction by eliminating the power of the whole memory array of the devices. Data will not be retained once the device enters Deep Power Down Mode.

This mode is entered by having all banks idle then /CS and /WE held low with /RAS and /CAS held high at the rising edge of the clock, while CKE is low. This mode is exited by asserting CKE high. The Power up and Initialization sequence must be applied following Deep Power Down Exit before normal operation can resume. This mode is not supported with TA > +85°C.



Figure7: Deep Power Down Mode Entry


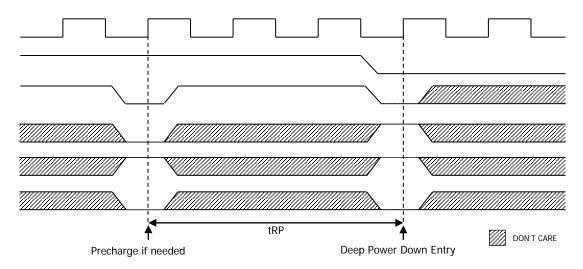


Figure8: Deep Power Down Mode Exit



DON'T CARE

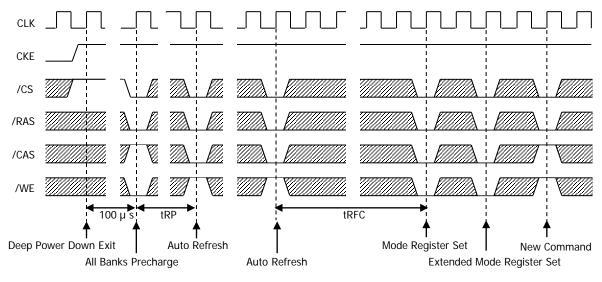

Ordering Information – VDD = 1.8V

Industrial Range: (-40°C to +85°C)

Configuration	Frequency (MHz)	Speed (ns)	Order Part No.	Package
32Mx16	166	6	IS42VM16320D-6BLI	54-ball BGA, Lead-free
	133	7.5	IS42VM16320D-75BLI	54-ball BGA, Lead-free


Automotive Range, A1: (-40°C to +85°C)

Configuration	Frequency (MHz)	Speed (ns)	Order Part No.	Package
32Mx16	133	7.5	IS45VM16320D-75BLA1	54-ball BGA, Lead-free

Automotive Range, A2: (-40°C to +105°C)

Configuration	Frequency (MHz)	Speed (ns)	Order Part No.	Package
32Mx16	133	7.5	IS45VM16320D-75BLA2	54-ball BGA, Lead-free



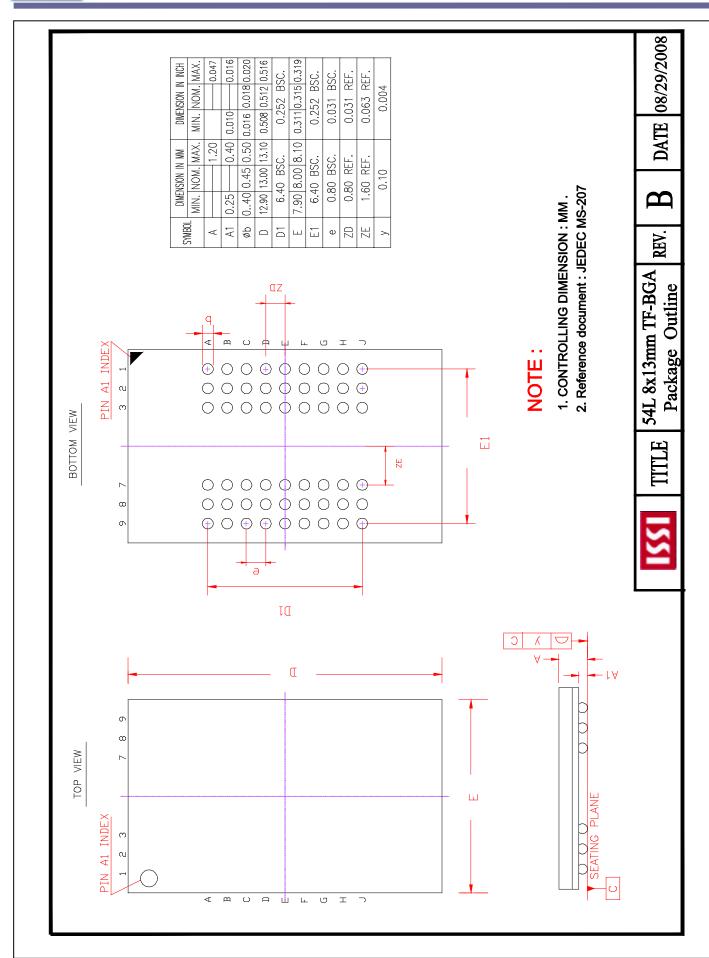

ПОСТАВКА ЭЛЕКТРОННЫХ КОМПОНЕНТОВ

Общество с ограниченной ответственностью «МосЧип» ИНН 7719860671 / КПП 771901001 Адрес: 105318, г.Москва, ул.Щербаковская д.3, офис 1107

Данный компонент на территории Российской Федерации Вы можете приобрести в компании MosChip.

Для оперативного оформления запроса Вам необходимо перейти по данной ссылке:

http://moschip.ru/get-element

Вы можете разместить у нас заказ для любого Вашего проекта, будь то серийное производство или разработка единичного прибора.

В нашем ассортименте представлены ведущие мировые производители активных и пассивных электронных компонентов.

Нашей специализацией является поставка электронной компонентной базы двойного назначения, продукции таких производителей как XILINX, Intel (ex.ALTERA), Vicor, Microchip, Texas Instruments, Analog Devices, Mini-Circuits, Amphenol, Glenair.

Сотрудничество с глобальными дистрибьюторами электронных компонентов, предоставляет возможность заказывать и получать с международных складов практически любой перечень компонентов в оптимальные для Вас сроки.

На всех этапах разработки и производства наши партнеры могут получить квалифицированную поддержку опытных инженеров.

Система менеджмента качества компании отвечает требованиям в соответствии с ГОСТ Р ИСО 9001, ГОСТ РВ 0015-002 и ЭС РД 009

Офис по работе с юридическими лицами:

105318, г. Москва, ул. Щербаковская д. 3, офис 1107, 1118, ДЦ «Щербаковский»

Телефон: +7 495 668-12-70 (многоканальный)

Факс: +7 495 668-12-70 (доб.304)

E-mail: info@moschip.ru

Skype отдела продаж:

moschip.ru_6 moschip.ru_4 moschip.ru_9