

QUICK START GUIDE FOR DEMONSTRATION CIRCUIT 486B DUAL-SMART BATTERY CHARGER/SELECTOR BOARD

LTC1760

DESCRIPTION

Demonstration circuit 486B is a dual Smart Battery PowerPath and charger controller featuring the LTC1760. The input voltage is 12 to 20V. The charger output voltage is programmed SMBus serial interface. The maximum charge current is 4A. The demoboard has been optimized to work with 2, 3 and 4-Cell Li-ion battery packs. A jumper is provided to select trip for low battery voltage (LOBAT), VLIMIT (VLIM), and ILIMIT (ILIM). The board will automatically charge any battery chemistry or cell configuration within the limits provided. By default, the board will power up in 3-Diode mode, which simply means all three power paths to the output (load) are on. The LTC1760 follows the Smart Battery Standards for the Smart Battery System Manager (SBSM) specification. The standard specifies that all PowerPath selection is automatically controlled exclusively by the LTC1760. There is no SMBUS interface command to control the

power paths. A user-selectable standalone mode is provided where the host SMBus lines become battery status output signals and can be monitored with the on-board LEDs.

OPTIONAL DC1223A-B Demoboard: The DC486B demoboard is populated with connectors that allow the use of an optional DC1223A-B SMBUS-to-USB port adapter and associated software to control the LTC1760 and monitor the batteries for demonstration purposes only. The software also supports data logging. Contact your LT representative for ordering a DC1223A-B.

**Design files for this circuit board are available.
Call the LTC factory.**

PowerPath is a trademark of Linear Technology Corporation

Table 1. Performance Summary

PARAMETER	CONDITION	VALUE
Maximum Input Voltage	Limited by input capacitor voltage rating	20V +/- 10 %
Recommended Minimum Input Voltage		12V +/- 10%
Low Battery Voltage	0% capacity voltage. Set by DCLOW TRIP Jumper.	5.3V for 2-cell Li-ion 7.9 for 3-cell Li-ion 11V for 4-cell Li-ion.
Trip point at full discharge		
Input Trip Voltage	Set by DCDIV divider network	10.7V +/- 3%
Maximum Charge Current	VIN > VBATmax > 6V	4A +/- 5% Adjustable to 1, 2 and 3A.
Short-Circuit Shutdown Trip Current	Static Load T > 15mS	8.33A +/- 5%
Input Current Limit	IBAT + ILOAD	3.57A +/- 5%


QUICK START GUIDE FOR DEMONSTRATION CIRCUIT 486B

DUAL-SMART BATTERY CHARGER/SELECTOR BOARD


QUICK START PROCEDURE

1. Connect the input power source to J1 or DCIN and GND terminals using a power supply capable of handling 4A of current within the 11 to 20V range. The input supply MUST be greater than the full battery voltage to allow a full charge to take place.
2. Connect the load to DCOUT and GND terminals.
3. Turn on the input power supply.
4. Plug in one or two Smart Batteries of your choice to BATTERY 1 and/or BATTERY2. Industry standard 5-Pin AMP Smart Battery connectors are provided as well as test points.
5. Optionally use the provided DC1223A-B demonstration software to control and configure the DC486B.

Figure 1. Proper Measurement Equipment Setup

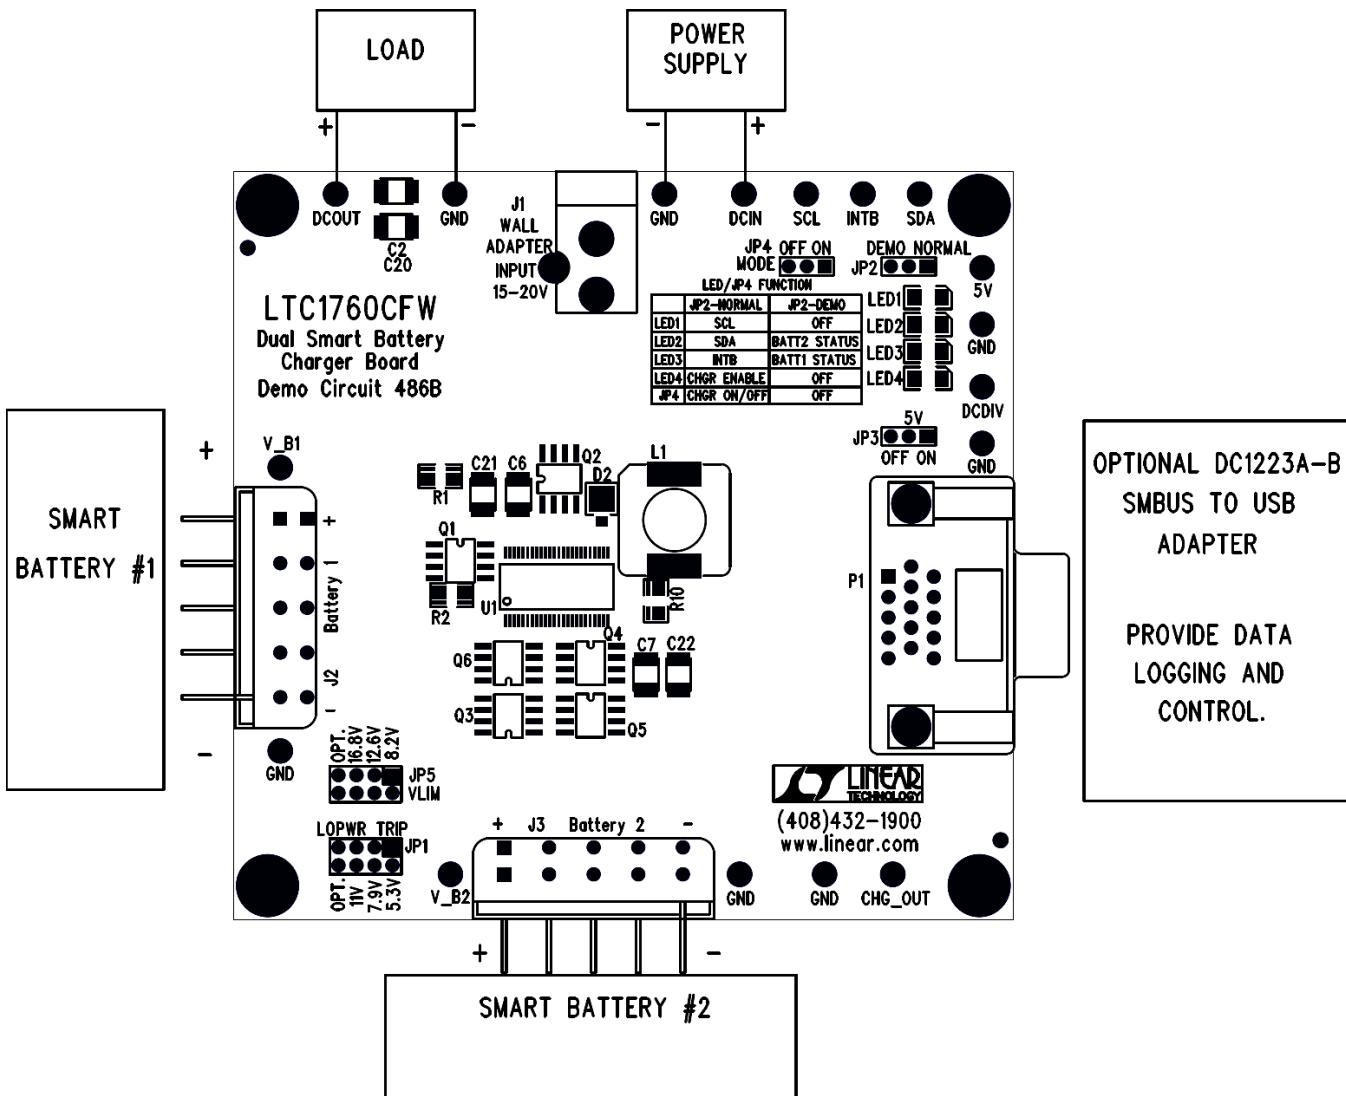

QUICK START GUIDE FOR DEMONSTRATION CIRCUIT 486B DUAL-SMART BATTERY CHARGER/SELECTOR BOARD

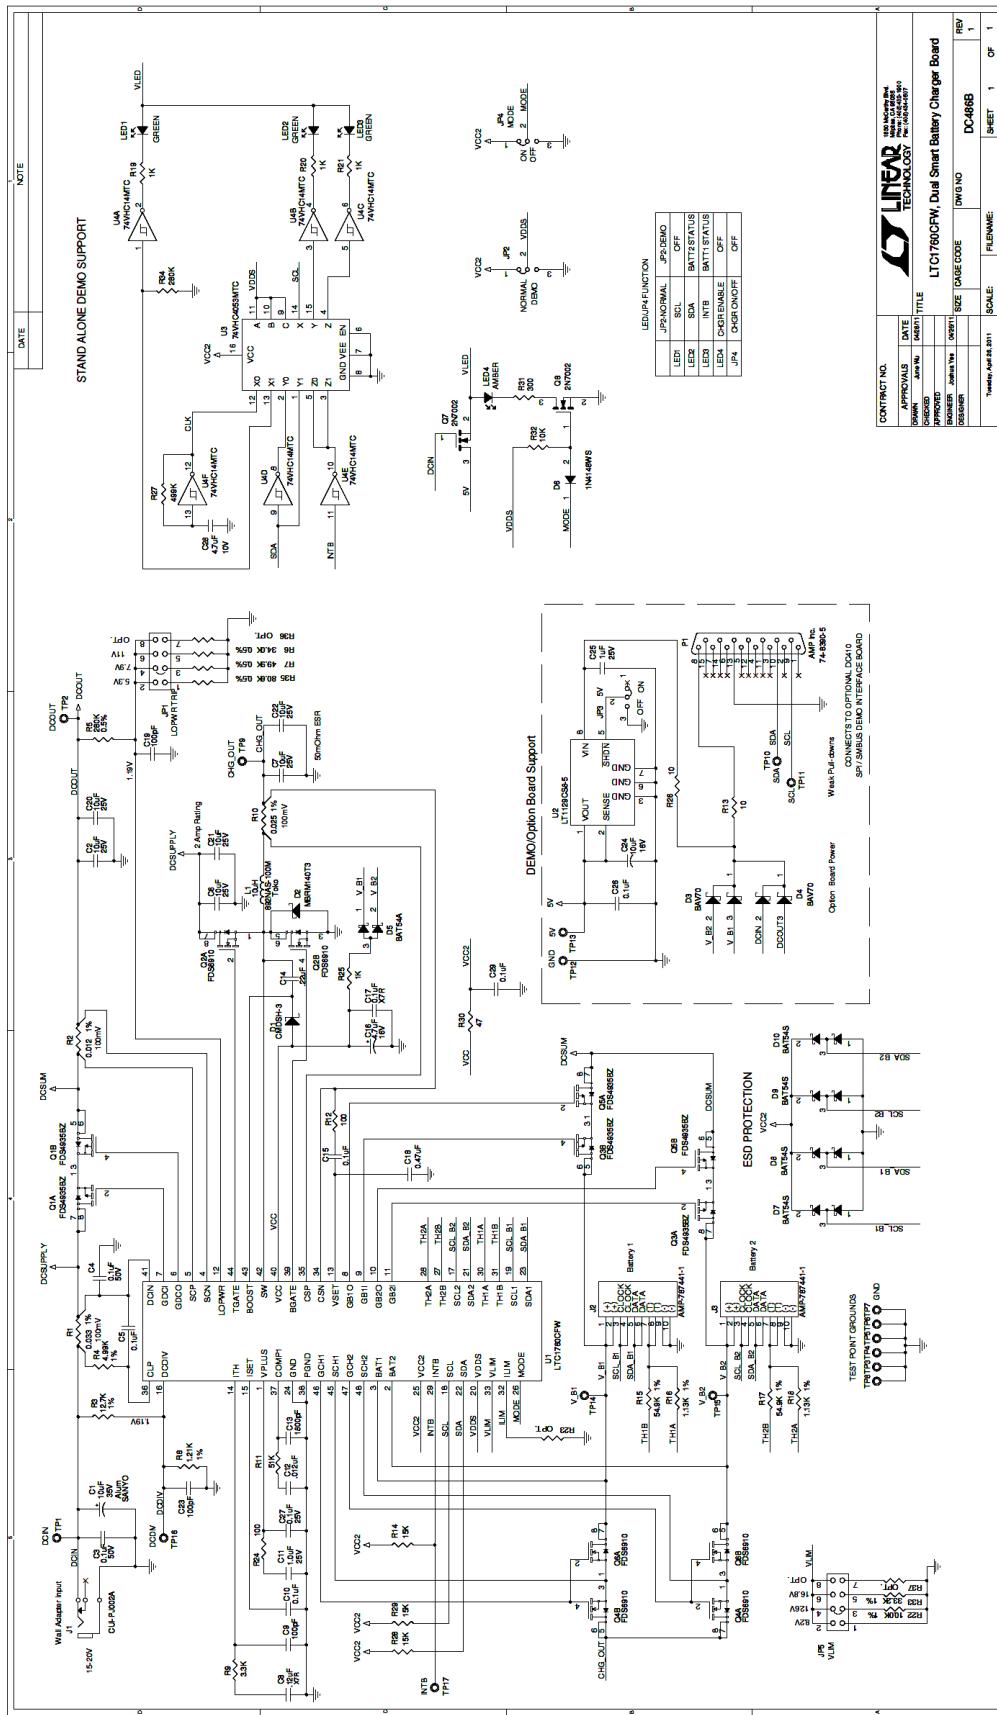

LTC1760CFW

Detailed View

of LTC1760CFW

IC

Pinouts

and Internal

Circuits

for DC486B

Board

Design

Notes

and

Comments

on

the

Board

Design

Notes

and

Comments

on

Данный компонент на территории Российской Федерации**Вы можете приобрести в компании MosChip.**

Для оперативного оформления запроса Вам необходимо перейти по данной ссылке:

<http://moschip.ru/get-element>

Вы можете разместить у нас заказ для любого Вашего проекта, будь то серийное производство или разработка единичного прибора.

В нашем ассортименте представлены ведущие мировые производители активных и пассивных электронных компонентов.

Нашей специализацией является поставка электронной компонентной базы двойного назначения, продукции таких производителей как XILINX, Intel (ex.ALTERA), Vicor, Microchip, Texas Instruments, Analog Devices, Mini-Circuits, Amphenol, Glenair.

Сотрудничество с глобальными дистрибуторами электронных компонентов, предоставляет возможность заказывать и получать с международных складов практически любой перечень компонентов в оптимальные для Вас сроки.

На всех этапах разработки и производства наши партнеры могут получить квалифицированную поддержку опытных инженеров.

Система менеджмента качества компании отвечает требованиям в соответствии с ГОСТ Р ИСО 9001, ГОСТ Р В 0015-002 и ЭС РД 009

Офис по работе с юридическими лицами:

105318, г.Москва, ул.Щербаковская д.3, офис 1107, 1118, ДЦ «Щербаковский»

Телефон: +7 495 668-12-70 (многоканальный)

Факс: +7 495 668-12-70 (доб.304)

E-mail: info@moschip.ru

Skype отдела продаж:

moschip.ru
moschip.ru_4

moschip.ru_6
moschip.ru_9