

QUICK START GUIDE FOR DEMONSTRATION CIRCUIT 1293A

MONOLITHIC STEP-DOWN SWITCHING REGULATOR WITH LDO

LT1939

DESCRIPTION

Demo circuit 1293A is a monolithic step-down switching regulator with LDO featuring LT1939. The demo circuit is designed for 5.0V and 3.3V outputs from a 7V to 25V input. The LDO output is configured as a post-regulator of the switching regulator output. The total current capability is up to 2A.

The switching regulator can be synchronized to an external clock input or be resistor-programmed to a 250kHz to 2.2MHz internal oscillator. Programmable frequency allows for optimization between efficiency and external component size. Cycle-by-cycle current limit, frequency foldback and thermal shutdown provide protections against a shorted output. The soft-start feature controls the ramp rate of the output voltage, elimi-

nates input current surge during startup, and also provides output tracking.

The LT1939's low current shutdown mode (<12uA) enables easy power management in battery-powered systems.

The LT1939 datasheet gives a complete description of the part, operation and application information. The datasheet must be read in conjunction with this quick start guide for demo circuit 1293A.

Design files for this circuit board are available. Call the LTC factory.

 , LTC and LT are registered trademarks of Linear Technology Corporation.

Performance Summary ($T_A = 25^{\circ}\text{C}$)

PARAMETER	CONDITION	VALUE
Minimum Input Voltage		7V
Maximum Input Voltage		25V
Output Voltage V_{OUT1}		5.0V $\pm 4\%$
Output Voltage V_{OUT2}		3.3V $\pm 4\%$
Switching Frequency		800kHz
Maximum Total Output Current ($I_{OUT1} + I_{OUT2}$)		2.0A
Voltage Ripple V_{OUT1}	$V_{IN}=12\text{V}$, $I_{OUT1}=1.5\text{A}$	10mV
Voltage Ripple V_{OUT2}	$V_{IN}=12\text{V}$, $I_{OUT2}=0.5\text{A}$	5mV

QUICK START GUIDE FOR DEMONSTRATION CIRCUIT 1293A

MONOLITHIC STEP-DOWN SWITCHING REGULATOR WITH LDO

QUICK START PROCEDURE

Demo circuit 1293A is easy to set up to evaluate the performance of the LT1939. Refer to Figure 1 for proper measurement equipment setup and follow the procedure below:

NOTE . When measuring the input or output voltage ripple, care must be taken to avoid a long ground lead on the oscilloscope probe. Measure the input or output voltage ripple by touching the probe tip directly across the V_{IN} or V_{OUT} and GND terminals. See Figure 2 for proper scope probe technique.

1. Place JP1 on the RUN position.
2. With power off, connect the input power supply to V_{IN} and GND.

3. Turn on the power at the input.

NOTE . Make sure that the input voltage does not exceed 25V.

4. Check for the proper output voltages.

NOTE . If there is no output, temporarily disconnect the load to make sure that the load is not set too high.

5. Once the proper output voltages are established, adjust the load within the operating range and observe the output voltage regulation, ripple voltage, efficiency and other parameters.

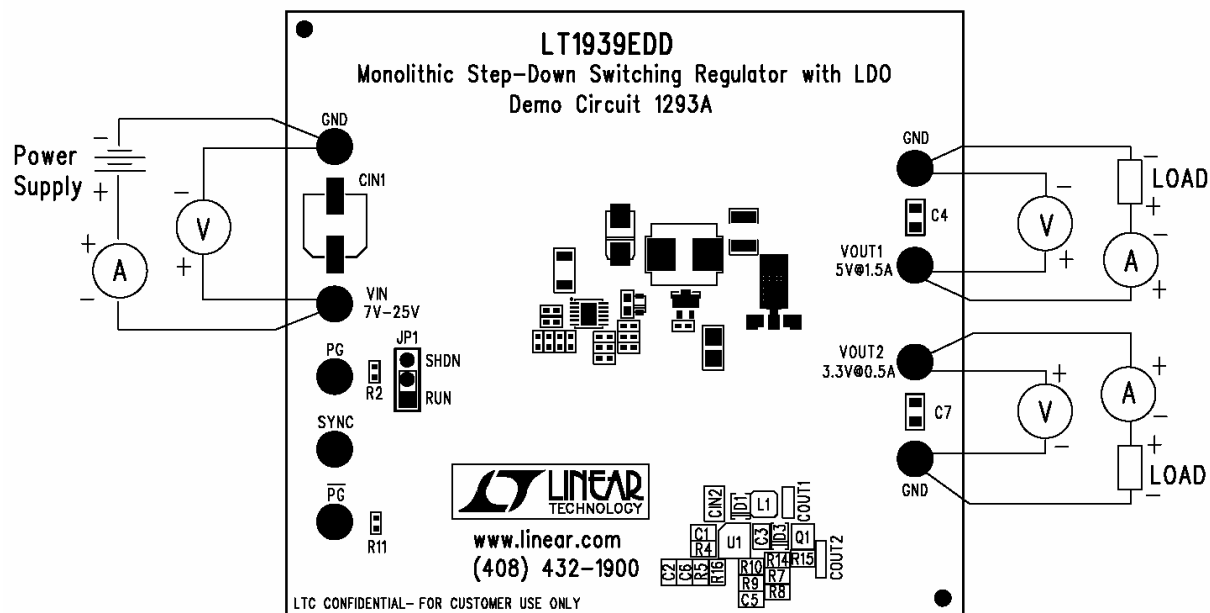


Figure 1. Proper Measurement Equipment Setup

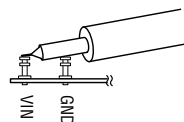


Figure 2. Measuring Input or Output Ripple

QUICK START GUIDE FOR DEMONSTRATION CIRCUIT 1293A

MONOLITHIC STEP-DOWN SWITCHING REGULATOR WITH LDO

SYNC FUNCTION


Install a 20K resistor at R16 to enable SYNC function.

UVLO FUNCTION

Install both R1 and R3 for the UVLO function, otherwise, let SHDN pin float for normal operation. See datasheet “Shutdown and Undervoltage Lockout” for resistor calculation.

QUICK START GUIDE FOR DEMONSTRATION CIRCUIT 1293A

MONOLITHIC STEP-DOWN SWITCHING REGULATOR WITH LDO

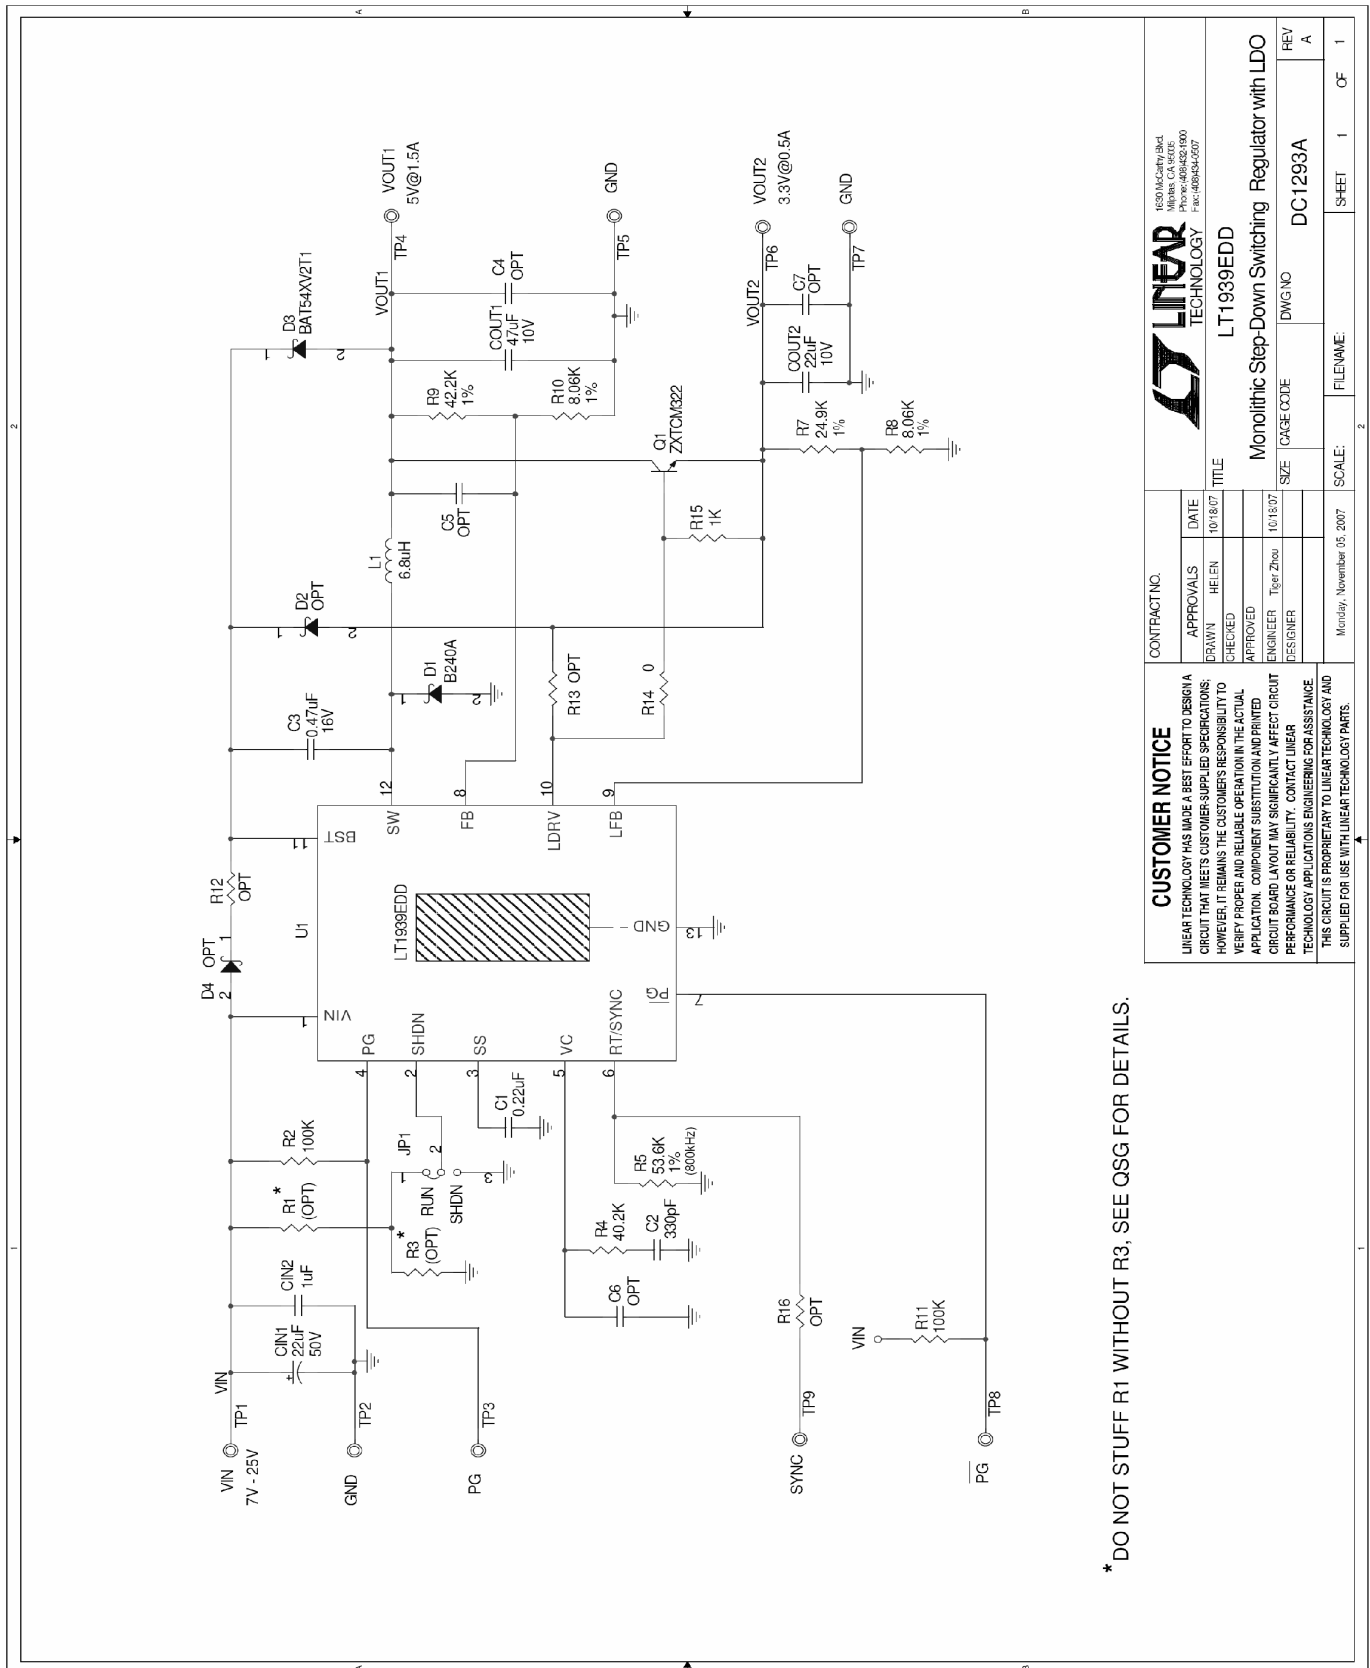

*DO NOT STUFF R1 WITHOUT R3, SEE QSG FOR DETAILS.

Данный компонент на территории Российской Федерации

Вы можете приобрести в компании MosChip.

Для оперативного оформления запроса Вам необходимо перейти по данной ссылке:

<http://moschip.ru/get-element>

Вы можете разместить у нас заказ для любого Вашего проекта, будь то серийное производство или разработка единичного прибора.

В нашем ассортименте представлены ведущие мировые производители активных и пассивных электронных компонентов.

Нашей специализацией является поставка электронной компонентной базы двойного назначения, продукции таких производителей как XILINX, Intel (ex.ALTERA), Vicor, Microchip, Texas Instruments, Analog Devices, Mini-Circuits, Amphenol, Glenair.

Сотрудничество с глобальными дистрибьюторами электронных компонентов, предоставляет возможность заказывать и получать с международных складов практически любой перечень компонентов в оптимальные для Вас сроки.

На всех этапах разработки и производства наши партнеры могут получить квалифицированную поддержку опытных инженеров.

Система менеджмента качества компании отвечает требованиям в соответствии с ГОСТ Р ИСО 9001, ГОСТ РВ 0015-002 и ЭС РД 009

Офис по работе с юридическими лицами:

105318, г.Москва, ул.Щербаковская д.3, офис 1107, 1118, ДЦ «Щербаковский»

Телефон: +7 495 668-12-70 (многоканальный)

Факс: +7 495 668-12-70 (доб.304)

E-mail: info@moschip.ru

Skype отдела продаж:

moschip.ru

moschip.ru_4

moschip.ru_6

moschip.ru_9