


**Extraction Tools 91047-[ ]**


Figure 1

**1. INTRODUCTION**

Extraction Tools 91047-[ ] are designed to extract flexible flat cable (FFC) contacts from FFC pin, receptacle, and edge connectors with end entrance locking lance slots (reference part number 86670-8). Read these instructions thoroughly before removing any contacts.

For connectors with side entrance locking lance slots, refer to 408-7916 for Tool 91200-[ ].

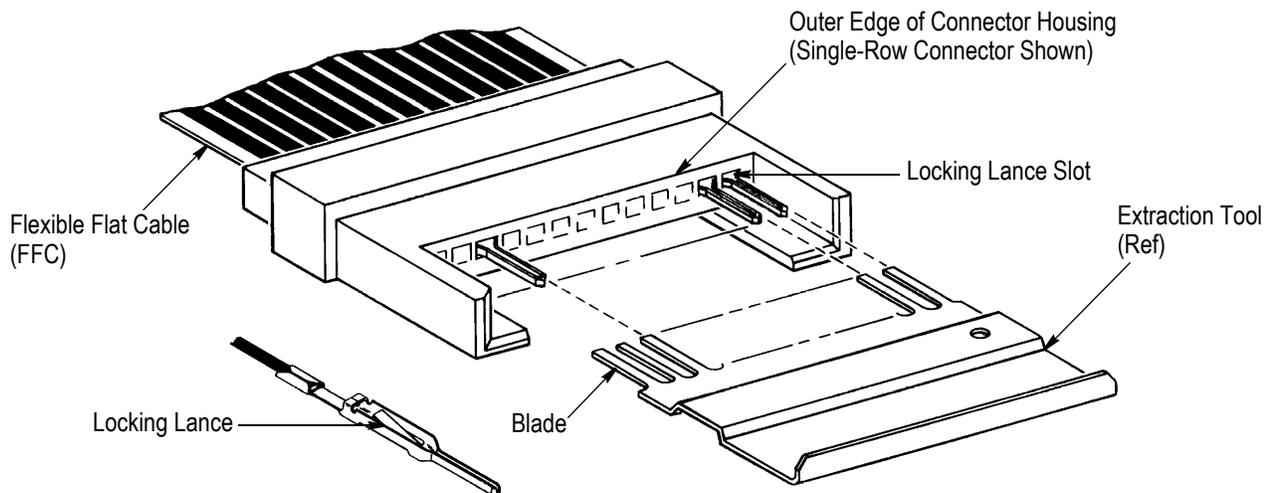

*Dimensions in this instruction sheet are in millimeters [with inches in brackets]. Figures are not drawn to scale.*

Reasons for reissue of this instruction sheet are provided in Section 6, REVISION SUMMARY.

**2. DESCRIPTION**

Each tool features a specific number of tool blades that release the contact locking lances of the connector. See Figure 1. The number of tool blades must match the number of cavities in one row of the connector.



*All contact locking lances must be released simultaneously; otherwise, damage to the connector, contacts, or cable may result.*

**3. EXTRACTION PROCEDURE**

Refer to Figure 2, and ensure that the number of blades of the extraction tool matches the number of contact cavities in one row of the connector.

| EXTRACTION TOOL |                  |
|-----------------|------------------|
| PART NUMBER     | NUMBER OF BLADES |
| 91047-1         | 9                |
| 91047-2         | 19               |
| 91047-3         | 29               |
| 91047-5         | 20               |
| 1-91047-0       | 10               |
| 1-91047-2       | 35               |
| 1-91047-4       | 12               |
| 1-91047-5       | 14               |
| 1-91047-6       | 15               |
| 1-91047-8       | 5                |
| 1-91047-9       | 3                |
| 2-91047-6       | 6                |

Figure 2

Proceed as follows:

1. Align the tool blades with the locking lance slots located between the contacts and outer edge of the housing as shown in Figure 1.
2. Simultaneously insert all tool blades straight into the connector until the tool bottoms. Only the radius between the tool blades should be visible when the tool is properly seated. See Figure 3.
3. Holding the tool and connector in one hand, carefully pull on the cable. A slight side-to-side motion may be used to ease contact extraction.

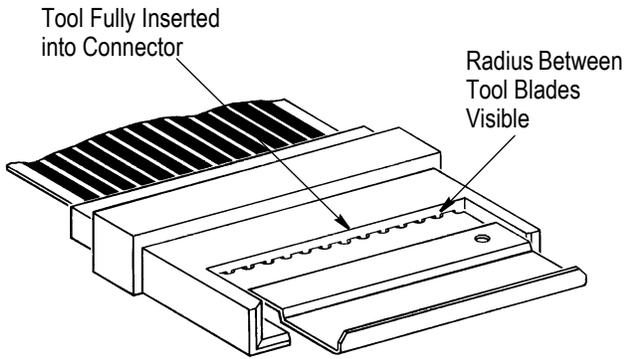


Figure 3



Excessive or improper force may cause damage to the contacts or cable.

4. After the cable and all of the contacts have been completely extracted, remove the tool from the connector.

**4. MAINTENANCE AND INSPECTION**

To ensure proper operation, the tool should conform to the dimensions provided in Figure 4.

It is recommended that the tool be inspected immediately when received and at regularly scheduled intervals.

It is recommended that the tool be stored in a clean, dry place and cleaned with a soft, lint-free cloth.

**5. REPLACEMENT AND REPAIR**


The tool is not repairable and should be replaced when worn or damaged. Additional tools can be purchased from:

CUSTOMER SERVICE (038-035)  
 TYCO ELECTRONICS CORPORATION  
 PO BOX 3608  
 HARRISBURG PA 17105-3608

**6. REVISION SUMMARY**

Revisions to this instruction sheet include:

- Updated instruction sheet to corporate requirements
- Removed obsolete extraction tools
- Replaced connector series part numbers with reference part number

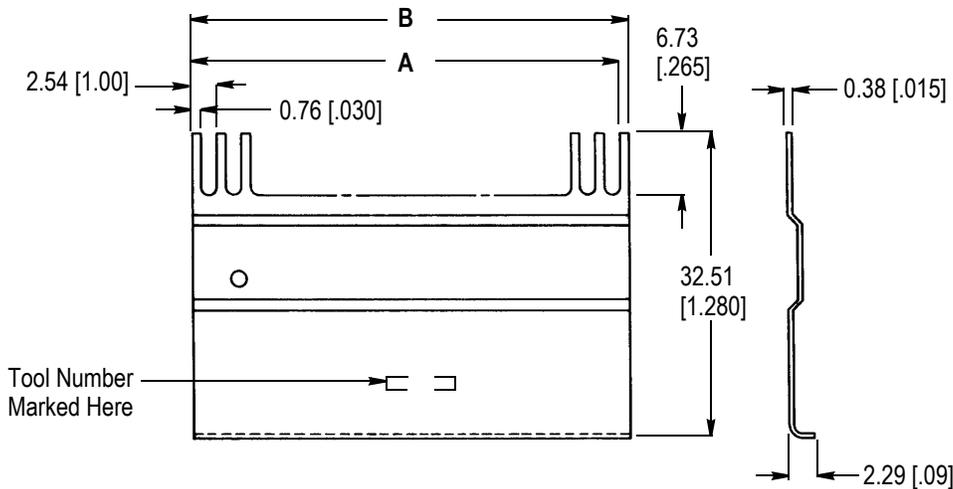

**EXTRACTION TOOL**

| PART NUMBER | DIMENSION     |               | PART NUMBER | DIMENSION     |               |
|-------------|---------------|---------------|-------------|---------------|---------------|
|             | A             | B             |             | A             | B             |
| 91047-1     | 20.32 [1.800] | 21.08 [1.830] | 1-91047-4   | 27.94 [1.100] | 28.70 [1.130] |
| 91047-2     | 45.72 [1.800] | 46.48 [1.830] | 1-91047-5   | 33.02 [1.300] | 33.78 [1.330] |
| 91047-3     | 71.12 [2.800] | 71.88 [2.830] | 1-91047-6   | 35.56 [1.400] | 36.32 [1.430] |
| 91047-5     | 48.26 [1.900] | 49.02 [1.930] | 1-91047-8   | 10.16 [1.400] | 10.92 [1.430] |
| 1-91047-0   | 22.86 [1.900] | 23.62 [1.930] | 1-91047-9   | 5.08 [1.200]  | 5.84 [1.230]  |
| 1-91047-2   | 86.36 [3.400] | 87.12 [3.430] | 2-91047-6   | 17.78 [1.700] | 18.54 [1.730] |

Figure 4

## Данный компонент на территории Российской Федерации

### Вы можете приобрести в компании MosChip.

Для оперативного оформления запроса Вам необходимо перейти по данной ссылке:

<http://moschip.ru/get-element>

Вы можете разместить у нас заказ для любого Вашего проекта, будь то серийное производство или разработка единичного прибора.

В нашем ассортименте представлены ведущие мировые производители активных и пассивных электронных компонентов.

Нашей специализацией является поставка электронной компонентной базы двойного назначения, продукции таких производителей как XILINX, Intel (ex.ALTERA), Vicor, Microchip, Texas Instruments, Analog Devices, Mini-Circuits, Amphenol, Glenair.

Сотрудничество с глобальными дистрибьюторами электронных компонентов, предоставляет возможность заказывать и получать с международных складов практически любой перечень компонентов в оптимальные для Вас сроки.

На всех этапах разработки и производства наши партнеры могут получить квалифицированную поддержку опытных инженеров.

Система менеджмента качества компании отвечает требованиям в соответствии с ГОСТ Р ИСО 9001, ГОСТ РВ 0015-002 и ЭС РД 009

### Офис по работе с юридическими лицами:

105318, г.Москва, ул.Щербаковская д.3, офис 1107, 1118, ДЦ «Щербаковский»

Телефон: +7 495 668-12-70 (многоканальный)

Факс: +7 495 668-12-70 (доб.304)

E-mail: [info@moschip.ru](mailto:info@moschip.ru)

Skype отдела продаж:

moschip.ru

moschip.ru\_4

moschip.ru\_6

moschip.ru\_9