



APPLICATION NOTE

AN60302

DSI Display Add-On for the
RK3399-Q7 Devkit

Document revision: Release v0.9
Issue date: Jan 31, 2018

Contents

- 1 Introduction 1
- 1.1 Package Contents 2
- 1.2 Mounting Instructions 2
- 1.3 Kernel Configuration 7
- 1.4 Touchscreen Firmware 8
- 1.5 Xorg Configuration 8
- 1.6 Reboot & Test 9

1 Introduction

The DSI Display Add-On is meant to be used in conjunction with the RK3399-Q7 Development Kit.

The display features a brilliant portrait-mode 800x1200 pixel IPS panel and a 10-point multitouch controller.

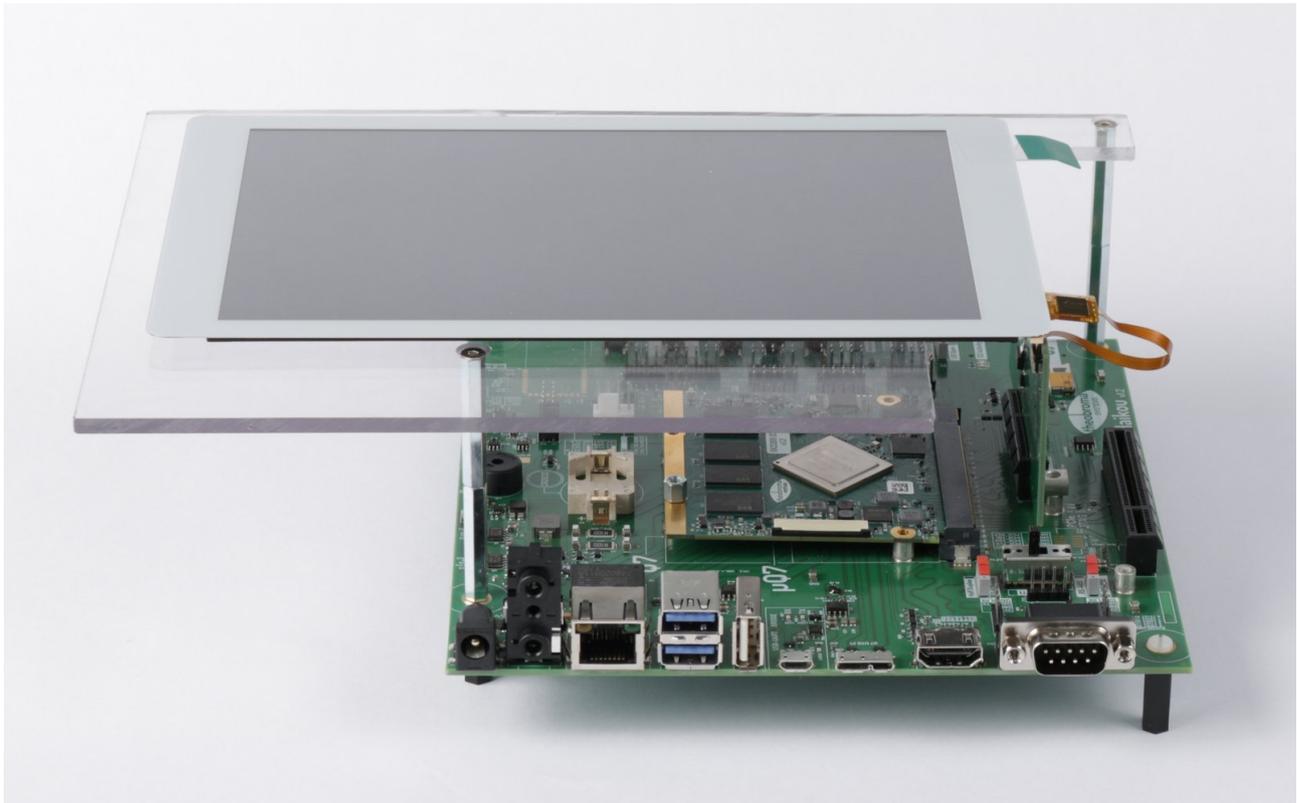


Fig. 1.1: Complete setup

Note that both connectors on the DSI adapter PCB are TOP-CONTACT. As seen below, the gold plated contacts of both flat-flex cables should be facing UP.

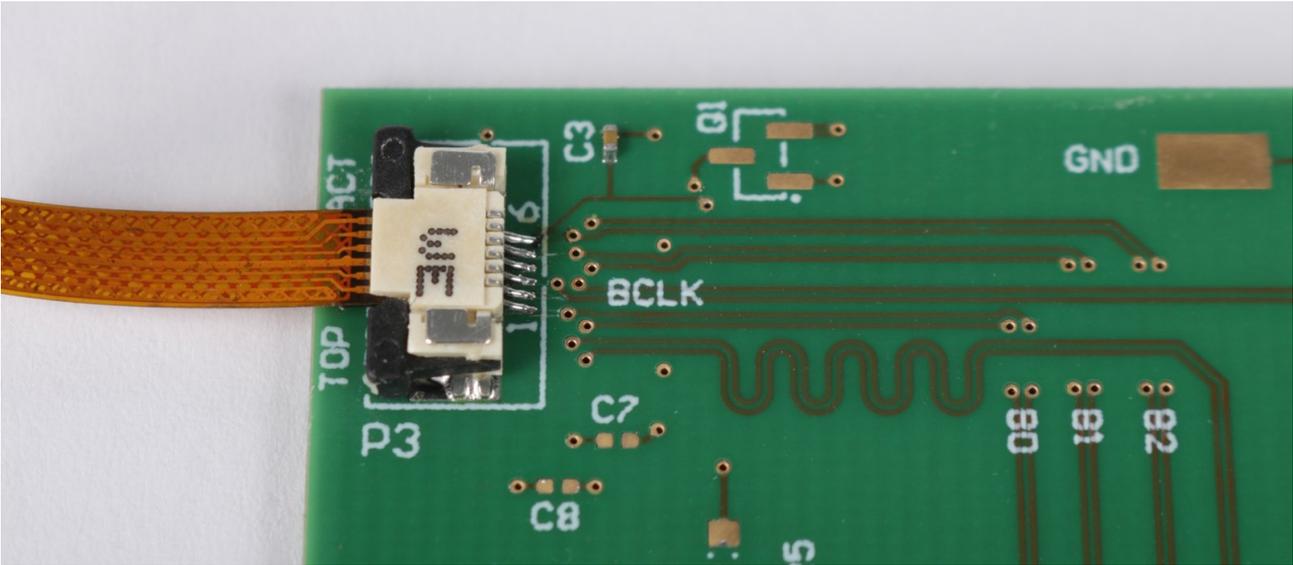


Fig. 1.3: Connector P3 (I2C / Touch) on the DSI adapter PCB

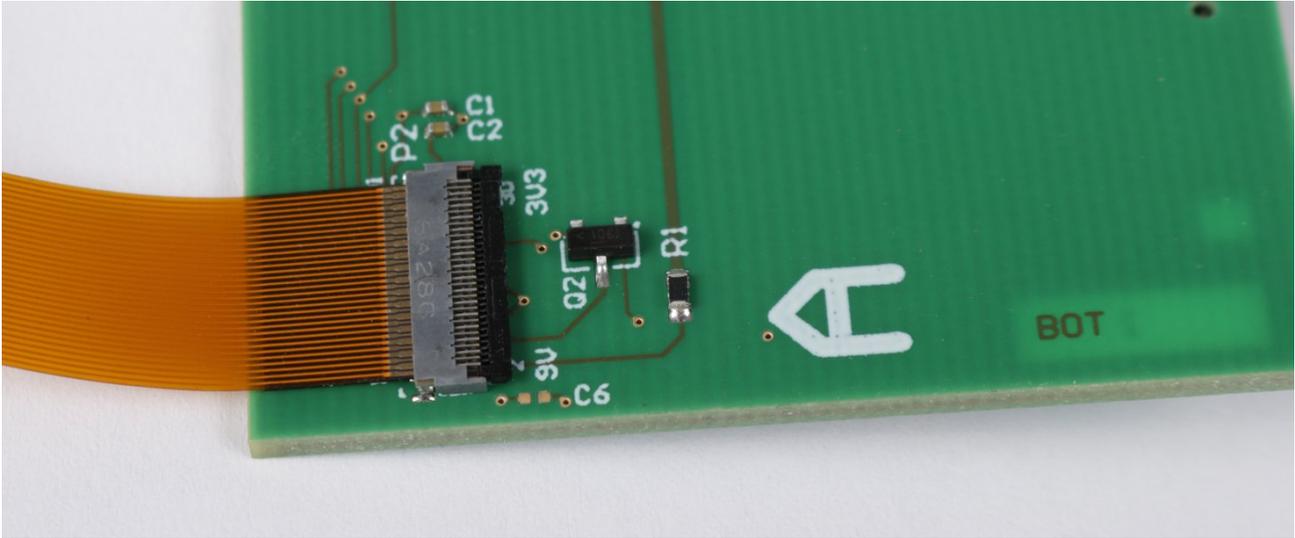


Fig. 1.4: Connector P2 (DSI) on the DSI adapter PCB

The narrow flat-flex cable is permanently connected to the display assembly, leaving only a single connector (the one for the wide cable). This connector is BOTTOM-CONTACT, the gold plated contacts on the flat-flex cable should be facing DOWN.

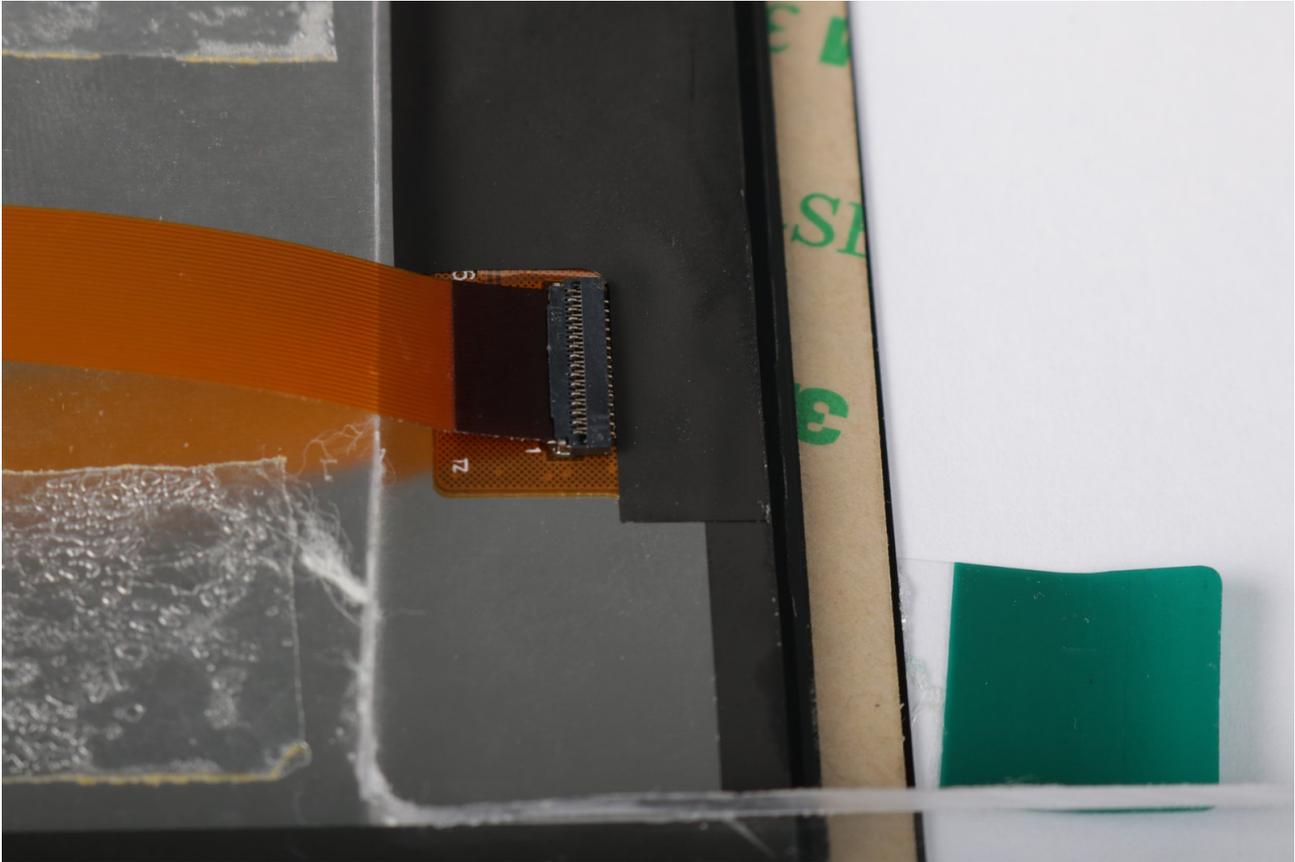


Fig. 1.5: DSI connector on the display assembly

Step 2: Mount the three hexagonal metal standoffs to the display assembly. The display assembly has three M3 threads sticking out of it. Screw the standoffs onto the threads without any force.

Step 3: Flip the display assembly face-up and hover it above the Haikou baseboard. Plug the DSI adapter PCB into the slot marked “Display connector” on the Haikou baseboard. Slide the threads of the three metal standoffs into the mounting holes of the Haikou baseboard.

Step 4: Flip the whole setup (display assembly and Haikou baseboard) around to get access to the threads sticking through the mounting holes. Stick the one M3 screw through the unoccupied hole. Now screw on the four M3 nuts that will serve as feet.

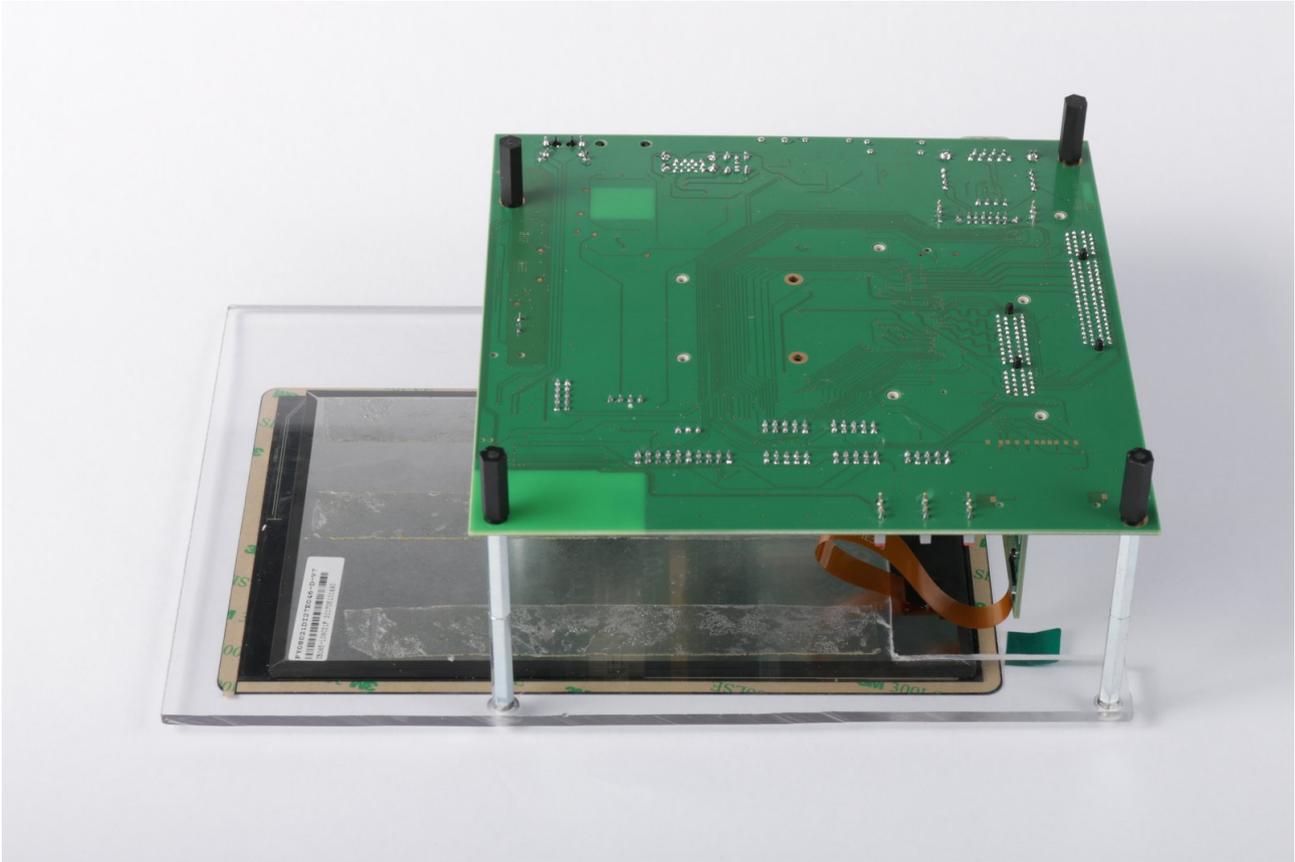


Fig. 1.6: M3 nuts that serve as feet for the Haikou baseboard

Step 5: Flip the setup around again. The result should look as seen in the photo.

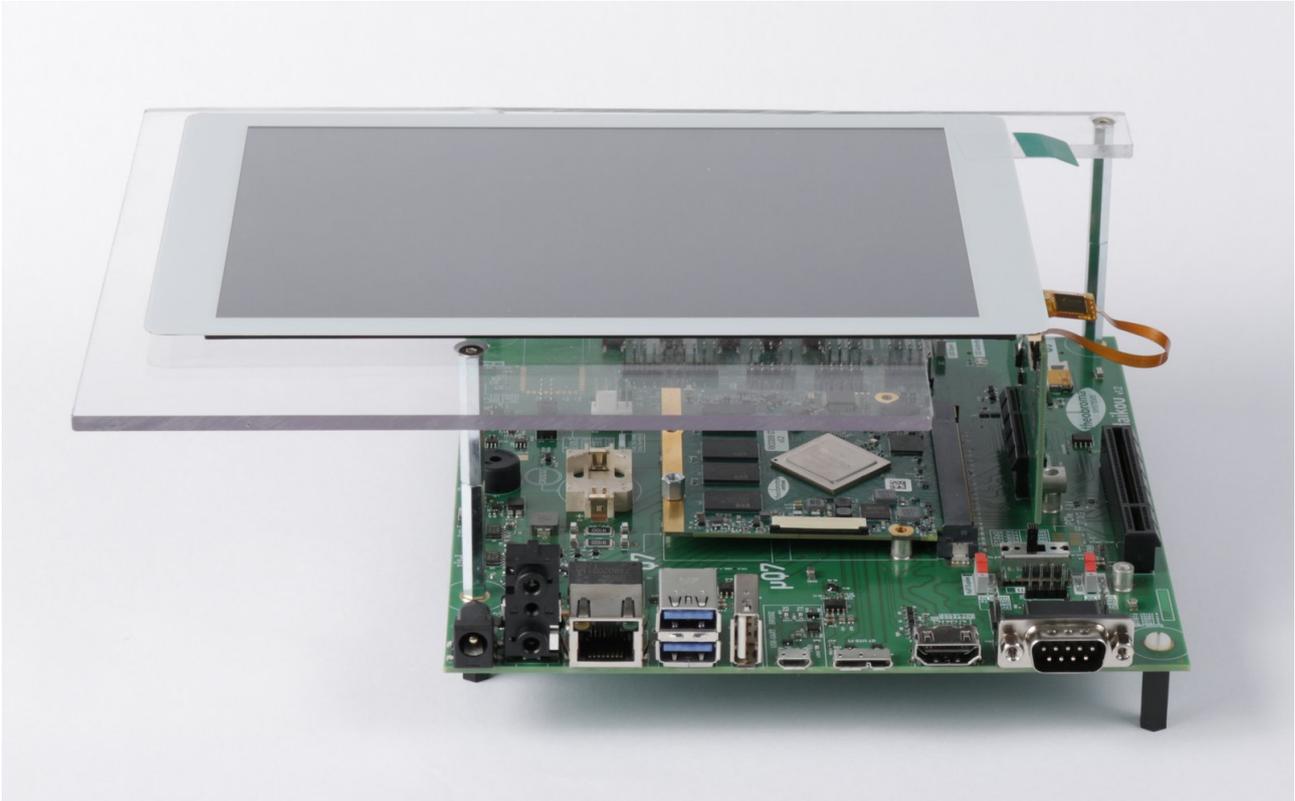


Fig. 1.7: Complete setup

1.3 Kernel Configuration

To enable display output to the DSI display, the correct DTB file must be used by Linux. The used file can be configured through the file `/boot/puma_rk3399/userEnv.txt`.

On the RK3399-Q7, open the file with an editor (for example, nano):

```
sudo nano /boot/puma_rk3399/userEnv.txt
```

Replace the linue:

```
fdtfile=rk3399-puma.dtb
```

with the line:

```
fdtfile=rk3399-puma-mipidsi.dtb
```

Save the file and exit the editor.

1.4 Touchscreen Firmware

A firmware file is loaded into the touchscreen controller at every power-up. The correct firmware file is called `ec080.fw` with the sha256 checksum shown below:

```
2e73bd80118fc6bea7b5fea941b06facb66e1f0338632775483c8fc6e16c1ea0 ec080.fw
```

You can obtain the firmware file by requesting it via email. Save it on the RK3399-Q7 under the following path:

```
/lib/firmware/silead/ec080.fw
```

1.5 Xorg Configuration

The touchscreen stays inactive unless enabled in `/etc/X11/xorg.conf.d/touchscreen.conf`.

On the RK3399-Q7, open the file with an editor (for example, nano):

```
sudo nano /etc/X11/xorg.conf.d/touchscreen.conf
```

and paste the text below:

```
Section "InputClass"  
    Identifier      "touchscreen"  
    MatchProduct   "silead_ts"  
    Option "TransformationMatrix" "1.5 0 0 0 0.7 0 0 0 1"  
EndSection
```

Save the file and exit the editor.

1.6 Reboot & Test

Reboot the RK3399-Q7 using:

```
reboot
```

Once the kernel has initialized the display controller (about 10 seconds into the boot), you should see the kernel boot messages on the display. The display manager starts a few seconds later and you will be greeted by the familiar desktop environment.

Данный компонент на территории Российской Федерации

Вы можете приобрести в компании MosChip.

Для оперативного оформления запроса Вам необходимо перейти по данной ссылке:

<http://moschip.ru/get-element>

Вы можете разместить у нас заказ для любого Вашего проекта, будь то серийное производство или разработка единичного прибора.

В нашем ассортименте представлены ведущие мировые производители активных и пассивных электронных компонентов.

Нашей специализацией является поставка электронной компонентной базы двойного назначения, продукции таких производителей как XILINX, Intel (ex.ALTERA), Vicor, Microchip, Texas Instruments, Analog Devices, Mini-Circuits, Amphenol, Glenair.

Сотрудничество с глобальными дистрибьюторами электронных компонентов, предоставляет возможность заказывать и получать с международных складов практически любой перечень компонентов в оптимальные для Вас сроки.

На всех этапах разработки и производства наши партнеры могут получить квалифицированную поддержку опытных инженеров.

Система менеджмента качества компании отвечает требованиям в соответствии с ГОСТ Р ИСО 9001, ГОСТ РВ 0015-002 и ЭС РД 009

Офис по работе с юридическими лицами:

105318, г.Москва, ул.Щербаковская д.3, офис 1107, 1118, ДЦ «Щербаковский»

Телефон: +7 495 668-12-70 (многоканальный)

Факс: +7 495 668-12-70 (доб.304)

E-mail: info@moschip.ru

Skype отдела продаж:

moschip.ru

moschip.ru_4

moschip.ru_6

moschip.ru_9