



Grove - 2-Coil Latching Relay

Release date : 9/20/2015

Version : 1.0

Wiki: [http://www.seeedstudio.com/wiki/Grove - 2-Coil Latching Relay](http://www.seeedstudio.com/wiki/Grove_-_2-Coil_Latching_Relay)

Bazaar: <http://www.seeedstudio.com/depot/Grove-2Coil-Latching-Relay-p-1446.html>

Document Revision History

Revision	Date	Author	Description
1.0	Sep 21, 2015	Victor.He	Create file

Contents

Document Revision History.....	2
1. Introduction	2
2. Features.....	3
3. Specifications	4
4. Usage.....	5
4.1 With Arduino.....	5
4.2 With Raspberry Pi	6
5. Resource.....	8
6. Support.....	9

Disclaimer

For physical injuries and possessions loss caused by those reasons which are not related to product quality, such as operating without following manual guide, natural disasters or force majeure, we take no responsibility for that.


Under the supervision of Seeed Technology Inc., this manual has been compiled and published which covered the latest product description and specification. The content of this manual is subject to change without notice.

Copyright

The design of this product (including software) and its accessories is under tutelage of laws. Any action to violate relevant right of our product will be penalized through law. Please consciously observe relevant local laws in the use of this product.

1. Introduction

This module is based on 2-Coil Latching Relay. Contrast to the ordinary relay, this latching relay does not need continuous power to keep the state, only a rising/falling pulse is needed to change the work state. Even the power can be removed when the work state do not need to change, making this module especially suitable for low-power projects.

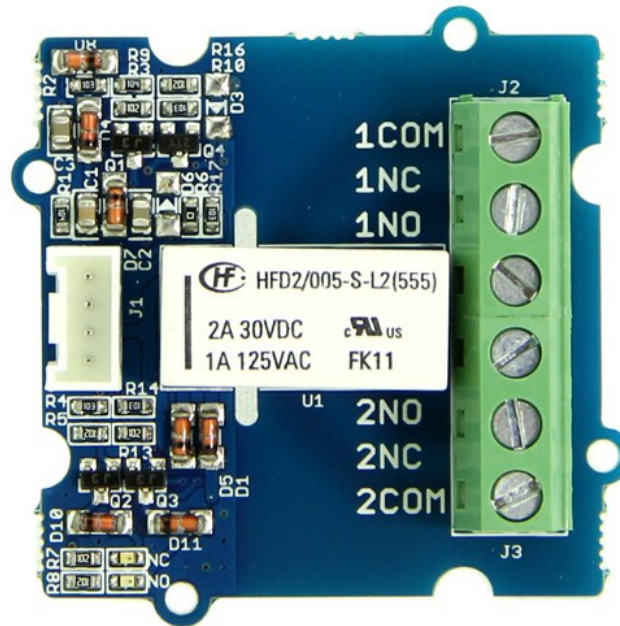

2. Features

- Grove Connector
- Low power consumption
- Dual Switch

3. Specifications

Item	Min	Typical	Max	Unit
Working Voltage	4.7	5.0	5.3	VDC
Set/Reset Voltage(Max)	4.0		VDC	
Coil Resistance	151	167	183	Ω
Switching Voltage(Max)	35VAC/35VDC		/	
Switching Current(Max)	3		A	
Set Time(Latching)	4.5(max)		ms	
Reset Time(Latching)	3.5(max)		ms	

4. Usage

4.1 With Arduino

The latching relay only draws power during the changing of state. A rising/falling voltage pulse on the signal pin changes it's working state. This is very useful in situations where energy efficiency is important, and also in situations where you need the relay to remember its state.

Let's begin to use it.

- Connect the module to D3 port of [Grove - Base Shield](#).
- The relay hold in "set" status(Comm and NO connected) in default, when there is a rising edge on the SIG pin. It turns the "reset" state(Comm and NC connected). The reference code as show below:

```
#define LatchingRelay 3
void setup()
{
    pinMode(LatchingRelay,OUTPUT);

    digitalWrite(LatchingRelay,LOW);
    delay(1000);
    digitalWrite(LatchingRelay,HIGH);
    delay(1000);
}
void loop()
{
}
}
```

- The relay hold in "reset" status(Comm and NC Connected), when there is a falling edge on the SIG pin. It turns the "set" state(Comm and NO connected). The reference code as show below:

```
#define LatchingRelay 3
void setup()
{
    pinMode(LatchingRelay,OUTPUT);

    digitalWrite(3,HIGH);
    delay(1000);
}
```



```
digitalWrite(3,LOW);
delay(1000);
}
void loop()
{
}
```

- This module consumes little power when working state doesn't change. After setting the relay state, you do not need to supply power for the Latching Relay any more, which makes it especially low power consumption.

Note:

- 1) Relay is on the "reset" status when being released from stock.

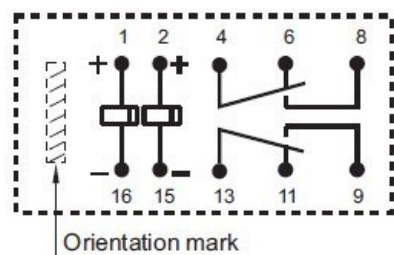


Diagram shows the "reset" position
Energize terminals 1 and 16 to "set"
Energize terminals 2 and 15 to "reset"

- 2) The two-way relay are controlled at the same time.
- 3) The NO (NC) indicator will flash once when switch to "set"("reset") status.

4.2 With [Raspberry Pi](#)

1. You should have got a raspberry pi and a grovepi or grovepi+.
2. You should have completed configuring the development environment, otherwise follow [here](#).
3. Connection. Plug the sensor to grovepi socket D4 by using a grove cable.
4. Navigate to the demos' directory:

```
cd yourpath/GrovePi/Software/Python/
```

To see the code

```
nano grove_solid_state_relay.py    # "Ctrl+x" to exit #
```

```
import time
import grovepi

# Connect the Grove Solid State Relay to digital port D4
# CTR,NC,VCC,GND
relay = 4

grovepi.pinMode(relay,"OUTPUT")

while True:
    try:
        # switch on for 5 seconds
        grovepi.digitalWrite(relay,1)
        print "on"
        time.sleep(5)

        # switch off for 5 seconds
        grovepi.digitalWrite(relay,0)
        print "off"
        time.sleep(5)

    except KeyboardInterrupt:
        grovepi.digitalWrite(relay,0)
        break
    except IOError:
        print "Error"}
```

5. Run the demo.

```
sudo python grove_solid_state_relay.py
```

5. Resource

[Grove - 2-Coil Latching Relay Eagle File](#)

[Latching Relay Datasheet](#)

6. Support

[Ask questions on Seeed forum.](#)

Данный компонент на территории Российской Федерации

Вы можете приобрести в компании MosChip.

Для оперативного оформления запроса Вам необходимо перейти по данной ссылке:

<http://moschip.ru/get-element>

Вы можете разместить у нас заказ для любого Вашего проекта, будь то серийное производство или разработка единичного прибора.

В нашем ассортименте представлены ведущие мировые производители активных и пассивных электронных компонентов.

Нашей специализацией является поставка электронной компонентной базы двойного назначения, продукции таких производителей как XILINX, Intel (ex.ALTERA), Vicor, Microchip, Texas Instruments, Analog Devices, Mini-Circuits, Amphenol, Glenair.

Сотрудничество с глобальными дистрибьюторами электронных компонентов, предоставляет возможность заказывать и получать с международных складов практически любой перечень компонентов в оптимальные для Вас сроки.

На всех этапах разработки и производства наши партнеры могут получить квалифицированную поддержку опытных инженеров.

Система менеджмента качества компании отвечает требованиям в соответствии с ГОСТ Р ИСО 9001, ГОСТ РВ 0015-002 и ЭС РД 009

Офис по работе с юридическими лицами:

105318, г.Москва, ул.Щербаковская д.3, офис 1107, 1118, ДЦ «Щербаковский»

Телефон: +7 495 668-12-70 (многоканальный)

Факс: +7 495 668-12-70 (доб.304)

E-mail: info@moschip.ru

Skype отдела продаж:

moschip.ru

moschip.ru_4

moschip.ru_6

moschip.ru_9