

LT6106

# 36V Low Cost High Side Current Sense Amplifier in SOT-23

#### DESCRIPTION

Demonstration circuit 1240 is a General Purpose High-Side Current-Sense Amplifier featuring the LT6106.

This demo board amplifies an on-board current-sense resistor voltage-drop, providing a precision uni-polar output voltage proportional to load current. The demo circuit includes scaling resistors that program the gain of the circuit to 25V/V. The LT6106 is powered from the same supply that the sense resistor is connected to and provides a ground referenced output. The LT6106 can perform current measurements on supplies ranging from 2.7V to 36V. Since the output voltage is developed as a controlled current through a load resistance, ground-loop errors can be eliminated by simply locating the load

resistor at the destination point (subsequent signal processing such as A/D conversion). Remote loading can be evaluated by simply removing the on board load resistor (R3).

The key performance characteristics of the LT6106 and DC1240 are shown in the Performance Summary below.

# Design files for this circuit board are available. Call the LTC factory.

(T), LT are registered trademarks of Linear Technology Corporation. Other product names may be trademarks of the companies that manufacture the products.

## **PERFORMANCE SUMMARY** Specifications are at T<sub>n</sub> = 25°C

SYMBOL	PARAMETER	CONDITIONS	MIN	TYP	MAX	UNITS
$V_{IN}$	Monitored Supply Input Range		2.7	328	36	V
$V_{MON}$	Measurement Output Signal	I <sub>OUT</sub> = 5A		2.5		V
I <sub>MON</sub>	Measurement Output Signal (current mode)	I <sub>OUT</sub> = 5A, R3 removed		500		μА
I <sub>OUT</sub>	Output Load Current Range	Thermal limit of R <sub>SENSE</sub>			7	A
I <sub>INQ</sub>	V <sub>IN</sub> Quiescent Current	$V_{IN} = 12V$ , $I_{OUT} = 0A$		65		μА
t <sub>R</sub>	V <sub>MON</sub> step-response time	I <sub>OUT</sub> step from 0A to 5A		5		μs

## **OPERATING PRINCIPLES**

The LT6106 operates by amplifying the voltage drop on a sense resistor placed in series with the power source of a load to be monitored. The sense inputs of the amplifier differentially measure the sense-resistor drop to control an internal variable current source that allows translation of the input information to a level referenced to V–(ground in this demo circuit). The circuit gain is established by the ratio of the output resistor to the input re-

sistor and is essentially as accurate as the resistors used. In DC1240 as shipped, the sense resistor installed is  $20m\Omega$  and the resistor ratio sets the gain to 25V/V, so the nominal output scaling is 500mV per Ampere of load current. Other scalings can be produced by resistor replacement on the demo circuit.

The DC1240 Schematic diagram is shown in Figure 2.



## **QUICK START PROCEDURE**

Demonstration circuit 1240 is easy to set up to evaluate the performance of the LT6106. Refer to Figure 1 for proper measurement equipment setup and follow the procedure below:

1. With power off, connect the power supply positive to IN and the common to GND. This supply should be in the range of 2.7V to 36V. If this supply is not equipped with an accurate current readout, a DMM (set to measure Amperes) may be connected in series with the supply as shown in Figure 1.

**NOTE.** Be sure that the current capacity of the DMM is adequate to handle the intended load current.

- 2. Connect a voltmeter or oscilloscope probe to the MON terminal, with the common connection or ground clip tied to GND.
- **3.** Connect a load to the OUT terminal (positive) and return (negative) to the common of the power supply. The load may be a power resistor, active load instrument, or other circuit of interest.
- **4.** Turn on the power supply.
- Measure an output voltage that corresponds to the load current. V<sub>MON</sub> = 0.5×I<sub>OUT</sub> for the factory installed resistors.

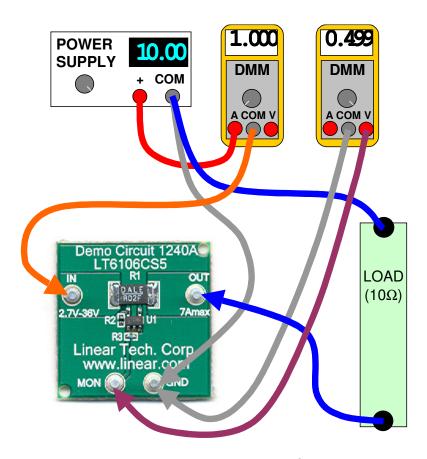


Figure 1. Proper Measurement Equipment Setup

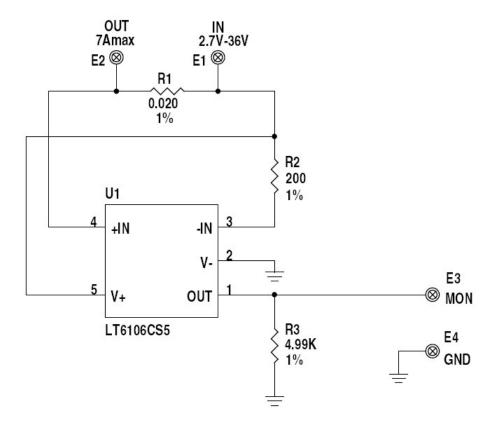


Figure 2. DC1240 Schematic Diagram



### **ПОСТАВКА** ЭЛЕКТРОННЫХ КОМПОНЕНТОВ

Общество с ограниченной ответственностью «МосЧип» ИНН 7719860671 / КПП 771901001 Адрес: 105318, г.Москва, ул.Щербаковская д.3, офис 1107

# Данный компонент на территории Российской Федерации Вы можете приобрести в компании MosChip.

Для оперативного оформления запроса Вам необходимо перейти по данной ссылке:

#### http://moschip.ru/get-element

Вы можете разместить у нас заказ для любого Вашего проекта, будь то серийное производство или разработка единичного прибора.

В нашем ассортименте представлены ведущие мировые производители активных и пассивных электронных компонентов.

Нашей специализацией является поставка электронной компонентной базы двойного назначения, продукции таких производителей как XILINX, Intel (ex.ALTERA), Vicor, Microchip, Texas Instruments, Analog Devices, Mini-Circuits, Amphenol, Glenair.

Сотрудничество с глобальными дистрибьюторами электронных компонентов, предоставляет возможность заказывать и получать с международных складов практически любой перечень компонентов в оптимальные для Вас сроки.

На всех этапах разработки и производства наши партнеры могут получить квалифицированную поддержку опытных инженеров.

Система менеджмента качества компании отвечает требованиям в соответствии с ГОСТ Р ИСО 9001, ГОСТ РВ 0015-002 и ЭС РД 009

#### Офис по работе с юридическими лицами:

105318, г. Москва, ул. Щербаковская д. 3, офис 1107, 1118, ДЦ «Щербаковский»

Телефон: +7 495 668-12-70 (многоканальный)

Факс: +7 495 668-12-70 (доб.304)

E-mail: info@moschip.ru

Skype отдела продаж:

moschip.ru moschip.ru\_6 moschip.ru 4 moschip.ru 9