

This circuit is used to control the water pump for watering plant and flower automatically. It measures the soil moisture in 3 levels with delay time.

Technical data

- Power supply : 12VDC.
- Electric current consumption : 46 mA. (working), 25 mA. (standby)
- With 3 LEDs for showing 3 different levels of soil moisture.
- Delay time : 4-240 seconds
- Maximum load : 1A.
- IC board dimension : 2.31 in x 1.29 in.

How does it work

The circuit diagram is shown in Figure 1. Its operation is based theoretically on the soil moisture content which is a conductor of electricity. The voltage that flow from the soil via PROBE to the circuit will be compiled by IC1/2, IC1/3 and IC1/4. The result of compilation presents the soil moisture levels, which are indicated by LED1-3.

PCB assembly

The assembly of components is shown in Fig. 2. For good looking and easy assembly, the shorter components should be first installed - starting with low resistant components and then the higher. An important thing is that diodes, electrolyte capacitors, and transistors shall be carefully assembled before mounting them onto their right anode/cathode of the IC board otherwise it might cause damage to the components or the circuit. Configuration of the anode and the cathode is shown in Fig 3. Use the soldering iron/gun not exceeding 40 watts and the solder of tin-lead 60:40 with flux within. Recheck the correctness of installation after soldering. In case of wrong position, just use lead absorber or lead extractor wire to avoid probable damage to the IC.

Testing

When the assembly is complete.

1. Adjust VR1 and VR2 to the left. Move switch SW1 to position one.
2. Supply 12VDC to the circuit. LED4 and LED5 will be lighted on and relay will start working.
3. Connect into PROBE position. LED1-3 will be lighted on. Then LED4 will be off and relay will stop working.

Usage

1. Connect the wire from PROBE positions and insert the metal probe into the soil.
2. Supply power into the circuit and observe at LED1-3, if the soil is dry, LED1-3 will not be on. Then the water pump will start working according to the set-time and LED1-3 will be lighted on.

NOTE: in case of dry soil but LED1-3 is on, adjust VR2 until LED1-3 is off.

Controlling points

1. VR1 is used for controlling the time of watering.
2. VR2 is used for adjusting the watering according to the soil conditions.
3. SW1 is used for setting the moisture level when watering, which can be adjusted into 3 different levels:-
 - Level 1 for lowest moisture.
 - Level 2 for medium moisture.
 - Level 3 for highest moisture.
4. SW2 is used for stopping the relay.
5. LED1-3 are soil moisture level indicators:-
 - LED1 for lowest.
 - LED2 for medium.
 - LED3 for highest.

Figure 1. The Automatic Sprinkler Control Circuit



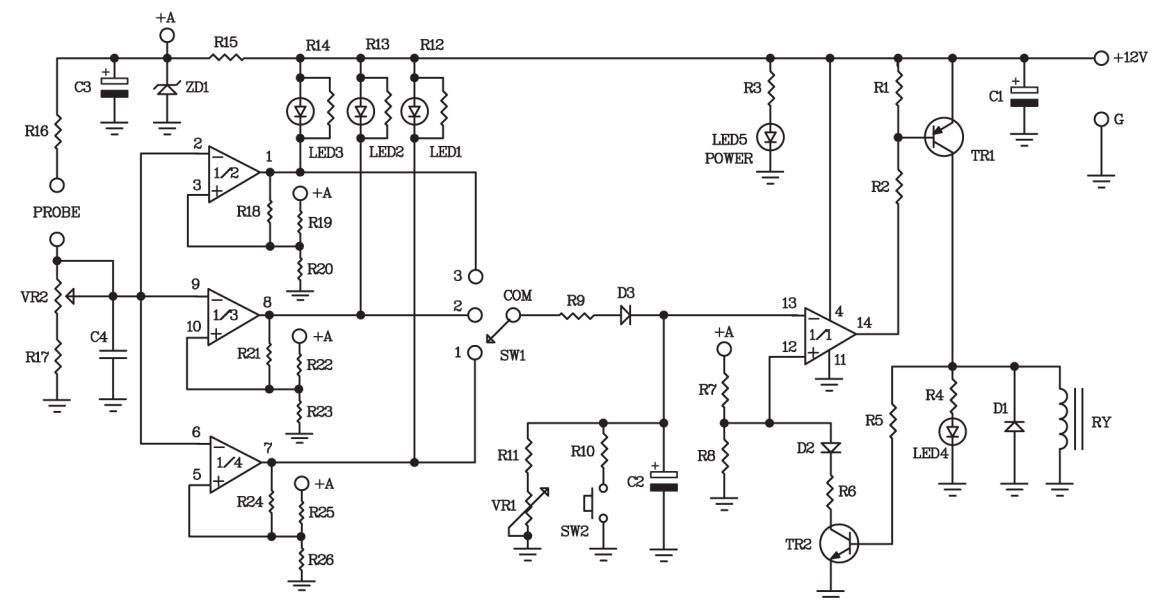


Figure 2. Circuit Assembling

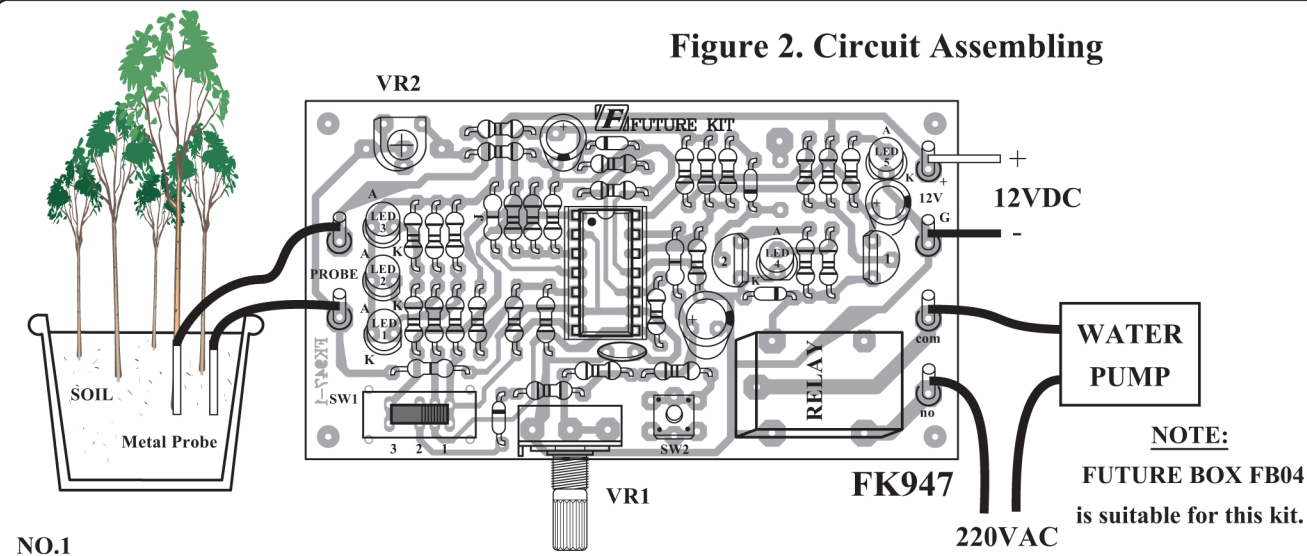

NOTE:
FUTURE BOX FB04
is suitable for this kit.

Figure 3. Installing the Components

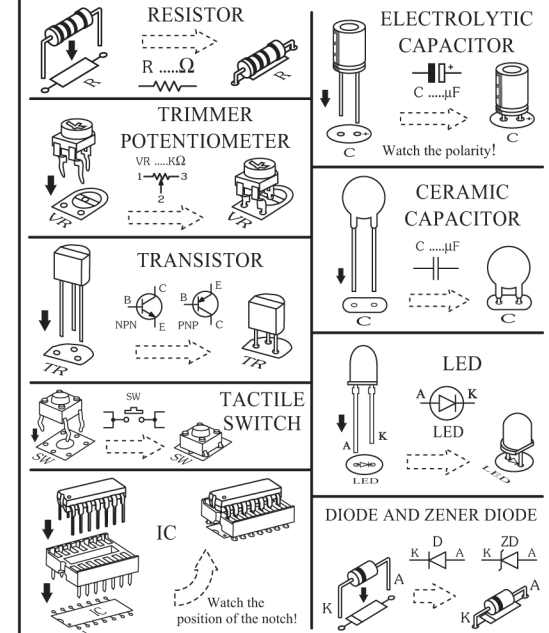

Данный компонент на территории Российской Федерации

Вы можете приобрести в компании MosChip.

Для оперативного оформления запроса Вам необходимо перейти по данной ссылке:

<http://moschip.ru/get-element>

Вы можете разместить у нас заказ для любого Вашего проекта, будь то серийное производство или разработка единичного прибора.

В нашем ассортименте представлены ведущие мировые производители активных и пассивных электронных компонентов.

Нашей специализацией является поставка электронной компонентной базы двойного назначения, продукции таких производителей как XILINX, Intel (ex.ALTERA), Vicor, Microchip, Texas Instruments, Analog Devices, Mini-Circuits, Amphenol, Glenair.

Сотрудничество с глобальными дистрибьюторами электронных компонентов, предоставляет возможность заказывать и получать с международных складов практически любой перечень компонентов в оптимальные для Вас сроки.

На всех этапах разработки и производства наши партнеры могут получить квалифицированную поддержку опытных инженеров.

Система менеджмента качества компании отвечает требованиям в соответствии с ГОСТ Р ИСО 9001, ГОСТ РВ 0015-002 и ЭС РД 009

Офис по работе с юридическими лицами:

105318, г.Москва, ул.Щербаковская д.3, офис 1107, 1118, ДЦ «Щербаковский»

Телефон: +7 495 668-12-70 (многоканальный)

Факс: +7 495 668-12-70 (доб.304)

E-mail: info@moschip.ru

Skype отдела продаж:

moschip.ru

moschip.ru_4

moschip.ru_6

moschip.ru_9