

## **Digital Counter**

H7CR

Compact 1/16 DIN Counters with Easy-to-Use Functions, Four- or Six-Digit LCD Displays

- Designed for easy operation
- High-speed response —5 K counts per second
- Prescale function displays in units of actual physical parameters — length, volume, etc. (except A/SA types)
- H7CR-C and -SC provide large/ small discrimination mode ideal for positioning and production control
- Easy-to-read backlit LCD display
- On-line change of set value
- 4-level key protect
- H7CR-S short 64 mm (2.52 in) body





## Ordering Information

When placing your order, specify the supply voltage after the part number. For example, H7CR-B 100 to 240 VAC.

#### **■ ECONOMY COUNTERS**

Number of presets	One	One		
Display type	6 digit LCD, not backlit	6 digit LCD, not backlit		
Input type	No-voltage Voltage			
Contact output	H7CR-A H7CR-AV			
Transistor output	H7CR-AS	H7CR-AVS		
Sensor power supply	Not available Not available			
Counter supply voltages	100 to 240 VAC, 50/60 Hz or 24 VAC			

#### **■ STANDARD COUNTERS**

Number of presets	S	One	One		ndent)
Display type		6 digit LCD, bac	cklit _	6 digit LCD, backl	it
Input type		No-voltage	Voltage	tage No-voltage Voltage	
12 VDC sensor supply voltage	Contact output	H7CR-B	H7CR-BV	H7CR-BW	H7CR-BWV
	Transistor output	H7CR-BS	H7CR-BVS	H7CR-BWS	H7CR-BWVS
24 VDC sensor	Contact output	H7CR-BG	H7CR-BVG	H7CR-BWG	H7CR-BWVG
supply voltage	Transistor output	H7CR-BSG	H7CR-BVSG	H7CR-BWSG	H7CR-BWVSG
Counter supply voltages 100 to 240 VAC, 50/60 Hz or 24 VAC/12 to 24 VDC					

Number of prese	ets	One	One		Two (Non-independent)		
Display type		4-digit LCD, ba	4-digit LCD, backlit		klit		
Input type		No-voltage	No-voltage		No-voltage		
Sensor supply v	Sensor supply voltage		24 VDC	12 VDC	24 VDC		
Output type Contact output		H7CR-B4	H7CR-B4G	H7CR-B4W	H7CR-B4WG		
Counter supply	voltage	100 to 240 VAC, 50/60 Hz					

#### ■ REVERSIBLE +/- RANGE COUNTERS

Number of presets	nber of presets One		Two (Non-independent)		
Display type		6-digit LCD, backl	6-digit LCD, backlit		t
Input type		No-voltage	No-voltage Voltage Voltage Voltage		Voltage
12 VDC sensor supply voltage	Contact output	H7CR-C	H7CR-CV	H7CR-CW	H7CR-CWV
	Transistor output	H7CR-CS	H7CR-CVS	H7CR-CWS	H7CR-CWVS
24 VDC sensor	Contact output	H7CR-CG	H7CR-CVG	H7CR-CWG	H7CR-CWVG
supply voltage Transistor output		H7CR-CSG	H7CR-CVSG	H7CR-CWSG	H7CR-CWVSG
Counter supply voltages		100 to 240 VAC, 50/60 Hz or 24 VAC/12 to 24 VDC			

#### **■ SHORT BODY COUNTERS**

Model	Economy	Standard			Reversible +/- Range	
Number of presets	One	One		Two	One	Two
Display type	6-digit, not backlit	6-digit, backlit	4-digit, backlit	6-digit, backlit	6-digit backlit	
Input type	No-voltage	No-voltage No-voltage				
Contact output	H7CR-SAL	H7CR-SBL	H7CR-SB4L	_	H7CR-SCL	_
Transistor	H7CR-SASL	H7CR-SBSL	_	H7CR-SBWSL	H7CR-SCSL	H7CR-SCWSL
Counter supply voltage	12 to 24 VDC					

#### ■ SOCKET-MOUNT COUNTERS

Number of presets	One			
Display type	6-digit LCD, backlit	4-digit LCD, backlit	6-digit LCD, backlit	
Input type	Power supply reset type		Memory backup type	
Contact output	H7CR-8	H7CR-84*	H7CR-11	
Transistor	H7CR-8S	_	H7CR-11S	
Counter supply voltage	100 to 240 VAC, 50/60 Hz or 24 VAC/12 to 24 VDC			

<sup>\*</sup> Available with 100 to 240 VAC supply voltage only.

#### **■** ACCESSORIES

Description	on		Part number	
Sockets	For H7CR-8	Bottom surface or track mounting, top screws	P2CF-08	
	and H7CR-8S	Back mounting, for use with Y92F-30 mounting adapter, bottom screw terminals	P3G-08	
	For H7CR-11	Bottom surface or track mounting, top screws	P2CF-11	
	and H7CR-11S Back mounting, for use with Y92F-30 mounting adapter, bottom screw terminals			
Soft cove	r with two mounting	clips for front panel protection	Y92A-48F1	
Shock pr	evention terminal co	ver protects wiring connections	Y92A-48T	
Mounting	track	DIN rail, 50 cm (1.64 ft) length	PFP-50N	
for P2CF	for P2CF sockets DIN rail, 1 m (3.28 ft) length		PFP-100N	
	End plate		PFP-M	
Panel mo	ounting adapter*	For use with H7CR-8/-11 digital counters	Y92F-30	

<sup>\*</sup> Panel mounting adapter is included with H7CR-A/-B/-C digital counters. Order separately for use with H7CR-8/-11 counters.

#### **■ REPLACEMENT PARTS**

Description	Part number
Panel mounting adapter*	Y92F-30

<sup>\*</sup> Panel mounting adapter is included with H7CR-A/-B/-C digital counters.

## Specifications\_\_\_\_\_

### **■ GENERAL CAPABILITIES**

Model	H7CR-A Series	H7CR-B Series	H7CR-C Series		
Classification	Preset counter (economy)	Preset counter (standard)	Preset counter (+/- range)		
Mounting	Flush mounting				
External connections	Screw terminals				
Degree of protection	IEC: IP54 (panel surface)				
Output modes	N, F	N, F, C, R, K, P, Q, A	K, D, L, H		
Input modes	Up, down, reversible A (command input inputs), reversible C (phase difference i	ts), reversible B (individual nputs)	Reversible A (command inputs), reversible B (individual inputs), reversible C (phase difference inputs)		
Reset system	External and manual resets	External, manual, and automatic (internal according to C, R, P, and Q mode operation) resets	External and manual resets		
		External: closing contacts 6 & 7 Manual: pressing reset button (certain models only) Automatic: available only in modes C, R, P, and Q	External: closing contacts 6 & 7 Manual: pressing reset button (certain models only)		
Scaling function	None	0.001 to 99.999 or 9.999	0.001 to 99.999		
Decimal point adjustments	None	Rightmost 3 digits			
Sensor power supply	None	12 or 24 VDC			
Input signals	Count, reset	Count, reset, key protect			
Input method	No-voltage input: Via opening and closi Voltage input: Via high and low signal v Key protect (standard and +/-range cou	oltage			
Control output	SPST-NO contact or transistor (NPN open collector) output	Single preset types: One SPST-NO contact or trans	istor (NPN open collector) output		
		Double preset types: Two SPST-NO contacts or transistor (NPN open collector) output			
Displays	7-segment LCD present value and pres	et displays; LCD character indicato	ors for outputs, power, and modes		
Display type	LCD; 8mm (0.32 in.) H Present Value, 4 mm (0.16 in.) H Set Value	Backlit LCD; 8 mm (0.24 in.) H Present Value, 4 mm (0.16 in.) H Set Value			
Digits	6 digits, 0 to 999,999	6 or 4 digits; 0 to 999,999 6 digits positive/5 digits negative, -99,999 to 999,999			
	Backup time for power interruption: Approx. 10 years at 20°C (68°F); non-replaceable lithium battery				

### ■ H7CR-S, -8, -11

Model	H7CR-SA	H7CR-SB□□	H7CR-SC	H7CR-8□	H7CR-11
Classification	Preset counter (economy)	Preset counter (standard)	Preset counter (+/– range)	Preset counter (standard)	Preset counter (standard)
Mounting	Flush mounting	,		Flush or surface mor	unting
External connections	Screw terminals			Socket	
Degree of protection	IEC: IP54 (panel su	urface)			
Output modes	N, F	N, F, C, R, K, P, Q, A	K, D, L, H N, F, C, R, K, P, Q, A		4
Input modes	Up, Down & Rever (command inputs), Reversible B (individual inputs), Reversible C (Phase difference i		Reversible A (command inputs), Reversible B (individual inputs), Reversible C (phase difference inputs)  Reversible A (command inputs), Reversible B (individual inputs), Reversible C (phase difference inputs)		
Reset system	External and manual resets	External, manual, automatic (inter- nal according to C, R, P, and Q operation) resets	External and manual resets	External, manual, power supply, and automatic (internal according to C, R, P, and Q operation) resets	External, manual, automatic (internal according to C, R, P, and Q operation) resets
Scaling function	None	0.001 to 99.999 fo	or 6-digit, 0.001 to 9.9	99 for 4-digit	
Decimal point adjustments	None	Rightmost 3 digits	3		
Input signals	Count, reset	Count, reset, key	protect	Count, reset	Count, reset, and key protect
Input method	No-voltage input: V	ia opening and clos	sing of contact		1
Control output	SPST-NO contact or transistor (NPN open collector) output	Single preset type SPST-NO contact open collector) ou Double preset typ DPST-NO contact (NPN open collect	t or transistor (NPN utput es: t or transistor	SPST-NO contact or transistor (NPN open collector) output	SPDT-NO contact or transistor (NPN open collector) output
Displays	7-segment LCD pre	esent value and pre	eset displays; LCD cha	aracter indicators for o	utputs, power, and modes
Display type	Backlit LCD				
Digits	6 digits (0 to 999,999)	6 or 4 digits; 0 to 999,999 or 0 to 9,999	6 digits positive and 5 digits nega- tive (-99,999 to 999,999)	6 or 4 digits; 0 to 999,999 or 0 to 9,999	6 digits (0 to 999,999)
Memory backup	Backup time for po	wer interruption: Ap	prox. 10 years at 20°	C (68°F); non-replace	able lithium battery

### ■ OUTPUT MODES SUMMARY

Output	Description		Applicable
mode	Single preset counter	Double preset counter	counter series
N	Sustained output	Sustained output 2, selectable sustained or one-shot output 1	H7CR-A, -B, -SA, -SB□, -8□, -11
F	Sustained output, overrun display	Sustained output 2, selectable sustained or one-shot output 1	
С	One-shot output	One-shot output 2, selectable one-shot or sustained output 1	
R	One-shot output	One-shot output 2, selectable one-shot or sustained output 1	
K	One-shot output, overrun display	One-shot output 2, selectable one-shot or sustained output 1	
Р	One-shot output	One-shot output 2, selectable one-shot or sustained output 1	
Q	One-shot output, overrun display	One-shot output 2, selectable one-shot or sustained output 1	
Α	One-shot output	One-shot output 2, selectable one-shot or sustained output 1	
D	Instantaneous output, count value = preset	Instantaneous outputs when count value = preset	H7CR-C, -SC
L	Sustained output, count value ≥ preset	Sustained output 2, count value ≥ preset, sustained output 1, count value ≤ preset	
Н	Sustained output, count value ≥ preset	Sustained outputs when count values ≥ preset	
К	One-shot output, count value = preset	One-shot outputs, count value = preset	

### **■** RATINGS

Model	H7CR-A Series		H7C	R-B Series	H7CR-C Series	
Supply voltage	or 24 VAC, 50/60 Hz	100 to 240 VAC, 50/60 Hz or 24 VAC, 50/60 Hz (permissible ripple: 20% max.)		100 to 240 VAC, 50/60 Hz or 24 VAC/12 to 24 VDC (permissible ripple: 20% max.)		
Operating voltage range	85% to 110% of rated	d voltage				
Power consumption	Approx. 1.7 VA at 50 240 VAC; 0.6 W at 24		Appr	ox. 6.6 VA at 50 H	z, 240 VAC; 3.2 W at 24 VDC*	
Max. counting speed	30 cps, or 1 or 5 kcps	s (same setting CF	21 and	CP2)		
Reset	Min. pulse width for external reset: 20 ms	, manual reset	Min. reset	•	ernal reset: 1 or 20 ms, manual	
Key protect	Not applicable		Resp	onse time: 1 seco	nd	
One-shot durations	10, 50, 100, 200, or 5	10, 50, 100, 200, or 500 ms			ms (separate settings for presets 1	
Inputs (count, reset)	No-voltage inputs	ON impedance: ON residual vol OFF impedance	tage	$1$ k $\Omega$ max. (approx 2 V max.; 1 V max 100 k $\Omega$ min.	2 mA when 0 kΩ) x. for H7CR-⊟4	
	Voltage inputs	High level: Low level: Input resistance	e:	4.5 to 30 VDC 0 to 2 VDC Approx. 4.7 kΩ		
Key protect input	Not applicable		No-v	oltage input	ON impedance: $1 \text{ k}\Omega$ max. ON residual voltage: $1 \text{ V}$ max. OFF impedance: $100 \text{ k}\Omega$ min.	
Control output	Contacts: 3 A, 250 V	, 0			tage 2 V max. (approx. 1 V)	
Sensor power supply	Not applicable		1	nA, 12 VDC±10 (5 A, 24 VDC±10 (5%	'''	
Ambient operating temperature	-10° to 55°C with no i (14° to 131°F)	icing				
Storage temperature	-25° to 65°C (-13° to	149°F) with no icir	ng			
Ambient operating humidity	35% to 85% RH					

 $<sup>^{\</sup>star}$ Upon power application, a surge current of approx. 5 A at 240 VAC and 8 A at 24 VAC or 24 VDC flows for 2 ms.

### H7CR-S, -8, -11

Model	H7CR-SA	H7CR-SB□	H7CR-SC	H7CR-8□	H7CR-11
Туре	Economy	Standard	+/- range	Socket mount	Socket mount
Supply voltage	12 to 24 VDC (20% max. permis	sible ripple)		100 to 240 VAC, 50/60 Hz or 24 VAC/12 to 24 VDC (20% max. permissible ripple)	
Operating voltage range	85% to 110% of ra	ated voltage			
Power consumption	Approx. 1.3 W at 24 VDC		Approx. 2.8 VA at 50 Hz, 240 VAC (approx. 5 A (24 VDC/240 VAC) surge current for 2 ms upon power application) Approx. 1.3 W at 24 VDC (approx. 8 A (24 VDC/24 VAC) surge current for 2 ms upon power application)		
Max. counting speed	30 cps, or 1 or 5 k	cps (same settir	ng CP1 and CP2)		
Reset	Min. pulse width for external reset: 20 ms		h for external reset:	Min. pulse width for external reset: 1 or 20 ms, power reset: 0.5 s	Min. pulse width for external reset: 1 or 20 ms
Key protect	Not applicable	Response time: 1 second			
One-shot durations	10, 50, 100, 200, and 500 ms	10, 50, 100, 200, and 500 ms (separate settings for presets 1 and 2)		10, 50, 100, 200, and 500 ms	
Inputs (count, reset)	No-voltage inputs	ON impedance: $1k\Omega$ max. (approx. 2 mA when $0$ $k\Omega$ ) ON residual voltage: $2$ V max. OFF impedance $100$ $k\Omega$ min.			
Key protect input	Not applicable	No-voltage input ON impedance: $1 \text{ k}\Omega$ max. (approx. 2 mA when $0 \text{ k}\Omega$ ) ON residual voltage: $1 \text{ V}$ max. OFF impedance: $100 \text{ k}\Omega$ min.		Not applicable	No voltage input ON impedance: $1 \text{ k}\Omega$ max. (approx. $2 \text{ mA}$ when $0 \text{ k}\Omega$ ) ON residual voltage: $1 \text{ V}$ max. OFF impedance: $100 \text{ k}\Omega$ min.
Control output	Contacts: 3 A, 250 VAC; general use (p.f. = 1) Transistor: Open collector; 100 mA at 30 VDC max. residual voltage 2 V max. (approx. 1 V)				
Ambient operating temperature	-10° to 55°C (14°	° to 55°C (14° to 131°F) with no icing			
Storage temperature	-25° to 65°C (-13°	o 65°C (-13° to 149°F) with no icing			
Ambient operating humidity	35% to 85% RH	6 RH			

### Approved by the following standards:

UL

CSA

SEV

CE (EMC)

#### **■ CHARACTERISTICS**

Insulation resistance	100 M $\Omega$ min. (at 500 VDC) (between current-carrying terminal and exposed non-current-carrying metal parts, and between non-continuous contacts)	
Dielectric strength	2,000 VAC, 50/60 Hz for 1 min (between current-carrying terminal and exposed non-current-carrying metal parts)	
Impulse voltage	Between power terminals: 1 kV for 24 or 12-24 VDC power supply, 3 kV for others Between current-carrying terminal and exposed non-current-carrying metal parts: 1.5kV for 24 or 12-24 VDC power supply, 4.5 kV for others	
Noise immunity	±2 kV between power terminals, ±600 V between input terminals (square-wave noise via noise simulator; pulse width: 1μs; 1-ns rise)	
Static immunity	Malfunction: 8 kV; destruction: 15 kV	
Vibration	Mechanical durability: 10 to 55 Hz with 0.75-mm (0.03 in) single amplitude/55 to 150 Hz with 10 G 32 min each in three directions  Malfunction durability: 10 to 55 Hz with 0.5-mm (0.02 in) single amplitude/55 to 150 Hz with 10 G 32 min each in three directions	
Shock	Mechanical durability: 30 G Malfunction durability: 10 G	
Life	Mechanical: 10 million operations min. Electrical: 100,000 operations min. (at 3 A, 250 VAC general in use (p.f. = 0.7 to 0.8)	
Weight	Economical counters: AC types, approx. 230 g (8.1 oz.); DC types, approx. 150 g (5.3 oz.) Standard and +/- range counters: Approx. 170 g ( 6 oz.)	

## Input/Output Functions\_\_\_

#### **■ INPUTS**

CP1/CP2 (count inputs)	<ul> <li>Count signal inputs.</li> <li>Up, Down, and Reversible (command, individual, or phase difference) inputs accepted.</li> <li>Maximum counting speed: 5 kcps.</li> </ul>
Reset	<ul> <li>Present value reset (to zero in Up or Up/Down modes, to preset with 1-stage models in Down mode and to preset 2 for 2-stage models in Down mode).</li> <li>Count inputs are not acknowledged while reset input is ON.</li> <li>Reset indicator lit while reset input is ON.</li> </ul>
Key protect	<ul> <li>Reset, Right Shift and Up keys are inoperative while key protect input is ON.</li> <li>Although Display key remains effective, only monitoring of settings is possible.</li> <li>Keys protected indicator lit while key protect input is ON.</li> <li>Effective when power supply is turned off.</li> </ul>

#### Count Input vs. Reset Input

When the RESET input is ON or the RESET key input is ON, the count input is prohibited and the present value is reset. However, when the key protect input is ON and the key protect level is KP-2 or KP-4, no RESET key input is accepted.

#### **Reset Time**

Set to 1 ms if high-speed resetting is necessary. Set the reset time to 20 ms if you need to prevent false signals caused by electrical noise from affecting the counter.


#### **■** OUTPUTS

	Outputs 1 and 2	Outputs made according to designated output mode when corresponding preset is reached.
L		

## **Using Prescale Function**


The prescale function converts the number of input counts into a user-selectable value. The example below shows a system that uses 250 encoder pulses to determine when an object has advanced 0.5 meters. Here is how to convert pulses into a unit of measure appropriate for your application:


- 1. Set the decimal point between the third and fourth digits.
- Set a prescale value of 0.002. This is calculated by dividing the unit of measure (0.5) by the number of pulse counts (250).

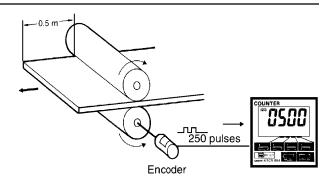

## Timing Charts\_

#### **■ INPUT MODES**

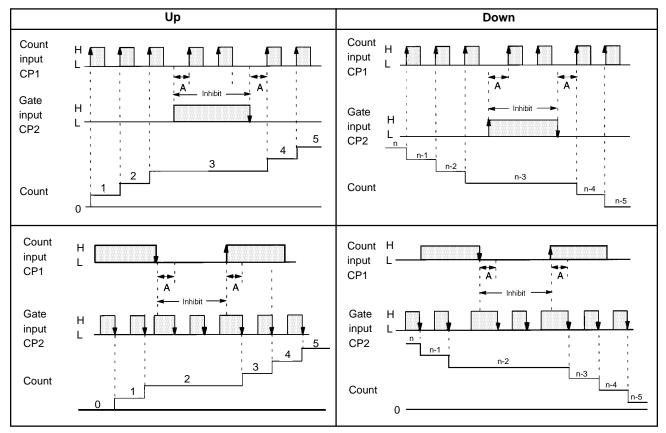


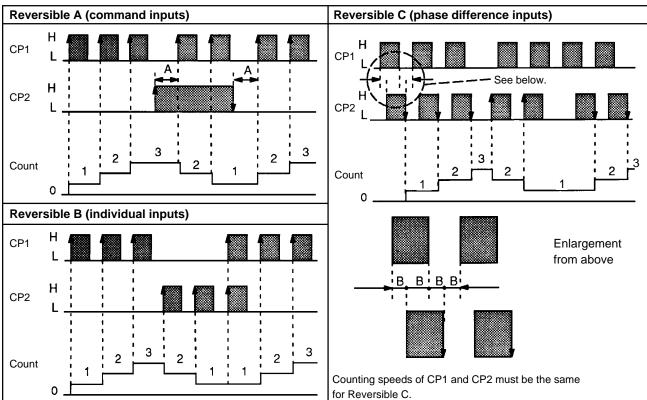

- A: Minimum signal width
- B: Must be at least 1/2 of minimum signal width. Signals may not be counted if the minimums for A and B are not met.

#### ■ H7CR-A AND H7CR-B COUNTER OUTPUT OPERATIONS


Bold line represents present value; Output 2 operation applies for single-preset models. H7CR-A models have only Mode N and F.

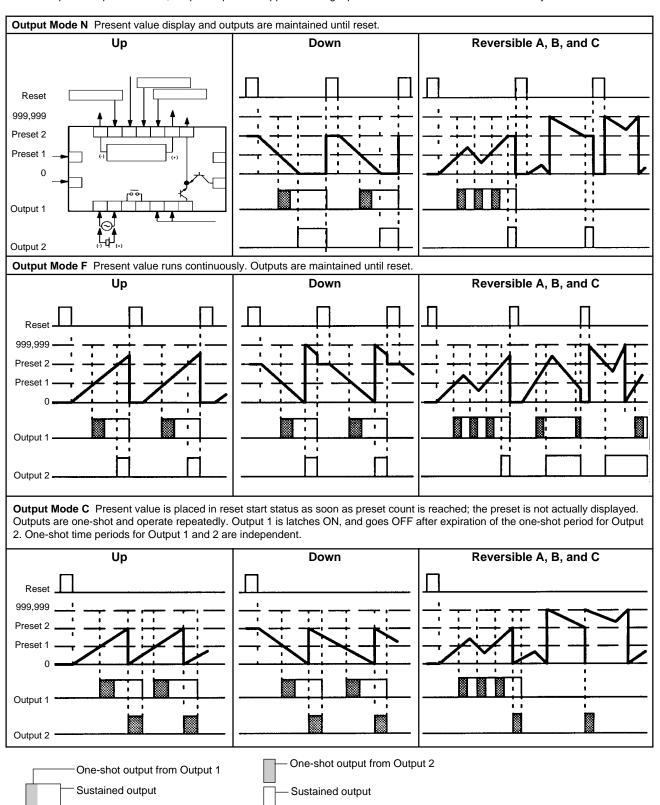


#### **Standard Counter Output Operation (Continued)**

(Bold line represents present value; Output 2 operation applies for single-preset models.)


**Output Mode R** Present value display returns to reset start status after expiration of one-shot time period. Outputs are one-shot and operate repeatedly. Output 1 latches ON at preset 1, and goes OFF after expiration of the one-shot period for Output 2. One-shot time periods for Output 1 and 2 are independent.

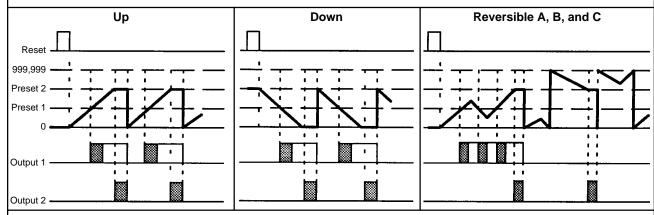

**Output Mode K** Present value runs continuously. Output 1 latches ON at preset 1, and goes OFF after expiration of the one-shot period for Output 2. One-shot time periods for Output 1 and 2 are independent.

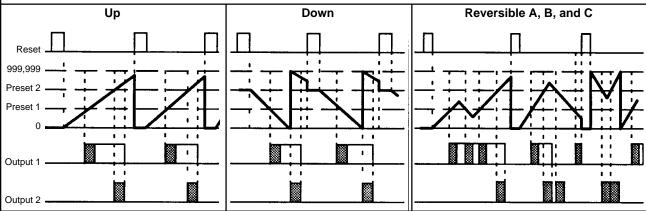


**Output Mode P** Present value display does not change during one-shot time period, but reset start status returns as soon as preset count is reached. Outputs are one-shot and operate repeatedly. Output 1 latches ON at preset 1, and goes OFF after expiration of the one-shot period for Output 2. One-shot time periods for Output 1 and 2 are independent.

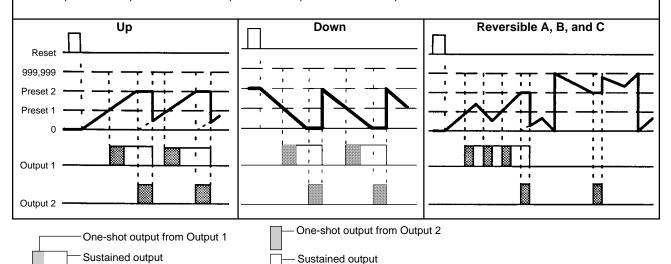

#### **Standard Counter Output Operation (Continued)**

(Bold line represents present value; Output 2 operation applies for single-preset models.)

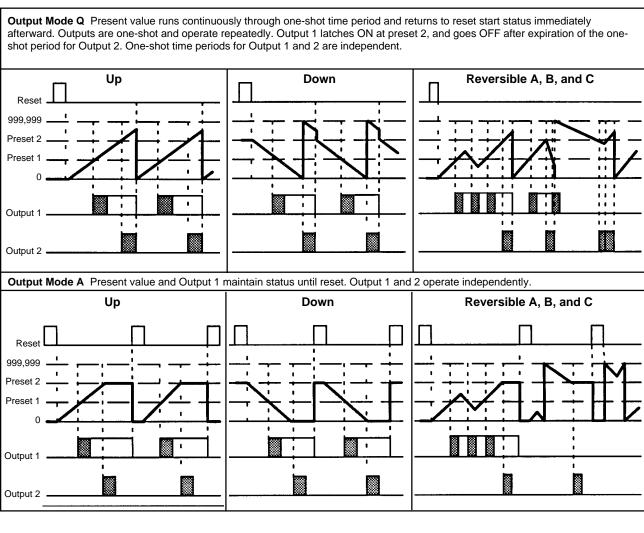


One-shot output from Output 1	One-shot output from Output 2
Sustained output	— Sustained output


#### ■ H7CR-C REVERSIBLE +/- RANGE COUNTER OUTPUT OPERATION

(Bold line represents present value; Output 2 operation applies for single preset models.)


**Output Mode K** Present value increments and decrements within displayable range. Output 1 goes ON for one-shot whenever present value is equal to preset 1; Output 2 goes ON for one-shot whenever present value is equal to preset 2.

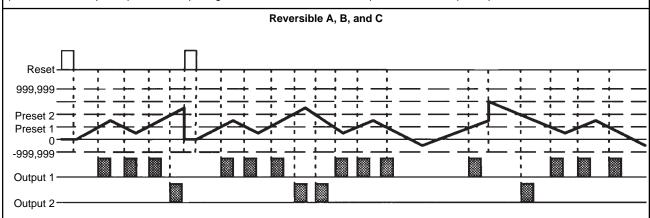

**Output Mode D** Present value increments and decrements within displayable range. Output 1 is ON whenever present value is equal to preset 1; Output 2 is ON whenever present value is equal to preset 2.

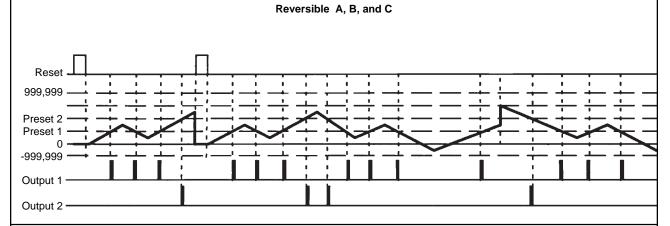

**Output Mode L** Present value increments and decrements within displayable range. Output 1 is ON whenever present value is less than or equal to preset 1; Output 2 is ON whenever present value is greater than or equal to preset 2.

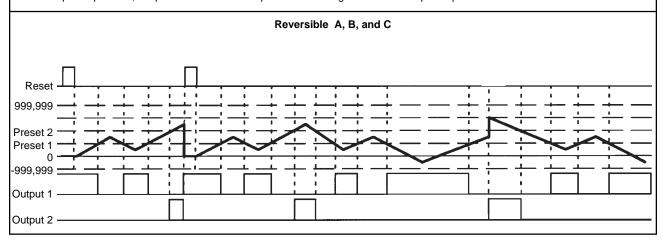





#### +/- Range Counter Output Operation (Continued)

(Bold line represents present value; Output 2 operation applies for single preset models.)

**Output Mode H** Present value increments and decrements within displayable range. Output 1 is ON whenever present value is greater than or equal to preset 1; Output 2 is ON whenever present value is greater than or equal to preset 2.

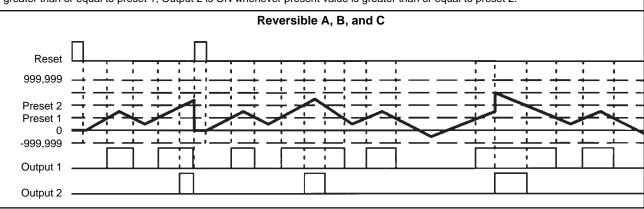

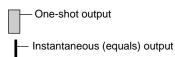

— Sustained output/level input

One-shot outputs can be set to 10, 50, 100, 200 or 500 ms.

#### Notes

Counting inputs are not acknowledged while the reset input is ON.

The compensation input is valid only when the present value is being incremented.

One-shot outputs, when ON, are turned OFF when the reset input goes ON, but are left ON for the one-shot time period when the compensation inputs goes ON. One-shot outputs, when ON, are reset and the one-shot output is restarted if a preset designating the output is reached.

M3.5 terminal


(1.76)

## Dimensions.

Unit: mm (inch)


#### **■** COUNTERS




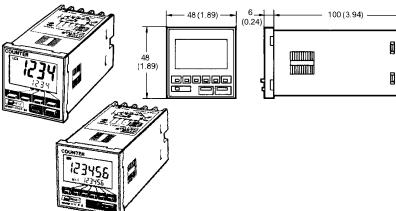


# 


H7CR-S□ Short Body

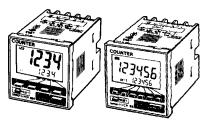

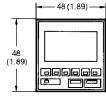


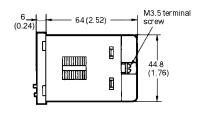


#### H7CR-8□, H7CR-11 Socket-Mount Types

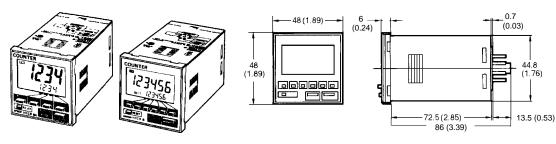

Track and surface mounting height

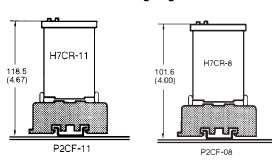


Panel mounting depth

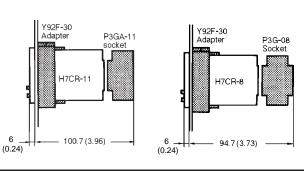


#### **■ SOCKETS**

#### 11-Pin Sockets for H7CR-11□

P2CF-11 Bottom surface or track mounting socket

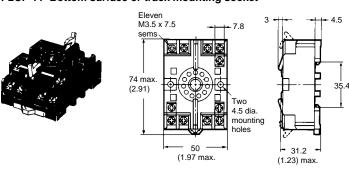

**Terminal arrangement** 

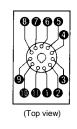

**Mounting holes** 



P3GA-11 Back mounting socket








**Terminal arrangement** 




8-Pin Sockets for H7CR-8□

#### P2CF-08 Bottom surface or track mounting socket

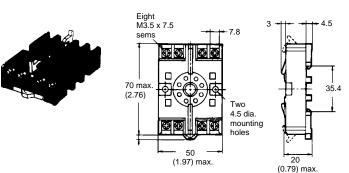

Terminal arrangement

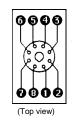


**Mounting holes** 





#### **SOCKETS (Continued)**


P3G-08 Back mounting socket



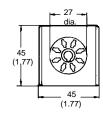

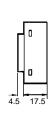

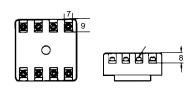


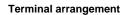




#### **■ MOUNTING TRACK AND ACCESSORIES**

#### PFP-50N, PFP-100N DIN Rail Track

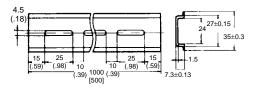



## 50 (1.97)L10.

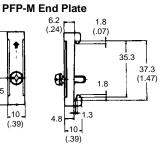

#### Y92A-48F1 Soft Plastic Cover


Two mounting clips help the soft plastic cover Y92A-48F1 fit snugly over the front of the timer to protect against dirt and water. Timer settings can be changed when the cover is on. The cover is intended for use in areas where unusual service conditions do not exist.

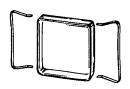


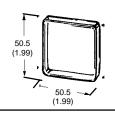

#### Y92A-48T Terminal Cover

The terminal cover protects wiring connections on the Standard and Short Body models.

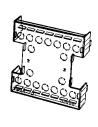

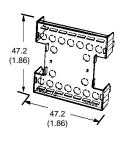


#### **■ PANEL MOUNTING ADAPTER Y92F-30**


Panel mounting adapter Y92F-30 is supplied with each counter. Installation instructions are on the next page.

#### H7CR-A, H7CR-B and H7CR-C





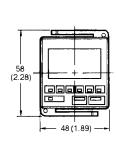


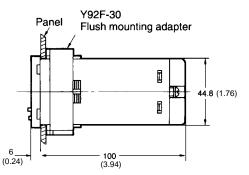


#### H7CR-S







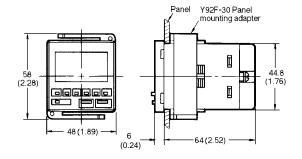

#### H7CR-8□, H7CR-11

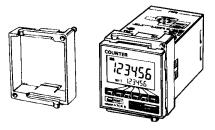

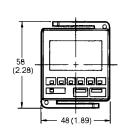


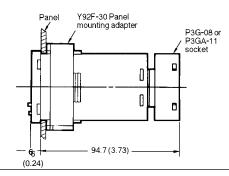

#### **Panel Mounting H7CR Counters**


Insert the counter through the panel cutout. Push the Y92F-30 adapter from the rear of the counter as far forward toward the panel as possible. Then, tighten the two retaining screws. To release the adapter, lift the tab at the rear of the adapter.

Several counters may be mounted close together using Y92F-30 adapter as shown here. When mounting two or more counters in a vertical line, arrange the adapters so that their molded tabs are positioned on the right and left sides. When mounting two or more counters in a horizontal line, arrange the adapters so that their molded tabs are positioned on the top and bottom sides.

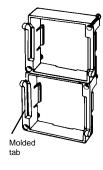




Panel cutout for side-by-side mounting of two counters

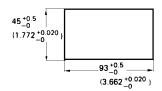


## Connections

#### ■ H7CR-□A SERIES (ECONOMY)

#### **Single Preset Contact Output**

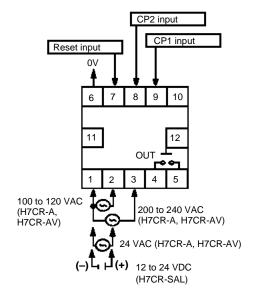


#### Single Preset Transistor (NPN) Output

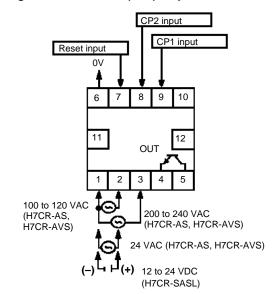

#### ■ H7CR-□B (STANDARD) AND H7CR□-C (REVERSIBLE +/-) SERIES


#### **Single Preset Contact Output**

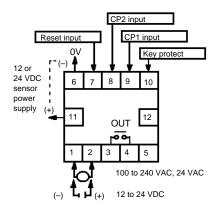

Applicable models include the following:

H7CR-B H7CR-BG H7CR-SBL, -SB4L H7CR-BV H7CR-BVG H7CR-SCL H7CR-C H7CR-CG H7CR-B4 H7CR-CV H7CR-CVG H7CR-B4G


#### **Double Preset Contact Output**

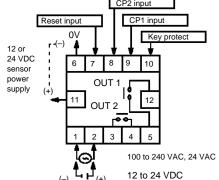

Applicable models include the following:

H7CR-BW H7CR-BWG H7CR-B4W H7CR-BWV H7CR-BWVG H7CR-B4WG H7CR-CW H7CR-CWG H7CR-CWV H7CR-CWVG


#### Single Preset Transistor (NPN) Output

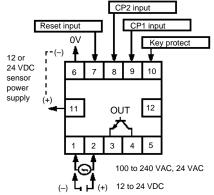

Applicable models include the following:

H7CR-BS H7CR-BSG H7CR-SBSL H7CR-BVS H7CR-BVSG H7CR-SCSL H7CR-CS H7CR-CSG H7CR-CVS H7CR-CVSG

### **Double Preset Transistor (NPN) Output**

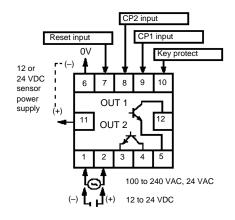


Applicable models include the following:


H7CR-BWS H7CR-BWSG H7CR-SBWSL H7CR-BWVS H7CR-BWVSG H7CR-SCWSL H7CR-CWS H7CR-CWSG H7CR-CWVS H7CR-CWVSG

### ■ H7CR-8, H7CR-11 SOCKET-MOUNT STANDARD TYPES

#### Single Preset H7CR-8, H7CR-84, H7CR-8S

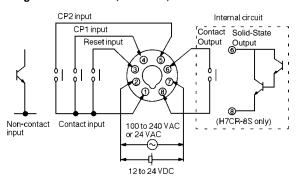

#### Single Preset with Memory Backup H7CR-11, H7CR-11S

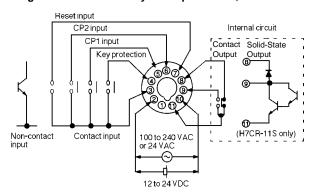


#### **■** CONNECTIONS


The inputs of the H7CR are non-voltage (short circuit or open) inputs and voltage inputs. (Non-voltage inputs only H7CR-S, -8 and -11.)

#### Non-voltage inputs


#### **Solid-State Input (NPN transistor)**

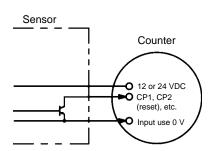

## Solid-State Input (NPN output sensor powered by built-in DC power source)

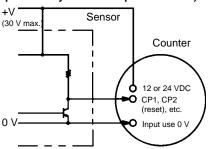


#### **Contact Input**

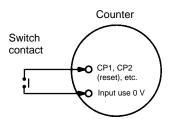


Input signal	Ratings
Non-contact input	High level when transistor is ON Residual voltage: 2 V max. Impedance when ON: 1 $k\Omega$ max.
	Low level when transistor is OFF Impedance when OFF: 100 kΩ max.
Contact input	Use contacts capable of switching 2 mA at 5 VDC

#### Voltage inputs


#### Solid-State Input (NPN transistor)

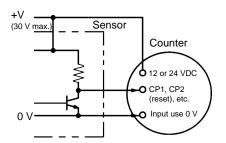

#### Solid-State Input (PNP transistor)

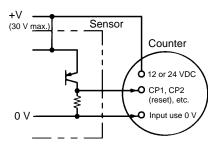


#### **Contact Input**

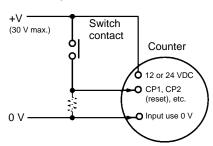


Input signal	Ratings	
Voltage input	High level when transistor is ON: 4.5 to 30 VDC	
	Low level when transistor is OFF: 0 to 2 VDC	
Contact input	Use contacts capable of switching 2 mA at 5 VDC	

#### Rotary encoder input

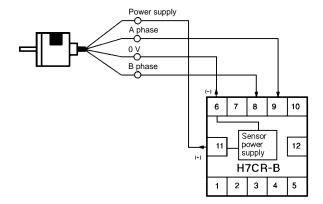


## Operation


#### **■ NOMENCLATURE**

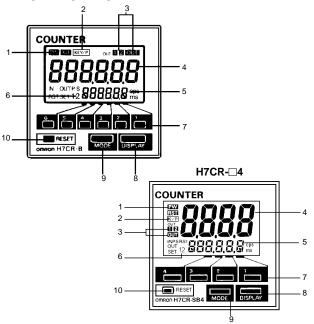

Key	Description
1	Power indicator
2	Key protection indicator
3	Control output indicator: displays "OUT" for single preset counters, displays "OUT1" or "OUT2" for double preset counters
4	Present value display, leading zeroes suppressed
5	Set value display indicates data in function setting mode
6	Set value indicator identifies preset 1 or preset 2
7	Increment keys 1 to 6 (1 to 4) change the corresponding digit of the set value when the counter is in the function setting mode. Increment key 6 on H7CR-C and H7CR-SC also can be used to designate + or – value.
8	Display key switches to the setting displays. For double preset counters, it switches between set values 1 and 2.
9	Mode key switches from run mode to function setting mode. Changes items in the function setting mode.
10	Reset key resets the present value and outputs.

#### **■** OPERATIONAL INTERVIEW

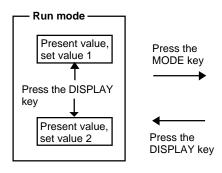

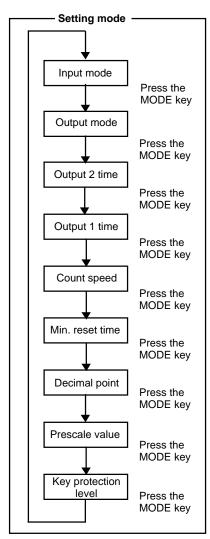

#### **■ FACTORY SETTINGS**

The following settings are made at the factory. Be sure to change any settings before operating the counter. Settings and display are possible with or without power supplied, although power supply is required for inputs and outputs to operate.

Outputs are not possible with the presets set to zero. The display and settings are powered by an internal battery so they are unaffected by external power interruptions.

#### H7CR-A, H7CR-B, H7CR-C

Model	H7CR-A (Economy type)	H7CR-B (Standard type)	H7CR-C (+/- Range type)
Present value	0	0	0
Presets	0	0	0
Input modes	Up	Up	Reversible C (phase difference)
Output mode	N	N (hold outputs on preset 1 for double preset)	К
Output 2 time	HOLD	HOLD	500 ms
Output 1 time		HOLD	500 ms
Counting speeds	30 cps	30 cps	30 cps
Min. reset time	20 ms (not adjustable)	20 ms	20 ms
Decimal point	Not applicable	Far right (no fractions)	Far right (no fractions)
Scale factor	1.000 (not adjustable)	1.000	1.000
Key protection level	_	KP-1	KP-1

#### H7CR-S, H7CR-8, H7CR-11

Model	H7CR-A (Economy type)	H7CR-B (Standard type)	H7CR-C (+/- Range type)	H7CR-8, -11 (Socket)
Present value	0	0	0	0
Presets	0	0	0	0
Input modes	Up	Up	Reversible C (phase difference)	Up
Output mode	N	N (hold outputs on preset 1 for double preset)	К	N
Output 2 time	HOLD	HOLD	500 ms	HOLD
Output 1 time	_	HOLD	500 ms	_
Counting speeds	30 cps	30 cps	30 cps	30 cps
Min. reset time	20 ms (not adjustable)	20 ms	20 ms	20 ms
Decimal point	Not applicable	Far right (no fractions)	Far right (no fractions)	Far right (no fractions)
Scale factor	1.000 (not adjustable)	1.000	1.000	1.000
Key protection level	_	KP-1	KP-1	KP-1 (H7CR-11 only)

#### **■ SUMMARY OF SETTING PROCEDURES**

Settings and operation are easily achieved as shown below. The settings that are possible for each model vary. After changing modes, the counter is ready to accept setting changes to default items.

#### Run Mode

Item	Applicable Counters	Description	Setting values
	H7CR-B, H7CR-SB H7CR-C, H7CR-SC	Determine the timing of the outputs in comparison to the present count value according to the output mode. The DISPLAY key switches between set value 1 and 2 in double preset models. Use the increment keys (1 to 6) to change a digit.	Sequence when changing a digit using the increment keys (1 to 6).  I - I B - g - [ ]  Minus sign displayed for leftmost digit of H7CR-C and H7CR-SC (+/- range counters) by using increment key 6.

#### **Setting Mode**

Item	Applicable Counters	Description	Setting values
Input mode (default)	H7CR-A, H7CR-SA H7CR-B, H7CR-SB H7CR-C, H7CR-SC H7CR-8, H7CR-11	Determines the input mode: Up, Down, Reversible A, Reversible B, Reversible C Press the Up key until the desired mode is displayed.	Increment keys 1 to 6 change the display.  U A B B U B B Reversible C  *There is no Up or Down mode for H7CR-C and H7CR-SC (+/- range) counters.
Output mode and OUT 2 output time	H7CR-A, H7CR-SA H7CR-B, H7CR-SB H7CR-C, H7CR-SC H7CR-8, H7CR-11	Determines the operation of the control outputs. Refer to "Output Operations" tables for details. Also determines the output time for control output (OUT2) in single preset counters.	Increment keys 1 to 6 change output mode. H7CR-A, -SA  H7CR-B, -SB, -8, -11 $(N)$ $(F)$ $(C)$ $(R)$ $(K)$ $(P)$ $(Q)$ $(A)$ $(K)$ $(P)$ $(Q)$ $(A)$ H7CR-C, -SC $(K)$ $(D)$ $(L)$ $(H)$ 2-stage model only. Press keys 1 to 6 to change the Output 2 time. (Applicable to output modes C, R, K, P, Q, and A only. $(D_{ms} - 5D_{ms} - 10D_{ms} - 20D_{ms} - 5DD_{ms} - 5DD_{ms}$
OUT 1 output time	H7CR-B, H7CR-SB H7CR-C, H7CR-SC (double preset models only)	Designates the output time for output 1 (double preset models only). Press the increment keys to set the desired time for output 1.	Increment keys 1 to 6 change output time.  #öLd #öLd #öLd #öLd #öLd #öLd #öLd #öL
Counting speed	H7CR-A, H7CR-SA H7CR-B, H7CR-SB H7CR-C, H7CR-SC H7CR-8, H7CR-11	Changes the input filter for counting inputs. Used to prevent counting errors caused by input interference. Press the increment keys to set the desired speed. A "k" on the display indicates kilocycles (1000 cycles).	Increment keys 1 to 6 change count speed.  30
Minimum reset times	H7CR-B, H7CR-SB H7CR-C, H7CR-SC H7CR-8, H7CR-11	Determines the minimum time required for the reset input. Press any increment key to switch between 1 and 20 ms.	Increment keys 1 to 6 change reset time.

Note: Settings changed in the Setting mode are effective only after returning to the Run mode.

#### **Setting Mode continued**

Item	Applicable Counters	Description	Setting values
Decimal point	H7CR-B, H7CR-SB H7CR-C, H7CR-SC H7CR-8, H7CR-11	Determines the position of the decimal point on the display. Press the Increment keys 1 to 6 to move the decimal from left to right.	Increment keys 1 to 6 move decimal point.
Scale factor	H7CR-B, H7CR-SB H7CR-C, H7CR-SC H7CR-8, H7CR-11	Used to convert counts to other units, (e.g., to display millimeters when each input pulse represents 0.02 mm, input a scale factor of 0.02). Values from 0.001 to 99.999 are possible. Press the Increment keys to set the desired value.	Increment keys 1 to 5 change the scaling
Key protection level	H7CR-B, H7CR-SB H7CR-C, H7CR-SC H7CR-11	Blocks certain keys to prevent accidental operation. The key protection level, kP-1 to kP-4, determines which keys are locked out when the key protection input is ON. The locked keys are crossed out in the diagrams at right.	Increment keys 1 to 4 change key protection level.  k P - ! k P - 2 k P - 3 k P - 4  (KP-1)  (KP-2)  (KP-3)  (KP-4)  (KP-4)

Note: Settings changed in the Setting mode are effective only after returning to the Run mode.


#### **■ EXAMPLES**

#### **Run Mode**

#### Changing the Set Value

When changing the set value while the counter is operating, an output will be produced if the set value ever equals the present value. To avoid triggering the output, begin by setting a higher digit to a larger number.

 Press the DISPLAY key to change the displayed values for preset 1 and 2 during operation.

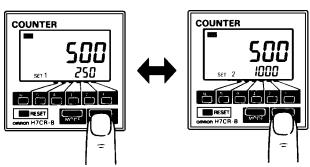

2. Change the set value from 250 to 1,250.

Pressing increment keys 1 to 6 advances the corresponding column value by 1.

Nonsignificant zeros are not normally shown on the set value display.



#### **Output Delay**

The following table shows the delay from when the present value passes the set value until the output is produced. The delay is the result of output control time, signal transmission time, relay switching time etc.

Actual measurements in N and K modes:

Control output	Max. counting speed	Output delay*
Contact	30 cps	18 to 24 ms
OUT1,	1 kcps	4.7 to 5.8 ms
OUT2	5 kcps	4.4 to 5.4 ms
Transistor	30 cps	13.5 to 20 ms
OUT1,	1 kcps	0.59 to 0.81 ms
OUT2	5 kcps	0.29 to 0.44 ms

\*The variation in delays is due to different modes and conditions. For systems where the delay is a problem, take actual measurements under operating conditions.

#### **Setting Mode**

#### **Changing Setting in the Function Setting Mode**

 Press the MODE key to switch from RUN mode to SETTING mode.

COUNTER

RESET OMRON H7CR - B


The counter will continue operation if switched from RUN mode to function setting mode during operation.

The MODE key will be locked if the key protection function is enabled.

Settings changed in the function setting mode are not effective until RUN mode is entered. As

the operating conditions will change in this case, always reset operation with the RESET key or a reset input.


Press the MODE key to scroll successively through the items that can be set. Release the MODE key to select the desired item.

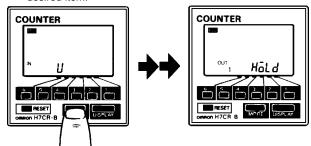

3. Changing the counting speed or another selected item:

Press the MODE key until the desired item appears.

Change the item setting by pressing increment keys 1 to 6.

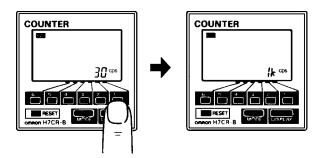


Press the DISPLAY key to return to RUN mode from SETTING mode.



## **Precautions**

#### **■ EXTERNAL POWER SUPPLY**

The capacity of the counter's external power supply is 50 mA at 24 VDC or 100 mA at 12 VDC. For models with 24 VAC/12 to 24 VDC specifications, loads must be established between the following limits.

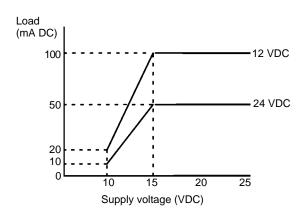

#### **■ POWER SUPPLY**

When the power turns OFF then ON, the input signal may or may not be received. The diagram below shows when the input signal will be received, will not be received or will be unstable. The unstable period will vary with power supply voltage, and the load conditions on external power supplies.

Power On supply Off 0 to 50 ms 10 ms 0 to 0.9 s Input Received Not received Unstable

For 100 to 240 VAC and 24 VAC/12 to 24 VDC counters, be sure that the capacity of the external power supply is adequate, because the power supply may not provide a surge current sufficient to start the counter due to the switching regulator contained in the counter's internal circuitry.

Connect the power supply voltage through a relay or switch in such a way that the voltage reaches a fixed value immediately.

#### **■ TRANSISTOR OUTPUT**

The transistor output in H7CR counters is optically isolated from the internal circuitry by a photocoupler, so either NPN or PNP output is possible.

#### **■ SELF DIAGNOSTIC FUNCTIONS**

The displays at right appear when irregularities occur. When the problems causing these conditions have been cleared, the preset count value and all outputs will be reset in the same way as when the Reset key is pressed.

Display	Meaning	Outputs	Recovery
	Present value	l	Press RESET key
	below minimum	changed.	for 1 second or
FFFFFF	Present value		reset input.
	above maximum		
E1	CPU error	OFF	Press RESET key
E2	Memory error		for 1 second.

Displayed for +/- range counters H7CR-C and H7CR-SC when max. negative value is exceeded.

FFFFFF: Displayed for +/- range counters H7CR-C and H7CR-SC when max. positive value is exceeded.

#### **■ OPERATING ENVIRONMENT**

Although the front of the counter resists water and oils and can be used where subject to these, extended exposure to large amounts of either can adversely affect internal components.

The counter, input signal lines, and the input device must be separated as far as possible from any sources of electrical

noise, such as high-voltage power lines. Shielded input signal lines can also be effective in suppressing noise.

To prevent damage, the exterior of the counter must not be exposed to organic solvents (e.g., paint thinner or benzene), strong alkalis, or strong acids.

#### ■ OTHER

Always isolate the counter from external circuits or short all terminals before measuring dielectric strength between electric circuits and non-charged metal parts or performing similar testing with the counter mounted in a control panel. This is to prevent internal circuit damage that might occur if the test voltage enters the counter interior due to withstand-voltage or insulation failure in control panel devices.

The counter contains a lithium battery, and must never be incinerated. Dispose of the counter as a noncombustible item.

## Applications of Operating Modes

#### **■ SINGLE OPERATING MODES**


Single operating modes are basic modes, among which, Mode N is the most basic (input the RESET signal to restart).

#### Mode N

The displayed count-up value is on hold.

#### **Example: Cutting Objects to Specified Size**

The object is advanced for a specified distance measured by encoder pulses to determine correct length for cutting.

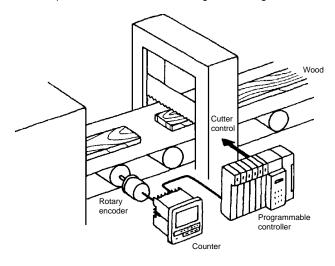

#### Mode A

Select Mode A for a one-shot output of the count-up signal used in Mode N. The displayed count-up value is on hold. Mode A can be used for a start signal for sequence control equipment.

#### Mode F

Go to Mode F to monitor the number of overrun objects. The process value is displayed normally. It is possible to monitor the number of overrun objects upon interruption of the operation after a specified number of objects are counted.

#### Mode K

Select Mode K for the one-shot output of the count-up signal used in Mode F. Mode K can be used as a start signal for sequence control equipment.

#### **■ REPETITIVE OPERATING MODES**


Modes R and C are typical of repetitive operating modes (the counter internally resets itself after each counting operation and then restarts). The counter begins the next counting operation after the present output is processed.

#### Mode R

The displayed count-up value is on hold.

#### **Example: Portion Control of Material or Ingredients**

The valve is closed when the supplied quantity of cookie batter or blended ingredient has reached a specified amount.

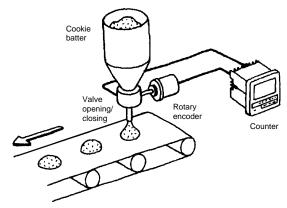

#### Mode Q


Choose Mode Q to view the process value continuously. There is no difference in operation between Mode R and Mode Q.

#### Mode C

The counting operation restarts upon counting up. The process value is displayed continuously.


#### **Example: Marking Material at Regular Intervals**

A roll of film being advanced is marked at regular intervals

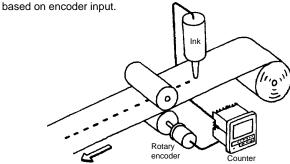

#### Mode P

Choose Mode P to put the count-up value on hold (display is on hold while the one-shot output is ON). There is no difference in operation between Mode C and Mode P.



NOTE: DIMENSIONS SHOWN ARE IN MILLIMETERS. To convert millimeters to inches, divide by 25.4.

Omron Europe B.V. EMA-ISD, tel:+31 23 5681390, fax:+31 23 5681397, http://www.eu.omron.com/ema

### **ПОСТАВКА** ЭЛЕКТРОННЫХ КОМПОНЕНТОВ

Общество с ограниченной ответственностью «МосЧип» ИНН 7719860671 / КПП 771901001 Адрес: 105318, г.Москва, ул.Щербаковская д.3, офис 1107

# Данный компонент на территории Российской Федерации Вы можете приобрести в компании MosChip.

Для оперативного оформления запроса Вам необходимо перейти по данной ссылке:

#### http://moschip.ru/get-element

Вы можете разместить у нас заказ для любого Вашего проекта, будь то серийное производство или разработка единичного прибора.

В нашем ассортименте представлены ведущие мировые производители активных и пассивных электронных компонентов.

Нашей специализацией является поставка электронной компонентной базы двойного назначения, продукции таких производителей как XILINX, Intel (ex.ALTERA), Vicor, Microchip, Texas Instruments, Analog Devices, Mini-Circuits, Amphenol, Glenair.

Сотрудничество с глобальными дистрибьюторами электронных компонентов, предоставляет возможность заказывать и получать с международных складов практически любой перечень компонентов в оптимальные для Вас сроки.

На всех этапах разработки и производства наши партнеры могут получить квалифицированную поддержку опытных инженеров.

Система менеджмента качества компании отвечает требованиям в соответствии с ГОСТ Р ИСО 9001, ГОСТ РВ 0015-002 и ЭС РД 009

### Офис по работе с юридическими лицами:

105318, г. Москва, ул. Щербаковская д. 3, офис 1107, 1118, ДЦ «Щербаковский»

Телефон: +7 495 668-12-70 (многоканальный)

Факс: +7 495 668-12-70 (доб.304)

E-mail: info@moschip.ru

Skype отдела продаж:

moschip.ru moschip.ru\_6 moschip.ru\_4 moschip.ru\_9