

# Single-phase Voltage Relay

## K8DT-VS

**Detect abnormal voltages applies to equipment to protect against equipment failure.**

**Use in either overvoltage or undervoltage mode.**



- Monitor AC or DC currents with one Relay.
- Settings for the operating value, hysteresis, and operating time.
- Width of 17.5 mm to reduce space required in panels.
- Push-In Plus Terminal that reduce wiring work.  
The use of cage clamps enables wiring with bare stranded wires.  
Double-insertion holes for crossover wiring (all terminals).
- UL listed for easy shipping to North America.
- Models added with transistor outputs for superior contact reliability.



Refer to *Safety Precautions* on page 9.

Refer to page 8 for commonly asked questions.



For the most recent information on models that have been certified for safety standards, refer to your OMRON website.

## Ordering Information

### Single-phase Voltage Relay

| Setting range   | Power supply voltage | Output                     | Model             |
|---|----------------------|----------------------------|-------------------|
| 1 to 10 V AC/DC<br>3 to 30 V AC/DC<br>15 to 150 V AC/DC     | 24 VAC/DC            | Relay: SPDT contact output | <b>K8DT-VS2CD</b> |
|   |                      | Transistor                 | <b>K8DT-VS2TD</b> |
|   | 100 to 240 VAC       | Relay: SPDT contact output | <b>K8DT-VS2CA</b> |
|   |                      | Transistor                 | <b>K8DT-VS2TA</b> |
| 20 to 200 V AC/DC<br>30 to 300 V AC/DC<br>60 to 600 V AC/DC | 24 VAC/DC            | Relay: SPDT contact output | <b>K8DT-VS3CD</b> |
|   |                      | Transistor                 | <b>K8DT-VS3TD</b> |
|   | 100 to 240 VAC       | Relay: SPDT contact output | <b>K8DT-VS3CA</b> |
|   |                      | Transistor                 | <b>K8DT-VS3TA</b> |

### Optional Cover

#### Front Cover

| Appearance | Model           |
|------------|-----------------|
|            | <b>Y92A-D1A</b> |

# K8DT-VS

## Ratings and Specifications

### Input Range

| Model      | Range *          | Connection terminal | Setting range     | Input impedance | Overload capacity   |
|------------|------------------|---------------------|-------------------|-----------------|---|
| K8DT-VS2□□ | 0 to 10 V AC/DC  | V1-COM              | 1 to 10 V AC/DC   | Approx. 120 kΩ  | Continuous input at 115% of maximum input<br>10 s at 125% (up to 600 VAC) |
|            | 0 to 30 V AC/DC  | V2-COM              | 3 to 30 V AC/DC   | Approx. 320 kΩ  |   |
|            | 0 to 150 V AC/DC | V3-COM              | 15 to 150 V AC/DC | Approx. 1.6 MΩ  |   |
| K8DT-VS3□□ | 0 to 200 V AC/DC | V1-COM              | 20 to 200 V AC/DC | Approx. 1.2 MΩ  | Continuous input at 115% of maximum input<br>10 s at 125% (up to 600 VAC) |
|            | 0 to 300 V AC/DC | V2-COM              | 30 to 300 V AC/DC | Approx. 1.7 MΩ  |   |
|            | 0 to 600 V AC/DC | V3-COM              | 60 to 600 V AC/DC | Approx. 3.1 MΩ  |   |

\* The range is selected using connected terminals.

## Ratings

|   |  |
|---|--|
| <b>Power supply voltage</b>               | K8DT-VS□□D: 24 VAC 50/60Hz, 24 VDC<br>K8DT-VS□□A: 100 to 240 VAC 50/60Hz   |
| <b>Power consumption</b>                  | 24 VAC/DC: 1.8 VA/1 W max.<br>100 to 240 VAC: 2.5 VA max.  |
| <b>Rated insulation voltage</b>           | 600 VAC  |
| <b>Operating value setting range (SV)</b> | 10% to 100% of maximum setting range<br>K8DT-VS2: 1 to 10 V AC/DC<br>3 to 30 V AC/DC<br>15 to 150 V AC/DC<br>K8DT-VS3: 20 to 200 V AC/DC<br>30 to 300 V AC/DC<br>60 to 600 V AC/DC   |
| <b>Operating value</b>                    | 100% operation at set value  |
| <b>Reset value setting range (HYS)</b>    | 5% to 50% of operating value   |
| <b>Reset method</b>                       | Manual reset/automatic reset (switchable)<br><b>Note:</b> Manual reset: Turn OFF power supply for 1 s or longer.   |
| <b>Operating time setting range (T)</b>   | 0.1 to 30 s  |
| <b>Power ON lock time</b>                 | 1 s or 5 s (Switched using DIP switch.)  |
| <b>Indicators</b>                         | Power (PWR): Green, Relay output (RY): Yellow, Alarm outputs (ALM): Red  |
| <b>Input impedance</b>                    | Refer to <i>Input Range</i> on page 2.   |
| <b>Output form</b>                        | Relay Output: SPDT contact<br>Transistor Output: 1<br>Switchable between normally open and normally closed with a DIP switch setting.  |
| <b>Output relay ratings</b>               | Rated load<br>5 A at 250 VAC (Resistive load)<br>5 A at 30 VDC (Resistive load)<br>1 A at 250 VAC (Inductive load)<br>0.2 A at 48 VDC (Inductive load)<br>Minimum load: 5 VDC, 10 mA (reference values)<br>Mechanical life: 10 million operations min.<br>Electrical life: 5 A at 250 VAC or 30 VDC: 50,000 operations<br>3 A at 250 VAC or 30 VDC: 100,000 operations |
| <b>Transistor output ratings</b>          | Rated voltage: 24 VDC (maximum voltage: 26.4 VDC)<br>Maximum current: 50 mA DC   |
| <b>Ambient operating temperature</b>      | -20 to 60°C (with no condensation or icing)  |
| <b>Storage temperature</b>                | -25 to 65°C (with no condensation or icing)  |
| <b>Ambient operating humidity</b>         | 25% to 85% RH (with no condensation)   |
| <b>Storage humidity</b>                   | 25% to 85% RH (with no condensation)   |
| <b>Altitude</b>                           | 2,000 m max.   |
| <b>Applicable wires</b>                   | Stranded wires, solid wires, or ferrules   |
| <b>Applicable wire size</b>               | 0.25 to 1.5 mm <sup>2</sup> (AWG24 to AWG16)   |
| <b>Wire insertion force</b>               | 8 N max. for AWG20 wire  |
| <b>Screwdriver insertion force</b>        | 15 N max.  |
| <b>Wire stripping length</b>              | 8 mm   |
| <b>Ferrule length</b>                     | 8 mm   |
| <b>Recommended flat-blade screwdriver</b> | XW4Z-00B (Omron)<br>SZF 0.4 x 2.5 (Phoenix Contact)<br>210-719 (Wago)<br>SDI 0.4 x 2.5 x 75 (Weidmuller)   |
| <b>Current capacity</b>                   | 10 A (per pole)  |
| <b>Number of insertions</b>               | 50 times   |
| <b>Case color</b>                         | N1.5   |
| <b>Case material</b>                      | PC, UL 94 V-0  |
| <b>Weight</b>                             | Approx. 100 g  |
| <b>Mounting</b>                           | Mounts to DIN Track, or screw mounting   |
| <b>Dimensions</b>                         | 17.5 x 90 x 90 mm (WxHxD)  |


## Specifications

|  |  |  |
|--|--|--|
| <b>Allowable operating voltage range</b>   | 85% to 110% of rated power supply voltage  |  |
| <b>Allowable operating frequency range</b> | 50/60 Hz ±5 Hz   |  |
| <b>Input frequency range</b>               | 40 to 500 Hz   |  |
| <b>Overload capacity</b>                   | Continuous input at 115% of maximum input, 10 s at 125% (up to 600 VAC).   |  |
| <b>Repeat accuracy</b>                     | <b>Operating value</b>   | ±0.5% full scale (at 25°C and 65% humidity, rated power supply voltage)                |
|  | <b>Operating time</b>  | ±50 ms (at 25°C and 65% humidity, rated power supply voltage)                          |
| <b>Applicable standards</b>                | <b>Conforming standards</b>  | EN 60947-5-1<br>Installation environment (pollution level 2, Overvoltage category III) |
|  | <b>EMC</b>   | EN 60947-5-1   |
|  | <b>Safety standards</b>  | UL 60947-5-1 (Listing), Korean Radio Waves Act (Act 10564), CCC (GB14048.5)            |
| <b>Insulation resistance</b>               | 20 MΩ min.<br>Between external terminals and case<br>Between power supply terminals and input terminals<br>Between power supply terminals and output terminals<br>Between input terminals and output terminals                                 |  |
| <b>Dielectric strength</b>                 | 2,000 VAC for one minute<br>Between external terminals and case<br>Between power supply terminals and input terminals<br>Between power supply terminals and output terminals<br>Between input terminals and output terminals                   |  |
| <b>Impulse withstand voltage</b>           | 6 kV (between live terminals and exposed, non-charged metal parts)   |  |
| <b>Noise immunity</b>                      | Square-wave noise of 1-μs/100-ns pulse width with 1-ns rise time<br>100 to 240 VAC: 1,500 V power supply terminal common/normal mode<br>24 VAC: 1,500 V power supply terminal common/normal mode<br>24 VDC: 480 V power supply terminal common |  |
| <b>Vibration resistance</b>                | Frequency: 10 to 55 Hz, 0.35-mm single amplitude<br>10 sweeps of 5 min each in X, Y, and Z directions  |  |
| <b>Shock resistance</b>                    | 100 m/s <sup>2</sup> , 3 times each in 6 directions along 3 axes   |  |
| <b>Degree of protection</b>                | Terminals: IP20  |  |

# K8DT-VS

## Connections


### Terminal Diagram

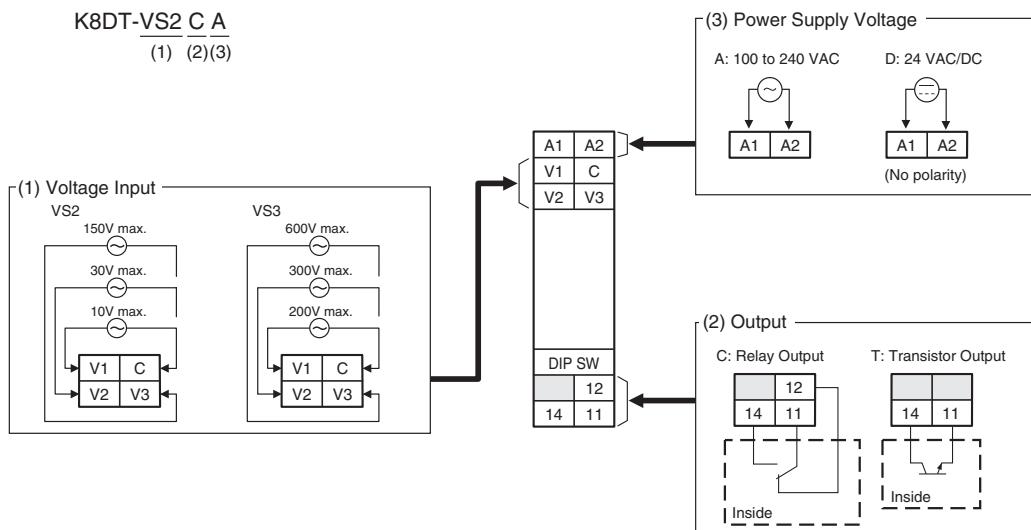


- Note:**
1. Do not connect anything to terminals that are shaded in gray.
  2. There is no polarity for the DC power supply input.
  3. For the voltage input, you can input only from the C terminal and one other terminal.
  4. Refer to Setting Ranges and Wiring Connections for information on the V1, V2, and V3 voltage input terminals.

## Wiring Example

### Relay Output

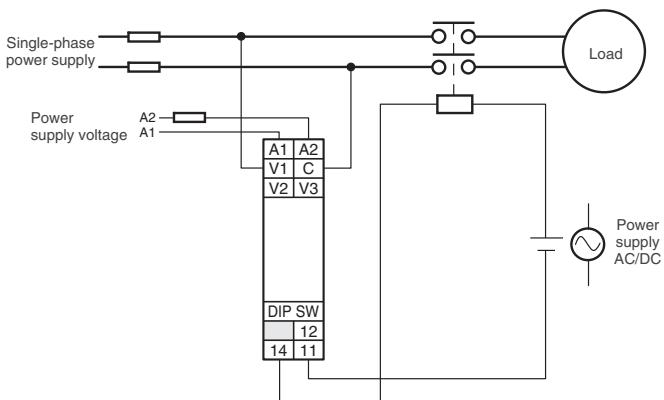

### Transistor Output

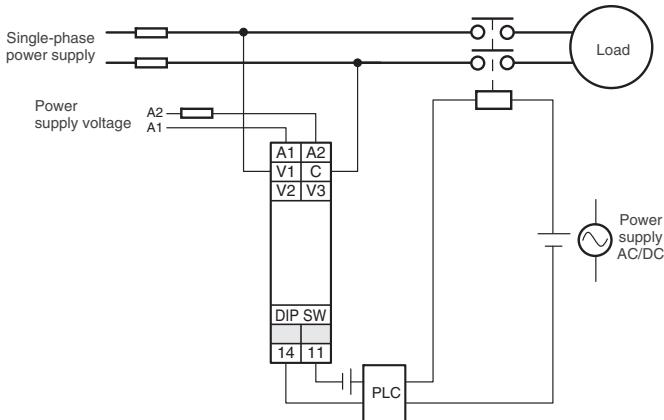


**Note:** Use copper wires with a rating of 75°C or an equivalent rating.

## Timing Charts

### Overvoltage Operation Diagram (Output Drive Method: Normally Closed)


DIP switch setting: SW3 ON, SW4 OFF.

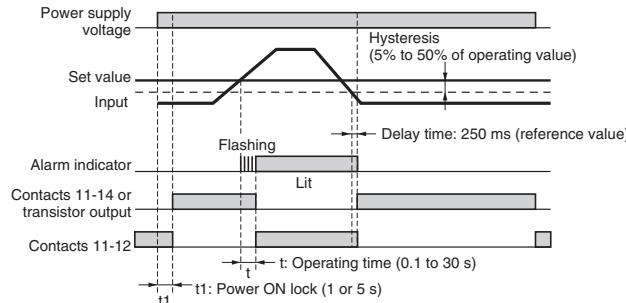

Note: The power ON lock prevents unnecessary alarms from being generated during the unstable period when the power is first turned on. There is no contact output during timer operation.

### Undervoltage Operation Diagram (Output Drive Method: Normally Open)


DIP switch setting: SW3 OFF, SW4 ON.

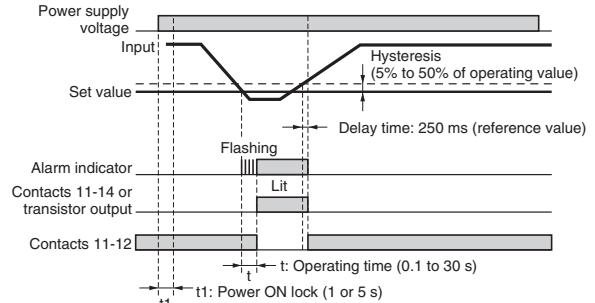

Note: The power ON lock prevents unnecessary alarms from being generated during the unstable period when the power is first turned on. There is no relay output during timer operation.


## Nomenclature

### Front

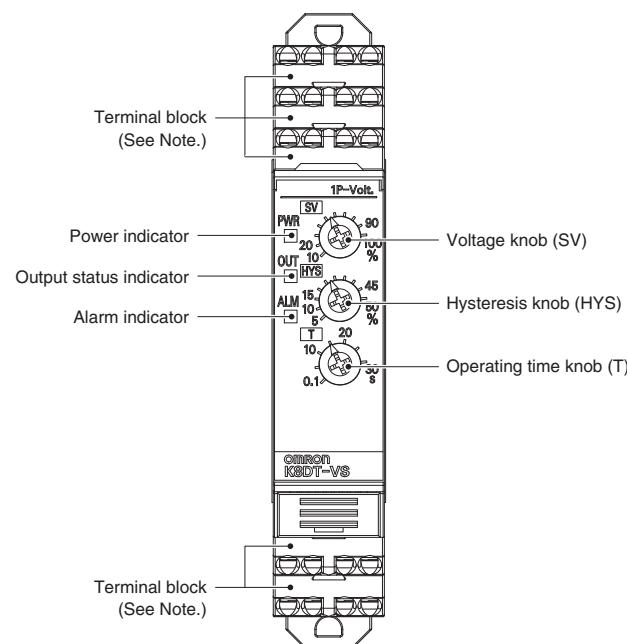

**Note:** Use solid wires, stranded wires, or ferrules to connect to the terminals.

To maintain the withstand voltage after connecting the terminals, insert 8 mm of exposed conductor into the terminal.

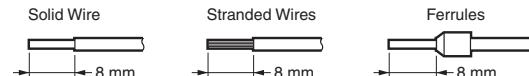

### Indicators

| Item   | Meaning  |
|--|--|
| <b>Power indicator (PWR: Green)</b>          | Lit when power is being supplied.  |
| <b>Output status indicator (OUT: Yellow)</b> | Lights for output  |
| <b>Alarm indicator (ALM: Red)</b>            | Lit when there is an overvoltage or undervoltage. The indicator flashes to indicate the error status after the input has exceeded the set value while the operating time is being clocked. |

### Setting Knobs

| Item                           | Usage  |
|--------------------------------|--|
| <b>Voltage knob (SV)</b>       | Used to set the voltage to 10% to 100% of maximum setting range. |
| <b>Hysteresis knob (HYS)</b>   | Used to set the rest value to 5% to 50% of the operating value.  |
| <b>Operating time knob (T)</b> | Used to set the operating time to 0.1 to 30 s.                   |

## Operation Methods

### Setting Ranges and Wiring Connections

| Model    | Setting range     | Wiring connection |
|----------|-------------------|-------------------|
| K8DT-VS2 | 1 to 10 V AC/DC   | V1-COM            |
|          | 3 to 30 V AC/DC   | V2-COM            |
|          | 15 to 150 V AC/DC | V3-COM            |
| K8DT-VS3 | 20 to 200 V AC/DC | V1-COM            |
|          | 30 to 300 V AC/DC | V2-COM            |
|          | 60 to 600 V AC/DC | V3-COM            |

## Connections

### Input

Connect the input between terminals V1-COM, V2-COM, or V3-COM, depending on the input voltage. Malfunctions may occur if the input is connected to unused terminals and the Unit will not operate correctly.

### Power Supply


Connect the power supply to terminals A1 and A2.

### Outputs



For a relay output, the SPDT contacts are output on terminals 11, 12, and 14. For a transistor output, the output is on terminals 11 and 14.

The internal circuit of the transistor output is NPN, but application is possible for either a sinking or sourcing output.

#### In the case of sinking output applications

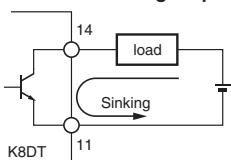

#### In the case of sourcing output applications

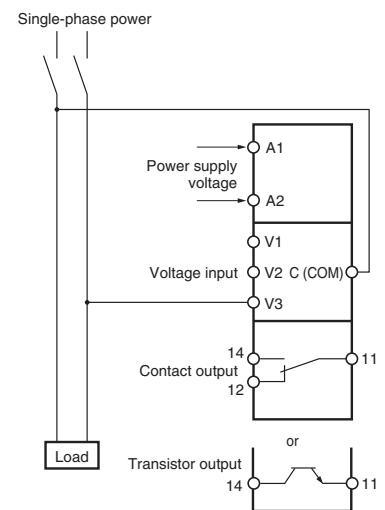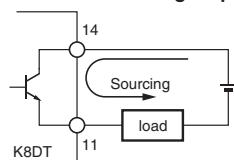


## DIP Switch Settings

The power ON lock time, reset method, drive output method, and operating mode are set using the DIP switch located on the front of the Unit.

**Note:** Open the DIP switch cover to set the DIP switch.

Keep the DIP switch cover closed while the power supply to the Relay is ON.

### DIP switch pins

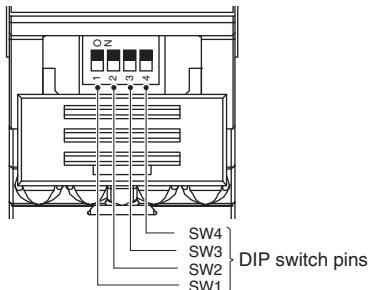

| Pin                | ON ○ ↑<br>OFF ● ↓ | ON 1<br>OFF | 2   | 3   | 4   |
|--------------------|-------------------|-------------|-----|-----|-----|
| Power ON lock time | 5 s               | ○           | --- | --- | --- |
|                    | 1 s               | ●           | --- | --- | --- |
| Resetting method   | Automatic reset   | ---         | ○   | --- | --- |
|                    | Manual reset      | ---         | ●   | --- | --- |
| Relay drive method | Normally closed   | ---         | --- | ○   | --- |
|                    | Normally open     | ---         | --- | ●   | --- |
| Operating mode     | Undervoltage      | ---         | --- | --- | ○   |
|                    | Oversupply        | ---         | --- | --- | ●   |

**Note:** All pins are set to OFF at the factory.

## Setting Method

### Setting Voltage

The voltage knob (SV) is used to set the voltage.

The voltage can be set to 10% to 100% of the maximum setting range.

Turn the knob while there is an input to the input terminals until the alarm indicator flashes (when the set value and the input have reached the same level.)

Use this as a guide to set the voltage.

The maximum setting range will differ depending on the model and the input terminal.

Example: K8DT-VS3 Using Input Terminal V3-COM

The maximum setting range will be 600 VAC/VDC and the setting range will be 60 to 600 V.

### Hysteresis

Hysteresis is set using the hysteresis knob (HYS)

The setting range is 5 to 50% of the operating value.

Example: Maximum Setting of 600 VAC/VDC, Voltage Set Value (SV) of 50%, and Overvoltage Operation

Operation will be at 300 V and resetting at 270 V when the hysteresis (HYS) is set to 10%.

### Operating Time

The operating time is set using the operating time knob (T).

The operating time can be set to between 0.1 and 30 s.

If the input voltage exceeds (or drops lower than) the voltage set value, the alarm indicator will start flashing for the set period and then stay lit.


## Dimensions

(Unit: mm)

### Single-phase Voltage Relays

K8AK-VS2



K8AK-VS3

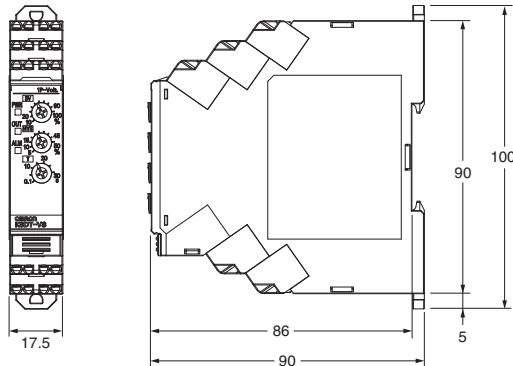

### Options (Order Separately)

#### Front Cover

Y92A-D1A

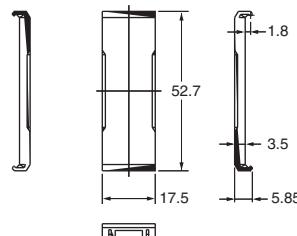
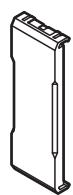


### Optional Parts for DIN Track Mounting

#### DIN Tracks

PFP-100N

PFP-50N

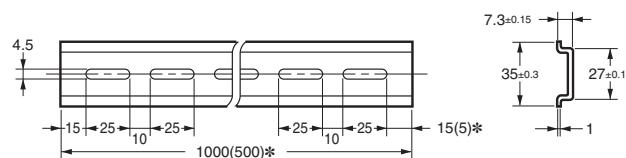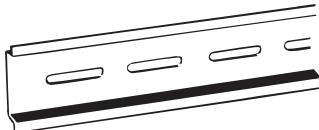

\* Dimensions in parentheses are for the PFP-50N.

## Questions and Answers

### Q Checking Operation

#### A Overvoltages


Gradually increase the input from 80% of the set value. The input will equal the operating value when the input exceeds the set value and the alarm indicator starts flashing. Operation can be checked by the contact outputs that will start after the operating time has passed.

#### A Undervoltage


Gradually decrease the input from 120% of the set value and check the operation using the same method as for overvoltage.

Example: Overvoltage Operating Mode and an Operating Time of 5 s

Note: K8DT-VS□ output relays are normally operative.

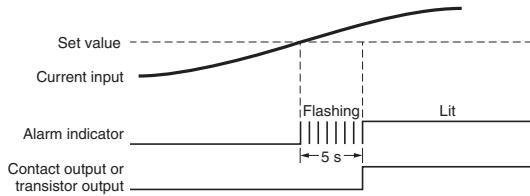

### Connection Diagram

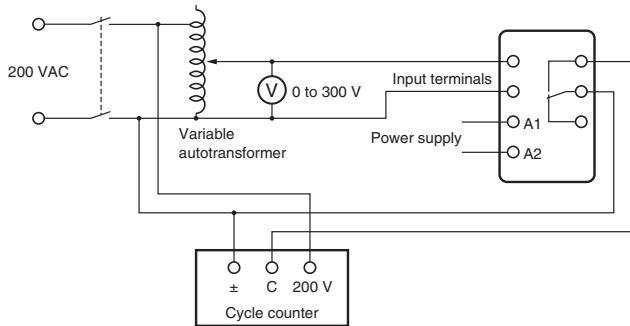

### Q How to Measure the Operating Time

#### A Overvoltage

Change the input suddenly from 0% to 120% of the set value and measure the time until the Unit operates.

#### A Undervoltage

Change the input suddenly from 120% to 0% of the set value and measure the time until the Unit operates.

## Safety Precautions

Be sure to read the precautions for all models in the website at the following URL: <http://www.ia.omron.com/>.

### Warning Indications

|  |   |
|--|---|
|  <b>WARNING</b> | Indicates a potentially hazardous situation which, if not avoided, will result in minor or moderate injury, or may result in serious injury or death. Additionally, there may be significant property damage. |
|  <b>CAUTION</b> | Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury or in property damage.  |
| <b>Precautions for Safe Use</b>  | Supplementary comments on what to do or avoid doing, to use the product safely.   |
| <b>Precautions for Correct Use</b>   | Supplementary comments on what to do or avoid doing, to prevent failure to operate, malfunction, or undesirable effects on product performance.   |

### Meaning of Product Safety Symbols

|   |   |
|---|---|
|    | Used to warn of the risk of electric shock under specific conditions.   |
|    | Used for general prohibitions for which there is no specific symbol.  |
|   | Used to indicate prohibition when there is a risk of minor injury from electrical shock or other source if the product is disassembled. |
|  | Used for general mandatory action precautions for which there is no specified symbol.   |

 **WARNING**  
Electrical shock may occasionally cause serious injury. Confirm that the input voltage is OFF before starting any wiring work and wire all connections correctly.

 **CAUTION**  
Doing so may occasionally result in minor injury due to electric shock. Do not touch the Relay while the power supply is ON, except for the adjustment knob.

 There is a risk of minor electrical shock, fire, or device failure. Do not allow any pieces of metal, conductors, or cutting chips that occur during the installation process to enter the product.

 Explosions may cause minor injuries. Do not use the product in locations with inflammable or explosive gases.

 There is a risk of minor electrical shock, fire, or device failure. Do not disassemble, modify, repair, or touch the inside of the product.

 Use of the product beyond its life may result in contact welding or burning. Make sure to consider the actual operating conditions and use the product within its rated load and electrical life count. The life of the output relay varies significantly with the switching capacity and switching conditions.

 If the Relay is used with incorrect wiring, fire may occasionally occur, possibly resulting in physical damage. Check the wiring for mistakes before you turn ON the power supply.

 If the Relay fails, monitoring and alarm outputs may fail to operate. This may result in physical damage to the facilities, equipment, or other devices that are connected to it. To reduce this risk, inspect the Relay regularly. To maintain safety in the event of malfunction of the Relay, take appropriate safety measures, such as installing a monitoring device on a separate line.

 If the wire insertion length is insufficient, fire may occasionally occur, possibly resulting in physical damage. Insert the wires all the way to the back.

 The terminal block may be damaged if you insert a flat-blade screwdriver in the release hole with excessive force. Insert the flat-blade screwdriver into the release holes with a force of 15 N or less.

## Precautions for Safe Use

1. Do not use or store the product in the following locations.
  - Locations subject to water or oil
  - Outdoor locations or under direct sunlight
  - Locations subject to dust or corrosive gases (sulfurizing gases, ammonia gases, etc.)
  - Locations subject to rapid temperature changes
  - Locations prone to icing and dew condensation
  - Locations subject to vibration and large shocks
  - Locations subject to wind and rain
  - Locations subject to static electricity or noise
  - Locations subject to insects or small animals
2. Use and store the product in a location where the ambient temperature and humidity are within the specified ranges. If applicable, provide forced cooling.
3. Check terminal polarity when wiring and wire all connections correctly. The power supply terminals do not have polarity.
4. Do not wire the input and output terminals incorrectly.
5. Make sure the power supply voltage and loads are within the specifications and ratings for the product.
6. Make sure the ferrule terminals for wiring are of the specified size.
7. The stripping length is 8 mm. Insert the wires all the way to the back.
8. Do not connect anything to terminals that are not being used.
9. Use a power supply that will reach the rated voltage within 1 second after the power is turned ON.
10. Keep wiring separate from high voltages and power lines that draw large currents. Do not place product wiring in parallel with or in the same path as high-voltage or high-current lines.
11. Do not install the product near equipment that generates high frequencies or surges.
12. The product may cause incoming radio wave interference. Do not use the product near radio wave receivers.
13. Install an external switch or circuit breaker and label it clearly so that the operator can quickly turn OFF the power supply.
14. Make sure the indicators operate correctly. Depending on the application environment, the indicators may deteriorate prematurely and become difficult to see.
15. Do not use the product if it is accidentally dropped. The internal components may be damaged.
16. Be sure you understand the contents of this catalog and handle the product according to the instructions provided.
17. Do not install the product in any way that would place a load on it.
18. When discarding the product, properly dispose of it as industrial waste.
19. When using the product, remember that the power supply terminals carry a high voltage.
20. The product must be handled only by trained electrician.
21. Prior to operation, check the wiring before you supply power to the product.
22. Do not install the product immediately next to heat sources.
23. Perform periodic maintenance.
24. Do not wire anything to the release holes.
25. Do not tilt or twist a flat-blade screwdriver while it is inserted into a release hole on the terminal block. The terminal block may be damaged.
26. Insert a flat-blade screwdriver into the release holes at an angle. The terminal block may be damaged if the screwdriver is inserted straight in.
27. Do not allow the flat-blade screwdriver to fall when you are holding it in a release hole.
28. Do not bend a wire past its natural bending radius or pull in it with excessive force. Doing so may break the wires.
29. Do not insert more than one wire into each terminal insertion hole.

30. To prevent wiring materials from smoking or igniting, confirm wire ratings and use the wiring materials given in the following table.

| Recommended wire                          | Stripping length<br>(Ferrules not used) |
|---|---|
| 0.25 to 1.5 mm <sup>2</sup> /AWG 24 to 16 | 8 mm                                    |

31. Use only the specified wires for wiring.

32. When wiring the terminals, allow some leeway in the wire length.

33. Make sure that the power supply is turned OFF before you change any DIP switch setting.

## Precautions for Correct Use


### Observe the following operating methods to prevent failure and malfunction.

1. Use the power supply voltage, input power, and other power supplies and converters with suitable capacities and rated outputs.
2. Do not use the Relay in circuits with waveform distortion. Error will be large due to waveform distortion.
3. Error will be large if the product is used for thyristor or inverter control.
4. When cleaning the product, do not use thinners or solvents. Use commercial alcohol.
5. If you use stranded wires, make sure that there are no loose wire strands.
6. If you wire crossovers and connect terminal blocks in parallel, a large current will flow. Make sure that the current does not exceed 10 A.
7. The terminal block may be damaged if the recommended tool is not used. Use the recommended flat-blade screwdriver to operate the release holes.

### Correct Mounting Direction, Mounting, and Removing


#### Mounting to DIN Track

To mount the Relay to a DIN Track, hook the Relay onto the DIN Track and press the Relay in the direction of the arrow until you hear it lock into place.

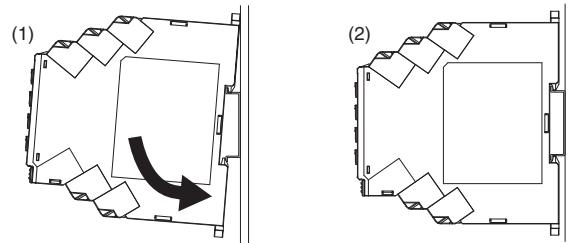

#### Removing from the DIN Track


To remove the Relay, insert a screwdriver into the hook on the top or bottom and pull out the hook to release the Relay.

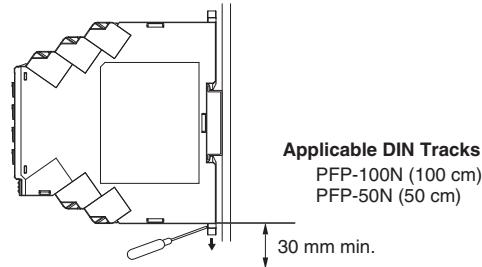

- Leave at least 30 mm of space between the product and other devices to allow easy installation and removal.


### Screw Mounting

1. Pull out the two hooks on the back of the Relay to the outside until you hear them click in place.
2. Insert M3 screws into the hook holes and secure the Relay.

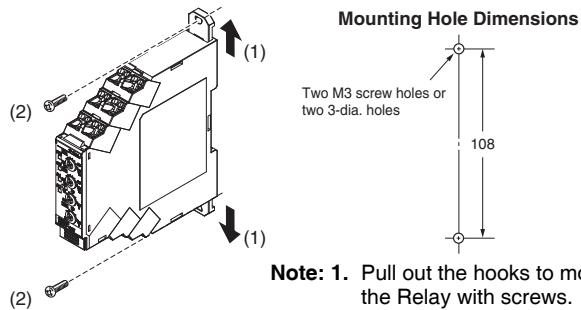

### Adjusting the Setting Knobs


- Use a flat-blade screwdriver to adjust the setting knobs. The knobs have a stopper that prevents them from turning beyond the full right or left position. Do not force a knob beyond these points.

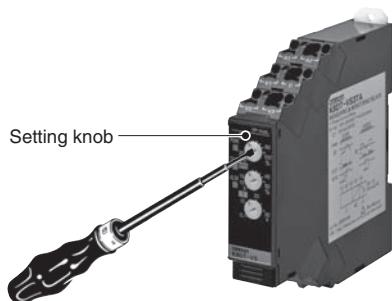

- To reduce the error in the setting knob, always turn the setting knob from the minimum setting toward the maximum setting.


### Connecting Wires to the Push-In Plus Terminal Block

#### Part Names of the Terminal Block

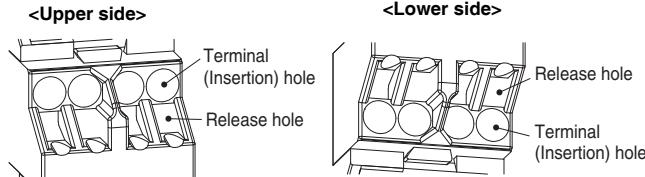

### Connecting Wires with Ferrules and Solid Wires

Insert the solid wire or ferrule straight into the terminal block until the end strikes the terminal block.

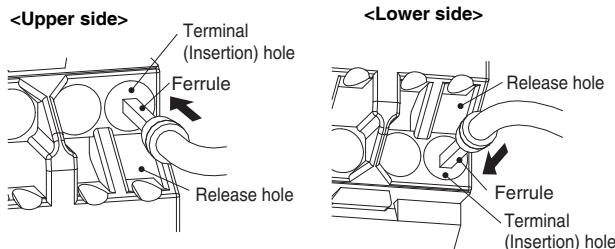


If a wire is difficult to connect because it is too thin, use a flat-blade screwdriver in the same way as when connecting stranded wire.

### Connecting Stranded Wires

Use the following procedure to connect the wires to the terminal block.

1. Hold a flat-blade screwdriver at an angle and insert it into the release hole. The angle should be between 10° and 15°. If the flat-blade screwdriver is inserted correctly, you will feel the spring in the release hole.
2. With the flat-blade screwdriver still inserted into the release hole, insert the wire into the terminal hole until it strikes the terminal block.
3. Remove the flat-blade screwdriver from the release hole.

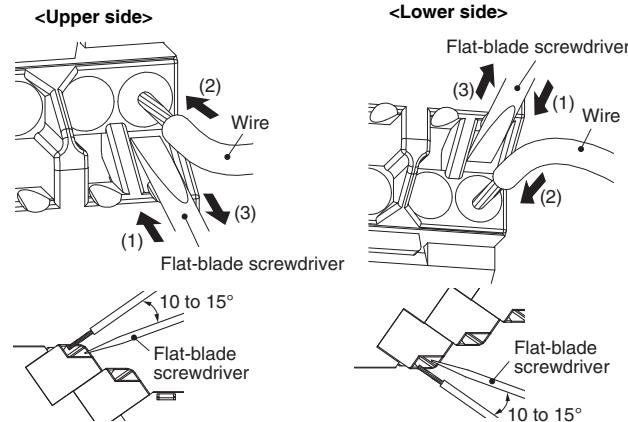


### Checking Connections

- After the insertion, pull gently on the wire to make sure that it will not come off and the wire is securely fastened to the terminal block.
- If you use a ferrule with a conductor length of 10 mm, part of the conductor may be visible after the ferrule is inserted into the terminal block, but the product insulation distance will still be satisfied.

### Removing Wires from the Push-In Plus Terminal Block

Use the following procedure to remove wires from the terminal block. The same method is used to remove stranded wires, solid wires, and ferrules.

1. Hold a flat-blade screwdriver at an angle and insert it into the release hole.
2. With the flat-blade screwdriver still inserted into the release hole, remove the wire from the terminal insertion hole.
3. Remove the flat-blade screwdriver from the release hole.

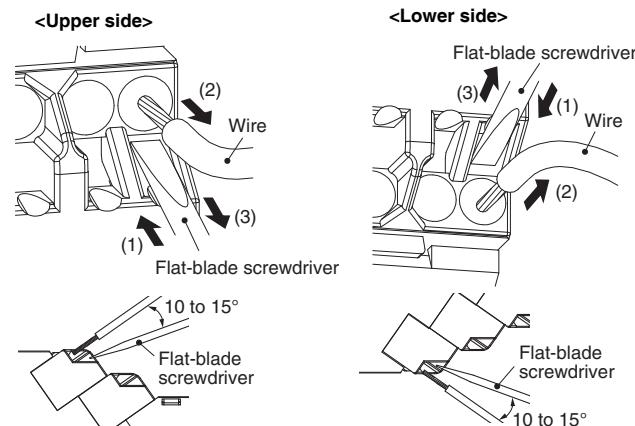


## Recommended Ferrules and Crimp Tools

### Recommended ferrules

| Applicable wire        |       | Ferrule Conductor Length (mm) | Stripping length (mm)<br>(Ferrules used) | Recommended ferrules   |                    |              |
|------------------------|-------|-------------------------------|--|------------------------|--------------------|--------------|
| (mm <sup>2</sup> )     | (AWG) |                               |  | PhoenixContact product | Weidmuller product | Wago product |
| 0.25                   | 24    | 8                             | 10                                       | AI 0,25-8              | H0.25/12           | 216-301      |
|                        |       | 10                            | 12                                       | AI 0,25-10             | ---                | ---          |
| 0.34                   | 22    | 8                             | 10                                       | AI 0,34-8              | H0.34/12           | 216-302      |
|                        |       | 10                            | 12                                       | AI 0,34-10             | ---                | ---          |
| 0.5                    | 20    | 8                             | 10                                       | AI 0,5-8               | H0.5/14            | 216-201      |
|                        |       | 10                            | 12                                       | AI 0,5-10              | H0.5/16            | 216-241      |
| 0.75                   | 18    | 8                             | 10                                       | AI 0,75-8              | H0.75/14           | 216-202      |
|                        |       | 10                            | 12                                       | AI 0,75-10             | H0.75/16           | 216-242      |
| 1/1.25                 | 18/17 | 8                             | 10                                       | AI 1-8                 | H1.0/14            | 216-203      |
|                        |       | 10                            | 12                                       | AI 1-10                | H1.0/16            | 216-243      |
| 1.25/1.5               | 17/16 | 8                             | 10                                       | AI 1,5-8               | H1.5/14            | 216-204      |
|                        |       | 10                            | 12                                       | AI 1,5-10              | H1.5/16            | 216-244      |
| Recommended crimp tool |       |                               | CRIMPFOX6<br>CRIMPFOX6T-F<br>CRIMPFOX10S | PZ6 roto               | Variocrimp4        |              |

- Note:**
1. Make sure that the outer diameter of the wire coating is smaller than the inner diameter of the insulation sleeve of the recommended ferrule.
  2. Make sure that the ferrule processing dimensions conform to the following figures.

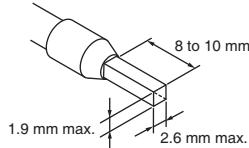


### Recommended Flat-blade Screwdriver

Use a flat-blade screwdriver to connect and remove wires.

Use the following flat-blade screwdriver.

The following table shows manufacturers and models as of 2015/Dec.

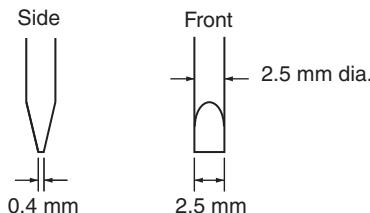

| Model                          | Manufacturer    |
|--------------------------------|-----------------|
| ESD 0,40X2,5                   | Wera            |
| SZS 0,4X2,5<br>SZF 0-0,4X2,5 * | Phoenix Contact |
| 0,4X2,5X75 302                 | Wiha            |
| AEF.2,5X75                     | Facom           |
| 210-719                        | Wago            |
| SDI 0,4X2,5X75                 | Weidmuller      |

\*OMRON's exclusive purchase model XW4Z-00B is available to order as SZF 0-0,4X2,5 (manufactured by Phoenix Contact).

### EN/IEC Standard Compliance

- Refer to the contents of this datasheet for cable selection and other conditions for compliance with EMC standards.

### Precaution on EN Standard Compliance


The K8DT complies with EN 60947-5-1 when it is built into a panel, but observe the following handling methods to ensure compliance with the requirements of this standard.

### Wiring

Overvoltage category III

Pollution degree 2

- Open-frame Device
- If basic, double, or reinforced insulation is required, use the basic, double, or reinforced insulation defined in IEC 60664 that is suitable for the maximum applied voltage for the clearance, solid insulation, and other factors.
- There is basic insulation between the power supply terminals and input terminals.
- There is basic insulation between the power supply terminals and output terminals.
- There is basic insulation between the input terminals and output terminals.
- Operating section must have reinforced or double insulation.
- The sides of the case are not isolated.
- Connect the output contacts (contacts with different polarity) so that they reach the same potential.

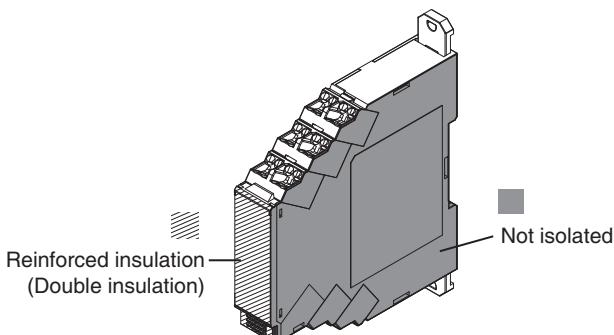

# Terms and Conditions Agreement

## **Read and understand this catalog.**

Please read and understand this catalog before purchasing the products. Please consult your OMRON representative if you have any questions or comments.

## **Warranties.**

- (a) Exclusive Warranty. Omron's exclusive warranty is that the Products will be free from defects in materials and workmanship for a period of twelve months from the date of sale by Omron (or such other period expressed in writing by Omron). Omron disclaims all other warranties, express or implied.
- (b) Limitations. OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, ABOUT NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OF THE PRODUCTS. BUYER ACKNOWLEDGES THAT IT ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE.

Omron further disclaims all warranties and responsibility of any type for claims or expenses based on infringement by the Products or otherwise of any intellectual property right. (c) Buyer Remedy. Omron's sole obligation hereunder shall be, at Omron's election, to (i) replace (in the form originally shipped with Buyer responsible for labor charges for removal or replacement thereof) the non-complying Product, (ii) repair the non-complying Product, or (iii) repay or credit Buyer an amount equal to the purchase price of the non-complying Product; provided that in no event shall Omron be responsible for warranty, repair, indemnity or any other claims or expenses regarding the Products unless Omron's analysis confirms that the Products were properly handled, stored, installed and maintained and not subject to contamination, abuse, misuse or inappropriate modification. Return of any Products by Buyer must be approved in writing by Omron before shipment. Omron Companies shall not be liable for the suitability or unsuitability or the results from the use of Products in combination with any electrical or electronic components, circuits, system assemblies or any other materials or substances or environments. Any advice, recommendations or information given orally or in writing, are not to be construed as an amendment or addition to the above warranty.

See <http://www.omron.com/global/> or contact your Omron representative for published information.

## **Limitation on Liability; Etc.**

OMRON COMPANIES SHALL NOT BE LIABLE FOR SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR PRODUCTION OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED IN CONTRACT, WARRANTY, NEGLIGENCE OR STRICT LIABILITY.

Further, in no event shall liability of Omron Companies exceed the individual price of the Product on which liability is asserted.

## **Suitability of Use.**

Omron Companies shall not be responsible for conformity with any standards, codes or regulations which apply to the combination of the Product in the Buyer's application or use of the Product. At Buyer's request, Omron will provide applicable third party certification documents identifying ratings and limitations of use which apply to the Product. This information by itself is not sufficient for a complete determination of the suitability of the Product in combination with the end product, machine, system, or other application or use. Buyer shall be solely responsible for determining appropriateness of the particular Product with respect to Buyer's application, product or system. Buyer shall take application responsibility in all cases.

NEVER USE THE PRODUCT FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY OR IN LARGE QUANTITIES WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT(S) IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

## **Programmable Products.**

Omron Companies shall not be responsible for the user's programming of a programmable Product, or any consequence thereof.

## **Performance Data.**

Data presented in Omron Company websites, catalogs and other materials is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of Omron's test conditions, and the user must correlate it to actual application requirements. Actual performance is subject to the Omron's Warranty and Limitations of Liability.

## **Change in Specifications.**

Product specifications and accessories may be changed at any time based on improvements and other reasons. It is our practice to change part numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the Product may be changed without any notice. When in doubt, special part numbers may be assigned to fix or establish key specifications for your application. Please consult with your Omron's representative at any time to confirm actual specifications of purchased Product.

## **Errors and Omissions.**

Information presented by Omron Companies has been checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical or proofreading errors or omissions.

**OMRON Corporation      Industrial Automation Company****Kyoto, JAPAN****Contact: [www.ia.omron.com](http://www.ia.omron.com)****Regional Headquarters****OMRON EUROPE B.V.**

Wegalaan 67-69, 2132 JD Hoofddorp

The Netherlands

Tel: (31)2356-81-300/Fax: (31)2356-81-388

**OMRON ASIA PACIFIC PTE. LTD.**No. 438A Alexandra Road # 05-05/08 (Lobby 2),  
Alexandra Technopark,  
Singapore 119967  
Tel: (65) 6835-3011/Fax: (65) 6835-2711**OMRON ELECTRONICS LLC**2895 Greenspoint Parkway, Suite 200  
Hoffman Estates, IL 60169 U.S.A.  
Tel: (1) 847-843-7900/Fax: (1) 847-843-7787**OMRON (CHINA) CO., LTD.**Room 2211, Bank of China Tower,  
200 Yin Cheng Zhong Road,  
PuDong New Area, Shanghai, 200120, China  
Tel: (86) 21-5037-2222/Fax: (86) 21-5037-2200**Authorized Distributor:**© OMRON Corporation 2016 All Rights Reserved.  
In the interest of product improvement,  
specifications are subject to change without notice.CSM\_1\_6\_0617  
Cat. No. N203-E1-01

0316 (0316)

**Данный компонент на территории Российской Федерации****Вы можете приобрести в компании MosChip.**

Для оперативного оформления запроса Вам необходимо перейти по данной ссылке:

<http://moschip.ru/get-element>

Вы можете разместить у нас заказ для любого Вашего проекта, будь то серийное производство или разработка единичного прибора.

В нашем ассортименте представлены ведущие мировые производители активных и пассивных электронных компонентов.

Нашей специализацией является поставка электронной компонентной базы двойного назначения, продукции таких производителей как XILINX, Intel (ex.ALTERA), Vicor, Microchip, Texas Instruments, Analog Devices, Mini-Circuits, Amphenol, Glenair.

Сотрудничество с глобальными дистрибуторами электронных компонентов, предоставляет возможность заказывать и получать с международных складов практически любой перечень компонентов в оптимальные для Вас сроки.

На всех этапах разработки и производства наши партнеры могут получить квалифицированную поддержку опытных инженеров.

Система менеджмента качества компании отвечает требованиям в соответствии с ГОСТ Р ИСО 9001, ГОСТ Р В 0015-002 и ЭС РД 009

**Офис по работе с юридическими лицами:**

105318, г.Москва, ул.Щербаковская д.3, офис 1107, 1118, ДЦ «Щербаковский»

Телефон: +7 495 668-12-70 (многоканальный)

Факс: +7 495 668-12-70 (доб.304)

E-mail: [info@moschip.ru](mailto:info@moschip.ru)

Skype отдела продаж:

moschip.ru  
moschip.ru\_4

moschip.ru\_6  
moschip.ru\_9