

# Analog Control 3623 and 4623 ChiP DCMs Evaluation Board

Arthur Russell  
VI Chip® Applications Engineering  
October 2014



| Contents                                                          | Page               |
|-------------------------------------------------------------------|--------------------|
| <a href="#">Introduction</a>                                      | <a href="#">1</a>  |
| <a href="#">Contents</a>                                          | <a href="#">3</a>  |
| <a href="#">Features</a>                                          | <a href="#">3</a>  |
| <a href="#">Board Description</a>                                 | <a href="#">4</a>  |
| <a href="#">General Components</a>                                | <a href="#">4</a>  |
| <a href="#">Test Points Description</a>                           | <a href="#">6</a>  |
| <a href="#">Schematic, Assembly Drawing and Bill of Materials</a> | <a href="#">7</a>  |
| <a href="#">Recommended Test Equipment</a>                        | <a href="#">14</a> |
| <a href="#">Basic Connections</a>                                 | <a href="#">14</a> |
| <a href="#">Board Operation Details</a>                           | <a href="#">14</a> |
| <a href="#">Trim Control</a>                                      | <a href="#">15</a> |
| <a href="#">Fault Monitoring</a>                                  | <a href="#">15</a> |
| <a href="#">Chassis Ground</a>                                    | <a href="#">16</a> |
| <a href="#">Paralleling</a>                                       | <a href="#">16</a> |

## Introduction

The Analog Control 3623 and 4623 ChiP DCM evaluation boards described in this document are designed to be used with the DCM family of isolated, DC-DC converters. The 3623 DCM board is used for the analog control, low input voltage 3623 ChiP products, while the 4623 DCM board is used for the analog control, high input voltage (offline) 4623 ChiP products.

The DCM evaluation board can be configured for various enabling and fault monitoring schemes, as well as to exercise various modes of trimming, depending on the application requirements. The evaluation board can be used to evaluate DCMs in either a stand-alone configuration, or as an array of modules.

### Enable options:

1. On-board mechanical switch (default)
2. External control

### Trim options:

1. Fixed trim operation (default): the TR pin is permitted to float at initial startup. The DCM disables output trimming and the output trim is programmed to the nominal rated  $V_{OUT}$ .
2. Variable trim operation, on-board variable resistor: The trim pin voltage is ratiometric, with a rheostat working against a pull-up resistor inside the DCM to VCC.
3. Variable trim operation, off-board control: The trim pin voltage is controlled via external programming control, which is referenced to the -IN of each specific DCM in the system.

### Fault monitor options:

1. On-board LED: the FT pin drives a visible LED for visual feedback on fault status.
2. On-board optocoupler: the FT pin drives an on-board optocoupler to bring fault status across the primary-secondary isolation boundary.



#### **IMPORTANT NOTICE:**

Hazardous voltages are present on the DCM Evaluation Board under power.

**PERSONAL CONTACT WITH LINE VOLTAGE MAY RESULT IN SEVERE INJURY, DISABILITY, OR DEATH. IMPROPER OR UNSAFE HANDLING OF THIS BOARD MAY RESULT IN SERIOUS INJURY OR DEATH.**

Read the precautions below entirely BEFORE using the DCM Evaluation Board. Do not operate the evaluation board unless you have the appropriate safety precautions in place on your bench to guarantee safety.

The list below is not comprehensive and is not a substitute for common sense and good practice.

- During operation, the power devices and surrounding structures can be operated safely at high temperatures.
- Remove power and use caution when connecting and disconnecting test probes and interface lines to avoid inadvertent short circuits and contact with hot surfaces.
- Never use a jumper in place of the fuse.
- When testing electronic products always use approved safety glasses. Follow good laboratory practice and procedures.
- Avoid creating ground loops when making measurements of the isolated input or output voltage.
- Care should be taken to protect the user from accidental contact when under power.
- Care should be taken to avoid reversing polarities if connecting to the opposite (solder) side of the board.
- The product evaluation boards described in this document are designed for general laboratory evaluation, and are not suitable for installation in end user equipment.
- Refer to the specific DCM module data sheet for electrical, thermal, and mechanical product details

---

These boards provide a convenient way to evaluate/demonstrate the performance of Vicor's DCM products. Kelvin connections are provided for accurate voltage measurements on power nodes. Sockets are provided to permit quick installation and changing of bulk filtering capacitors. The evaluation board also provides lugs for input/output connections, test points and sockets for easy connection to standard test-equipment, and a high performance air cooled heatsink assembly.

## Contents

The evaluation board arrives with the following contents:

- 1 x DCM evaluation board
- 1 x top and belly heatsink assembly (pre-installed)
- 1 x hardware kit

## Features

The DCM evaluation board has the following features:

1. Input and output lugs for source and load connections
2. Input fuse (appropriately rated)
3. Basic input filtering, including sockets to add through-hole input aluminum-electrolytic capacitors for additional source decoupling

**Note:** The filtering used in the eval board is for demonstration purposes only and might not be the optimal solution for all applications. For optimal filter design for parallel array application, consult the datasheet of the DCM in use and the online filter design tool at:

<http://app2.vicorpower.com/filterDesign/intiFilter.do>

4. Basic output filtering, including sockets to add through-hole output aluminum-electrolytic capacitors
5. Toggle switch for enabling and disabling the DCM via the ENABLE pin
6. Trim control selection
  - a. Using potentiometer
  - b. Using external voltage source
  - c. Open, to disable trimming and latch the model nominal trim condition
7. Provisions to replace input and output differential mode inductors with wire loops, for oscilloscope/shunt based current measurements
8. Oscilloscope probe jack for accurate, high frequency output voltage measurements
9. Dual paralleling connectors for ENABLE, TRIM, FAULT and SGND signal connections, for daisy chaining control to other DCM evaluation boards in an array
10. Kelvin voltage test points for all power pins
11. Top and bottom heatsink assembly for the DCM

---

## Board Description

The following section provides a detailed description of the evaluation board components, test points and sockets.

### General Components

1. DCM (PS01)
2. Input lugs: Sized for #10 hardware. Use these for making connection to the input source. This board does not contain reverse polarity protection. Check for proper polarity before applying the power.
3. Input fuse (F01 & F02): Appropriately rated for the DCM model on the board.
4. Input filter: Ceramic input capacitors (C15-C22), filtering inductor (L01) and damping resistor (R08) provide input filtering. Sockets (H01-H02, H03-H04) can be used for easy installation of aluminum-electrolytic input capacitors. The 3623 board also adds H09-H10 for additional input bypassing.
5. Enable / Disable switch (SW01): When actuator is in top position towards “ON” text on the board, the ENABLE pin will be open and the DCM will be enabled. When actuator is in bottom position towards “OFF” text on the board, the ENABLE pin will be connected to SGND and the DCM will be disabled. When switch SW01 is ON, an external voltage source can control the ENABLE state.
6. Header-jumper for trim control (J09): Provides the option to enable the trim function to set the DCM programmed trim value via either the on board trim rheostat or an external voltage source:
  - a. Using potentiometer (R26)
  - b. Using external voltage source.
7. Output lugs: Sized for #10 hardware. Use these lugs to connect the output directly to the load.
8. Output oscilloscope probe Jack (J01): Used for making accurate scope measurements of the output voltage (e.g. ripple). The jack is directly compatible with many common passive voltage probes models. Remove the grounding lead and insulating barrel of the probe and insert the probe tip and barrel directly into the jack, ensuring that the probe tip seats in the center socket of the jack. To avoid the risk of an inadvertent short circuit, do not attempt to install while power is applied.
9. Output filter: Output capacitor (C201), filtering inductor (L02) and damping resistors (R16-R17), and ceramic output capacitors (C02-C05) provide output filtering. Sockets H05-H06, and H03-H04 can be used for easy installation of aluminum-electrolytic output capacitors.
10. High side current sense wire loops: By depopulating the associated inductor and damping resistors, all input or output currents can be passed through a wire loop or use with an oscilloscope current probe. The wire loop is installed at the large pair of plated through-holes near the applicable inductor location.
11. Dual paralleling wire-to-board connectors (J02 and J03): Used for bussing control signals and their reference (ENABLE, SHARE, FAULT, and SGND) across board assemblies during parallel operation. The connector style provides simple “strip and insert” use with 18 – 24 AWG solid wires. Once inserted, a spring loaded barb retains each wire with no need for soldering. To release the wire, insert a thin bladed tool (AVX 06-9276-7001-01-000 or similar) into the slot above each wire entry point.

**Figure 1**  
3623 DCM evaluation  
board photo, top side

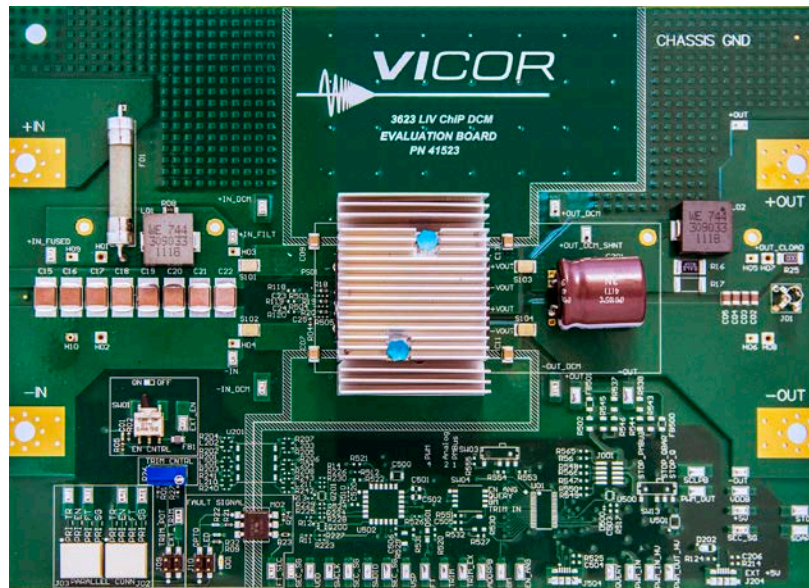


**Figure 2**  
4623 DCM evaluation  
board photo, top side



## Test Points Description

Test nodes are labeled and include a SMT test point for attaching miniature probes, clips or hooks.

**Table 1**  
*Primary referred  
test point descriptions*

| Name                           | Description                                                                                                                                                                                                        |
|--------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| +IN_FUSED,<br>+IN_FILT,<br>-IN | Provide measurement testpoints for the input voltage to the board in various locations, relative to the -IN board lug. +IN_FUSED is taken after input fusing, +IN_FILT is taken after the input filtering network. |
| +IN_DCM,<br>-IN_DCM            | Provide Kelvin connection to input pins of the DCM. Use these test points for measuring the input voltage at the module, excluding errors due to finite connection resistance leading up to the module.            |
| PRI_SG                         | Testpoint for Signal Ground on the primary/input side of the isolation boundary. This is the reference for all primary side control circuitry and all control pins of the DCM.                                     |
| EXT_EN                         | Testpoint to drive the ENABLE signal (relative to PRI_SG) using an external source.                                                                                                                                |
| PRI_EN                         | Testpoint to measure the ENABLE signal (relative to PRI_SG).                                                                                                                                                       |
| EXT_TR                         | Testpoint to drive the TRIM signal (relative to PRI_SG) using an external source.                                                                                                                                  |
| PRI_TR                         | Testpoint to measure the TRIM signal (relative to PRI_SG).                                                                                                                                                         |
| PRI_FT                         | Testpoint to measure the FAULT signal (relative to PRI_SG).                                                                                                                                                        |

**Table 2**  
*Secondary referred  
test point descriptions*

| Name                            | Description                                                                                                                                                                                                                                            |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| +OUT_DCM,<br>-OUT_DCM           | Output voltage test points provide Kelvin connection to output pin group of the DCM. Use these test points for measuring the output voltage at the module, excluding voltage errors due to finite connection resistance and the module output current. |
| +OUT_DCM_SHNT,<br>+OUT,<br>-OUT | Provides measurement testpoints for the output voltage in various locations, relative to the -OUT board lug. +OUT_DCM_SHNT is taken before the output filtering, and +OUT is taken at the +OUT board lug.                                              |
| SEC_SG                          | Testpoints for the +5V bias supply return, and for measuring the FT_SEC fault monitor output.                                                                                                                                                          |
| FT_SEC                          | Testpoint to measure the FAULT signal relative to SEC_SG once it has passed through the opto-coupler, if used. Bias power must be supplied to +5V for voltage output to appear here.                                                                   |
| +5 V                            | Testpoint to provide a bias voltage (relative to secondary ground) for the fault opto-coupler, if used.                                                                                                                                                |

The diagram illustrates a power supply system with the following components and connections:

- Primary Section:**
  - Input filter: J104, J105, J106, J107, J108, J109.
  - Transformer: PS01, 3623 ratio.
  - Resistors: R18, R19, R20, R21, R22, R23, R24, R25, R26, R27, R28, R29, R30, R31, R32, R33, R34, R35, R36, R37, R38, R39, R40, R41, R42, R43, R44, R45, R46, R47, R48, R49, R50, R51, R52, R53, R54, R55, R56, R57, R58, R59, R60, R61, R62, R63, R64, R65, R66, R67, R68, R69, R70, R71, R72, R73, R74, R75, R76, R77, R78, R79, R80, R81, R82, R83, R84, R85, R86, R87, R88, R89, R90, R91, R92, R93, R94, R95, R96, R97, R98, R99, R100, R101, R102, R103, R104, R105, R106, R107, R108, R109, R110, R111, R112, R113, R114, R115, R116, R117, R118, R119, R120, R121, R122, R123, R124, R125, R126, R127, R128, R129, R130, R131, R132, R133, R134, R135, R136, R137, R138, R139, R140, R141, R142, R143, R144, R145, R146, R147, R148, R149, R150, R151, R152, R153, R154, R155, R156, R157, R158, R159, R160, R161, R162, R163, R164, R165, R166, R167, R168, R169, R170, R171, R172, R173, R174, R175, R176, R177, R178, R179, R180, R181, R182, R183, R184, R185, R186, R187, R188, R189, R190, R191, R192, R193, R194, R195, R196, R197, R198, R199, R200, R201, R202, R203, R204, R205, R206, R207, R208, R209, R210, R211, R212, R213, R214, R215, R216, R217, R218, R219, R220, R221, R222, R223, R224, R225, R226, R227, R228, R229, R230, R231, R232, R233, R234, R235, R236, R237, R238, R239, R240, R241, R242, R243, R244, R245, R246, R247, R248, R249, R250, R251, R252, R253, R254, R255, R256, R257, R258, R259, R260, R261, R262, R263, R264, R265, R266, R267, R268, R269, R270, R271, R272, R273, R274, R275, R276, R277, R278, R279, R280, R281, R282, R283, R284, R285, R286, R287, R288, R289, R290, R291, R292, R293, R294, R295, R296, R297, R298, R299, R300, R301, R302, R303, R304, R305, R306, R307, R308, R309, R310, R311, R312, R313, R314, R315, R316, R317, R318, R319, R320, R321, R322, R323, R324, R325, R326, R327, R328, R329, R330, R331, R332, R333, R334, R335, R336, R337, R338, R339, R340, R341, R342, R343, R344, R345, R346, R347, R348, R349, R350, R351, R352, R353, R354, R355, R356, R357, R358, R359, R360, R361, R362, R363, R364, R365, R366, R367, R368, R369, R370, R371, R372, R373, R374, R375, R376, R377, R378, R379, R380, R381, R382, R383, R384, R385, R386, R387, R388, R389, R390, R391, R392, R393, R394, R395, R396, R397, R398, R399, R400, R401, R402, R403, R404, R405, R406, R407, R408, R409, R410, R411, R412, R413, R414, R415, R416, R417, R418, R419, R420, R421, R422, R423, R424, R425, R426, R427, R428, R429, R430, R431, R432, R433, R434, R435, R436, R437, R438, R439, R440, R441, R442, R443, R444, R445, R446, R447, R448, R449, R450, R451, R452, R453, R454, R455, R456, R457, R458, R459, R460, R461, R462, R463, R464, R465, R466, R467, R468, R469, R470, R471, R472, R473, R474, R475, R476, R477, R478, R479, R480, R481, R482, R483, R484, R485, R486, R487, R488, R489, R490, R491, R492, R493, R494, R495, R496, R497, R498, R499, R500, R501, R502, R503, R504, R505, R506, R507, R508, R509, R510, R511, R512, R513, R514, R515, R516, R517, R518, R519, R520, R521, R522, R523, R524, R525, R526, R527, R528, R529, R530, R531, R532, R533, R534, R535, R536, R537, R538, R539, R540, R541, R542, R543, R544, R545, R546, R547, R548, R549, R550, R551, R552, R553, R554, R555, R556, R557, R558, R559, R560, R561, R562, R563, R564, R565, R566, R567, R568, R569, R570, R571, R572, R573, R574, R575, R576, R577, R578, R579, R580, R581, R582, R583, R584, R585, R586, R587, R588, R589, R590, R591, R592, R593, R594, R595, R596, R597, R598, R599, R600, R601, R602, R603, R604, R605, R606, R607, R608, R609, R610, R611, R612, R613, R614, R615, R616, R617, R618, R619, R620, R621, R622, R623, R624, R625, R626, R627, R628, R629, R630, R631, R632, R633, R634, R635, R636, R637, R638, R639, R640, R641, R642, R643, R644, R645, R646, R647, R648, R649, R650, R651, R652, R653, R654, R655, R656, R657, R658, R659, R660, R661, R662, R663, R664, R665, R666, R667, R668, R669, R670, R671, R672, R673, R674, R675, R676, R677, R678, R679, R680, R681, R682, R683, R684, R685, R686, R687, R688, R689, R690, R691, R692, R693, R694, R695, R696, R697, R698, R699, R700, R701, R702, R703, R704, R705, R706, R707, R708, R709, R710, R711, R712, R713, R714, R715, R716, R717, R718, R719, R720, R721, R722, R723, R724, R725, R726, R727, R728, R729, R730, R731, R732, R733, R734, R735, R736, R737, R738, R739, R740, R741, R742, R743, R744, R745, R746, R747, R748, R749, R750, R751, R752, R753, R754, R755, R756, R757, R758, R759, R760, R761, R762, R763, R764, R765, R766, R767, R768, R769, R770, R771, R772, R773, R774, R775, R776, R777, R778, R779, R780, R781, R782, R783, R784, R785, R786, R787, R788, R789, R790, R791, R792, R793, R794, R795, R796, R797, R798, R799, R800, R801, R802, R803, R804, R805, R806, R807

**Figure 3**

The schematic diagram illustrates a power supply system for a medical device, featuring a transformer (4623), a switching regulator (PS01), and various control and protection components. The diagram is divided into three main sections: PRIMARY, SECONDARY, and ISOLATION BARRIER.

**PRIMARY SECTION:** The primary side of the transformer (4623) is connected to the primary winding. The primary winding is connected to the primary input (+IN) and primary output (-IN) of the switching regulator (PS01). The primary output (-IN) is connected to the primary input (+IN) of the switching regulator (PS01). The primary input (+IN) is connected to the primary output (-IN) of the switching regulator (PS01). The primary output (-IN) is connected to the primary input (+IN) of the switching regulator (PS01).

**SECONDARY SECTION:** The secondary side of the transformer (4623) is connected to the secondary winding. The secondary winding is connected to the secondary input (+OUT) and secondary output (-OUT) of the switching regulator (PS01). The secondary output (-OUT) is connected to the secondary input (+OUT) of the switching regulator (PS01). The secondary input (+OUT) is connected to the secondary output (-OUT) of the switching regulator (PS01).

**ISOLATION BARRIER:** The isolation barrier is represented by a dashed line. The primary side of the transformer (4623) is connected to the primary input (+IN) and primary output (-IN) of the switching regulator (PS01). The secondary side of the transformer (4623) is connected to the secondary input (+OUT) and secondary output (-OUT) of the switching regulator (PS01).

**FAULT INDICATOR:** The fault indicator (FAULT\_IND) is connected to the primary input (+IN) and primary output (-IN) of the switching regulator (PS01). The fault indicator (FAULT\_IND) is connected to the primary input (+IN) and primary output (-IN) of the switching regulator (PS01).

**ENABLE CONTROL:** The enable control (ENABLE\_CTRL) is connected to the primary input (+IN) and primary output (-IN) of the switching regulator (PS01). The enable control (ENABLE\_CTRL) is connected to the primary input (+IN) and primary output (-IN) of the switching regulator (PS01).

**TRIM CONTROL:** The trim control (TRIM\_CTRL) is connected to the primary input (+IN) and primary output (-IN) of the switching regulator (PS01). The trim control (TRIM\_CTRL) is connected to the primary input (+IN) and primary output (-IN) of the switching regulator (PS01).

**Figure 4**

## Schematic, Assembly Drawing and Bill of Materials (Cont.)

**Figure 5**  
3623 DCM evaluation board,  
assembly drawing, top side


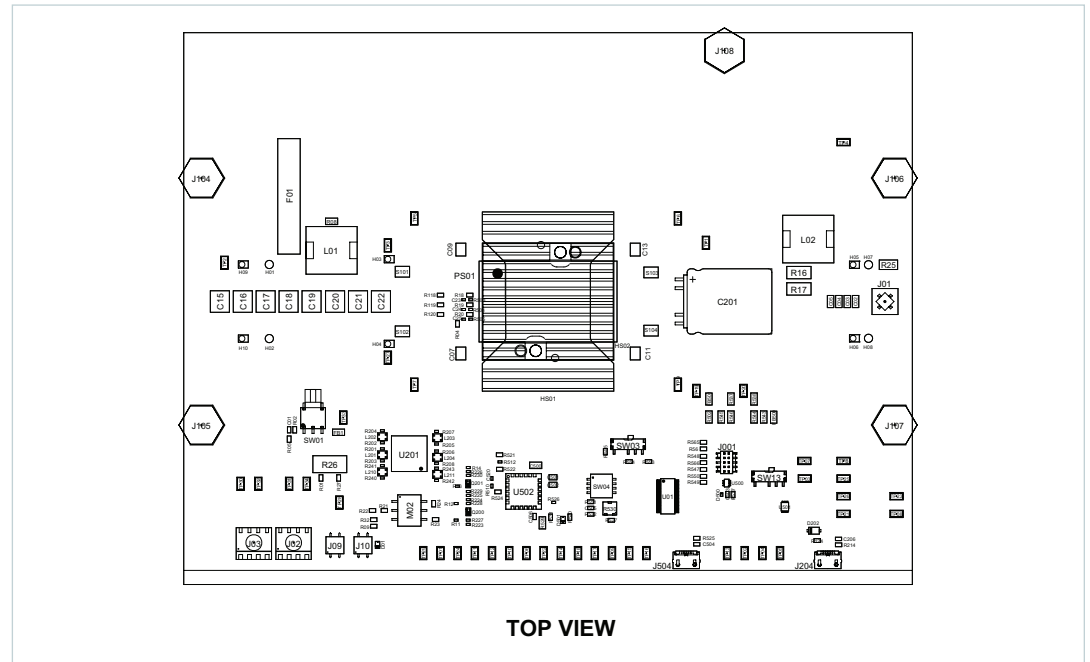


**Figure 6**  
4623 DCM evaluation board  
assembly drawing, top side

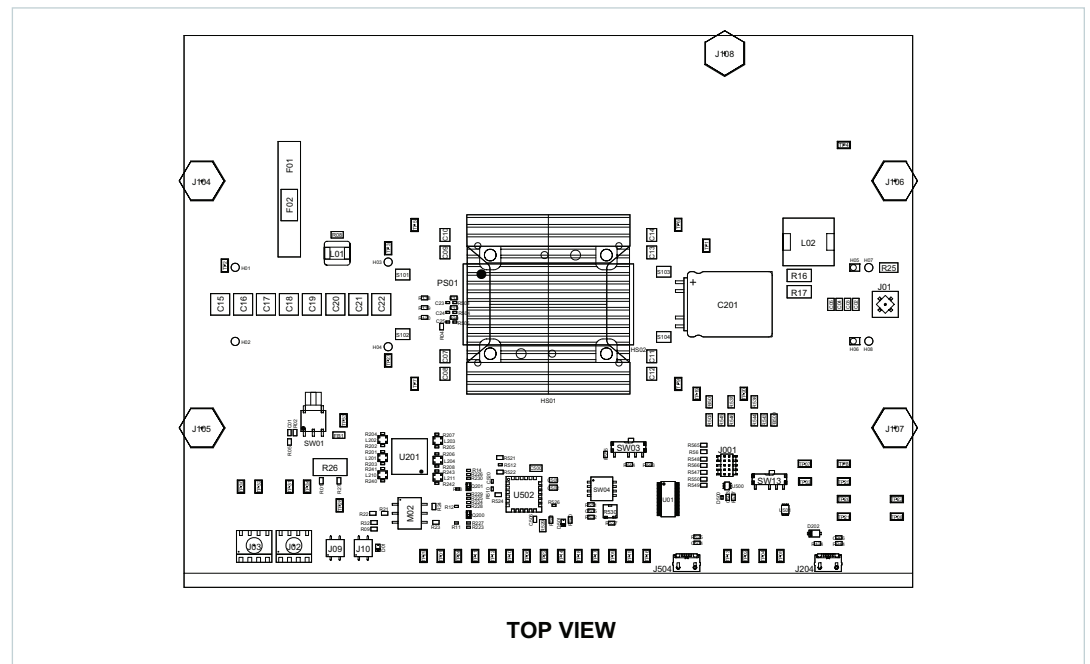

## Schematic, Assembly Drawing and Bill of Materials (Cont.)

**Table 3**  
DCM evaluation board BOM,  
components common  
to all boards

| Reference Designator            | Description                        | Manufacturer        | Manufacturer Part Number |
|---------------------------------|------------------------------------|---------------------|--------------------------|
| <b>Common Components</b>        |                                    |                     |                          |
| C01                             | CAP X7R 0.10μF 10% 16V 0603        | AVX                 | 0603YC104KAT2A           |
| C02 – C05                       | CAP X7S 4.7μF 10% 100V 1206        | AVX                 | 12061Z475KAT2A           |
| C07 – C14                       | Board specific - See table 4 BOMs  |                     |                          |
| C15 – C22                       | Board specific - See table 4 BOMs  |                     |                          |
| C201                            | Design specific - See table 5 BOMs |                     |                          |
| D01                             | LED RED 0805                       | ROHM                | SML-211UTT86             |
| FB1                             | FERRITE BEAD 33 OHM 6A 1206        | MURATA              | BLM31PG330SN1L           |
| F01, F02                        | Design specific - See table 5 BOMs |                     |                          |
| HS01 – HS02                     | Board specific - See table 4 BOMs  |                     |                          |
| J02 – J03                       | CONN 4 POS WIRE TO BOARD           | AVX                 | 009276004021106          |
| J01                             | PCB TP ADAPTER, 3.5mm PROBE        | TESTPATH            | 131-5031-00              |
| L01                             | Board specific - See table 4 BOMs  |                     |                          |
| L02                             | IND 0.33μH 20% 50A                 | WURTH               | 744309033                |
| M02                             | IC 6 PIN OPTO                      | VISHAY              | CNY17-3X017T             |
| R02, R04, R05,<br>R18, R19, R20 | RES 0 OHM JUMPER 0603              | KOA                 | RK73Z1JTDD               |
| PS01                            | Design specific - See table 5 BOMs | VICOR               |                          |
| R08                             | RES 1 OHM ¼ W 5% 1206              | KOA                 | RK73B2BTE1R0J            |
| R16                             | RES 250 mOHM 1W 2512               | VISHAY              | WSL2512R2500FEA          |
| R09, R21                        | RES 1 KOHM 1/10W 5% 0603           | KOA                 | RK73B1JTDD102J           |
| R22, R32                        | RES 49.9 KOHM 1/10W 1% 0603        | KOA                 | RK73H1JTDD4992F          |
| R23                             | RES 4.99 KOHM 1/1W 0.1% 0603       | THIN FILM TECH      | CR0603E4991B-T5          |
| R24, R01                        | RES 0 OHM JUMPER 0603              | KOA                 | RK73Z1JTDD               |
| R25                             | RES 0 OHM JUMPER 2010              | VISHAY              | CRCW20100000Z0EF         |
| R26                             | RES TRIM POT 500 KOHM 1/2W 10%     | COPAL               | CT-94EW504               |
| S102 - S104                     | RES 0 OHM JUMPER 1612 COPPER       | EXCELTOOL & DIE     | 29581                    |
| SW01                            | SW TOGGLE SPDT 1 POS               | C&K COMPO-<br>NENTS | GT11MSABE                |
| JMPSOK for<br>J09 – J10         | JUMPER SOCKET XJ8A                 | OMRON               | XJ8A-0211                |

## Schematic, Assembly Drawing and Bill of Materials: (Cont.)

**Table 4a**

BOM additions, components  
common to all 3623 DCM  
evaluation boards

| Reference Designator         | Description                           | Manufacturer     | Manufacturer Part Number |
|------------------------------|---------------------------------------|------------------|--------------------------|
| <b>3623 board components</b> |                                       |                  |                          |
| C07, C09, C11, C13           | CAP X7R 4700pF 10% 2kV 1210           | KEMET            | C1210C472KGRAC7800       |
| C08, C10, C12, C14           | N/A (not present in design)           | N/A              | N/A                      |
| C15 – C22                    | CAP X7R 4.7μF 20% 100V 2220           | TDK              | C5750X7R2A475M230KA      |
| L01                          | IND 0.33μH 20% 50A                    | WURTH            | 744309033                |
| HS01 - HS02                  | 3623 DUAL HTSNK                       | VICOR            | 40526                    |
| S101                         | RES 0 OHM JUMPER 1612 COPPER          | EXCELTOOL & DIE  | 29581                    |
| C <sub>IN</sub> @ H01 - H02  | CAP ALEL 680μF 20% 63V RADIAL 18 X 20 | UNITED CHEMI CON | ELXZ630ELL681MM20S       |

**Table 4b**

BOM additions, components  
common to all 4623 DCM  
evaluation boards

| Reference Designator         | Description                  | Manufacturer     | Manufacturer Part Number |
|------------------------------|------------------------------|------------------|--------------------------|
| <b>4623 board components</b> |                              |                  |                          |
| C07 – C14                    | CAP X7R 4700pF 10% 2kV 1210  | KEMET            | C1210C472KGRAC7800       |
| C15 – C22                    | CAP X7T 0.47μF 10% 630V 2220 | TDK              | C5750X7T2J474K250KC      |
| L01                          | IND 1.0μH 20% 13A            | BOURNS           | SRP7030-1R0FM            |
| HS01 - HS02                  | 4623 DUAL HTSNK              | VICOR            | 40519                    |
| S101                         | BEAD 680 OHM 4A 1812         | TAIYO YUDEN      | FBMH4532HM681-T          |
| C <sub>IN</sub> @ H01 - H02  | AP ALEL 10μ 20% 450V RAD     | UNITED CHEMI CON | EKXG451ELL100MK20S       |

## Schematic, Assembly Drawing and Bill of Materials: (Cont.)

**Table 5**

Example: BOM additions,  
components which are  
DCM model specific.

| Reference Designator                                                                        | Description                               | Manufacturer    | Manufacturer Part Number                                                                                             |
|---------------------------------------------------------------------------------------------|-------------------------------------------|-----------------|----------------------------------------------------------------------------------------------------------------------|
| <b>Evaluation board number: DCM3623E50M06A8M00</b>                                          |                                           |                 |                                                                                                                      |
| PS01                                                                                        | DCM - 3623                                | VICOR           | DCM3623T50M06A8M00                                                                                                   |
| F01                                                                                         | FUSE 30A 125V AXIAL                       | LITTELFUSE      | 324 030P                                                                                                             |
| C201                                                                                        | CAP ALEL 10000µF 20% 10V RADIAL 18 x 26.5 | NICHICON        | URS1A103MHD1TN                                                                                                       |
| <b>Evaluation board number: DCM3623E50M13C2M00</b>                                          |                                           |                 |                                                                                                                      |
| PS01                                                                                        | DCM - 3623                                | VICOR           | DCM3623T50M13C2M00                                                                                                   |
| F01                                                                                         | FUSE 30A 125V AXIAL                       | LITTELFUSE      | 324 030P                                                                                                             |
| C201                                                                                        | CAP ALEL 4700µF 20% 25V RADIAL 16 x 25    | NICHICON        | UVY1E472MHD                                                                                                          |
| <b>Evaluation board number: DCM3623E50M17C2M00</b>                                          |                                           |                 |                                                                                                                      |
| PS01                                                                                        | DCM - 3623                                | VICOR           | DCM3623T50M17C2M00                                                                                                   |
| F02                                                                                         | FUSE 30A 125V AXIAL                       | LITTELFUSE      | 324 030P                                                                                                             |
| C201                                                                                        | CAP ALEL 2200µF 20% 25V RADIAL 16 x 25    | NICHICON        | UPW1E222MHD                                                                                                          |
| <b>Evaluation board numbers: DCM3623E50M26C2M00, DCM3623E50M31C2M00</b>                     |                                           |                 |                                                                                                                      |
| PS01                                                                                        | DCM - 3623                                | VICOR           | One of<br>DCM3623T50M26C2M00<br>DCM3623T50M31C2M00                                                                   |
| F01                                                                                         | FUSE 30A 125V AXIAL                       | LITTELFUSE      | 324 030P                                                                                                             |
| C201                                                                                        | CAP ALEL 1000µF 20% 50V RADIAL 18 x 20    | UNITED CHEMICON | EKY-500ELL102MM20S                                                                                                   |
| <b>Evaluation board number: DCM3623E50M53C2M00</b>                                          |                                           |                 |                                                                                                                      |
| PS01                                                                                        | DCM - 3623                                | VICOR           | DCM3623T50M53C2M00                                                                                                   |
| F01                                                                                         | FUSE 30A 125V AXIAL                       | LITTELFUSE      | 324 030P                                                                                                             |
| C201                                                                                        | CAP ALEL 220µF 20% 80V RADIAL 18 x 16.5   | NICHICON        | UPJ1K221MHD6TN                                                                                                       |
| <b>Evaluation board numbers: DCM4623EC8G16F0T00, DCM4623ED2J13D0X00, DCM4623ED2H26F0X00</b> |                                           |                 |                                                                                                                      |
| PS01                                                                                        | DCM - 4623                                | VICOR           | One of<br>DCM4623TC8G16F0T00<br>DCM4623TD2J13D0T00<br>DCM4623TD2J13D0M00<br>DCM4623TD2H26F0T00<br>DCM4623TD2H26F0M00 |
| F01                                                                                         | FUSE 5A 450V FAST 6.3 X 32 RADIAL         | COOPER BUSSMANN | BK/PCD-5-R                                                                                                           |
| C201                                                                                        | CAP ALEL 1000µF 20% 50V RADIAL 18 x 20    | UNITED CHEMICON | EKY-500ELL102MM20S                                                                                                   |

## Schematic, Assembly Drawing and Bill of Materials: (Cont.)

**Table 5 (Cont.)**

Example: BOM additions,  
components which are  
DCM model specific.

| Reference Designator                                                    | Description                                      | Manufacturer       | Manufacturer Part Number                                                                       |
|-------------------------------------------------------------------------|--------------------------------------------------|--------------------|------------------------------------------------------------------------------------------------|
| <b>Evaluation board numbers: DCM4623ED2H31E0X00, DCM4623ED2H53E0X00</b> |                                                  |                    |                                                                                                |
| PS01                                                                    | DCM - 4623                                       | VICOR              | One of<br>DCM4623TD2H31E0T00<br>DCM4623TD2H31E0M00<br>DCM4623TD2H53E0T00<br>DCM4623T02H53E0M00 |
| F01                                                                     | FUSE 5A 450V FAST 6.3 X 32 RADIAL                | COOPER<br>BUSSMANN | BK/PCD-5-R                                                                                     |
| C201                                                                    | CAP ALEL 220 $\mu$ F 20% 80V RADIAL<br>18 x 16.5 | NICHICON           | UPJ1K221MHD6TN                                                                                 |

### General BOM rules for various DCM Evaluation Boards

- **PS01:** This is the Vicor DCM, whose part number is coded in the evaluation board part number. For example, eval board DCM4623ED2K53E0M00 uses DCM4623TD2K53E0M00.
- **F01:** This is the input fuse. See the datasheet for the specific DCM for appropriate fuse needed to meet listed safety agency approvals.
- **C201:** This is the external output capacitor for the DCM. It is an Aluminum electrolytic with value that satisfies the DCM datasheet  $C_{OUT-TRANS}$  minimum.

---

## Recommended Test Equipment

The following is a list of recommended test equipment.

1. Safety glasses
2. DC power supply: Refer to the specific DCM model datasheet to ensure the supply has sufficient power and current capability, especially at low line, to satisfy current inrush when the DCM is started
3. Electronic load: Refer to the specific DCM model datasheet to ensure the load has sufficient power handling and current capability for testing
4. Cooling fan
5. Digital multi-meters (DMMs)
6. Oscilloscope and probes
7. Function generator
8. Auxiliary bench voltage supply (optional, for bias of secondary side fault monitor opto-coupler)
9. Interconnect wires, cables and fastening hardware
10. Calibrated input and output shunts, appropriately rated
11. Thin bladed tool for extracting wires from paralleling connectors (AVX 06-9276-7001-01-000 or similar)

## Basic Connections

- Confirm bench equipment is powered off.
- Connect the input DC power supply positive lead to the +IN input lug of the evaluation board, connect the input power supply negative lead to the –IN input lug of the evaluation board.
- Connect the CHASSIS\_GROUND lug of the evaluation board to a safety “green wire” earth ground.
- Connect the +OUT lug of the evaluation board to the electronic load positive input, connect the –OUT lug of the evaluation board to the electronic load negative input.
- Direct airflow from the cooling fan through the DCM heatsink fins.
- Have the latest DCM datasheet on hand for reference.

## Board Operation Details

- SW01 provides control over enable.
  - In the “OFF” position, the switch will connect SG the EN net, which disables the DCM.
  - In the “ON” position, SG is disconnected from the EN net.
- External connection to EN is permitted using the PRI\_EN testpoint. SW01 should be set to “ON” to permit external control.
- The J02 & J03 paralleling connectors can be used to connect EN nets across different boards.  
Note: to enable the DCMs in a parallel array, all boards need SW01 set to “ON” to avoid pulling the EN node low.

---

## Trim Control

- Jumper block J09 configures trimming.
  - With no jumpers installed, neither the trim potentiometer nor the test point for external trim control is connected to the TR net. Note that the paralleling connectors always connect to the TR net.
  - With a jumper loaded across J09.1 and J09.2, the trim potentiometer R26 is connected as a rheostat between the TR node and SG.
  - With a jumper loaded across J09.3 and J09.4, the external trim test point is connected to the TR node.
- The DCM contains an internal pull-up resistor to VCC (3.3V nominal). When  $V_{IN}$  is applied to the DCM it samples the TR node voltage. If it has pulled up to VCC, the DCM disables trimming as long as it has input power, and the programmed trim condition will be nominal rated VOUT of the DCM model.
- If the TR node is not permitted to pull-up to VCC when  $V_{IN}$  is applied, trimming is enabled for as long as the DCM has input power.
- Note: Any load on the TR node may cause the DCM to select trim mode when  $V_{IN}$  is applied, including: the external trim testpoint (if selected with the jumper block), the trim potentiometer (if selected with the jumper block), and other DCM evaluation boards attached to the paralleling connectors.
- The trim potentiometer adds a variable resistance between the TR node and SG, from between  $0\Omega$  nominal, to the value of the potentiometer ( $500k\Omega$ ). This resistance range will generate TR pin voltages which cover the entire functional range of the TR pin. Care should be taken to ensure the programmed trim condition is within the rated trim range of the DCM in order for the DCM to meet specifications.
- In a parallel setup using the J02 & J03 paralleling connectors, all boards besides the top one should have the trim jumper select block at J09 open.
- In a parallel setup with multiple DCM evaluation boards, each DCM contributes another internal pull-up resistor to a 3.3V nominal rail. With any resistive based trimming of the TR node, the resultant trim condition will be modified by the number of DCMs which are attached and have  $V_{IN}$  applied. Conversely with a voltage source applied to the TR node, adding additional DCMs to the system has minimal impact on the resultant trim condition.

## Fault Monitoring

- Jumper block J10 configures how the FT node is monitored.
  - With no jumpers installed, neither the visible LED nor the opto-coupler is connected to the FT net. Note that the paralleling connectors always connect to the FT net.
  - With a jumper loaded across J10.3 and J10.4, the visible LED at D01 and its bias resistor network R09 & R32 are connected to the FT node.
  - With a jumper loaded across J10.1 and J10.2, the opto-coupler at M02 and its bias resistor network R21 & R22 is connected to the FT node.
- The DCM FT output is intended to be directly paralleled with the FT output of other DCMs in an array. The FT node in an array forms a “wired-OR”, where any DCM can drive the FT node high.

- Both the visible LED and the opco-coupler draw current from the FT node in a fault condition. The FT pin on the DCM has limited drive-high capabilities, and so care must be taken to avoid excess loading of the pin. To avoid overload, do not configure J10 to use both the LED and opto-coupler indicators simultaneously. When connecting external circuitry or test equipment to the FT test point, ensure that the maximum load on the FT node is within the DCM datasheet ratings.
- In a parallel setup using the J02 & J03 paralleling connectors, all boards besides the top one should have the fault jumper select block at J10 open.
- When using the opto-coupler, the status of the FT node can be easily transferred to the secondary side of the DCM(s) isolation boundary. To resolve the fault state on the secondary side, the collector side of the opto requires a bias voltage. A 5V bench supply should be connected between the "+5V" and "SEC\_SG" testpoints. With no fault present, "FT\_SEC" will be at 0V, and when a fault occurs and the opto-coupler is active, "FT\_SEC" will pull up to 5V, relative to SEC\_SG.

## Chassis Ground

The heatsink assembly of the DCM is connected to the CHASSIS\_GND node of the board, as well as the y-caps from each power connection of the DCM. A connection from the CHASSIS\_GND lug to earth ground is required.

## Paralleling

The paralleling and sharing performance of multiple DCMs can be easily demonstrated by stacking multiple evaluation boards and interconnecting the inputs and outputs with standoffs to create a parallel array. The DCM uses a negative load-line to implement wireless droop-sharing in an array. Each DCM in an array operates in the same way as it does as a stand-alone unit. With equal trim conditions, the load is effectively shared across multiple DCMs. Mismatches in this case are modest, and are further canceled by an effective negative voltage vs. temperature coefficient. See the DCM datasheet for more detail on load line and tempco. DCMs in an array require no derating of maximum output power or current.

DCMs in an array with mismatched trim conditions will not share the load equally at light- to moderate-load conditions. As the load increases, one or more DCMs (starting with those with the highest programmed output trim voltage) will go into current limit and their contribution to the overall output current will plateau. For DCMs, current limit is not a fault condition, rather it is a valid constant-current mode of operation and a DCM in current limit will provide constant current to the load. As long as the load does not exceed the maximum load rating of the array of DCMs, the output voltage will continue to be regulated by any remaining DCMs still in constant voltage mode. Even with mismatched trim conditions, the array can be safely loaded up to the full rated array capacity.

The following connections and settings should be used for an array of DCM evaluation boards:

- All DCMs in a parallel array must be the same model.
- The boards should be physically stacked using metal standoffs at the +IN & -IN lugs, the +OUT & -OUT lugs, and the CHASSIS\_GND lug. This also connects these nodes electrically so that a single source, single load, and earth ground connection can be made to the system.
  - The +IN lugs are not required to be connected together for an array of DCMs. The wireless sharing does not require the same differential input voltage be present on all DCMs in the array. In some applications dissimilar input voltages may be needed, which is fully supported.


- The -IN lugs must be connected together if the paralleling connector is used, or if the EN, TR, or FT pins are interconnected in any fashion. However if all control signals of all DCMs are fully isolated from one another, then both the +IN and -IN lugs can remain independent across the evaluation boards, and the DCMs can be operated with fully independent input supplies.
- Standoffs must be sufficient in length to avoid contact between boards, and to permit airflow to all DCMs in the system.
- If coordinated enable control, trimming or fault monitoring is desired, then the paralleling connectors J09 & J10 can be used to easily interconnect the PRI\_FT, PRI\_EN, PRI\_TR\_ and PRI\_FT nodes across boards.

The paralleling connectors at J02 & J03 can be used for coordinated enable and trim control and fault monitoring. The enable, trim and fault monitor features of the top most board should be used for convenience, while the remaining boards should have their jumper blocks depopulated and enable switches set to enable.

The paralleling wire-to-board connectors (at J02 and J03) are provided to daisy chain control signals and PRI\_SG, with a simple strip and insert option. They will accept 18 – 24 AWG solid wires.

**Figure 7**

*DCM evaluation boards stacked to form a high power parallel array, using common -IN and the paralleling connectors.*

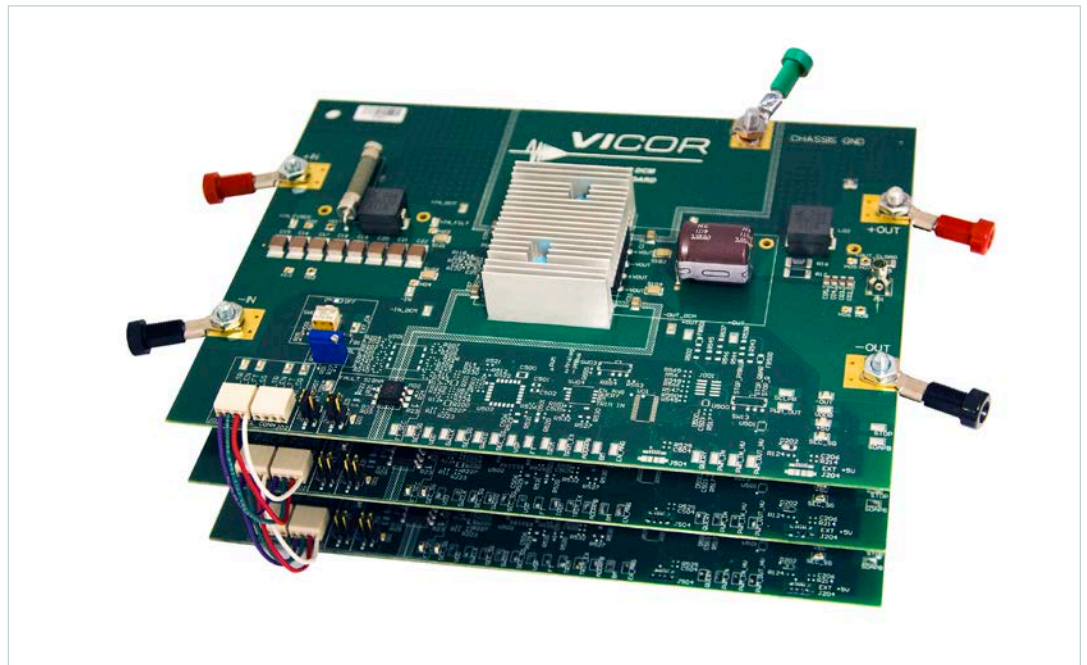

Information furnished by Vicor is believed to be accurate and reliable. However, no responsibility is assumed by Vicor for its use. Vicor components are not designed to be used in applications, such as life support systems, wherein a failure or malfunction could result in injury or death. All sales are subject to Vicor's Terms and Conditions of Sale, which are available upon request.

**Specifications are subject to change without notice.**

# Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

[Vicor:](#)

|                                    |                                    |                                    |                                    |
|------------------------------------|------------------------------------|------------------------------------|------------------------------------|
| <a href="#">DCM3623EA5N06A2T70</a> | <a href="#">DCM3623EA5N13B4T00</a> | <a href="#">DCM3623EA5N26B4T70</a> | <a href="#">DCM3623EA5N17B4T00</a> |
| <a href="#">DCM3623EA5N0480T00</a> | <a href="#">DCM3623EA5N53B4T70</a> | <a href="#">DCM3623EA5N31B4T00</a> | <a href="#">DCM3623EA5N0480T70</a> |
| <a href="#">DCM3623EA5N53B4T00</a> | <a href="#">DCM3623EA5N17B4T70</a> | <a href="#">DCM3623EA5N06A2T00</a> | <a href="#">DCM3623EA5N26B4T00</a> |
| <a href="#">DCM3623EA5N13B4T70</a> | <a href="#">DCM3623EA5N31B4T70</a> | <a href="#">MDCD270P120M500A40</a> | <a href="#">MDCD270P480M500A40</a> |
| <a href="#">MDCD270P240M500A40</a> | <a href="#">MDCD270P280M500A40</a> | <a href="#">MDCD270P050M250A40</a> | <a href="#">MDCD270P150M500A40</a> |
| <a href="#">DCM3623E75X1780T00</a> | <a href="#">DCM3623E75X1780T70</a> | <a href="#">DCM3623E50M06A8M00</a> | <a href="#">DCM3623E50T26A6M00</a> |
| <a href="#">DCM3623E75H53C2T00</a> | <a href="#">DCM3623E36G26C2T00</a> | <a href="#">DCM3623E50T0480M00</a> | <a href="#">DCM3623E50T0680M00</a> |
| <a href="#">DCM4623ED2K04A5M00</a> | <a href="#">DCM4623ED2N06A9T00</a> | <a href="#">DCM4623ED2H15E0T00</a> | <a href="#">DCM4623ED2K31E0M00</a> |
| <a href="#">DCM3623E36G17C2T00</a> | <a href="#">DCM3623E50M04A2M00</a> | <a href="#">DCM4623ED2N13C8T00</a> | <a href="#">DCM4623ED2K26E0M00</a> |
| <a href="#">DCM3623E36G06A8T00</a> | <a href="#">DCM3623E50M31C2M00</a> | <a href="#">DCM3623E50M53C2M00</a> | <a href="#">DCM3623E75H26C2T00</a> |
| <a href="#">DCM3623E75H40C2T00</a> | <a href="#">DCM4623ED2K53E0M00</a> | <a href="#">DCM3623E50M13C2M00</a> | <a href="#">DCM3623E50M17C2M00</a> |
| <a href="#">DCM3623E50T31A6M00</a> | <a href="#">DCM3623E50T53A6M00</a> | <a href="#">DCM3623E75H06A6T00</a> | <a href="#">DCM4623ED2H31E0T00</a> |
| <a href="#">DCM4623ED2H53E0T00</a> | <a href="#">DCM4623ED2N26C8T00</a> | <a href="#">DCM3623E50M26C2M00</a> | <a href="#">DCM3623E75H13C2T00</a> |
| <a href="#">DCM4623EC8G16F0T00</a> | <a href="#">DCM4623ED2J13D0T00</a> | <a href="#">DCM4623ED2K17E0M00</a> | <a href="#">DCM3623E36G31C2T00</a> |
| <a href="#">DCM3623E36G40C2T00</a> | <a href="#">DCM3623E36G53C2T00</a> | <a href="#">DCM4623ED2N53C8T00</a> | <a href="#">DCM3623E50T13A6M00</a> |
| <a href="#">DCM4623ED2K06B5M00</a> | <a href="#">DCM4623ED2N31C8T00</a> | <a href="#">DCM3623E75H31C2T00</a> | <a href="#">DCM4623ED2K13E0M00</a> |
| <a href="#">DCM3623E36G13C2T00</a> | <a href="#">MDCD270P033M150A40</a> | <a href="#">DCM3623E75X5380T00</a> | <a href="#">DCM3623E75X2680T00</a> |
| <a href="#">DCM3623E75X1380T00</a> | <a href="#">DCM3623E75X3180T00</a> | <a href="#">MDCD30AP120M160A50</a> | <a href="#">MDCD30AP480M160A50</a> |
| <a href="#">DCM3623E75H40C2T70</a> | <a href="#">DCM3623E50M53C2M70</a> | <a href="#">DCM3623E50M26C2M70</a> | <a href="#">DCM4623ED2J13D0T70</a> |
| <a href="#">DCM4623ED2N26C8T70</a> | <a href="#">DCM3623E75H31C2T70</a> | <a href="#">DCM3623E50M04A2M70</a> | <a href="#">DCM4623ED2K53E0M70</a> |
| <a href="#">DCM3623E50T17A6M70</a> | <a href="#">DCM4623ED2N53C8T70</a> | <a href="#">DCM4623ED2K13E0M70</a> | <a href="#">DCM4623ED2K04A5M70</a> |
| <a href="#">DCM4623ED2K26E0M70</a> | <a href="#">DCM4623ED2K06B5M70</a> | <a href="#">DCM4623ED2N17C8T70</a> | <a href="#">DCM4623ED2N17C8T00</a> |
| <a href="#">DCM4623ED2K17E0M70</a> | <a href="#">DCM4623ED2N06A9T70</a> | <a href="#">DCM3623E50T0480M70</a> | <a href="#">DCM3623E50M06A8M70</a> |
| <a href="#">DCM3623E50M31C2M70</a> | <a href="#">DCM4623ED2K31E0M70</a> | <a href="#">DCM4623ED2H31E0T70</a> | <a href="#">DCM4623ED2N13C8T70</a> |

## Данный компонент на территории Российской Федерации

**Вы можете приобрести в компании MosChip.**

Для оперативного оформления запроса Вам необходимо перейти по данной ссылке:

<http://moschip.ru/get-element>

Вы можете разместить у нас заказ для любого Вашего проекта, будь то серийное производство или разработка единичного прибора.

В нашем ассортименте представлены ведущие мировые производители активных и пассивных электронных компонентов.

Нашей специализацией является поставка электронной компонентной базы двойного назначения, продукции таких производителей как XILINX, Intel (ex.ALTERA), Vicor, Microchip, Texas Instruments, Analog Devices, Mini-Circuits, Amphenol, Glenair.

Сотрудничество с глобальными дистрибьюторами электронных компонентов, предоставляет возможность заказывать и получать с международных складов практически любой перечень компонентов в оптимальные для Вас сроки.

На всех этапах разработки и производства наши партнеры могут получить квалифицированную поддержку опытных инженеров.

Система менеджмента качества компании отвечает требованиям в соответствии с ГОСТ Р ИСО 9001, ГОСТ РВ 0015-002 и ЭС РД 009

### Офис по работе с юридическими лицами:

105318, г.Москва, ул.Щербаковская д.3, офис 1107, 1118, ДЦ «Щербаковский»

Телефон: +7 495 668-12-70 (многоканальный)

Факс: +7 495 668-12-70 (доб.304)

E-mail: [info@moschip.ru](mailto:info@moschip.ru)

Skype отдела продаж:

moschip.ru

moschip.ru\_4

moschip.ru\_6

moschip.ru\_9