
Foot Grounders - Grounding, **Testing, and Maintenance**

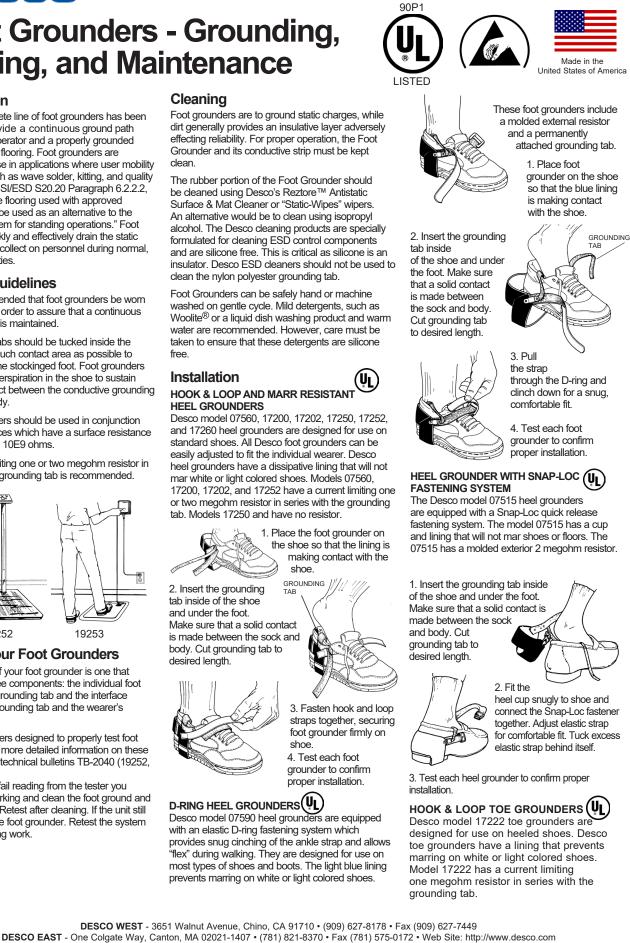

Description

Desco's complete line of foot grounders has been created to provide a continuous ground path between the operator and a properly grounded ESD protected flooring. Foot grounders are designed for use in applications where user mobility is required, such as wave solder, kitting, and quality control. Per ANSI/ESD S20.20 Paragraph 6.2.2.2, "ESD protective flooring used with approved footwear, may be used as an alternative to the wrist strap system for standing operations." Foot grounders quickly and effectively drain the static charges which collect on personnel during normal, everyday activities.


General Guidelines

1. It is recommended that foot grounders be worn on both feet, in order to assure that a continuous path to ground is maintained.

2. Grounding tabs should be tucked inside the shoe with as much contact area as possible to the bottom of the stockinged foot. Foot grounders rely upon the perspiration in the shoe to sustain electrical contact between the conductive grounding tab and the body.

3. Foot grounders should be used in conjunction with floor surfaces which have a surface resistance of less than 1 x 10E9 ohms.

4. A current limiting one or two megohm resistor in series with the grounding tab is recommended.

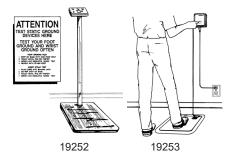

Testing Your Foot Grounders

The best test of your foot grounder is one that includes all three components: the individual foot grounder, the grounding tab and the interface between the grounding tab and the wearer's sweatlaver.

Desco has testers designed to properly test foot grounders. For more detailed information on these testers, ask for technical bulletins TB-2040 (19252, 19253).

If you obtain a fail reading from the tester you should stop working and clean the foot ground and grounding tab. Retest after cleaning. If the unit still fails, replace the foot grounder. Retest the system before beginning work.

Cleaning

Foot grounders are to ground static charges, while dirt generally provides an insulative layer adversely effecting reliability. For proper operation, the Foot Grounder and its conductive strip must be kept clean.

The rubber portion of the Foot Grounder should be cleaned using Desco's Reztore™ Antistatic Surface & Mat Cleaner or "Static-Wipes" wipers. An alternative would be to clean using isopropyl alcohol. The Desco cleaning products are specially formulated for cleaning ESD control components and are silicone free. This is critical as silicone is an insulator. Desco ESD cleaners should not be used to clean the nylon polyester grounding tab.

Foot Grounders can be safely hand or machine washed on gentle cycle. Mild detergents, such as Woolite[®] or a liquid dish washing product and warm water are recommended. However, care must be taken to ensure that these detergents are silicone free

Installation

HOOK & LOOP AND MARR RESISTAN HEEL GROUNDERS

Desco model 07560, 17200, 17202, 17250, 17252, and 17260 heel grounders are designed for use on standard shoes. All Desco foot grounders can be easily adjusted to fit the individual wearer. Desco heel grounders have a dissipative lining that will not mar white or light colored shoes. Models 07560, 17200, 17202, and 17252 have a current limiting one or two megohm resistor in series with the grounding tab. Models 17250 and have no resistor.



2. Insert the grounding tab inside of the shoe and under the foot. Make sure that a solid contact is made between the sock and body. Cut grounding tab to desired length.



D-RING HEEL GROUNDERS

Desco model 07590 heel grounders are equipped with an elastic D-ring fastening system which provides snug cinching of the ankle strap and allows "flex" during walking. They are designed for use on most types of shoes and boots. The light blue lining prevents marring on white or light colored shoes.

1. Place the toe grounder on the shoe so that the lining is making contact with the

shoe

2. Insert the grounding tab inside of the shoe and under the foot. Make sure that a solid contact is made between the sock and body. Cut grounding tab to desired length.




3. Pull fabric strap through cam and lock in place. This will secure toe grounder firmly on shoe.

> 4.Test each toe ground to confirm proper installation.

D-RING TOE GROUNDERS

Desco model 07595 toe grounders with the elastic D-ring fastening system are designed for use on heeled shoes. Desco toe grounders have a blue lining that will prevent marring on white or light colored shoes. These toe grounders include a molded external 2 megohm resistor and a permanently attached grounding tab.

1. Insert the grounding tab inside of the shoe and under the foot. Make sure that a solid contact is made between the sock and body. Cut grounding tab to desired lenath.



2. Place rubber toe material under toe area of shoe sole. Pull strap over top of shoe and cinch down until snug. Install so that the lined surface is making contact with the shoe

3. Pull elastic strap around the back of the heel. Adjust Dring plastic loop for a comfortable fit.

4. Test each toe grounder to confirm proper installation.

SOLE GROUNDERS

Desco model 07501, 07502, and 07503 sole grounders are designed for use on standard shoes. Desco sole grounders are available in three sizes and can be easily adjusted to fit the individual wearer. Sole grounders have a lining that prevents marring on white or light colored shoes. Models 07507, 07508, and 07509 also have a non-marring exterior to prevent marks on floors. Sole grounders have a molded exterior 2 megohm resistor.

1. Place the sole grounder on the shoe so that the lining is making contact with the shoe.

to desired length. 3. Pull the strap through the D-rings and cinch down for a snug,

2. Insert the grounding tab

under the foot. Make

is made between the sock

and body. Cut grounding tab

sure that a solid contact

inside of the shoe and

4 Test each foot grounder to confirm proper installation.

comfortable fit.

FULL COVERAGE GROUNDERS

Desco model 17290, 17291, and 17292 full coverage grounders are designed for use on standard shoes. They can be easily adjusted to fit the individual wearer. They have a lining that will not marr most footwear. These foot grounders have a discrete one megohm resistor built into the grounding tab.



1. Place the full coverage grounder on the shoe so that the lining is making contact with the shoe

2. Insert the grounding tab inside of the shoe and under the foot. Make sure that solid contact is made between the stockinged foot and grounding tab. Cut grounding tab to desired length.





loc fastener together. Adjust elastic strap for comfortable fit. Tuck excess elastic strap

4. Test each full coverage grounder to confirm proper installation.

SOLE GROUNDER WITH SNAP-LOC ίŲ FASTENING SYSTEM


The Desco model 17239 sole grounders are equipped with a Snap-Loc quick release fastening system. The model 17239 has a cup and lining that will not mar shoes or floors. The 17239 has a molded exterior 2 megohm resistor.

1. Place the sole grounder on the shoe so that the lining is making contact with the shoe.





2. Insert the grounding tab inside of the shoe and under the foot. Make sure that a solid contact is made between the sock and body. Cut grounding tab to desired length.



Snap-Loc Fastening System

3.Connect the Snap-Loc fastener together. Adjust elastic strap for comfortable fit. Tuck excess elastic strap behind itself.

4. Test each heel grounder to confirm proper installation

DISPOSABLE FOOT GROUNDERS

1. Insert the conductive grounding tab inside the shoe and under the foot.

2. Pull front and side extension tabs securing Full Coverage Foot Grounder

around the periphery of shoe positioning straps near heel and ball of foot. 3. Then, tuck excess conductive grounding tab into the shoe

4. Test each foot grounder on an ESD footwear tester to confirm proper installation



ATTENTION: This product is not recommended for use on equipment with operating voltage exceeding 250 VAC.

CAUTION: The ESD Series is for electrostatic control. It will not reduce or increase your risk of receiving electric shock when using or working on electrical equipment. Follow the same precautions you would use without wrist straps, includina:

- Make certain that equipment having a grounding type plug is properly grounded.
- Make certain that you are not in contact with grounded objects other than through the ESD Series.

Limited Warranty, Warranty Exclusions, Limit of Liability and RMA Request Instructions

See Desco's Terms and Conditions http://desco.descoindustries.com/Terms-And-Conditions.aspx

DESCO WEST - 3651 Walnut Avenue, Chino, CA 91710 • (909) 627-8178 • Fax (909) 627-7449 DESCO EAST - One Colgate Way, Canton, MA 02021-1407 • (781) 821-8370 • Fax (781) 575-0172 • Web Site: http://www.desco.com







Общество с ограниченной ответственностью «МосЧип» ИНН 7719860671 / КПП 771901001 Адрес: 105318, г.Москва, ул.Щербаковская д.З, офис 1107

Данный компонент на территории Российской Федерации

Вы можете приобрести в компании MosChip.

Для оперативного оформления запроса Вам необходимо перейти по данной ссылке:

http://moschip.ru/get-element

Вы можете разместить у нас заказ для любого Вашего проекта, будь то серийное производство или разработка единичного прибора.

В нашем ассортименте представлены ведущие мировые производители активных и пассивных электронных компонентов.

Нашей специализацией является поставка электронной компонентной базы двойного назначения, продукции таких производителей как XILINX, Intel (ex.ALTERA), Vicor, Microchip, Texas Instruments, Analog Devices, Mini-Circuits, Amphenol, Glenair.

Сотрудничество с глобальными дистрибьюторами электронных компонентов, предоставляет возможность заказывать и получать с международных складов практически любой перечень компонентов в оптимальные для Вас сроки.

На всех этапах разработки и производства наши партнеры могут получить квалифицированную поддержку опытных инженеров.

Система менеджмента качества компании отвечает требованиям в соответствии с ГОСТ Р ИСО 9001, ГОСТ РВ 0015-002 и ЭС РД 009

Офис по работе с юридическими лицами:

105318, г.Москва, ул.Щербаковская д.3, офис 1107, 1118, ДЦ «Щербаковский»

Телефон: +7 495 668-12-70 (многоканальный)

Факс: +7 495 668-12-70 (доб.304)

E-mail: info@moschip.ru

Skype отдела продаж: moschip.ru moschip.ru_4

moschip.ru_6 moschip.ru_9