

Basler Accessories



Technical Specification

CABLE GIGE CAT6 S/STP ONE END WITH SCREW LOCK VERTICAL

Drag Chain Suitable

Order Numbers

2000028340

2000028339

2000028338

Document Number: DG001385

Version: 01 Language: 000 (English)

Release Date: 9 July 2014

Contacting Basler Support Worldwide

Europe:

Basler AG
An der Strusbek 60-62
22926 Ahrensburg
Germany

Tel.: +49 4102 463 515
Fax.: +49 4102 463 599

support.europe@baslerweb.com

Americas:

Basler, Inc.
855 Springdale Drive, Suite 203
Exton, PA 19341
U.S.A.

Tel.: +1 610 280 0171
Fax.: +1 610 280 7608

support.usa@baslerweb.com

Asia:

Basler Asia Pte. Ltd.
35 Marsiling Industrial Estate Road 3
05 - 06
Singapore 739257

Tel.: +65 6367 1355
Fax.: +65 6367 1255

support.asia@baslerweb.com

www.baslerweb.com

**All material in this publication is subject to change without notice and is copyright
Basler AG.**

Order Number	Description	Applicable Cameras
2000028340	Cable GigE CAT6 S/STP one end with screw lock vertical, 5 m	scout GigE, pilot
2000028339	Cable GigE CAT6 S/STP one end with screw lock vertical, 10 m	scout GigE, pilot
2000028338	Cable GigE CAT6 S/STP one end with screw lock vertical, 20 m	scout GigE, pilot

Table 1: Cable Type

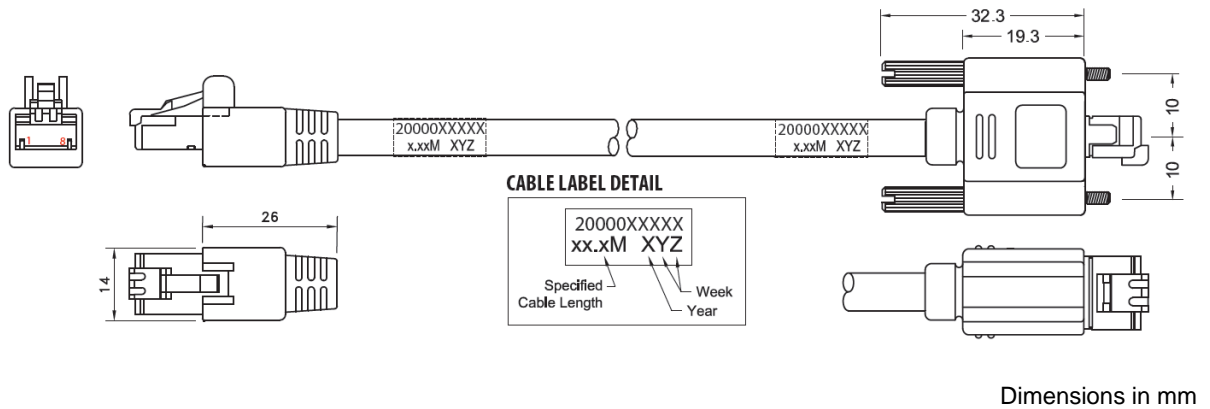


Fig. 1: Cable Overview

Suitability for Drag Chain Applications

All cables mentioned in this document have been tested and declared suitable for use in drag chain applications. For test conditions, see Fig. 2. The cables are guaranteed for 1 million bending cycles.



The bending radius influences the number of bending cycles.

A bending radius larger than the one used during testing, leads to an increase in the number of bending cycles. A smaller bending radius has the opposite effect and results in a lower number of bending cycles.

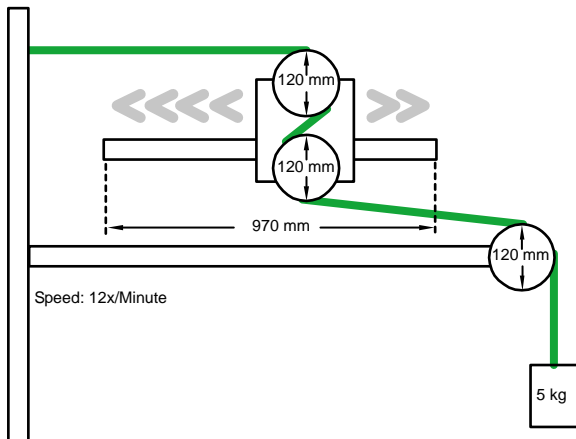


Fig. 2: Test Conditions for Drag Chain Compliance Testing

Read the camera User's Manual including the safety warnings before connecting the cable to the camera. The User's Manual also contains further information about pin assignments, power requirements, as well as comprehensive information about installing and using the camera.

You can download the User's Manual and related documents for your camera free of charge from the Basler website: www.baslerweb.com.

Revision History

Doc. ID Number	Date	Changes
DG00138501000	9 Jul 2014	Initial release of this document.

Данный компонент на территории Российской Федерации

Вы можете приобрести в компании MosChip.

Для оперативного оформления запроса Вам необходимо перейти по данной ссылке:

<http://moschip.ru/get-element>

Вы можете разместить у нас заказ для любого Вашего проекта, будь то серийное производство или разработка единичного прибора.

В нашем ассортименте представлены ведущие мировые производители активных и пассивных электронных компонентов.

Нашей специализацией является поставка электронной компонентной базы двойного назначения, продукции таких производителей как XILINX, Intel (ex.ALTERA), Vicor, Microchip, Texas Instruments, Analog Devices, Mini-Circuits, Amphenol, Glenair.

Сотрудничество с глобальными дистрибьюторами электронных компонентов, предоставляет возможность заказывать и получать с международных складов практически любой перечень компонентов в оптимальные для Вас сроки.

На всех этапах разработки и производства наши партнеры могут получить квалифицированную поддержку опытных инженеров.

Система менеджмента качества компании отвечает требованиям в соответствии с ГОСТ Р ИСО 9001, ГОСТ РВ 0015-002 и ЭС РД 009

Офис по работе с юридическими лицами:

105318, г.Москва, ул.Щербаковская д.3, офис 1107, 1118, ДЦ «Щербаковский»

Телефон: +7 495 668-12-70 (многоканальный)

Факс: +7 495 668-12-70 (доб.304)

E-mail: info@moschip.ru

Skype отдела продаж:

moschip.ru

moschip.ru_4

moschip.ru_6

moschip.ru_9