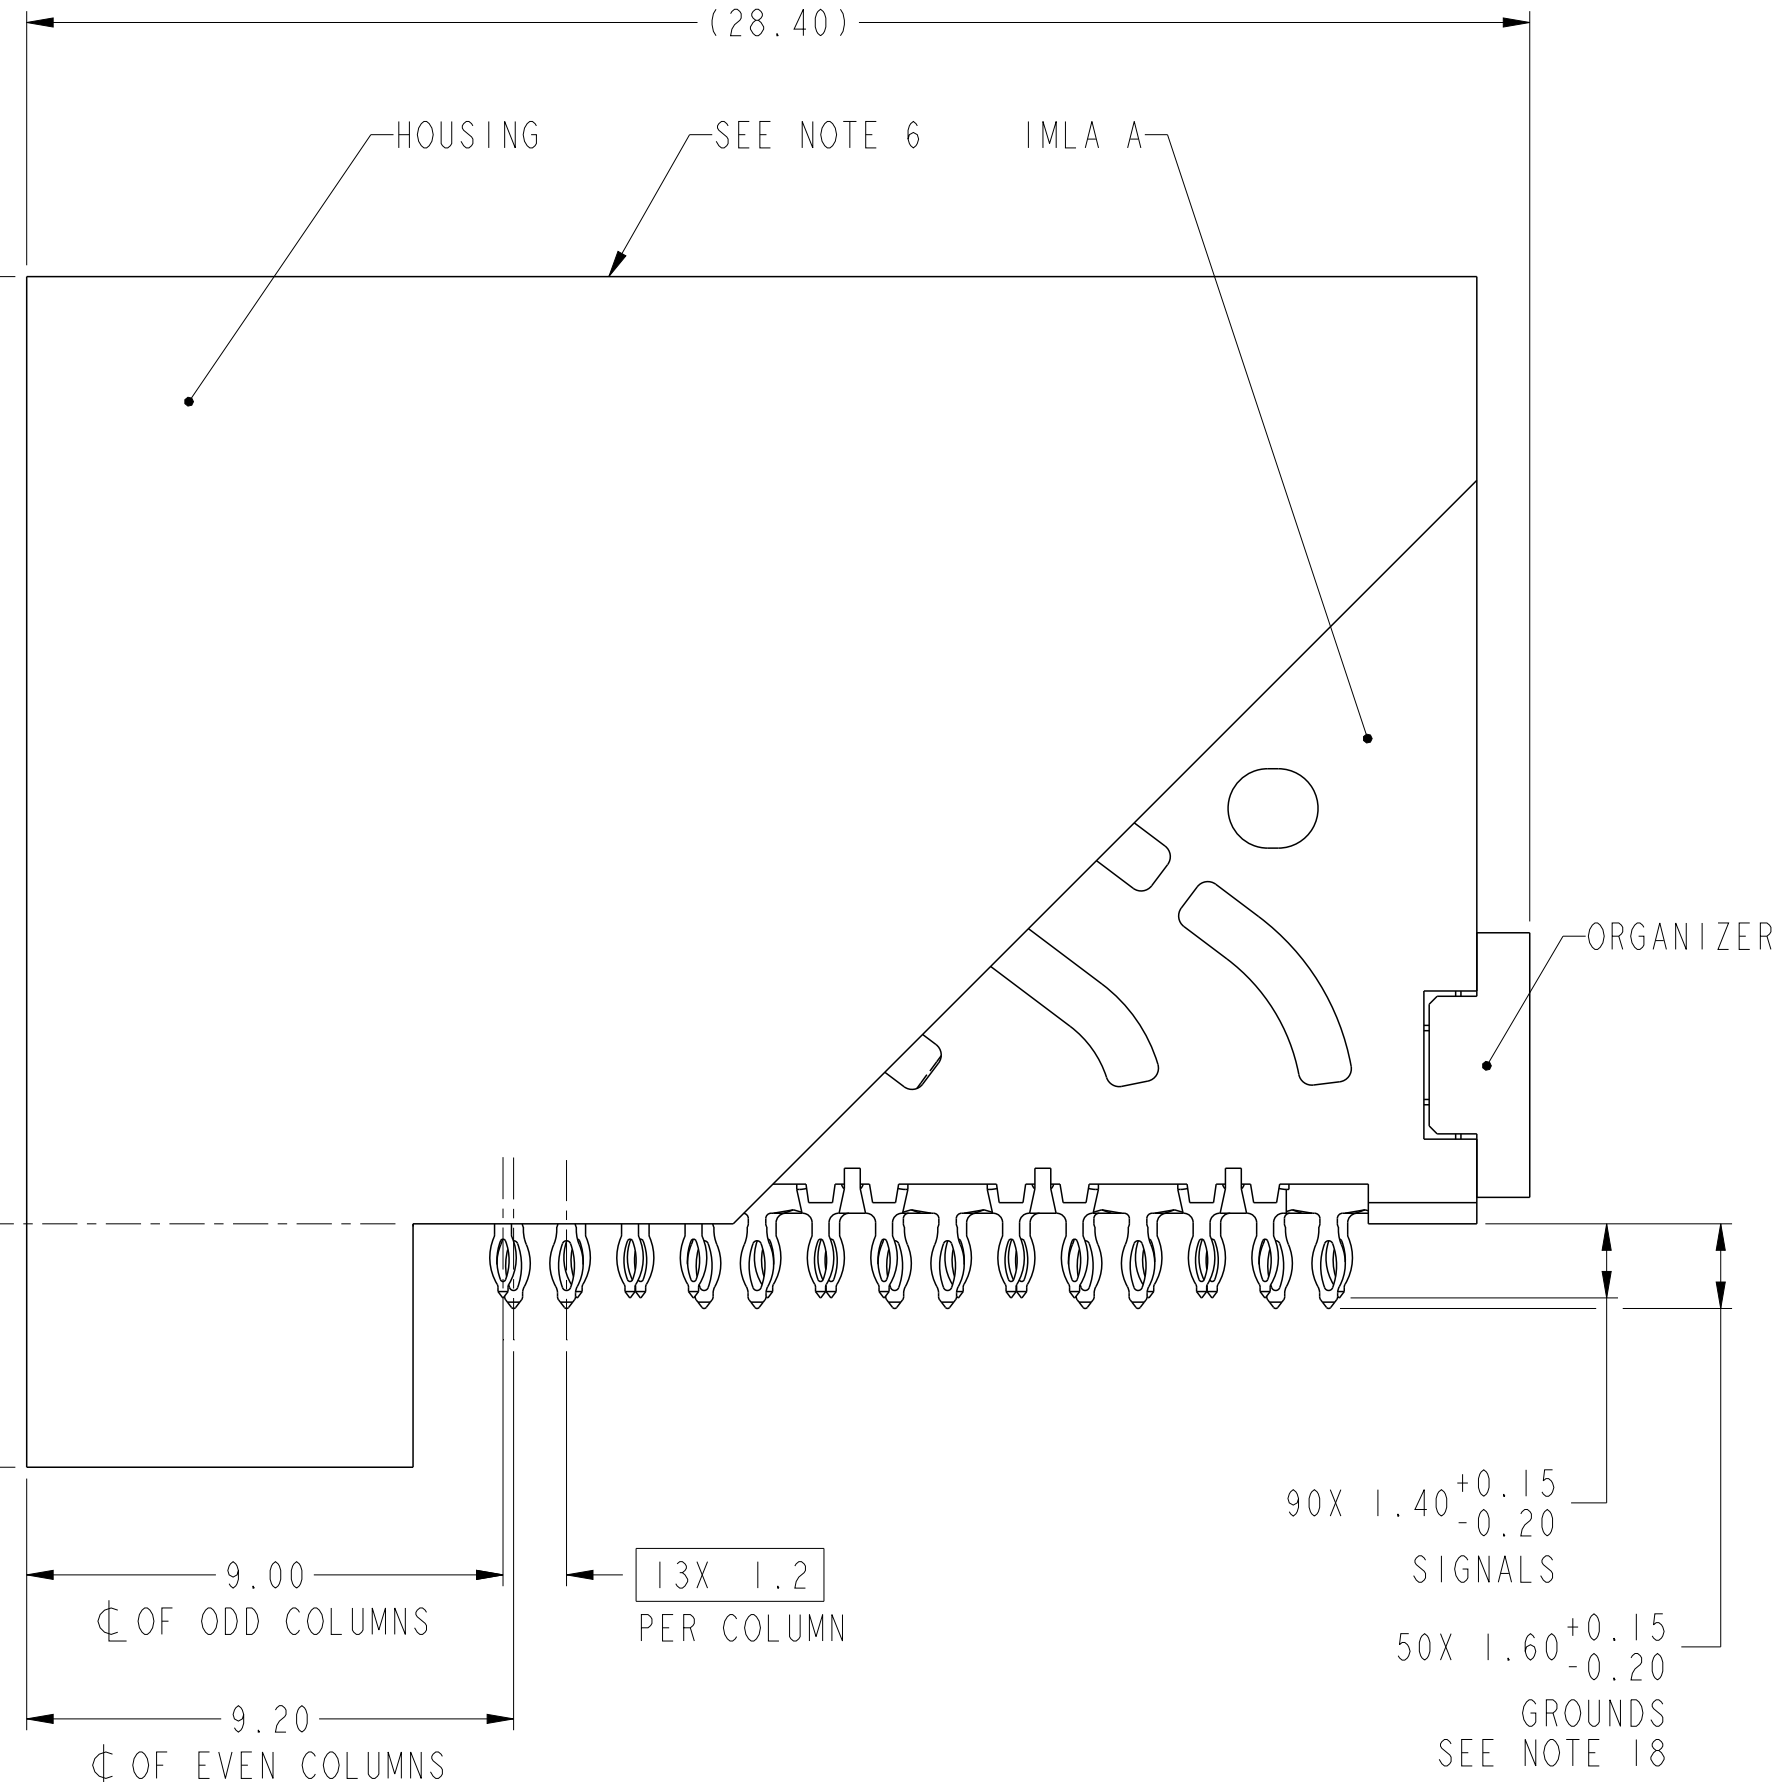
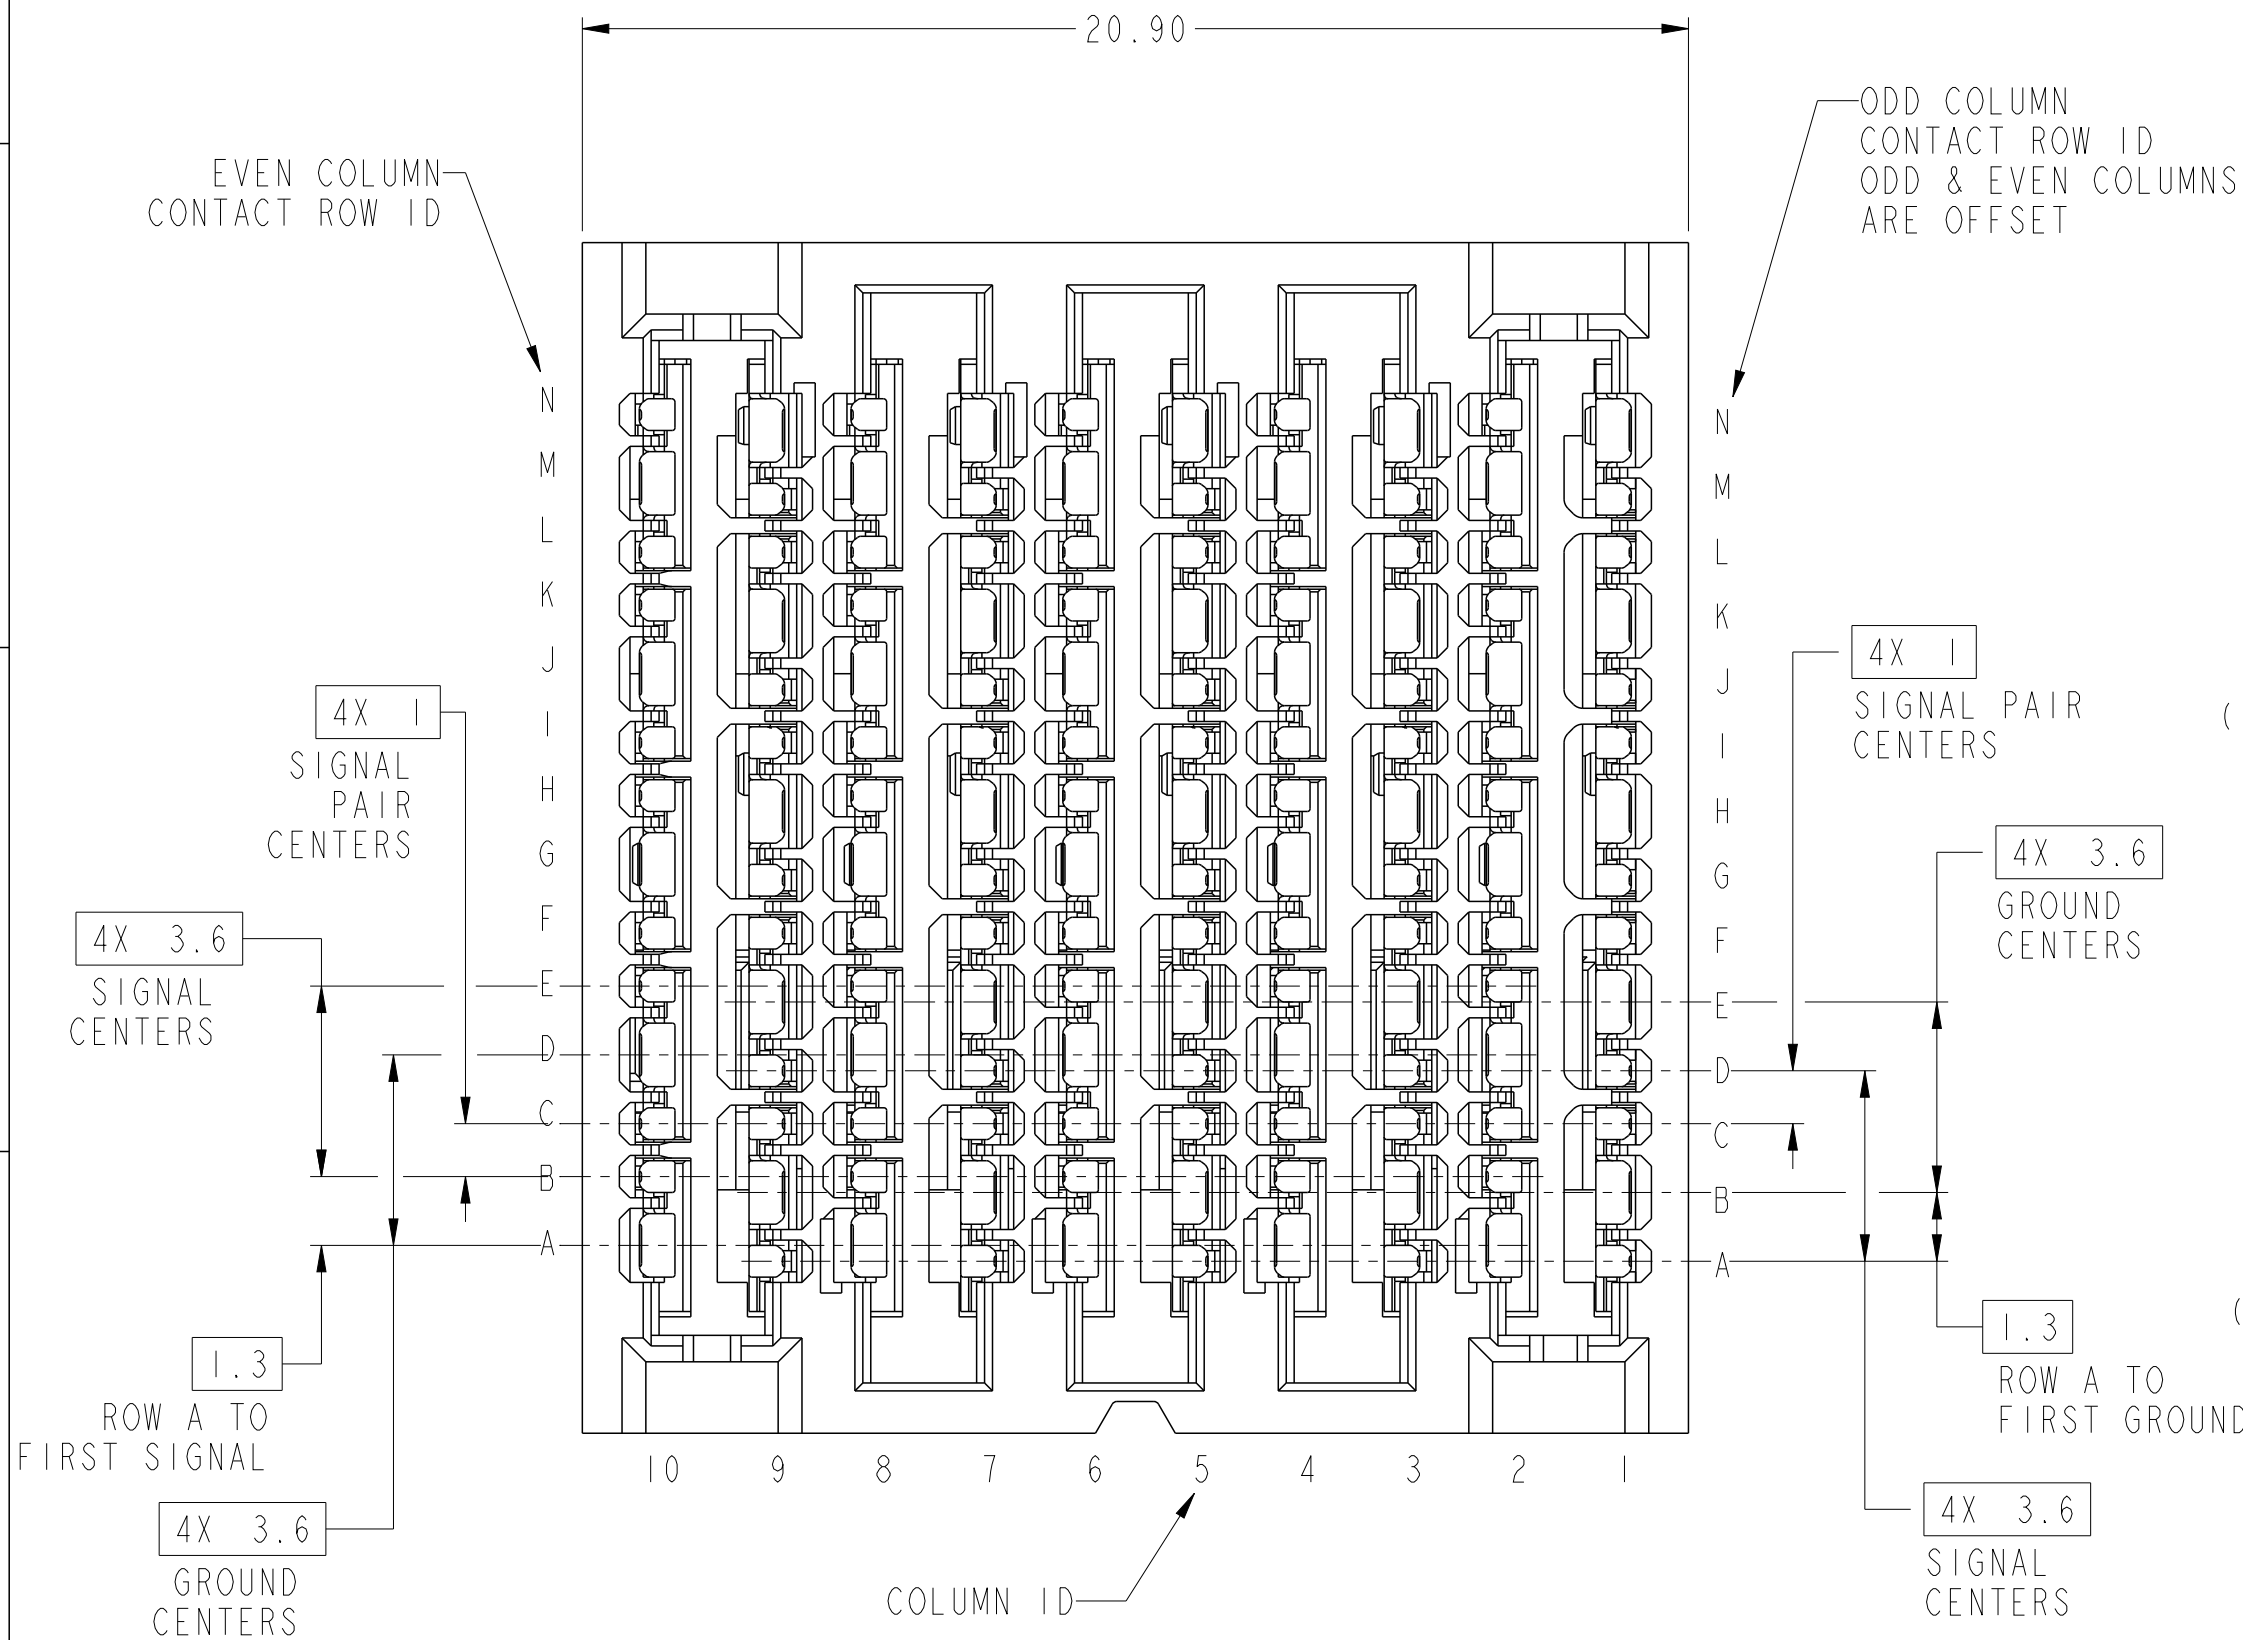
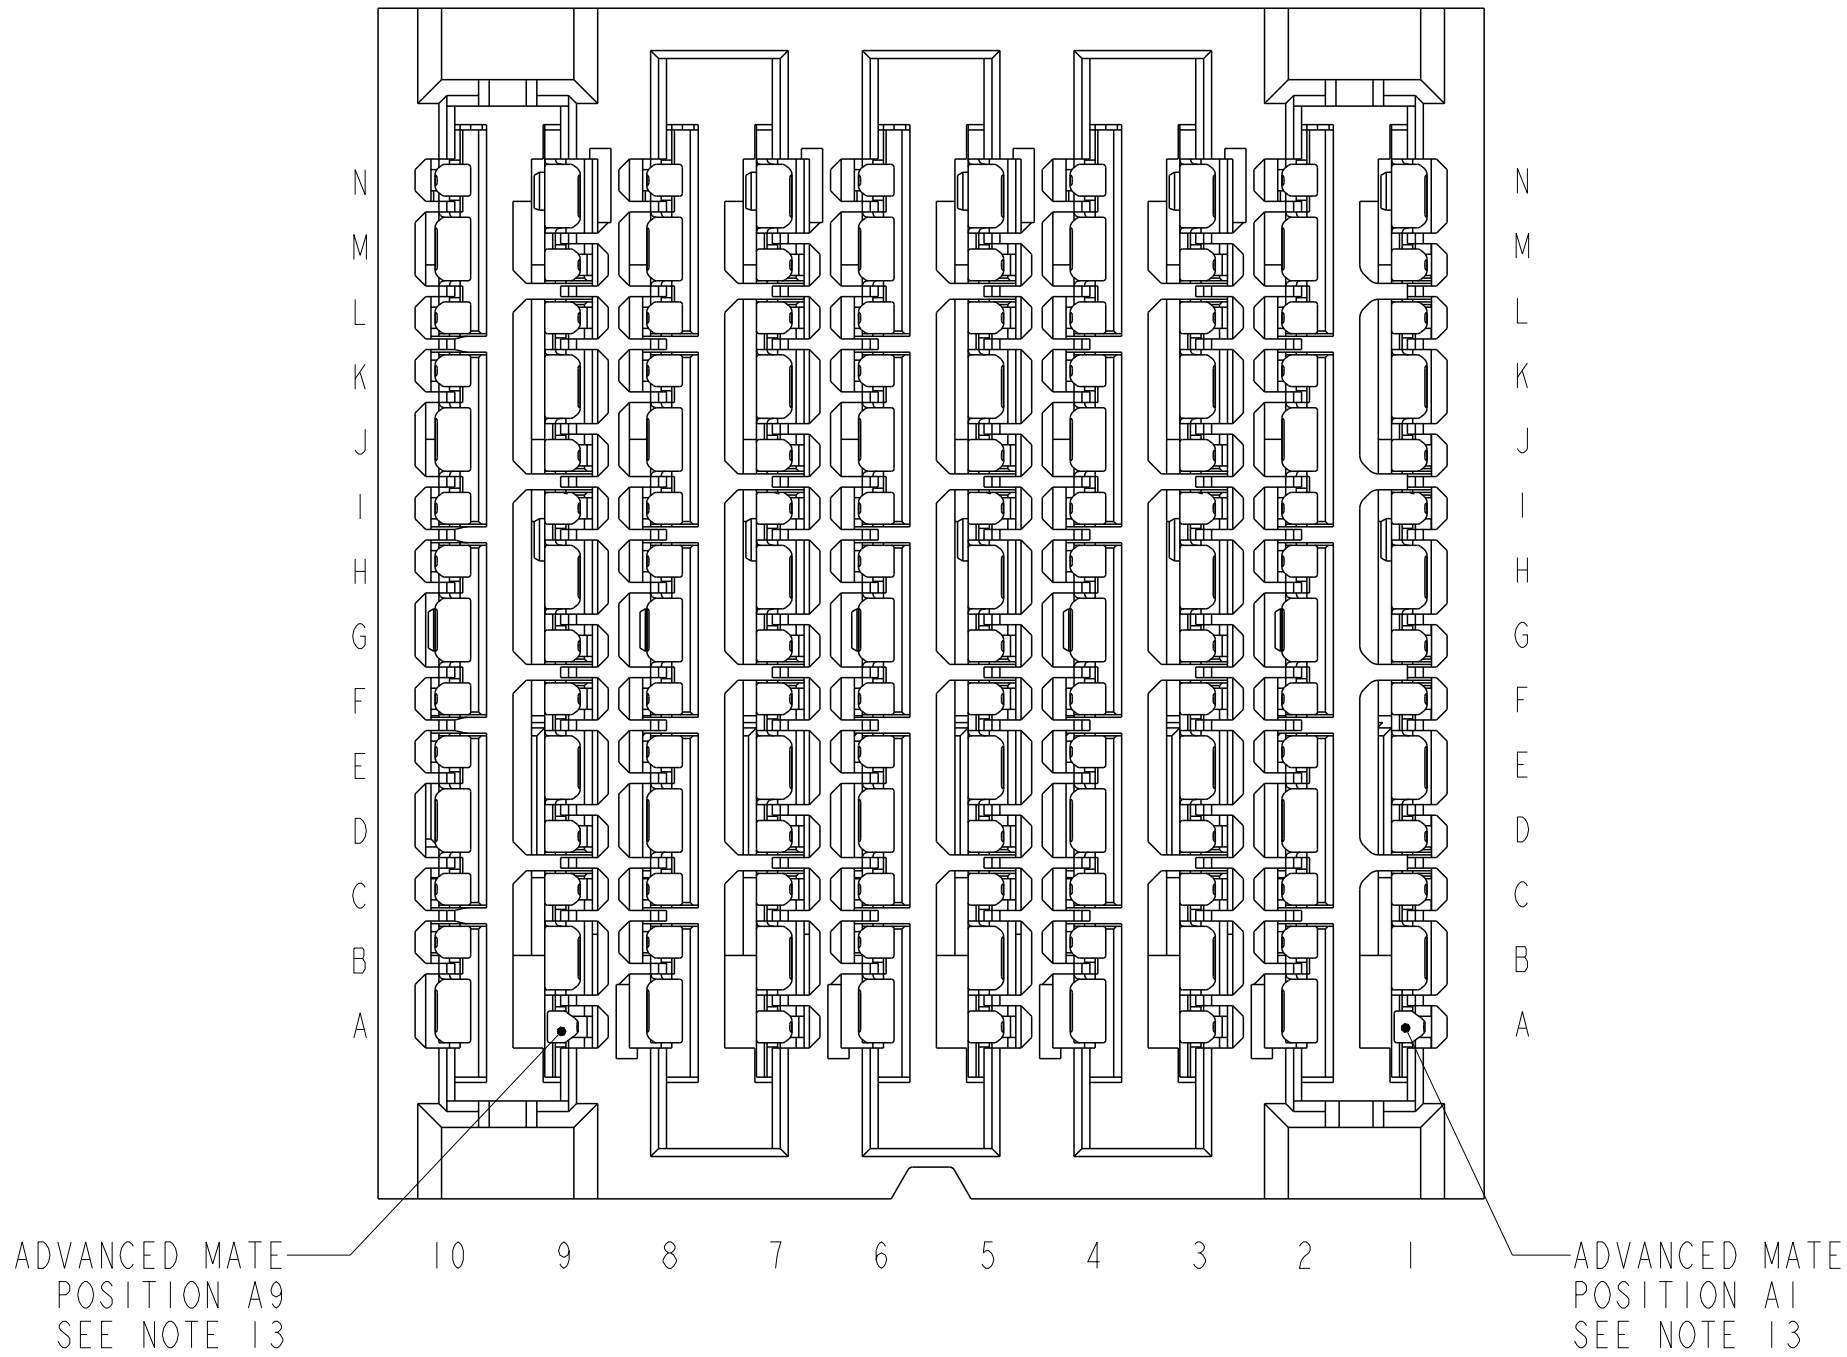



PRODUCT NUMBER
SEE TABLE

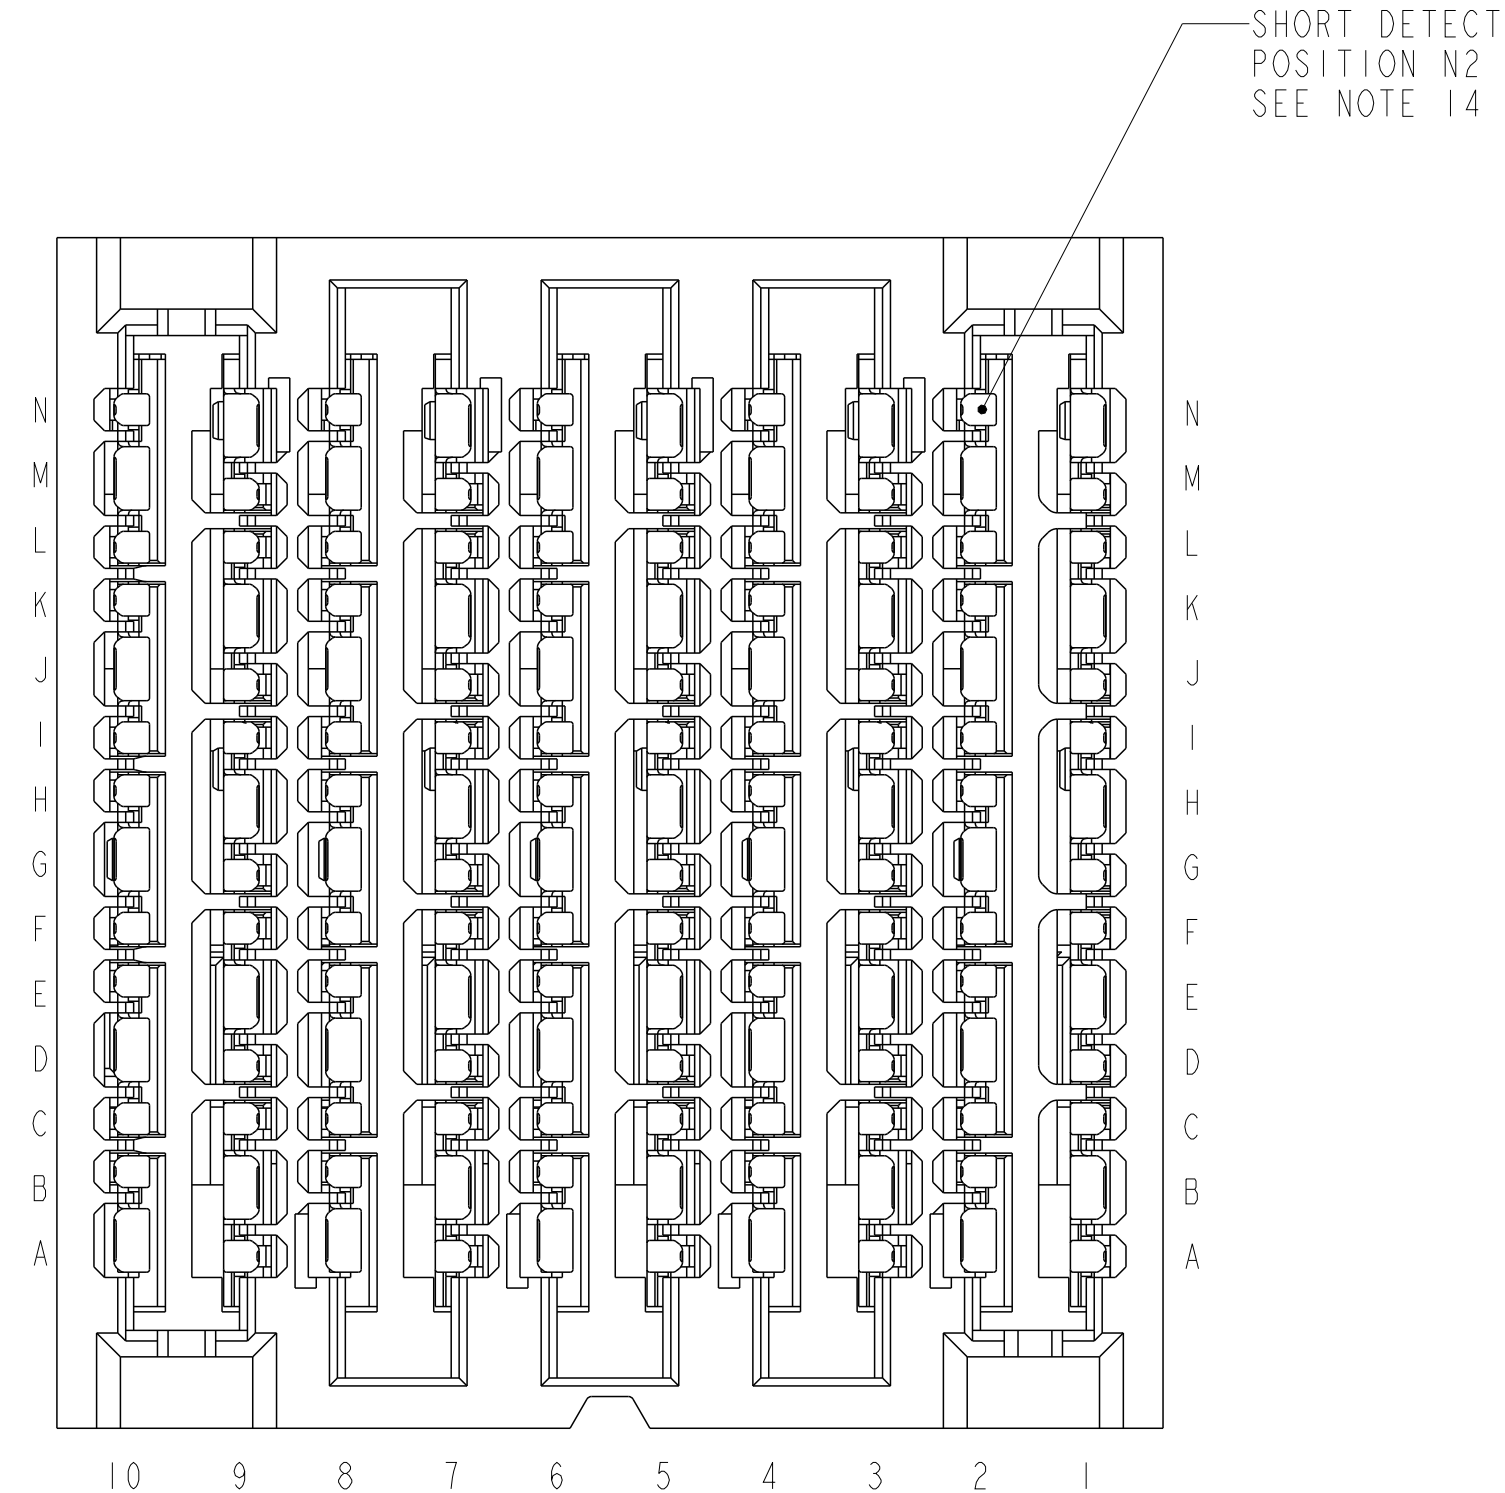


spec ref	SEE NOTES	dr	Greg Hull	2015/10/12	projection	MM	size	A2	scale	7:1
tolerance std	TOLERANCES UNLESS OTHERWISE SPECIFIED	eng	Peng-Bing Fu	2016/04/01			ecn no	-		
ISO 406		chr	-	-			rel level	Preliminary		
ISO 1101		appr	-	-	product family	ExaMax				
surface	linear	0.X	±.3		Amphenol FCI	title	ExaMAX R.A. RECEPT ASSY	dwg no	10135218	rev
		0.XX	±.10				4 PR, 85 Ohm, THK WALL, 140 POS, 10 IMLA			2
		0.XXX	±.050							
ISO 1302	angular	0°	±°							
					cat. no.	10135218-101LF	Product - Customer Drw	sheet 1 of 11		



10135218-201LF
ADVANCED MATE RECEPTACLE
ADVANCED MATE POSITIONS ARE POSITIONS A1 AND A9 ONLY
FOR ALL DIMENSIONS SEE 10135218-101LF ON SHEET 1

spec ref		SEE NOTES			dr		Greg Hull		2015/10/12		projection		MM		size		A2		scale		7:1	
tolerance std		TOLERANCES UNLESS OTHERWISE SPECIFIED			eng		Peng-Bing Fu		2016/04/01						ecn no		-		rel level		Preliminary	
ISO 406					chr		-		-													
ISO 1101					appr		-		-													
											product family		ExaMax									
surface		linear		0.X		±.3		Amphenol FCi		title		ExaMAX R.A. RECEIPT ASSY		dwg no		10135218		rev		2		
ISO 1302		0.XX		±.10																		
		0.XXX		±.050																		
		angular		0°		±°						cat. no.		10135218-101LF		Product - Customer Drw				sheet 2 of 11		

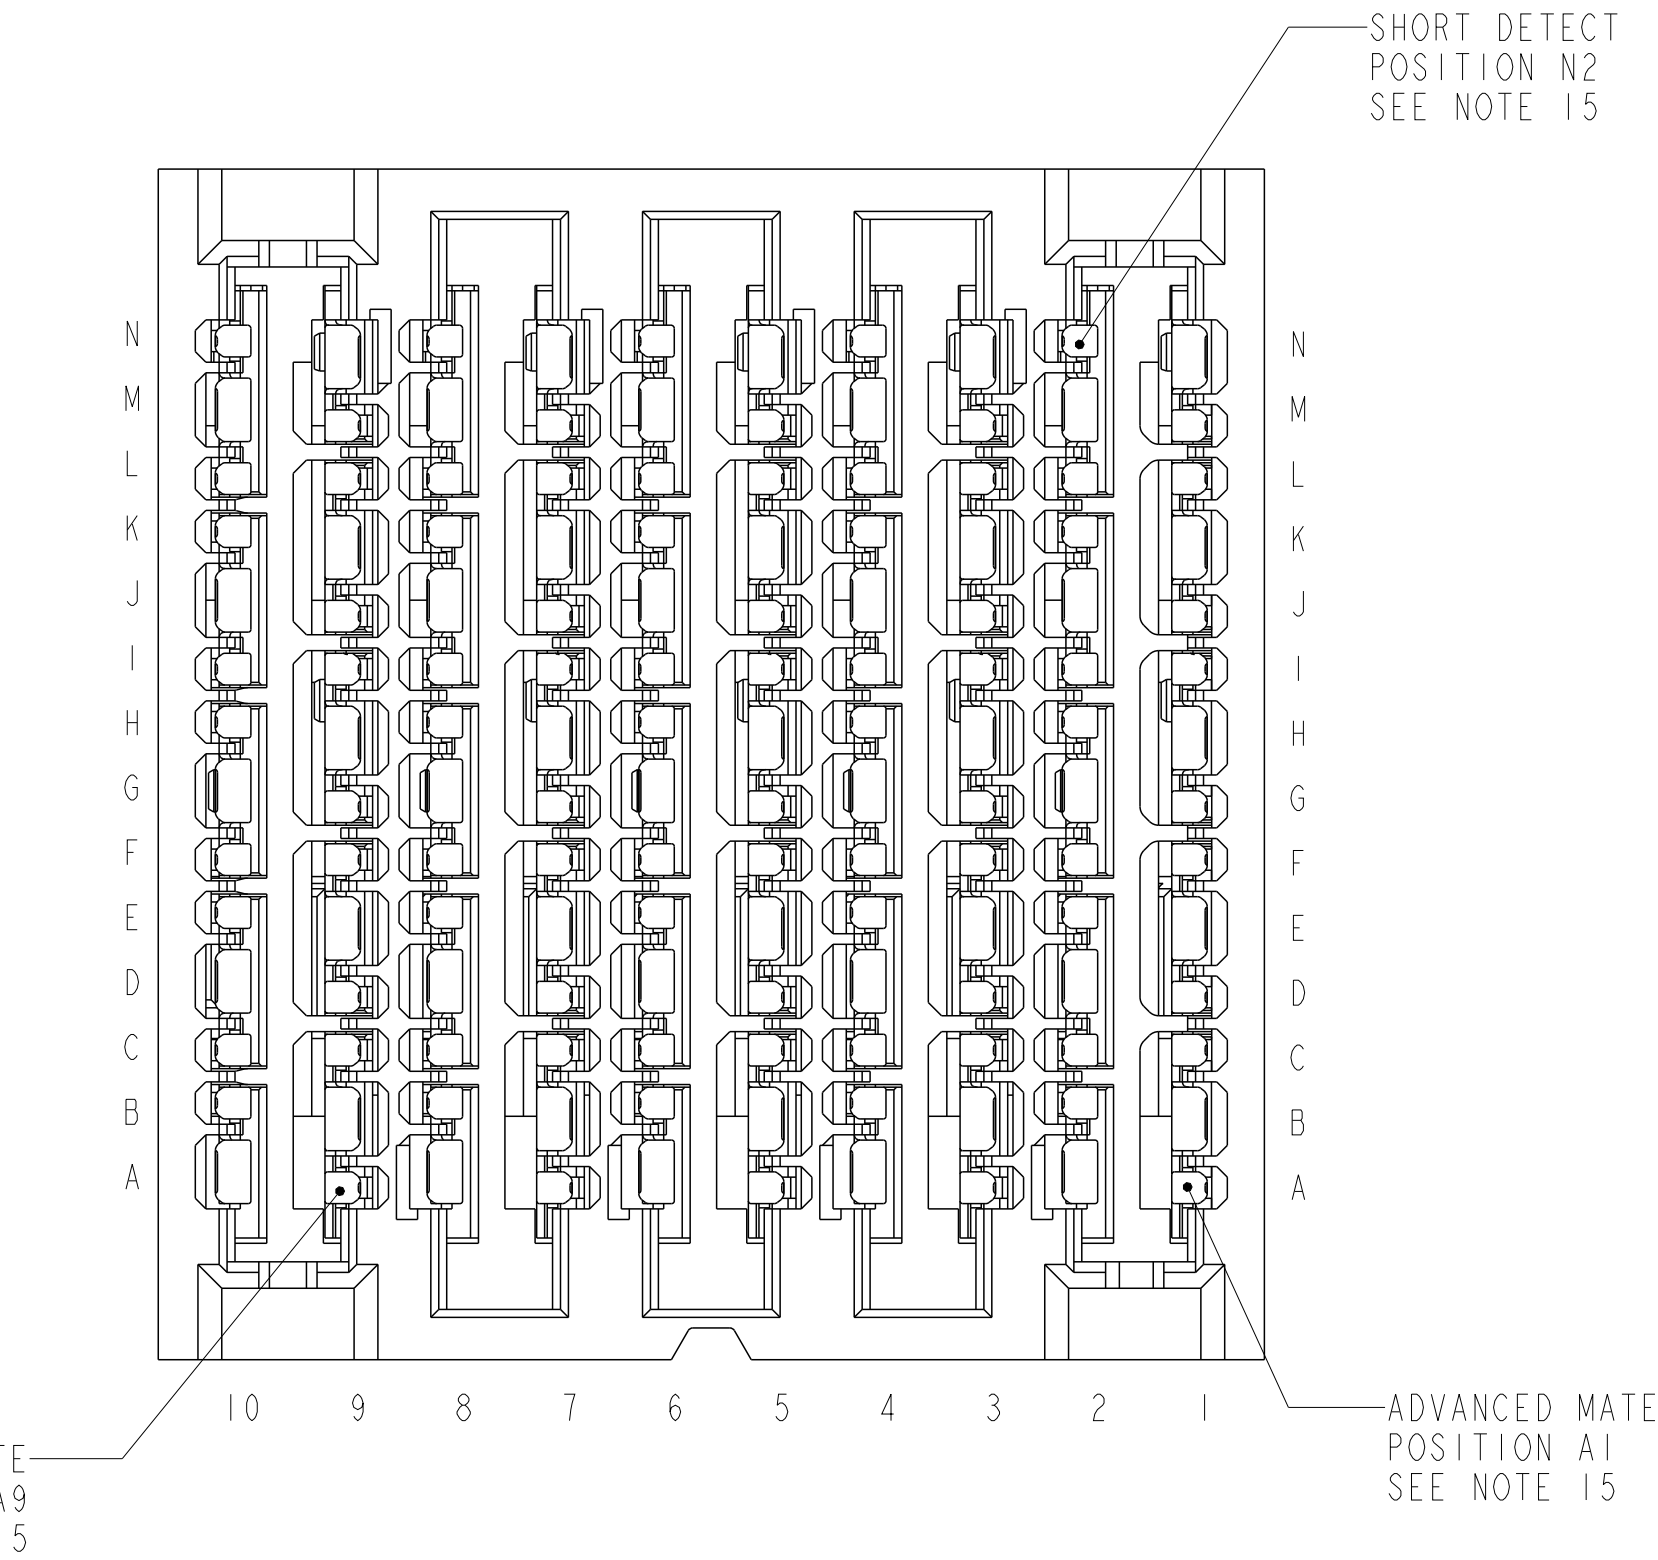


10135218-301LF
SHORT DETECT RECEPTACLE
SHORT DETECT POSITION IS N2
FOR ALL DIMENSIONS SEE 10135218-101LF ON SHEET 1


spec ref		SEE NOTES			dr		Greg Hull		2015/10/12		projection		MM		size		A2		scale		7:1								
tolerance std		TOLERANCES UNLESS OTHERWISE SPECIFIED			eng		Peng-Bing Fu		2016/04/01						ecn no		-												
ISO 406					chr		-		-						rel level		Preliminary												
ISO 1101					appr		-		-						product family		ExaMax												
surface					linear		0.X		±.3						Amphenol FCi		title		ExaMAX R.A. RECEPT ASSY		dwg no		10135218		rev		2		
ISO 1302				0.XX		±.10		cat. no.		10135218-101LF		Product - Customer Drw		sheet 3 of 11															
				0.XXX		±.050																							
		angular		0°		±°																							

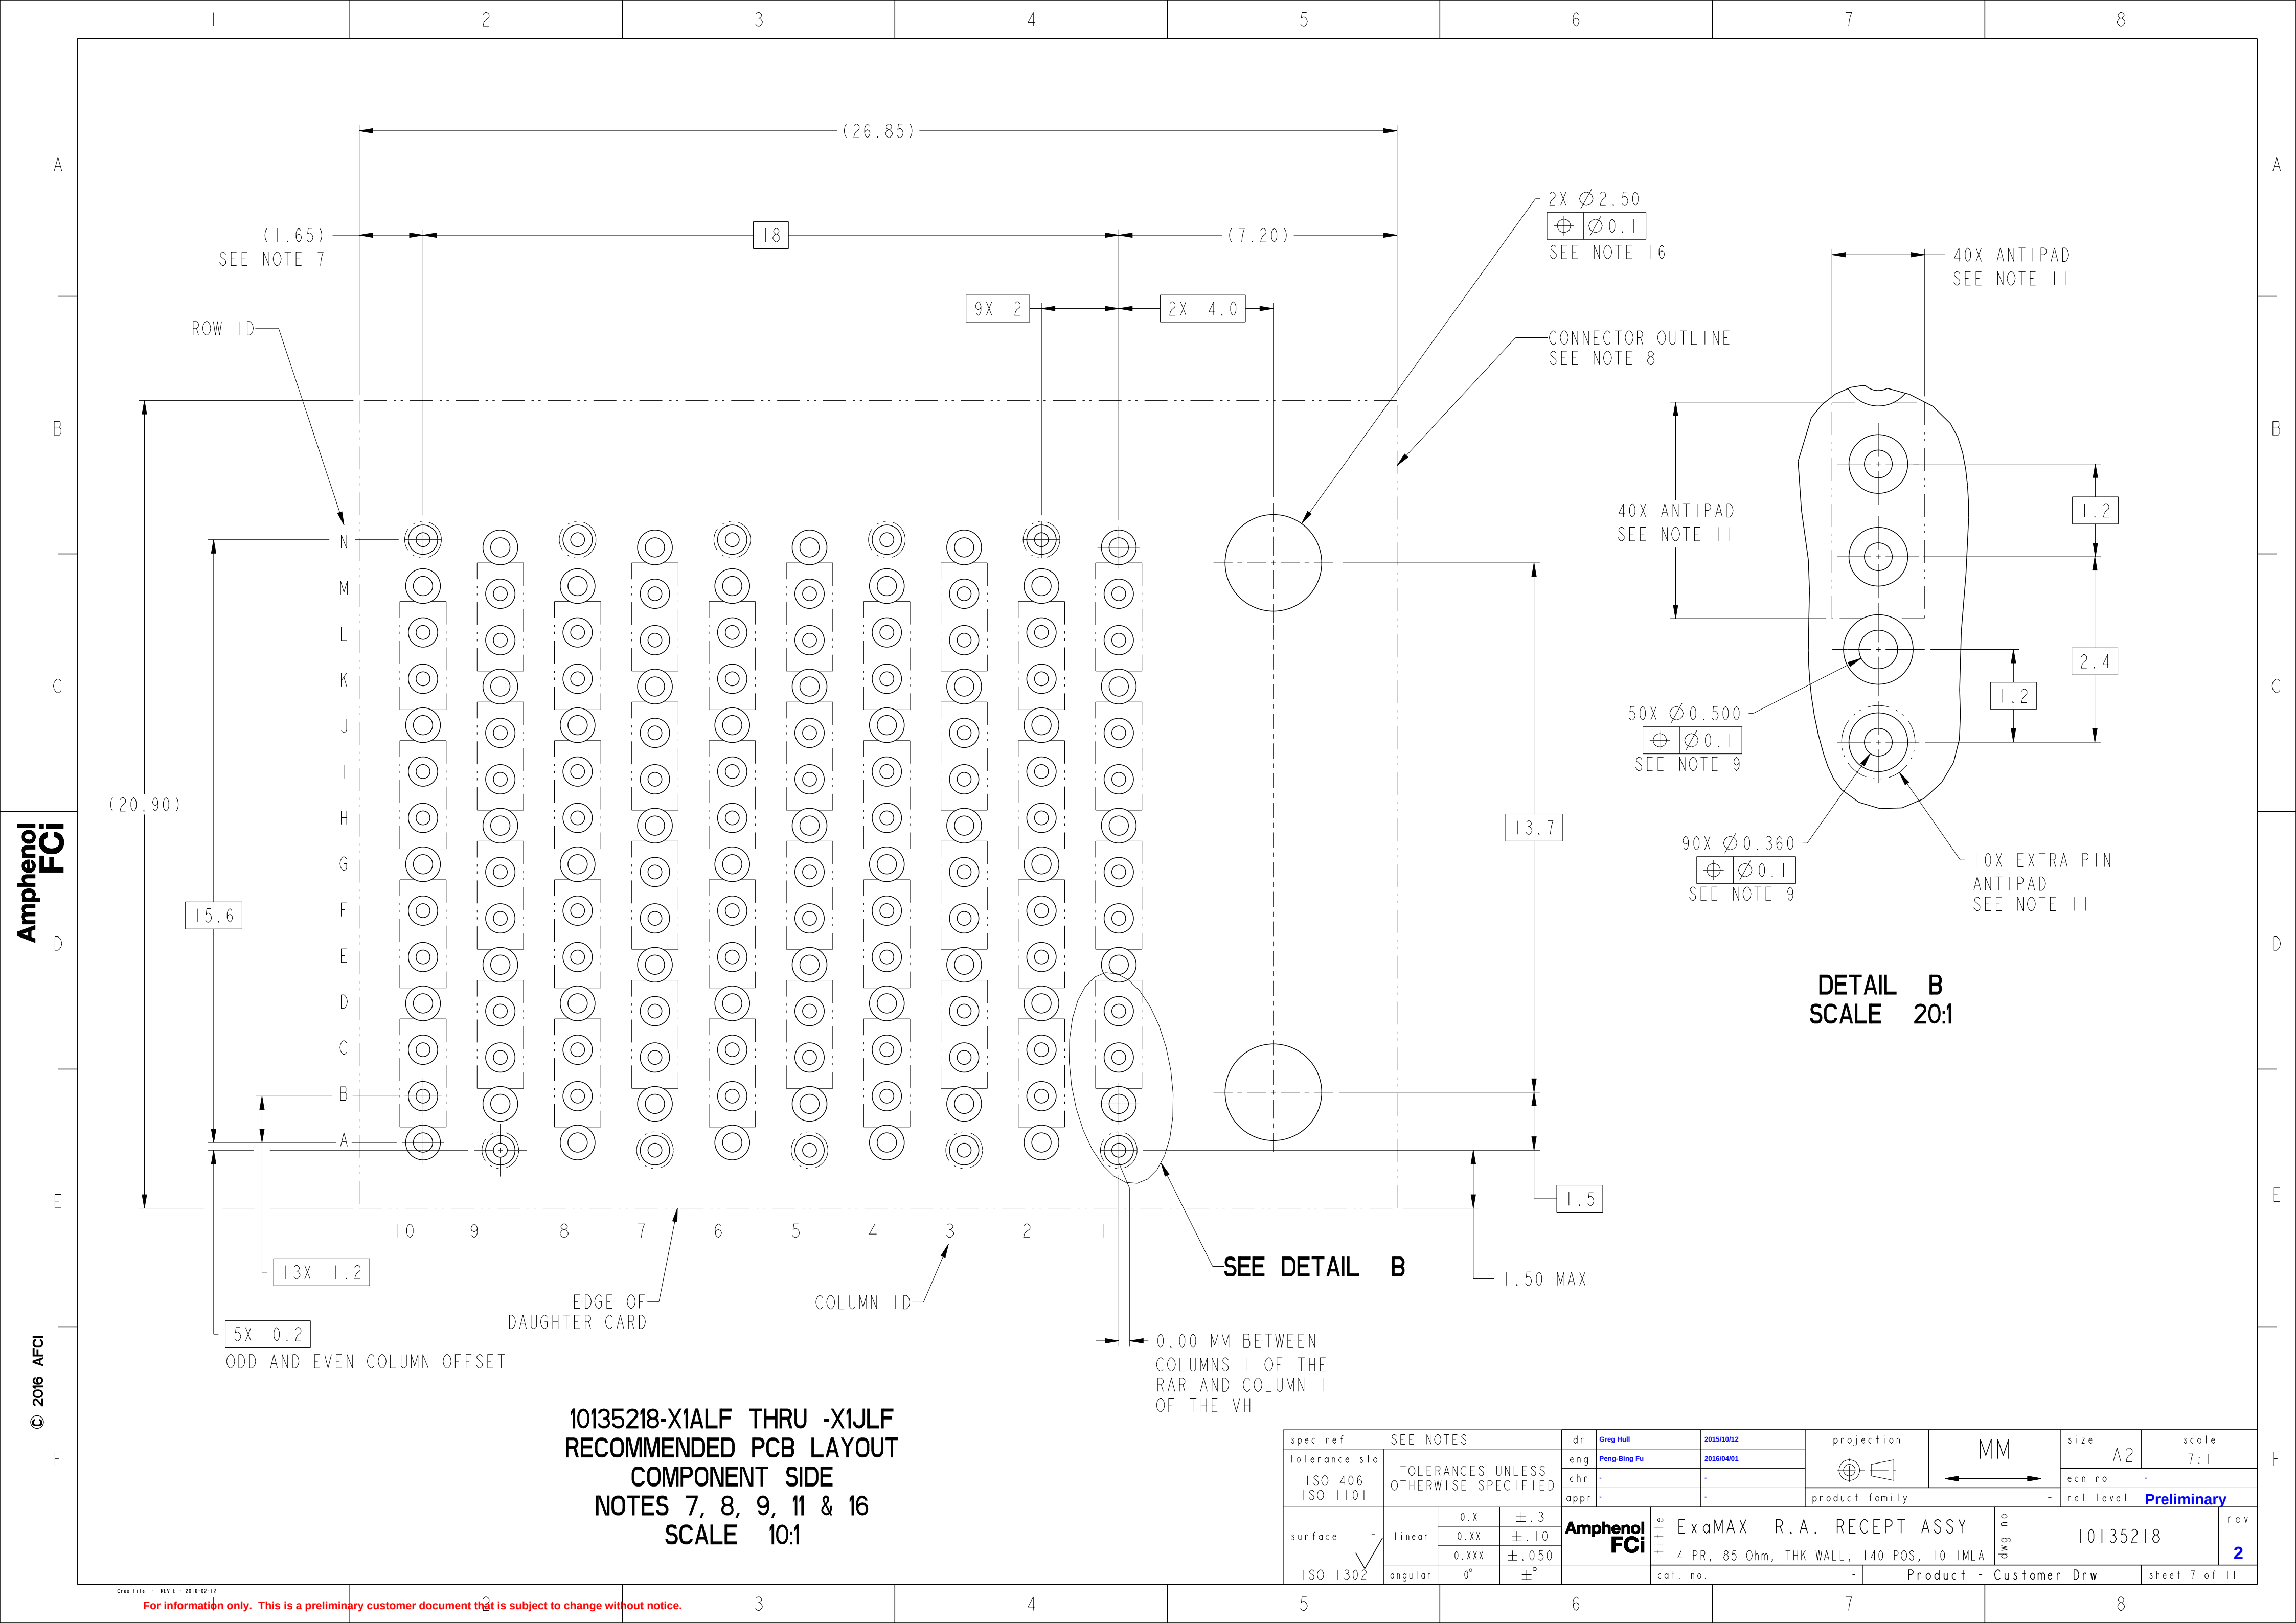
A
B
C
D
E
F

A
B
C
D
E
F




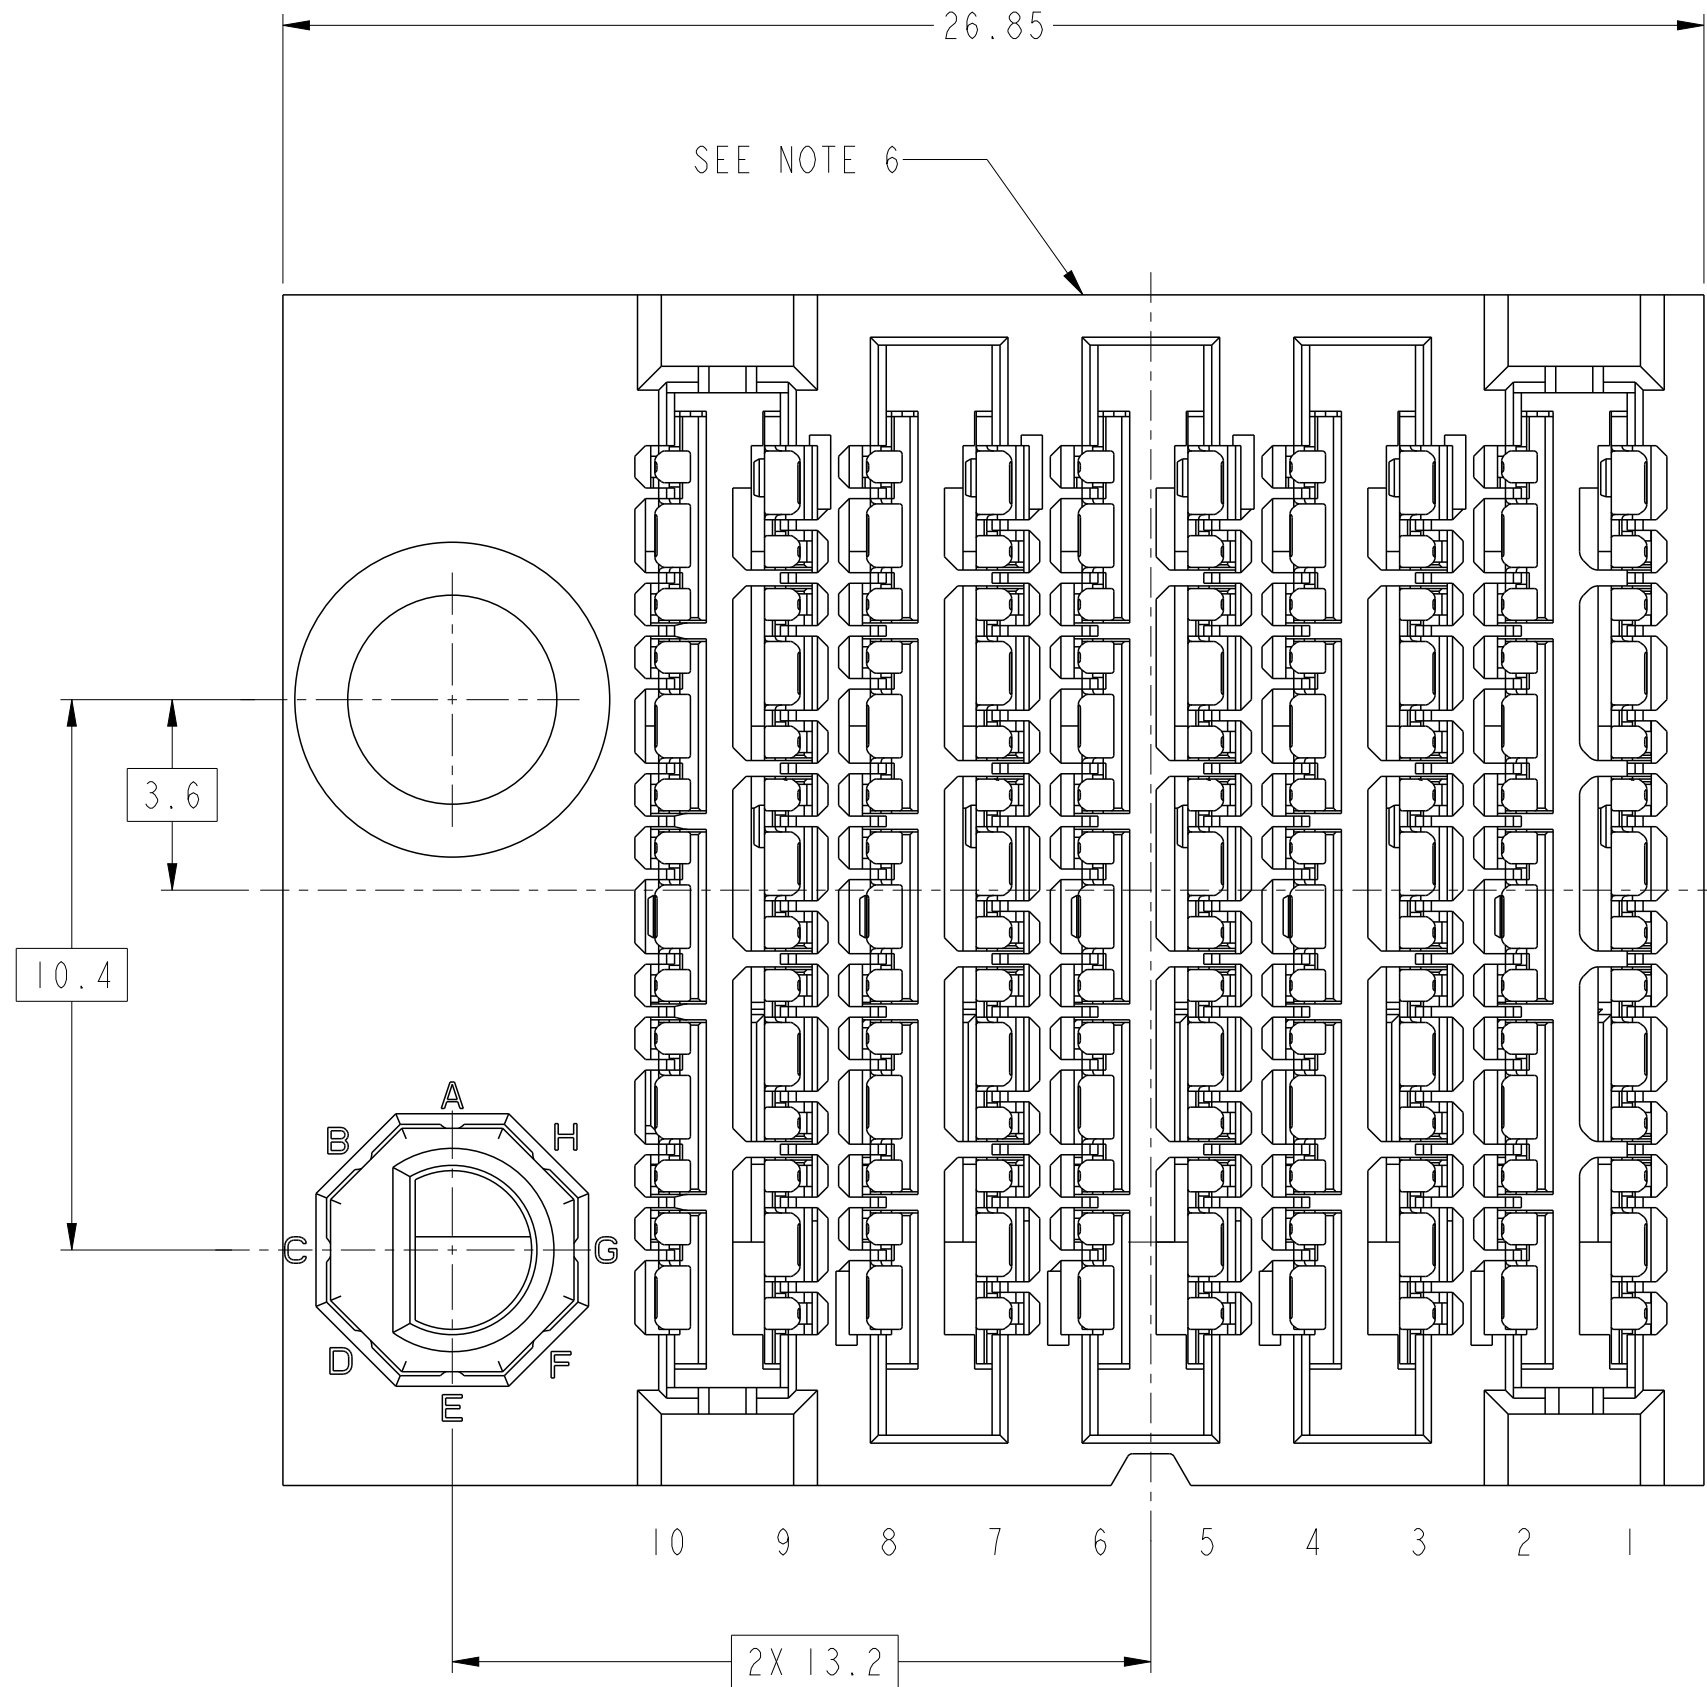
10135218-401LF
ADVANCED MATE/SHORT DETECT RECEPTACLE
ADVANCED MATE POSITIONS ARE POSITIONS A1 AND A9 ONLY
SHORT DETECT POSITION IS N2
FOR ALL DIMENSIONS SEE 10135218-101LF ON SHEET 1

spec ref		SEE NOTES			dr		Greg Hull		2015/10/12		projection		MM		size		A2		scale		7:1	
tolerance std		TOLERANCES UNLESS OTHERWISE SPECIFIED			eng		Peng-Bing Fu		2016/04/01						ecn no		-		rel level		Preliminary	
ISO 406					chr		-		-						product family		ExaMax					
ISO 1101					appr		-		-													
surface					linear		0.X		±.3						Amphenol FCi		title		ExaMAX R.A. RECEPT ASSY		dwg no	
ISO 1302				0.XX		±.10		4 PR, 85 Ohm, THK WALL, 140 POS, 10 IMLA														
		angular		0°		±°																
												cat. no.		10135218-101LF		Product - Customer Drw		sheet 4 of 11				

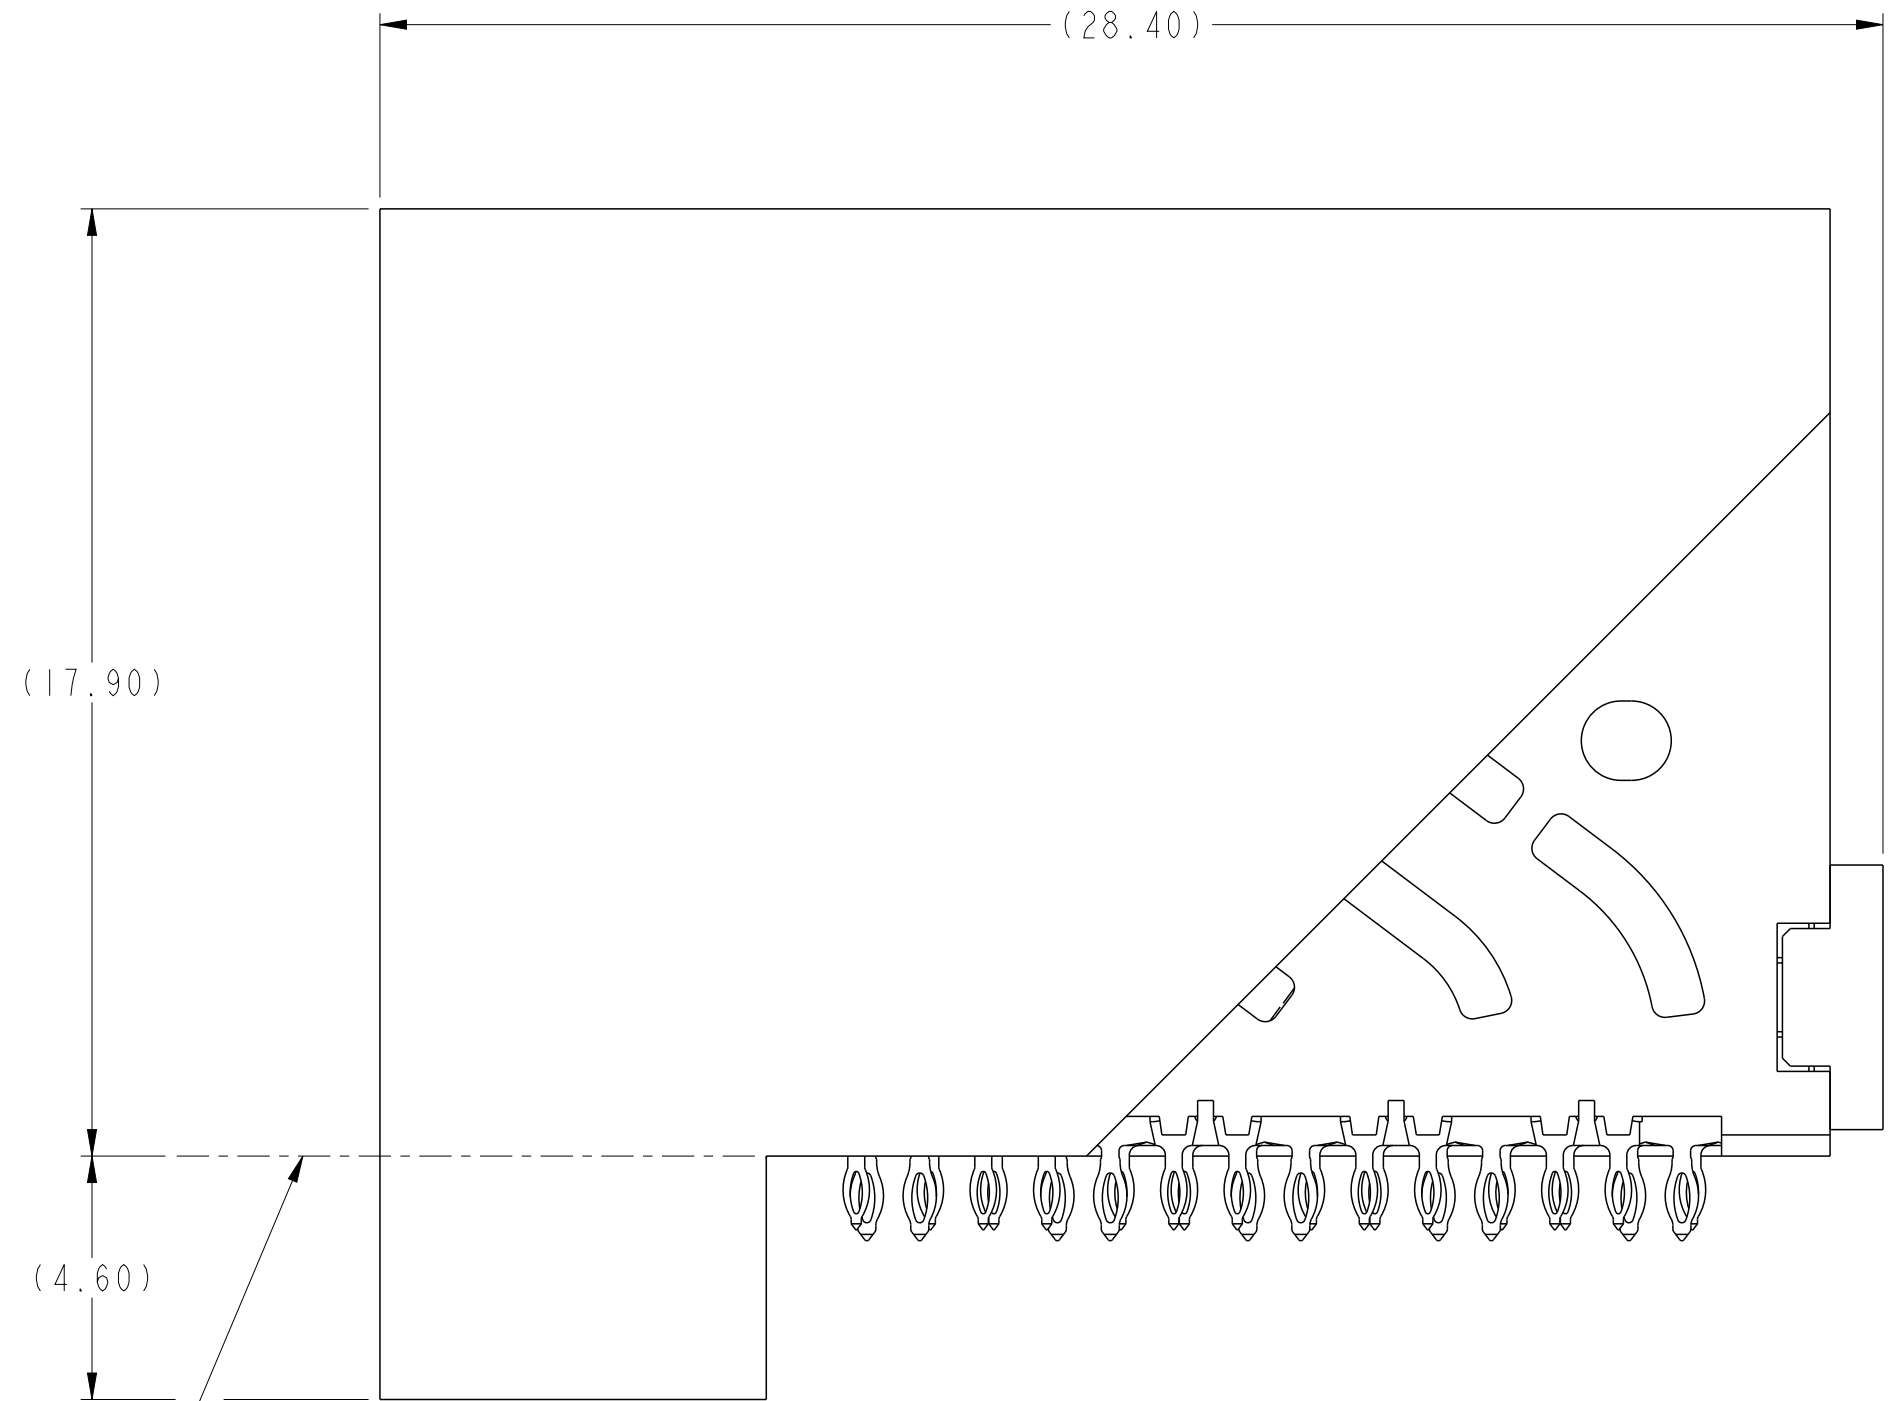


10135218-X1ALF THRU -X1JLF
RECOMMENDED PCB LAYOUT
COMPONENT SIDE
NOTES 7, 8, 9, 11 & 16
SCALE 10:1

spec ref	SEE NOTES			dr	Greg Hull	2015/10/12	projection		size	A2	scale	7:1	
tolerance std	TOLERANCES UNLESS OTHERWISE SPECIFIED			eng	Peng-Bing Fu	2016/04/01				ecn no	-		
ISO 406				chr	-	-				product family	rel level	Preliminary	
ISO 1101	appr	-	-										
surface	linear	0.X	±.3	Amphenol FCI	title	ExaMAX R.A. RECEPT ASSY			dwg no	10135218		rev	2
		0.XX	±.10										
		0.XXX	±.050										
	ISO 1302	angular	0°										

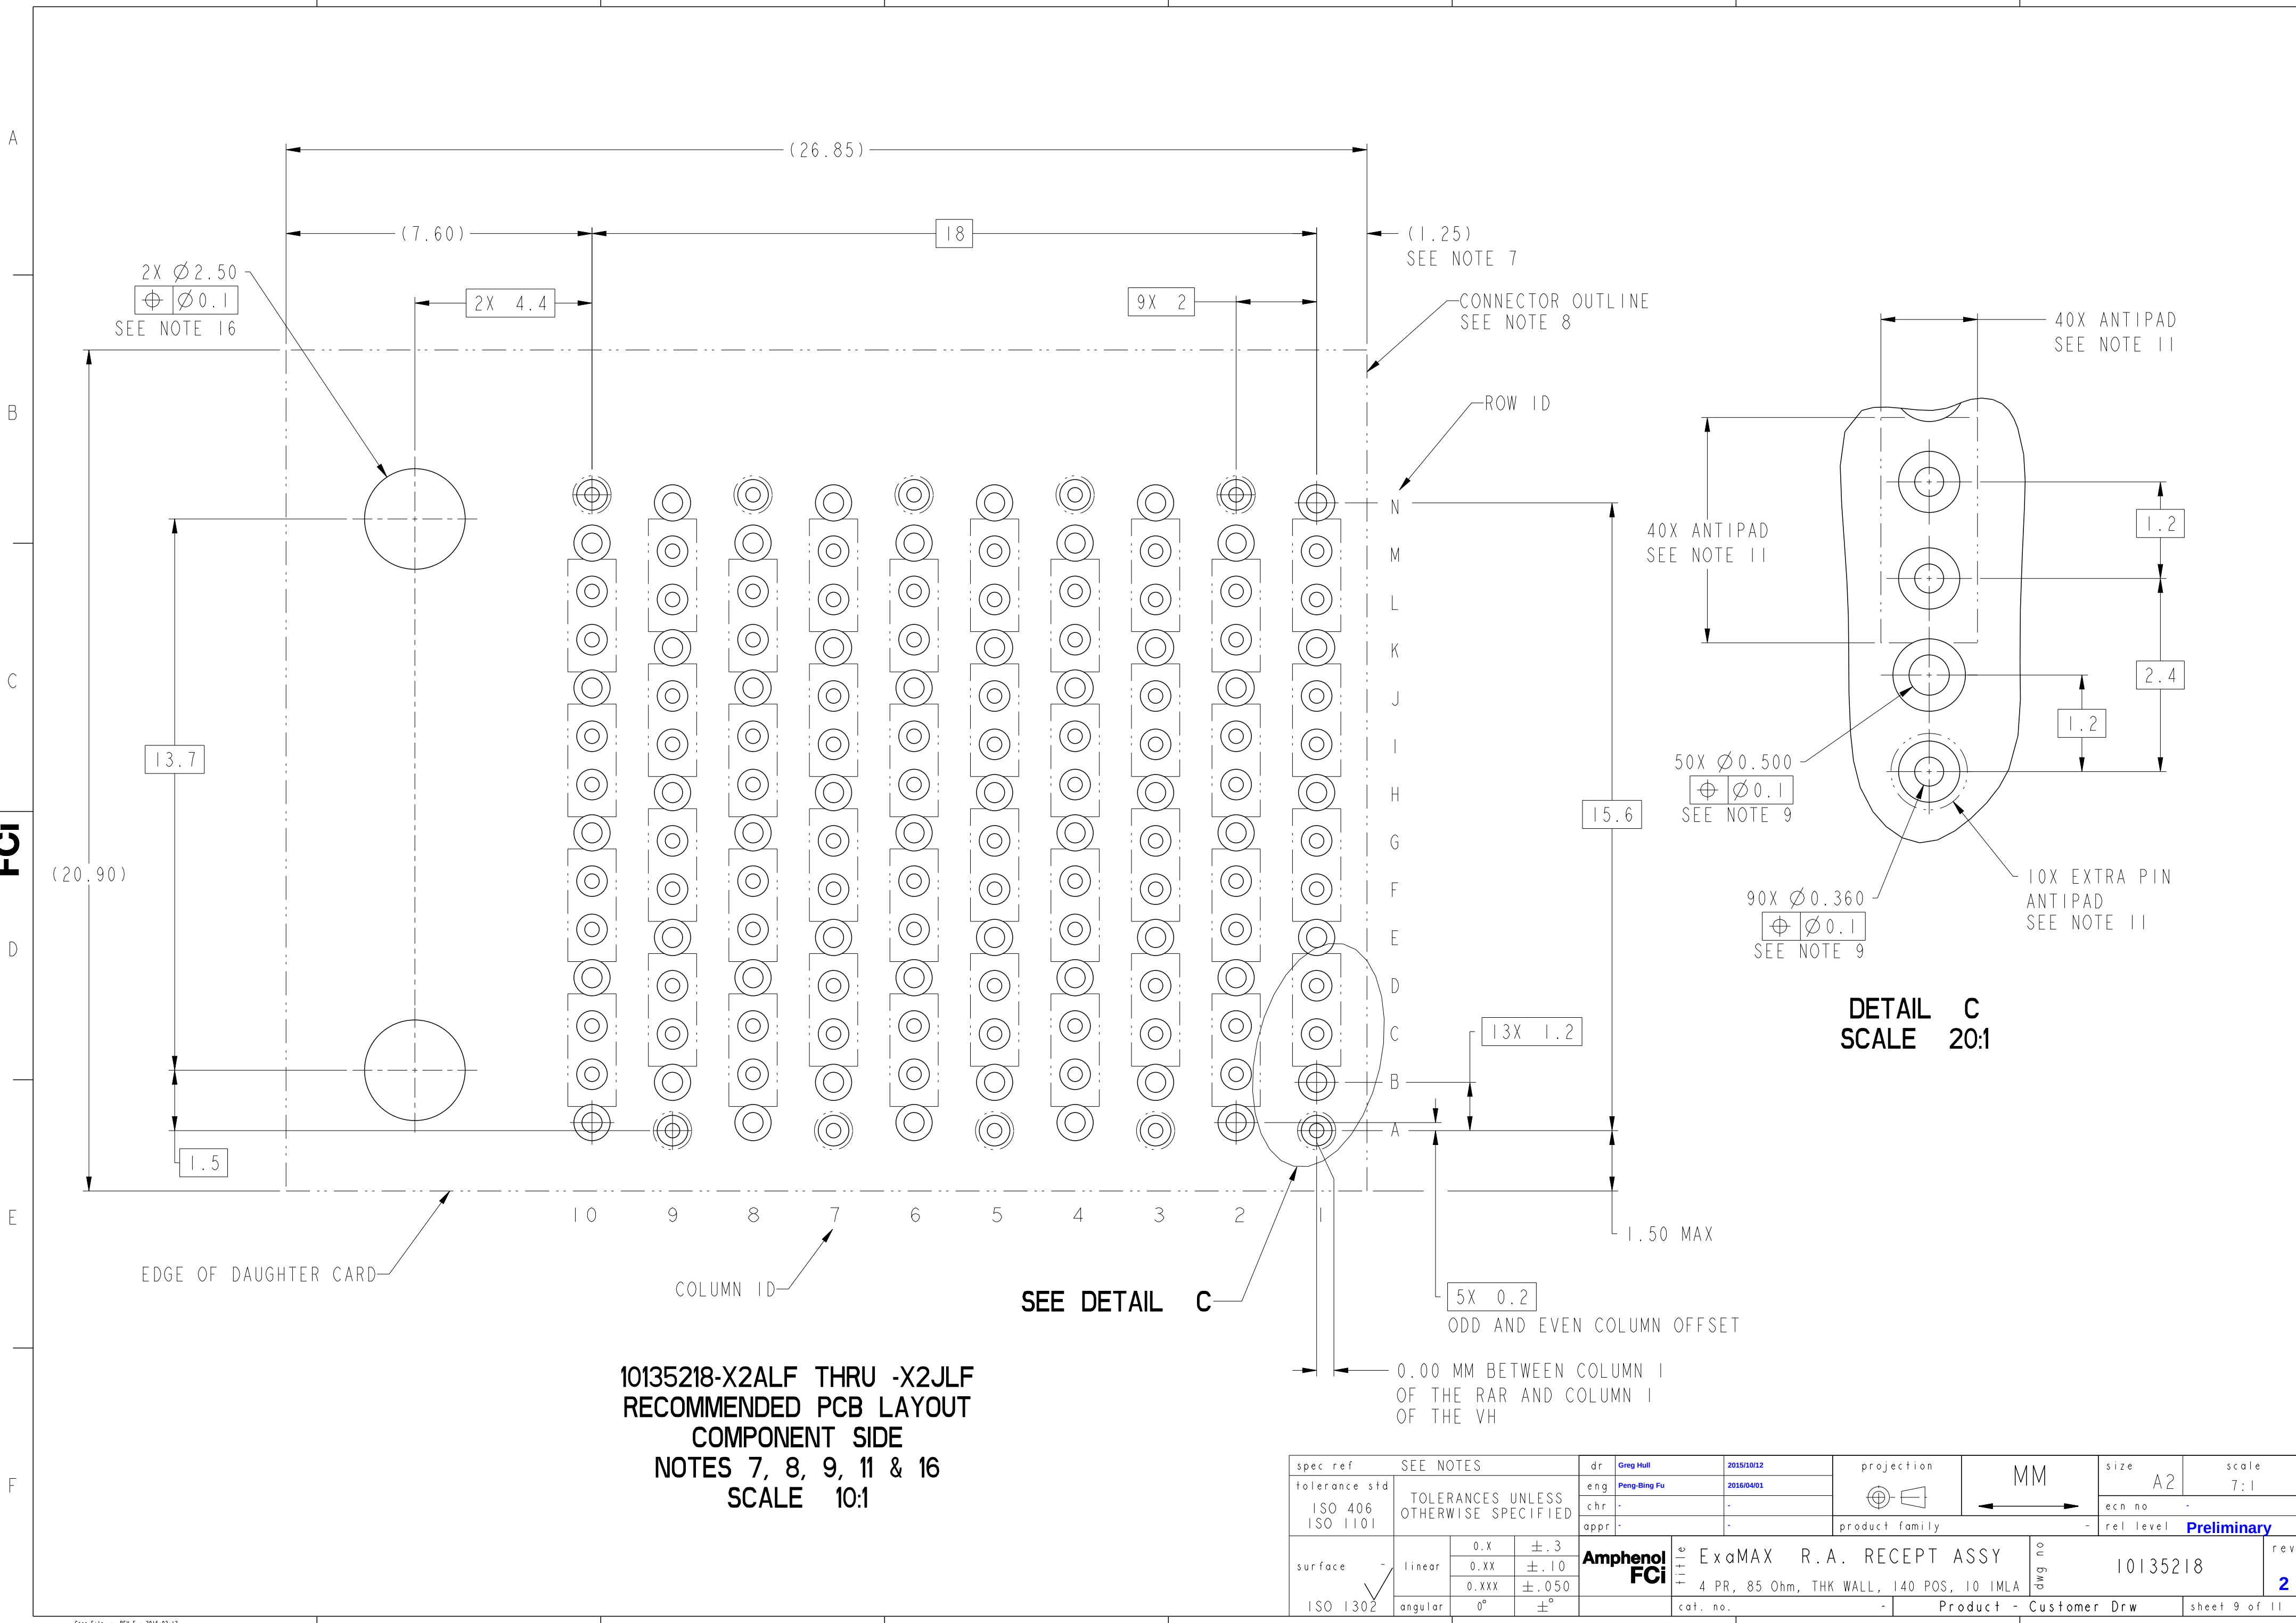


TOP SURFACE
OF DAUGHTER CARD



10135218-X2ALF THRU 10135218-X2JLF
LEFT GUIDANCE (SEE NOTE 17)
FOR ALL OTHER DIMENSIONS SEE 10135218-101LF ON SHEET 1

spec ref		SEE NOTES			dr	Greg Hull	2015/10/12			MM	size	A2	scale	7:1
tolerance std		TOLERANCES UNLESS OTHERWISE SPECIFIED			eng	Peng-Bing Fu	2016/04/01				ecn no	-		
ISO 406					chr	-	-				product family	ExaMax	rel level	Preliminary
ISO 1101		appr	-	-										
surface	linear	0.X	±.3	Amphenol FCi	title	ExaMAX R.A. RECEPT ASSY			dwg no	10135218		rev	2	
		0.XX	±.10											
		0.XXX	±.050											
	ISO 1302	angular	0°											±0°
					cat. no.	10135218-101LF		Product - Customer Drw			sheet 8 of 11			

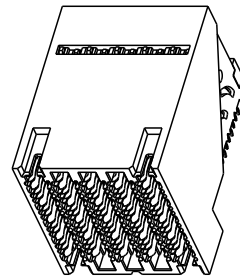
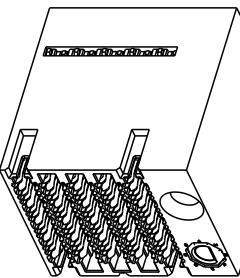
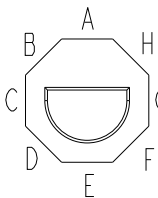
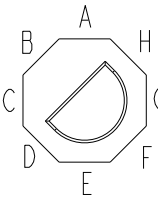
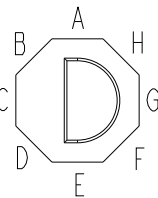
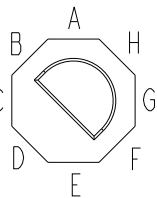
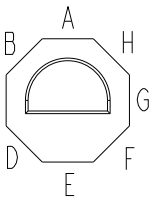
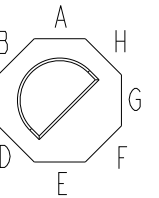
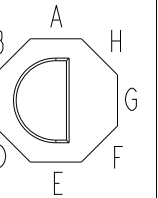
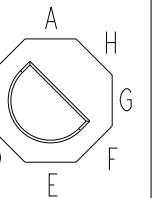
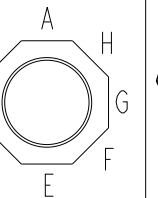
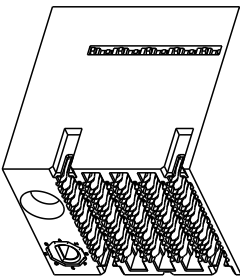
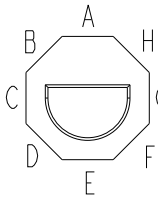
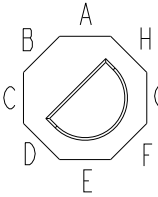
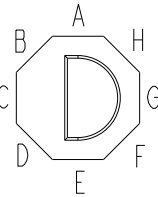
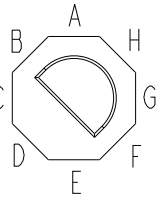
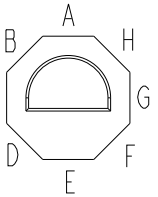
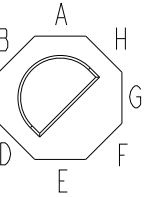
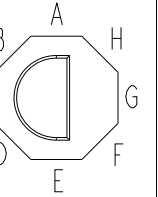
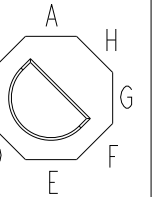
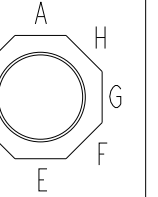


10135218-X2ALF THRU -X2JLF
RECOMMENDED PCB LAYOUT
COMPONENT SIDE
NOTES 7, 8, 9, 11 & 16
SCALE 10:1

spec ref		SEE NOTES			dr		Greg Hull		2015/10/12		projection		MM		size		A2		scale		7:1	
tolerance std		TOLERANCES UNLESS OTHERWISE SPECIFIED			eng		Peng-Bing Fu		2016/04/01						ecn no		-					
ISO 406																						
ISO 1101					chr		-		-		-		product family		-		rel level		Preliminary			
surface		linear		0.X		±.3		Amphenol FCI		title		ExaMAX R.A. RECEPT ASSY		dwg no		10135218		rev		2		
ISO 1302		0.XX		±.10																		
		0.XXX		±.050																		
		angular		0°		±°				cat. no.		-		Product - Customer Drw				sheet 9 of 11				



10135218 - Y Y Y L F

ASSEMBLY PART NUMBER	DESCRIPTION
10135218-1YYLF	STANDARD MATE
10135218-2YYLF	ADVANCED MATE
10135218-3YYLF	SHORT DETECT
10135218-4YYLF	ADVANCED MATE & SHORT DETECT

MODULE DESCRIPTION	DESIGNATION REPRESENTED IN DASH NUMBER									BASE MODULE
WITHOUT END GUIDES MODULE (SEE SHEET 1)	01									
RIGHT GUIDANCE MODULE (SEE SHEET 6)	1A	1B	1C	1D	1E	1F	1G	1H	1J (NO KEY)	
										
LEFT GUIDANCE MODULE (SEE SHEET 8)	2A	2B	2C	2D	2E	2F	2G	2H	2J (NO KEY)	
										

Amphenol
FCi

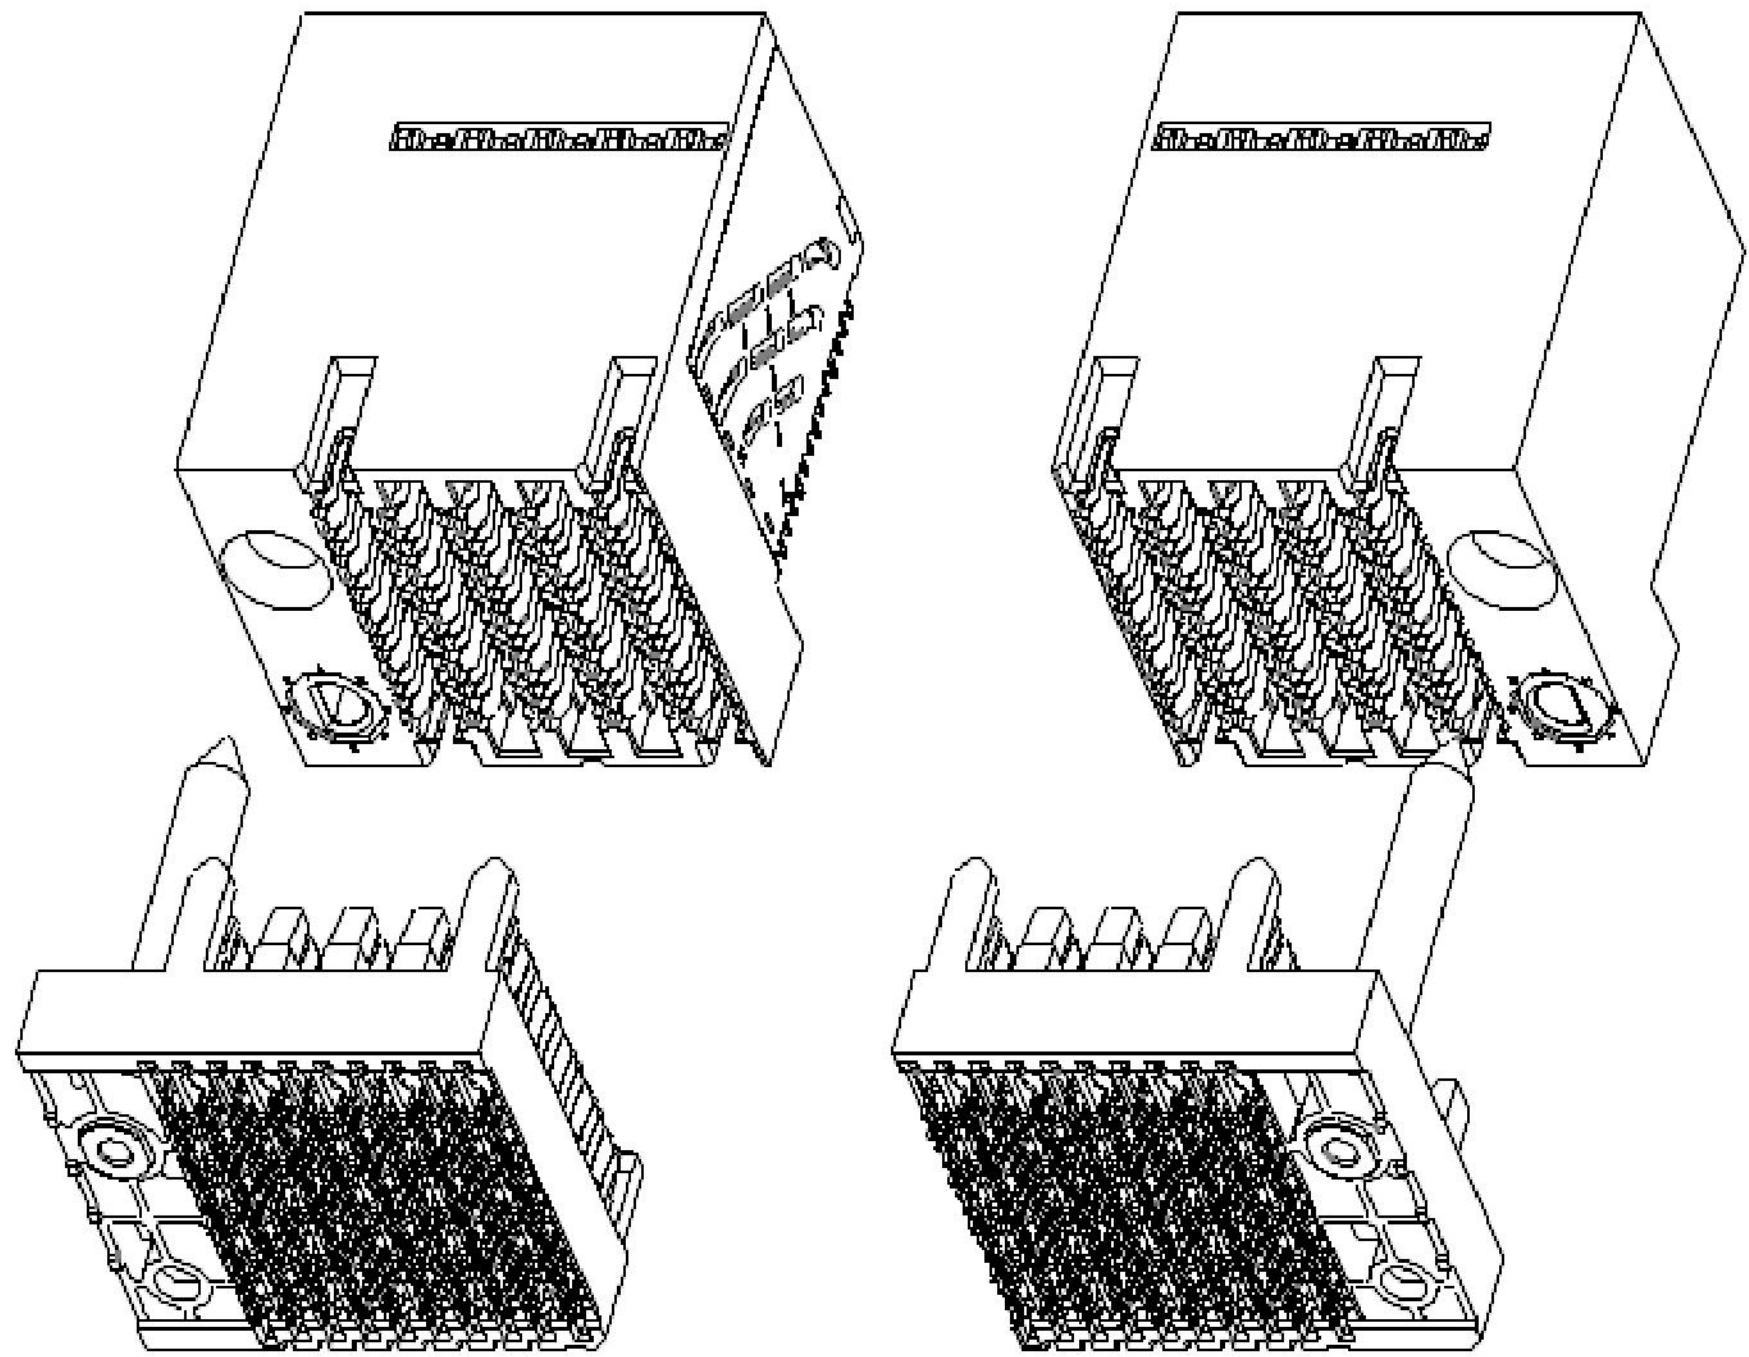
© 2016 AFCi

spec ref	SEE NOTES				dr	Greg Hull	2015/10/12			size	A2	scale	1:1	
tolerance std	TOLERANCES UNLESS OTHERWISE SPECIFIED				eng	Peng-Bing Fu	2016/04/01			ecn no	-			
ISO 406					chr	-	-							
ISO 1101					appr	-	-					product family	ExaMax	rel level
surface	linear	0.X	±.3	Amphenol FCI	title	ExaMAX R.A. RECEPT ASSY				dwg no	10135218	rev	2	
ISO 1302		0.XX	±.10											
		0.XXX	±.050											
	angular	0°	±°			cat. no.	10135218-101LF	Product - Customer Drw				sheet 10 of 11		

NOTES:

- ① - CONNECTOR MATERIALS:
HOUSING: HIGH TEMP THERMOPLASTIC, BLACK, UL94-V0
IMLA PLASTIC: HIGH TEMP THERMOPLASTIC, NATURAL, UL94-V0
CONTACT: COPPER ALLOY
ORGANIZER: STAINLESS STEEL
- 2 - CONTACT PLATING:
SEPARABLE INTERFACE:
PERFORMANCE-BASED PLATING, QUALIFIED TO MEET THE REQUIREMENTS OF FCI PRODUCT SPECIFICATION GS-12-1096 INCLUDING TELCORDIA GR-1217-CORE (NOVEMBER 1995) CENTRAL OFFICE TEST SEQUENCE

PRESS-FIT TAILS: TIN OVER NICKEL (LEAD FREE)
- 3 - PRODUCT SPECIFICATION: GS-12-1096
- 4 - APPLICATION SPECIFICATION GS-20-0361.
- 5 - PACKAGING MEETS GS-14-920 LEAD FREE LABELING SPECIFICATION.
- ⑥ - PRODUCT MARKING, (PROTOTYPE, PART NUMBER & LOT CODE), ON THIS SURFACE.
- ⑦ - THE MINIMUM VIA SPACING BETWEEN STACKED CONNECTORS IS 3.0 MM FOR THIS RAR AND THE MATING HEADER. REFER TO THE APPLICATION SPECIFICATION FOR DETAILS
- ⑧ - CONNECTOR OUTLINE MAY BE SCREEN PRINTED ONTO CUSTOMER PCB TO BE USED AS A GUIDE FOR MANUAL CONNECTOR PLACEMENT.
- ⑨ - REFER TO CUSTOMER DRAWING 10119933 FOR INFORMATION ON PCB HOLE DIAMETERS AND PLATING OPTIONS
- 10 - THIS PRODUCT MEETS THE EUROPEAN UNION DIRECTIVES & OTHER COUNTRY REGULATIONS AS DESCRIBED IN GS-47-0004.
- ⑪ - REFER TO APPLICATION SPECIFICATION FOR TRACE ROUTING EXAMPLES THAT INCLUDE DIMENSIONS FOR ANTIPADS, TRACE WIDTH, TRACE SPACING, ETC.
- 12 - THE HOUSING WILL WITHSTAND EXPOSURE TO 260° C FOR 10-30 SECONDS IN A CONVECTION, INFRA-RED OR VAPOR PHASE REFLOW OVEN.
- ⑬ - THE ADVANCED MATE RECEPTACLE, 10135218-2XXLF, WHEN MATED WITH AN ADVANCED MATE VERTICAL HEADER OR AN ADVANCED MATE RIGHT-ANGLE HEADER WILL PROVIDE 2 PAIRS OF MATING CONTACTS THAT MATE 0.75MM BEFORE THE REMAINDER OF THE SIGNAL AND GROUND CONTACTS.
- ⑭ - THE SHORT DETECT RECEPTACLE, 10135218-3XXLF, WHEN MATED WITH A STANDARD MATE VERTICAL HEADER OR A STANDARD MATE RIGHT-ANGLE HEADER WILL PROVIDE 1 PAIR OF MATING CONTACTS THAT MATE 1.00MM AFTER THE REMAINDER OF THE SIGNAL AND GROUND CONTACTS.
- ⑮ - THE ADVANCE MATE/SHORT DETECT RECEPTACLE, 10135218-4XXLF, WHEN MATED WITH AN ADVANCED MATE VERTICAL HEADER OR AN ADVANCED MATE RIGHT-ANGLE HEADER WILL PROVIDE 2 PAIRS OF MATING CONTACTS THAT MATE 0.75MM BEFORE THE REMAINDER OF THE SIGNAL AND GROUND CONTACTS AND 1 PAIR OF MATING CONTACTS THAT MATE 1.00MM AFTER THE REMAINDER OF THE SIGNAL AND GROUND CONTACTS.
- ⑯ - FOR CONNECTORS WITH EITHER A RIGHT OR LEFT GUIDE MODULE, TWO PHILLIPS PAN HEAD M2 HOLD DOWN SCREW MUST BE USED TO SECURE THE CONNECTOR TO THE PCB. THE SCREW LENGTH SHALL BE 2.0-6.0mm PLUS THE THICKNESS OF THE BOARD. SCREWS ARE NOT PROVIDED WITH CONNECTOR.
- ⑰ - LEFT / RIGHT INTEGRATED GUIDE ORIENTATION IS DETERMINED BY THE LOCATION OF THE GUIDE FEATURES WHEN LOOKING AT THE MATING FACE OF THE RIGHT ANGLE RECEPTACLE. THE LEFT / RIGHT DESIGNATION OF THE MATING HEADER IS DEFINED BY THE RIGHT ANGLE RECEPTACLE THAT IT MATES WITH (i.e. A RIGHT GUIDE VERTICAL HEADER MATES WITH A RIGHT GUIDE RIGHT ANGLE RECEPTACLE.)
- ⑱ - ALL GROUND CONTACTS ARE COMMONED IN A COLUMN.



LEFT GUIDE

RIGHT GUIDE

ExaMAX INTEGRATED GUIDE ORIENTATION
SEE NOTE 17

spec ref		SEE NOTES		dr		Greg Hull	2015/10/12	projection		MM		size	A2	scale		7:1		
tolerance std		TOLERANCES UNLESS OTHERWISE SPECIFIED		eng		Peng-Bing Fu	2016/04/01					ecn no		-				
ISO 406				chr		-	-					rel level		Preliminary				
ISO 1101				appr		-	-					product family		ExaMax				
surface		linear		Amphenol FCI		title		ExaMAX R.A. RECEPT ASSY				dwg no		10135218		rev		2
		0.X								±.3								
		0.XX								±.10								
ISO 1302		angular		0°		±°		cat. no.		10135218-101LF		Product - Customer Drw		sheet 11 of 11				

Данный компонент на территории Российской Федерации

Вы можете приобрести в компании MosChip.

Для оперативного оформления запроса Вам необходимо перейти по данной ссылке:

<http://moschip.ru/get-element>

Вы можете разместить у нас заказ для любого Вашего проекта, будь то серийное производство или разработка единичного прибора.

В нашем ассортименте представлены ведущие мировые производители активных и пассивных электронных компонентов.

Нашей специализацией является поставка электронной компонентной базы двойного назначения, продукции таких производителей как XILINX, Intel (ex.ALTERA), Vicor, Microchip, Texas Instruments, Analog Devices, Mini-Circuits, Amphenol, Glenair.

Сотрудничество с глобальными дистрибьюторами электронных компонентов, предоставляет возможность заказывать и получать с международных складов практически любой перечень компонентов в оптимальные для Вас сроки.

На всех этапах разработки и производства наши партнеры могут получить квалифицированную поддержку опытных инженеров.

Система менеджмента качества компании отвечает требованиям в соответствии с ГОСТ Р ИСО 9001, ГОСТ РВ 0015-002 и ЭС РД 009

Офис по работе с юридическими лицами:

105318, г.Москва, ул.Щербаковская д.3, офис 1107, 1118, ДЦ «Щербаковский»

Телефон: +7 495 668-12-70 (многоканальный)

Факс: +7 495 668-12-70 (доб.304)

E-mail: info@moschip.ru

Skype отдела продаж:

moschip.ru

moschip.ru_4

moschip.ru_6

moschip.ru_9