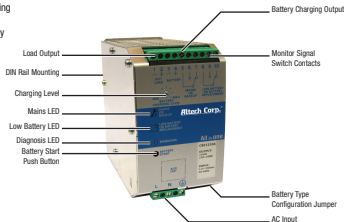# CBI All in One
DC UPS Power Solutions

CBI All in One UPS Power Solutions combine the requirements for several applications in just one device which can be used as power supply unit, battery charger, battery care module or backup module. The available power is automatically distributed among load and battery, while supplying power to the load always is the first priority. The maximum available current of the load output is two times the value of the device's rated current.

If the device is disconnected from the main power source, the battery will supply the load until the battery voltage reaches 1.5 V per cell. This prevents the battery from deep discharge. CBI devices provide microprocessor controlled battery charging. Using algorithms, the battery's condition will be detected and based on that, an appropriate charging mode is chosen. The real-time diagnostics system will continuously monitor the charging progress and indicate possibly causing faults such as elements in short circuit, accidental reverse polarity connection or disconnection of the battery by the battery fault LED and a flashing code of the diagnosis LED.

CBI All in One UPS Power Solutions are suitable for open/sealed lead acid-, lead gel- and optionally Ni-Cd batteries. By using the battery-select-jumper, it is possible to set predefined charging curves for those battery types. The available charging options are recovery-, boost- and trickle charge. All CB devices are built in a rugged metal case with a DIN rail mounting bracket.

Features:

- Power supply, battery charger, battery care module and backup module in one device
- Three charging modes
- Compact, rugged metal case
- Available in 12VDC, 24VDC and 48VDC
- Suitable for most common battery types
- Adjustable charging current
- Easy battery diagnosis and fault identification either by LED or external devices connected to fault
- Status contacts
- High efficiency up to 91% through switching technology
- Several output protection features such as short circuit, overload, deep battery discharge etc.
- DIN rail mounting
- Small size
- 3 year warranty

Battery Charging Output

Load Output

DIN Rail Mounting

Charging Level

Mains LED

Low Battery LED

Diagnosis LED

Battery Start
Push Button

Monitor Signal
Switch Contacts

Battery Type
Configuration Jumper

AC Input

Battery Selection Chart

Battery type	1.2 Ah	3.2 Ah	7.2 Ah	12 Ah
Load 1.5 A	20	60	200	400
Load 3 A	8	30	120	240
Load 5 A	3	15	55	100
Load 7.5 A	2	10	30	60
Load 10 A	-	7	20	45
Load 12 A	-	3	12	30
Load 15 A	-	-	9	20
Load 20 A	-	-	7	13

BUFFERING
(MINUTE) TIME

For the latest on Altech Power Supply specifications please visit www.altechcorp.com/power.

ADELSYSTEM

Via Luigi Barchi 9/B – Reggio Emilia 42124 – Italy
Tel. +39 0522 345518 – Fax +39 0522 345551 – mail: info@adelsystem.it
www.adelsystem.it

Instruction Manual All In One _R21.doc

All In One: Uninterruptible Power Supply Output Vdc

Thank you for having chosen one of our products for your work.
We are certain that it will give the utmost satisfaction and be a notable help on the job.

General Description

Thanks to the All In One units (DC-UPS), it will be possible to optimize power management. The available power is automatically allocated between load and battery, supplying power to the load is the first priority of the unit thus it is not necessary to double the power, because also the power going to the battery will go to the load if the load so requires. The maximum available current on the load output is 2 times the value of the device rated current in. We call "Battery Care" the concept base on algorithms that implement rapid and automatic charging, battery charge optimization during time, full batteries recovery and real time diagnostic during installation and operation. The Real Time Auto-diagnostic system, monitoring battery faults such as, battery Sulfated, elements in short circuit, accidental reverse polarity connection, disconnection of the battery, they can easily be detected and removed by help of Blink Code of Diagnosis Led; during the installation and after sell. The continuous monitoring of battery efficiency, reduces battery damage risk and allows a safe operation in permanent connection. Each device is suited for all battery types, by means of jumpers it is possible setting predefined curves for Open Lead Acid, Sealed Lead Acid, Gel, Ni-Cd Ni-Mh(option), Lithium(option). They are programmed for two charging levels, boost and charge, but they can be changed to single charging level by the user. A rugged casing with bracket for DIN rail mounting provide IP20 protection degree. They are extremely compact and cost-effective.

Main Characteristics

- Input: single-phase   115–230-277 Vac
- Output Load: power supply: 24 Vdc; 3, 5, 10, 20 A; 12 Vdc; 3, 6, 10, 35 A   48 Vdc; 5 – 10 A
- Output Battery: charging   24 Vdc; 3 – 5 – 10 – 20 A; 12 Vdc; 3 – 6 – 10 – 35 A; 48 Vdc; 5 – 10 A
- Suited for the following battery types: Open Lead Acid, Sealed Lead Acid, lead Gel, Ni-Cd, Ni-Mh and Lithium
- Automatic diagnostic of battery status. Charging curve IUoUO, constant voltage and constant current Battery Life Test function (Battery Care)
- Switching technology
- Four charging levels: Boost, Absorption, Trickle and Recovery
- Protected against short circuit, Over Load and inverted polarity
- Signal output (contact free) for discharged or damaged battery
- Signal output (contact free) for mains or Back-UP
- Protection degree IP20 - DIN rail; Space saving
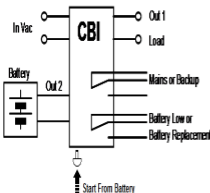
Safety and warning notes

WARNING – Explosion Hazard Do not disconnect Equipment unless power has been switched off or the area is known to be non-hazardous.

WARNING – Explosion Hazard. Substitution of components may impair suitability for class I, Division 2.
WARNING – Switch off the system before connecting the module. Never work on the machine when it is live. The device must be installed in accordance with UL508. The device must have a suitable isolating facility outside the power supply unit, via which can be switched to idle. Danger of fatal Injury!

Connection (terminal and wiring):

Cable Connection: The following cable cross-sections may be used:

	Solid (mm²)	Stranded (mm²)	AWG	Torque (Nm)	Stripping Length	All In One (Size)	1 Phase L N PE Input AC	1 Phase L N PE Input AC
In:	0.2 – 2.5	0.2 – 2.5	24 – 14	0.5 – 0.6 Nm	7 mm	Size 1 and 2		
	4.0	6.0	30 – 10	0.8 – 0.9 Nm	7 mm	Size 3		
Out:	0.2 – 2.5	0.2 – 2.5	24 – 14	0.5 – 0.6 Nm	7 mm	Size 1 and 2		
	4.0	6.0	30 – 10	0.8 – 0.9 Nm	7 mm	Size 3		
Signal:	0.2 – 2.5	0.2 – 2.5	24 – 14	0.5 – 0.6 Nm	7 mm			

The connection is made by the screw type 2.5 mm² or 4.0 mm² (CBI2420A – CBI1235A) terminal blocks. Use only copper cables that are designed for operating temperatures of > 75 °C. Wiring terminal shall be marked to indicate the proper connection for the power supply.
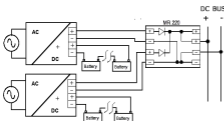
Output Power connections:
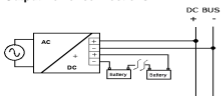
Normal connection

Typical application for All In One device, one output for Load "DC Bus", one Input/Output for connection to the battery.

N°1 battery (12 Vdc) for CBI12xx;
N°2 battery (12 Vdc) connected in Series for CBI24xx;
N°4 battery (12 Vdc) connected in Series for CBI48xx;
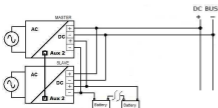
Parallel connection "Redundancy"

Power supplies can be paralleled for 1+1 redundancy to obtain a higher system availability. Redundant systems require a certain amount of extra power to support the load in case one power supply unit fails. The simplest way is to put two CBI in parallel. In case one power supply unit fails, the other one is automatically able to support the load current without any interruption. This simple way to build a redundant system has two major disadvantages:
- The faulty power supply can not be recognized.
- The Diagnosis LED will give the informations about the status of the Load and the Battery (see Display Signals for

more data). It does not cover failures such as an internal short circuit in the secondary side of the power supply. In such a - virtually nearly impossible - case, the defective unit becomes a load for the other power supplies and the output voltage can not be maintained any more. This can only be avoided by utilizing decoupling diodes which are included in the Redundancy Module MR220. Recommendations for building redundant power systems: a) Use separate input fuses for each CBI. b) Monitor the individual CBI units by three LED. Each unit has two relay: Mains and backup and Low Battery or Battery Replacement (faulty situation). This feature reports a faulty unit; see Relay Contact Rating for any technical detail. c) When possible, connect each power supply to different phases or circuits.

Parallel connection "Double Power"

Power supplies can be paralleled for 1+1=2 parallel to obtain a double power of a single unit. The possibility to put in parallel connection it is only in SIZE 3 devices in the specific "P" version (i.e. CBI2420AP), to be reach the sum of the current at the same output voltage. It is necessary to use a standard UTP cable RJ45 to connect Aux2 of each device. The communication protocol is based on CAN2.0A standard. In this way the system have only One output for the Load and One output for the battery.

a) Use separate input fuses for each CBI.
b) The connections does not provide any preparation, only the connection to the RJ45 cable also with the two devices already powered, make sure that the two CBI have the same settings (battery type, charging level current, time buffering, life test ...) because at every power on (or after the connection of the cable RJ45) configure themselves one as the Master (which give you all the visual signals) and one as the Slave (diagnosis LED always ON) without a default choice.
c) Use the alarm contacts of two devices in parallel.
For Start Battery without mains voltage, push start button on both units.
The models with software for parallel ("P" suffix) can be used alone simply not connecting with each other with the RJ45 cable.
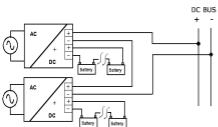
Series connection:

a) It is possible to connect as many units in series as needed, providing the sum of the output voltage does not exceed 150Vdc. b) Voltages with a potential above 60Vdc are not SELV any more and can be dangerous. Such voltages must be installed with a protection against touching. c) For serial operation use power supplies of the same type. d) Connection of the output is required when the sum of the output voltage is above 60Vdc. e) Keep an installation clearance of 10 mm (left/right) between two power supplies and avoid installing the power supplies on top of each other. Note: Avoid return voltage (e.g. from a decelerating motor or battery) which is applied to the output terminals.

Output Load (Mains input ON)

The output Load in normal mode, Mains Input Vac Voltage present, follow the charging battery dc output voltage. The minimum and maximum range stabilized are the following:

CBI12xx:11 – 14,4 Vdc; (Without battery connected out. Voltage fixed at 12Vdc)
CBI24xx:22 – 28.8 Vdc; (Without battery connected out. Voltage fixed at 24Vdc)
CBI48xx:44 – 57.6 Vdc; (Without battery connected out. Voltage fixed at 48Vdc)

Thanks to the All In One units, it will be possible to manage the power. The available power, is automatically allocated between load and battery: supplying power to the load is the first priority of the unit; thus it is not necessary to double the power, and also the power available for the battery will go to the load if the load requires so:
in "Power Boost Mode" the maximum current on the load output is the 2 times the rated current 2 x In (Iload = In+ Ibatt) in continuous operation and 3 times the rated current 3 x In (Iload = 2In+ Ibatt) for 4 seconds; after this parameter the devices is electrically protected against overload and short circuit.
- In "Power Boost Mode", if the current of the battery generate current to the load for a time more than 4 minutes, the device give message (8 Blink), consequently means that the battery it is going to unloading.
If the Mains Input Voltage fall below a Threshold level (50% of the Typ. Vac input) the battery it is immediately connected to the Output Load, without any interruption.
voltage dips: In this situation the voltage in the output load it is the same of the battery.
To avoid deep battery discharge, the battery will supply the load until battery voltage reaches 1.5 V/cell. Below this level the device automatically switches off to prevent Deep discharge and battery damage.

Output Load In Buffer Mode (Mains Input OFF)
Some example of buffering time depending on LOAD Output in function to the Ah of the battery.

Buffering Time	BATT1.2 Ah	BATT 3 Ah	BATT7.2 Ah	BATT12 Ah	BATT100 Ah
Load 1.5 A	20 min	60 min	200 min	400 min	/
Load 3 A	8 min	30 min	120 min	240 min	/
Load 5 A	3 min	15 min	55 min	100 min	/
Load 7.5 A	2 min	10 min	30 min	60 min	/
Load 10 A	No	7 min	20 min	45 min	20 h
Load 12 A	No	3 min	12 min	30 min	600 min
Load 15 A	No	No	9 min	20 min	400 min
Load 20 A	No	No	7 min	13 min	240 min

Operating and Display Element:
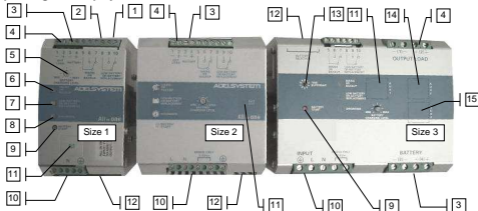
No. 10: Input AC Port pin. L – N:

1 Phase Switching Power Supplies L, N, PE ⏚.
Size 2 and Size 3 BRIDGE ONLY for input 115 Vac, and connect L, N, PE ⏚.

No. 3: Battery Connection Port:
Connect the battery between pin. 3 (–) and 4 (+)
One battery (12 Vdc) for CBI12xx;
Two battery (12 Vdc) connected in Series for CBI24xx;
Four battery (12 Vdc) connected in Series for CBI48xx;

No. 4: Output Load:
Connect this Output to the load 1 (–). 2 (+).

No. 1, 2 Signal Ports (Output Isolated):

Connections for,
No. 2: Mains/Back Up: Input Mains On/Off. Contact: 5,6,7
No. 1: Low Battery, Fault connections systems, Battery replacement. Contact: 8,9,10

Relay Contact Rating:
Max.DC1: 30 Vdc 1 A; AC1: 60 Vac 1A : Resistive load (EN 60947-4-1)
Min.1mA at 5 Vdc: Min. permissive load

Signal Output port true table:		Port N°2 - Led N°6 Mains/Back-Up		Port N°1 - Led N°7 Fault Battery	
		5-6 Closed	5-7 Closed	8-9 Closed (OK)	8-10 Closed
Mains Input Vac	ON	■ - led off		■ - led off	
	OFF		■ - led On (1)	■ - led off	
The battery in BackUP it is less than 30% cap?	YES		■ - led On		■ - led On
	NO	■ - led off		■ - led off	
Battery or system Fault?	YES				■ - led On (2)
	NO	■ - led off		■ - led off	

Note:
(1) For better efficiency of the system, filter relay Mains/Back up with a delay of at least 5 seconds before give alarm Mains Lost, example: connection to PLC.
(2) See Diagnosis Led

No. 6, 7 and 8 Display Signals

No.6: Led Mains/Back Up: Input Mains On/Off
No.7: Led Low Battery(capacity less than 30%), Fault connections systems, Battery replacement.
No.8: Led Battery charge mode,
Led Diagnosis. Diagnosis of the system through "blinking code" signal

Monitoring Control Chart:	State	LED Diagnosis (No.8)	LED Battery Fault (No.7)
Charging Type	Trickle	1 Blink/sec	OFF
	Boost	3 Blink/sec	OFF
	Recovery	5 Blink/sec	OFF
System Auto Diagnosis	Reverse polarity or high battery Voltage (over 32.5Vdc for CBI24xxA)	1 Blink/pause _|	ON
	Battery In Short Circuit	2 Blink/pause _||	ON
	Element in Short Circuit	3 Blink/pause _|||	ON
	Over Load or short circuit on the load	4 Blink/pause _||||	ON
	Bad battery; Internal impedance Bad or Bad battery wire connection	5 Blink/pause _|||||	ON
	Life test not possible	6 Blink/pause _||||||	ON
	Bad thermal sensor	7 Blink/pause _|||||||	ON
	Boost condition; battery discharge after 4 min. of overload.	8 Blink/pause _||||||||	ON
	Internal fault	9 Blink/pause _|||||||||	ON
	Low battery (under 18.5Vdc for CBI24xxA) Only if started from battery, no Mains input. Form Jumper N°5 or Push Bottom	10 Blink/pause _||||||||||	ON
	CAN bus error	11 Blink/pause _|||||||||||	ON
	Life test not possible on Slave Device	12 Blink/pause _||||||||||||	ON
	Bad battery wire connection; Parallel mode on Slave	13 Blink/pause _|||||||||||||	ON
	Boost condition; battery discharge after 4 min. of overload; Parallel mode on Slave Device	15 Blink/pause _|||||||||||||||	ON

No. 9, 12: Start from Battery, No Mains Vac

No. 9: Push-bottom, for 3 sec., in the front panel for switch ON the system without the "Mains input Vac" but only the battery connected. (Not present in CBI2410XX and CBI485XX)
No.12: (Jumper n.5) It is also available the same function for remote start from the battery, via RTCONN cable connected in the Push-bottom mounted on front Panel of the external system. Standard function for all products, Size 2 only with code CBI2410A/S and CBI485A/S.

No. 12: Battery Management Configurations

Preliminary Operations: One device for all battery types.

Completely automatic, all devices are suitable to charge most batteries types thank to User Selectable charging curves. They can charge open lead acid, sealed lead acid, Gel, Ni-Cd Ni-MH and Lithium batteries. It is possible to change or add other charging curves connecting the device to a portable PC.

Caution: Switch off the system before Setting the jumper. Only jumper in position 5 Refresh ON/OFF state with Power.

For Battery Type Selection always refer to the data of the manufacturer of the batteries.

Battery Type Selection	Jumper Position (Size 1 and Size 3)	Jumper Position (Size 2)	Trickle/Float charge (Volt/Cell)	Fast/Bulk charge (Volt/Cell)
Open Lead	*(jumper diagram)*	*(jumper diagram)*	2.23	2.40
VRLA (AGM) Low	*(jumper diagram)*	*(jumper diagram)*	2.25	2.40
VRLA (AGM) High	*(jumper diagram)*	*(jumper diagram)*	2.27	2.40
Gel Battery	*(jumper diagram)*	*(jumper diagram)*	2.30	2.40

ADELSYSTEM → Side Label for NiCd/Lithium Type.

CBIxxxxA (Ni-Cd)

If NiCd/Lithium is present please consider the following table for Battery Type Selection.

Battery Type Selection (NiCd)	Jumper Position (Size 1 and Size 3)	Jumper Position (Size 2)	Trickle/Float charge (Volt/Cell)	Fast/Bulk charge (Volt/Cell)
Open Lead	*(jumper diagram)*	*(jumper diagram)*	2.23	2.40
VRLA (AGM) Low	*(jumper diagram)*	*(jumper diagram)*	2.25	2.40
Gel Battery	*(jumper diagram)*	*(jumper diagram)*	2.30	2.40
(1) NiCd – NiMh	*(jumper diagram)*	*(jumper diagram)*	10% Imax Trimmer	1.70 – (12V) 10 cells / 1.55 – (24V) 20 cells
(2) Lithium	*(jumper diagram)*	*(jumper diagram)*	Battery disconnected	3,65 V – (12V) 4 cells / 3,65 V – (24V) 8 cells

Functional Setting			Function
Battery Life test ON	*(jumper diagram)*	*(jumper diagram)*	Jumper present: Life test enabled.
Fast Charge Enable	*(jumper diagram)*	*(jumper diagram)*	Jumper present: fast charge enabled.
"Battery Start" (without Input Mains) (3)	*(jumper diagram)*	*(jumper diagram)*	RTCONN cable for connection to external Push-bottom mounted on front Panel of the external system.
Fast Recovery Charge (4)	*(jumper diagram)*	Not available	Jumper present: Fast Recovery Charge, enabled only for Size 3. Possibility to recharge the battery also when the voltage is close to Zero with the maximum power of the device. To be careful, the Load Output voltage follow the voltage of the battery.

Notice:

1   Be careful, in NiCd-NiMh (option to be defined by Order), the VRLA (AGM) High charging curve is deleted. End-of-charge determined by negative ΔV detection of battery voltage (-5mV/cell). If no negative ΔV but only a "flat" profile is detected fast charge is terminated after 10 min. General end-of-charge timeout set to 16 hours. Trickle charge current is regulated at 10% of max current corresponding to trimmer position. In order to detect end-of-charge negative ΔV, charging current must be set at least at 30% of nominal battery capacity (0,3 C); with lower values of charging current negative ΔV detection is not guaranteed.

2   Be careful, in Lithium (option to be defined by Order), the VRLA (AGM) High charging curve is deleted. In Float charge, with battery disconnected, the voltage on OUT LOAD is always 14,6V (12V) or 29,2V (24V).

3   Don't leave the jumper in position 5; penalty discharge in Back up mode complete the battery close to Zero. For Size 2: must be require CBI2410A/S or CBI485A/S (/S means start with battery functions, otherwise only start with Input Mains)

4   Jumper selection n.7 is available only on Size 3

No. 5: Charging Level Current:

BATTERY CHARGING LEVEL MIN — MAX

It is possible set the max recharging current for the batteries by trimmer (Charging Level). The current adjustment goes from 20% ÷ 100% of In. Set the maximum charging current between 10% and 20% of the battery capacity.

No: 11: Auxiliary Output

RJ 45 behind the label remove the window label to find the connector,
It is possible connect:

- Temperature sensor, for ambient temperature charging compensation. With this it is possible to active the specifications of the EN54-4 firing norm.
- Connection for external display to remote n° 3 led of the internal device.

This features are not available for the NiCd/Lithium models.

No. 13: Buffering Time Setting

On models Size 3 it is possible to set a buffering time. It can be selected by setting the desired value on the rotary switch 13. Buffering time is initiated when the mains is switched OFF. The LOAD output will be ON for the selected time.

Switch position	0	1	2	3	4	5	6	7	8	9
Buffering Time (min.)	∞	0.5	2	5	10	15	20	30	45	60

If the switch is in position 0, the LOAD output will be in ON state until the battery it is completed discharged. Anyway to prevent damage risks, the unit disconnects the batteries when a minimum voltage level is reached.
Units Size 1 -2 also not allow user setting of a buffering time. The LOAD output will be in ON state until the battery it is completed discharged. It is however possible to request factory customized versions with specific buffering time setting.

No. 14: Auxiliary Output "Aux 2"

Present only in CBI2420A and CBI1235A it is provided of CAN2.0A connection.
Connection for external Intelligent display.

No. 15: Auxiliary Output "Aux 3"

Present only in CBI2420A and CBI1235A : Not used.

Battery Test

The Battery Care philosophy is base on algorithms that implement rapid and automatic charging, battery charge optimization during time, flat batteries recovery and real time charging diagnostic during installation and operation. The Real Time Auto-diagnostic system, monitoring battery faults such as, elements in short circuit, accidental reverse polarity connection, disconnection of the battery, they can easily be detected and removed by help of Blink Code of Diagnosis Led; during the installation and after sell. Each device is suited for all battery types, by means of jumpers it is possible setting predefined curves for Open Lead Acid, Sealed Lead Acid, Gel, Ni-Cd(option), Lithium(option).They guarantees battery reliability in time by continuously testing the internal impedance status, avoids any possible risk of damages and grants also a permanent, reliable and safe connection of the battery to the power supply. The system, through a battery simulation circuit with algorithms of evaluation of the detected parameter, is able to recognize sulphated batteries or batteries with a short-circuited element.
Battery Test: Automatic. Every 60 sec. check battery connection. Every 220 minute in trickle charge, make the test of the battery efficiency. The fault is signalized with relay commutation and diagnosis led blinking.

Diagnostic Type Checks:

Check for accidental disconnection of the battery cables:

All In One detects accidental disconnection and immediately switched off the output power.

Battery not connected:

If the battery is not connected no output power.

Test of quality wire connections:

During trickle charge the quality (resistance) on the battery connection is checked every 20 sec. This to detect if the cable connection has been properly made.

Battery in Open Circuit or Sulphated:

Every 220 minute. All In One tests of internal impedance, in trickle charging mode.

Reverse Polarity check:

If the battery is connected with inverted polarity, All In One is automatically protected.

Test of battery voltage connections:

Appropriate voltage check, to prevent connection of wrong battery types, more or less than the nominal voltage.

End of Charge check

When the battery is completely full, the device automatically switch in trickle charging mode.

Check for Battery Cells in short circuit

Thanks to specific algorithms of evaluation, the CBs recognize batteries with cells in internal short circuit.
In trickle charge every 2 hours test of element in short circuit.

Diagnosis of battery and device

All CBI devices support the user during installation and operation. A Blink code of Diagnosis Led allows to discriminate among various possible faults.
Error conditions, "LED Battery Fault" ON and "LED Diagnosis" blinking with sequence; see Display Signal section.

Charging Curve

Automatic multi-stage operation and real time diagnostic allows fast recharge and recovery of deep discharged batteries, adding value and reliability to the system hosting the CBI device. The type of charging is Voltages stabilized and Current stabilized IUoUo.

Three charging modes are identified by a flashing code on a Diagnosis LED.

To maintain the Output Load in lower Voltage state, don't put jumper in position 5, in this case no boost charge but only Float charge.

	State	Diagnosis LED	Battery Fault LED
Charging Type	Trickle	1 Blink/sec	OFF
	Boost	2 Blink/sec	OFF
	Recovery	5 Blink/sec	OFF

CB Charging Diagram
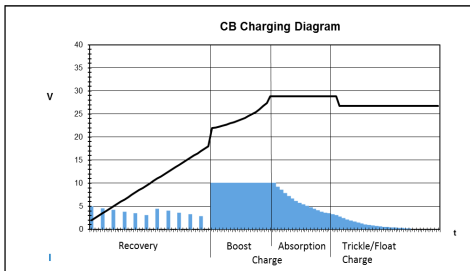
Compensation Recharges in temperature

(For SIZE 2: CBI2410 and CBI485 require /ARJ code)

Connecting to RJ45 Auxiliary Output the cable RJTEMP (supplied separately), the CBI will vary the voltage of battery charging depending on the temperature:

Fast Charge	Trickle charge
+/-5mV/°C x n. of Cells from -8°C to +60°C	+/-3mV/°C x n. of Cells from -20°C to +60°C
+140mV/Cell ÷ -200mV/Cell compared to the value at 20°C	+120mV/Cell ÷ -120mV/Cell compared to the value at 20°C

If the temperature is less than -20°C or greater than +60°C alarm is signalled with code 7 blink.
The sensor place on cable RJTEMP must be applied on the battery.

Protection Features

On the primary side: the device is equipped whit an internally fuse. If the internal fuse is activated, it is most probable that there is a fault in the device. If happen, the device must be checked in the factory.

On the secondary side Battery and load: The device is electrically protected against short circuits and overload.

Inversion polarity: the module it is automatically protected against inversion of battery polarity and connection of load inverted.

Over current and output short circuit: the unit limits the output current (see the technical data).

Deep discharge : not possible. The unit disconnects the battery when a minimum voltage level is reached.

Thermal behaviour

Surrounding air temperature 50°C. For ambient temperature of over 50°C, the output current must be reduced by 2.5% per °C. Max 70°C At the temperature of 70°C the output current will be 50% of In. The equipment does not switch off in case of ambient temperature above 70°C or thermal overload. The devices are protected for Over temperature conditions "worst case"; in this situations the device Shut-down the output and automatic restart when temperature inside fall.

Standards and Certification

Electrical Safety:
Assembling device: UL508, IEC/EN 60950 (VDE 0805) and EN 50178 (VDE 0160).
Installation according: IEC/EN 60950.
Input / Output separation: SELV EN 60950-1 and PELV EN 60204-1. Double or reinforced insulation.

EMC Standards Immunity:
EN 61000-4-2, EN 61000-4-3, EN 61000-4-4, EN 61000-4-5.

EMC Standards Emission:
EN 61000-6-4, EN 61000-6-3, EN 61000-3-2 (see data sheet for each device)

Standards Conformity:
Safety of Electrical Equipment Machines: EN 60204-1.

CE The CE mark in According to EMC 2004/108/EC and Low voltage directive 2006/95/EEC

c UL us In According to UL 1236 and CSA C22.2 N° 107.2

Norms and Certifications

In Conformity to: IEC/EN 60335-2-29 Battery chargers; EN60950 / UL1950; Electrical safety EN54-4 Fire Detection and fire alarm systems; 89/336/EEC EMC Directive; 2006/95/EC (Low Voltage); DIN41773 (Charging cycle); Emission: IEC 61000-6-4; Immunity: IEC 61000-6-2. CE.

Rail Mounting:

⚠ All modules must have a minimum vertical and horizontal distance of 10 cm to this power supply in order to guarantee sufficient auto convection. Depending on the ambient temperature and load of the device, the temperature of the housing can become very high!

MOUNTING   **REMOVING**

-5°/+5° max

ADELSYSTEM
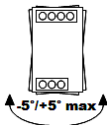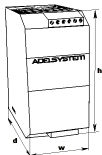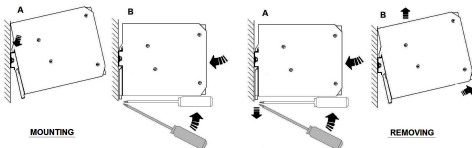
CBI - All in ONE

	12Vdc				24Vdc				48Vdc	
Model	CBI123A	CBI126A	CBI1210A	CBI1235A	CBI243A	CBI245A	CBI2410A	CBI2420A	CBI485A	CBI4810A
INPUT DATA										
Nominal Input Voltage / Tensione d'ingresso nominale	115 – 230 – 277Vac	115 – 230 – 277Vac	115 – 230 – 277Vac	115 / 230 – 277Vac	115 – 230 – 277Vac	115 – 230 – 277Vac	115 / 230 – 277Vac	115 / 230 – 277Vac	115 / 230 – 277Vac	115 / 230 – 277Vac
Input Voltage Range / Campo di funzionamento	90 – 305Vac	90 – 305Vac	90 – 305Vac	90 – 135Vac 180 – 305Vac	90 – 305Vac	90 – 305Vac	90 – 135Vac 180 – 305Vac	90 – 135Vac 180 – 305Vac	90 – 135Vac 180 – 305Vac	90 – 135Vac 180 – 305Vac
Inrush Current (Vn and In Load) I²t / Corrente di Inserzione	≤ 36 A ≤ 5msec	≤ 36 A ≤ 5msec	≤ 36 A ≤ 5msec	≤ 80 A ≤ 5msec	≤ 36 A ≤ 5msec	≤ 36 A ≤ 5msec	≤ 42 A ≤ 5msec	≤ 80 A ≤ 5msec	≤ 42 A ≤ 5msec	≤ 35 A ≤ 5msec
Frequency / Frequenza di Ingresso	47 – 63 Hz	47 – 63 Hz	47 – 63 Hz	47 – 63 Hz	47 – 63 Hz	47 – 63 Hz	47 – 63 Hz	47 – 63 Hz	47 – 63 Hz	47 – 63 Hz
Input Current (115 – 230Vac) / Assorbimento	2.8 – 1.3A	2.8 – 1.3A	2.8 – 1.3A	8.0 – 4.2A	2.8 – 1.3A	2.8 – 1.3A	3.3 – 2.2A	8.0 – 4.2A	3.3 – 2.2A	8.0 – 4.2A
Internal Fuse / Fusibile Interno (non sostituibile)	4A	4A	4A	10A	4A	4A	6.3A	10A	6.3A	10A
External Fuse (recommended) / Fusibile Esterno raccomandato	10A	10A	10A	16A	10A	10A	16A	16A	16A	16A
OUTPUT DATA										
Output Vdc / I_N / Tensione di uscita Vdc / I_N	12Vdc – 3A	12Vdc – 6A	12Vdc – 10A	12Vdc – 35A	24Vdc – 3A	24Vdc – 5A	24Vdc – 10A	24Vdc – 20A	48Vdc – 5A	48Vdc – 10A
Output Current (In)	3A	6A	10A	35A	3A	5A	10A	20A	5A	10A
Dissipation Power load max (W)	15	18	25	68	18	25	48	68	48	68
Minimum load / Carico minimo	No	No	No	No	No	No	No	No	No	No
Efficiency (50% of In) / Rendimento tipico	≥ 89%	≥ 89%	≥ 89%	> 90%	≥ 89%	≥ 89%	≥ 83%	> 90%	≥ 83%	> 91%
Short-circuit protection / Protezione contro il corto circuito	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Over Load protection / Protezione sovraccarico	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Over Voltage Output protection / Protezione sovratensione in uscita	Yes (Typ. 35Vdc)	Yes (Typ. 35Vdc)	Yes (Typ. 35Vdc)	Yes (Typ. 35Vdc)	Yes (Typ. 35Vdc)	Yes (Typ. 35Vdc)	Yes (Typ. 35Vdc)	Yes (Typ. 35Vdc)	Yes (Typ. 90Vdc)	Yes (Typ. 90Vdc)
Overheating Thermal Protection / Protezione sovratemperatura	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Reverse battery protection / Protezione inversione batteria	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Sulfated battery check / Controllo batteria solfatata	Yes by Jumper	Yes by Jumper	Yes by Jumper	Yes by Jumper	Yes by Jumper	Yes by Jumper	Yes by Jumper	Yes by Jumper	Yes by Jumper	Yes by Jumper
Detection of element in short circuit / Relevazione elemento in corto circuito	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
LOAD OUTPUT / USCITA CARICO										
Output voltage (at IN) Vdc / Tensione di uscita (a IN) Vdc	10 – 14.4Vdc (17Vdc for Ni-Cd)	10 – 14.4Vdc (17Vdc for Ni-Cd)	10 – 14.4Vdc (17Vdc for Ni-Cd)	10 – 14.4Vdc (17Vdc for Ni-Cd)	22 – 28.8Vdc (31Vdc for Ni-Cd)	22 – 28.8Vdc (31Vdc for Ni-Cd)	22 – 28.8Vdc (31Vdc for Ni-Cd)	22 – 28.8Vdc (31Vdc for Ni-Cd)	44 – 57.6Vdc	44 – 57.6Vdc
Nominal Current IN = Iload	1.1 x In A ± 5%	1.1 x In A ± 5%	1.1 x In A ± 5%	1.1 x In A ± 5%	1.1 x In A ± 5%	1.1 x In A ± 5%	1.1 x In A ± 5%	1.1 x In A ± 5%	1.1 x In A ± 5%	1.1 x In A ± 5%
Continuous current (without battery) Iload = In	3A	6A	10A	35A	3A	5A	10A	20A	5A	10A
Max continuous current (with battery) Iload = In + Ibatt	6A	12A	20A	70A	6A	10A	20A	40A	10A	20A
Max current Output Load: (Main Input) Iload (4sec.)	9A max	18A max	30A max	105A max	9A max	15A max	30A max	60A max	15A max	30A max
Max current Output Load: (Back Up) Iload (4sec.)	6A max	12A max	20A max	70A max	6A max	10A max	20A max	40A max	10A max	20A max
Push Button or Remote Input Control (AMP type connector)	Start from Battery without main	Start from Battery without main	Start from Battery without main	Start from Battery without main	Start from Battery without main	Start from Battery without main	Start from Battery without main (1)	Start from Battery without main	Start from Battery without main (1)	Start from Battery without main
Time Buffering; min (switch output off without main input)	Can be adjuste by PC SW mode	Can be adjuste by PC SW mode	Can be adjuste by PC SW mode	0.5;1;3;5;10;15; 20; 30; 45;60;∞	Can be adjuste by PC SW mode	Can be adjuste by PC SW mode	5 min standard - Require: SW S31	0.5;1;3;5;10;15; 20; 30; 45;60;∞	5 min standard - Require: SW S31	0.5;1;3;5;10;15; 20; 30; 45;60;∞
Protections against total discharge	9 – 10 Vdc batt	9 – 10 Vdc batt	9 – 10 Vdc batt	9 – 10 Vdc batt	19 – 20 Vdc batt	19 – 20 Vdc batt	19 – 20 Vdc batt	19 – 20 Vdc batt	38 – 40 Vdc batt	38 – 40 Vdc batt
Threshold alarm Battery almost flat	10 – 11 Vdc batt	10 – 11 Vdc batt	10 – 11 Vdc batt	10 – 11 Vdc batt	20 – 21 Vdc batt	20 – 21 Vdc batt	20 – 21 Vdc batt	20 – 21 Vdc batt	40 – 42 Vdc batt	40 – 42 Vdc batt
BATTERY CHARGER OUTPUT / USCITA CARICA BATTERIA										
Boost – Bulk charge (Typ. at I_N) / Carica Veloce	14.4Vdc	14.4Vdc	14.4Vdc	14.4Vdc	28.8Vdc	28.8Vdc	28.8Vdc	28.8Vdc	57.6	57.6
Max.Time Boost–Bulk charge (Typ. at I_N) / Tempo massimo Carica Veloce	15h	15h	15h	15h	15h	15h	15h	15h	15h	15h
Min.Time Boost–Bulk charge (Typ. at I_N) / Tempo minimo Carica Veloce	1min.	1min.	1min.	1min.	1min.	1min.	1min.	1min.	1min.	1min.
Trickle-Float charge (Typ. at I_N) / Carica di mantenimento	13.75Vdc	13.75Vdc	13.75Vdc	13.75Vdc	27.5Vdc	27.5Vdc	27.5Vdc	27.5Vdc	55Vdc	55Vdc
Recovery Charge / Carica di recupero	2 – 9Vdc	2 – 9Vdc	2 – 9Vdc	2 – 9Vdc	2 – 16Vdc	2 – 16Vdc	2 – 16Vdc	2 – 16Vdc	2 – 24Vdc	2 – 24Vdc
Turn-On delay after applying mains voltage / Accensione con tensione di rete	1sec. Max	1sec. Max	1sec. Max	1sec. Max	1sec. Max	1sec. Max	1.5sec. Max	1sec. Max	1.5sec. Max	1sec. Max
End of charging current (Bulk charge)	0.3A	0.3A	0.3A		0.3A	0.3A	0.3A			
Start up with strong load (capacitive load)/ Start up con carichi capacitivi	Yes, Unlimited	Yes, Unlimited	Yes, Unlimited	Yes, Unlimited	Yes, Unlimited	Yes, Unlimited	Yes, Unlimited	Yes, Unlimited	Yes, Unlimited	Yes, Unlimited
Residual Ripple / Ripple Residuo	≤ 60 mVpp	≤ 60 mVpp	≤ 60 mVpp		≤ 60 mVpp	≤ 60 mVpp	≤ 60 mVpp		≤ 60 mVpp	≤ 60 mVpp
Charging max I_{batt} / Corrente max. di Carica	3A ± 5%	6A ± 5%	10A ± 5%	35A ± 5%	3A ± 5%	5A ± 5%	10A ± 5%	10A ± 5%	5A ± 5%	10A ± 5%
Charging current Limiting I_N (I_{adj}) / Limitazione Corrente di Carica	20 ÷ 100 % / I_{batt}	20 ÷ 100 % / I_{batt}	20 ÷ 100 % / I_{batt}	10 ÷ 100 % / I_{batt}	20 ÷ 100 % / I_{batt}	20 ÷ 100 % / I_{batt}	20 ÷ 100 % / I_{batt}	10 ÷ 100 % / I_{batt}	20 ÷ 100 % / I_{batt}	10 ÷ 100 % / I_{batt}
Jumper Config.Type Battery (NiCd optional) / Configurazione Tipo Batteria	2.23 V/cell Open Lead, 2.25 V/cell Sealed Lead, 2.27 V/cell Sealed Lead, 2.3 V/cell gel; NiCd 1.5V/cell (10 elem.) trickle (Imax 10%)				2.23 V/cell Open Lead, 2.25 V/cell Sealed Lead, 2.27 V/cell Sealed Lead, 2.3 V/cell gel; NiCd 1.5V/cell (20 elem.) trickle (Imax 10%)				2.23 V/cell Open Lead, 2.25 V/cell Sealed Lead, 2.27 V/cell Sealed Lead, 2.3 V/cell gel; NiCd 1.5V/cell (40 elem.) trickle (Imax 10%)	
Quieshent Current / Consumo da batteria max.	≤100mA	≤100mA	≤100mA	≤100mA	≤100mA	≤100mA	≤100mA	≤100mA	≤100mA	≤100mA
Remote Input Control (AMP Type connector)	Boost / Trickle	Boost / Trickle	Boost / Trickle	Boost / Trickle	Boost / Trickle	Boost / Trickle	Boost / Trickle	Boost / Trickle	Boost / Trickle	Boost / Trickle
Characteristic Curve / Caratteristiche di Carica	IUoUo, Automatic, 3 stage / IUoUo, Automatico a 3 Stadi									
SIGNAL OUTPUT (RELAY) / SEGNALAZIONE RELÈ USCITA										
Main or Backup Power	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Low Battery	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Fault Battery	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
AUXILIARY OUTPUT (RJ 45 CONNECTION) FOR:										
CAN Bus	No	No	No	Optional	No	No	No	Optional	No	Optional
CLIMATIC DATA										
Ambient Temperature operation / Temperatura Ambiente di Lavoro	-25 ÷ +70°C	-25 ÷ +70°C	-25 ÷ +70°C	-25 ÷ +70°C	-25 ÷ +70°C	-25 ÷ +70°C	-25 ÷ +70°C	-25 ÷ +70°C	-25 ÷ +70°C	-25 ÷ +70°C
De rating Tª > (In) / De rating Tª > (In)	> 50° -2.5%(In) / °C	> 50° -2.5%(In) / °C	> 50° -2.5%(In) / °C	> 50° -2.5%(In) / °C	> 50° -2.5%(In) / °C	> 50° -2.5%(In) / °C	> 50° -2.5%(In) / °C	> 50° -2.5%(In) / °C	> 50° -2.5%(In) / °C	> 50° -2.5%(In) / °C
Ambient Temperature Storage / Temperatura max. Magazzino	-40 ÷ +85°C	-40 ÷ +85°C	-40 ÷ +85°C	-40 ÷ +85°C	-40 ÷ +85°C	-40 ÷ +85°C	-40 ÷ +85°C	-40 ÷ +85°C	-40 ÷ +85°C	-40 ÷ +85°C
Humidity at 25 °C / Umidità	95% to 25°C	95% to 25°C	95% to 25°C	95% to 25°C	95% to 25°C	95% to 25°C	95% to 25°C	95% to 25°C	95% to 25°C	95% to 25°C
Cooling / Raffreddamento	Auto Convection	Auto Convection	Auto Convection	Auto Convection	Auto Convection	Auto Convection	Auto Convection	Auto Convection	Auto Convection	Auto Convection
GENERAL DATA										
Isolation Voltage (IN / OUT) / Tensione di Isolamento (IN / OUT)	3000Vac	3000Vac	3000Vac	3000Vac	3000Vac	3000Vac	3000Vac	3000Vac	3000Vac	3000Vac
Isolation Voltage(IN / PE) / Tensione di Isolamento(IN / TERRA)	1605Vac	1605Vac	1605Vac	1605Vac	1605Vac	1605Vac	1605Vac	1605Vac	1605Vac	1605Vac
Isolation Voltage(OUT / PE) / Tensione di Isolamento(OUT/TERRA)	500Vac	500Vac	500Vac	500Vac	500Vac	500Vac	500Vac	500Vac	500Vac	500Vac
Protection Class (EN/IEC 60529) / Protezione Classe	IP 20	IP 20	IP 20	IP 20	IP 20	IP 20	IP 20	IP 20	IP 20	IP 20
Reliability (MTBF IEC 61709) / Affidabilità	> 300 000 h	> 300 000 h	> 300 000 h	> 300 000 h	> 300 000 h	> 300 000 h	> 300 000 h	> 300 000 h	> 300 000 h	> 300 000 h
Pollution Degree Environment / Grado d'inquinamento ambientale	2	2	2	2	2	2	2	2	2	2
Connection Terminal Blocks Screw Type / Dimensione morsetti	2,5mm (24-14 AWG)	2,5mm (24-14 AWG)	2,5mm (24-14 AWG)	4mm (30-10 AWG)	2,5mm (24-14 AWG)	2,5mm (24-14 AWG)	2,5mm (24-14 AWG)	4mm (30-10 AWG)	2,5mm (24-14 AWG)	4mm (30-10 AWG)
Protection class (with PE connected) / Grado di protezione (con cavo di terra collegato)	I	I	I	I	I	I	I	I	I	I
Dimension (w-h-d)/Dimensioni (l-h-p) mm	65x115x135 mm	65x115x135 mm	65x115x135 mm	150x115x135 mm	65x115x135 mm	65x115x135 mm	100x115x135 mm	150x115x135 mm	100x115x135 mm	150x115x135 mm
Weight / Peso	0.60 kg approx	0.60 kg approx	0.60 kg approx	1.55 kg approx	0.60 kg approx	0.60 kg approx	0.85 kg approx	1.55 kg approx	0.85 kg approx	1.55 kg approx
Safety Standard Approval / Conformità ed Approvazioni	CE ᴄ🆄🅻ᴜ	CE ᴄ🆄🅻ᴜ	CE ᴄ🆄🅻ᴜ	CE	CE	CE ᴄ🆄🅻ᴜ	CE	CE	CE	CE

(1) - Options to be defined by Order, Push Button not available

Optional for auxiliary Output (RJ45 connection): Temp Charging probe: Temperature sensor for battery 2m lenght. Voltage drop compensation: Cable for battery connection 2m lenght. Remote monitoring Display. Can Bus Cable.

All specification are subject to change without notice

Данный компонент на территории Российской Федерации

Вы можете приобрести в компании MosChip.

Для оперативного оформления запроса Вам необходимо перейти по данной ссылке:

http://moschip.ru/get-element

   Вы можете разместить у нас заказ для любого Вашего проекта, будь то
серийное   производство или разработка единичного прибора.

В нашем ассортименте представлены ведущие мировые производители активных и
пассивных электронных компонентов.

Нашей специализацией является поставка электронной компонентной базы
двойного назначения, продукции таких производителей как XILINX, Intel
(ex.ALTERA), Vicor, Microchip, Texas Instruments, Analog Devices, Mini-Circuits,
Amphenol, Glenair.

Сотрудничество с глобальными дистрибьюторами электронных компонентов,
предоставляет возможность заказывать и получать с международных складов
практически любой перечень компонентов в оптимальные для Вас сроки.

На всех этапах разработки и производства наши партнеры могут получить
квалифицированную поддержку опытных инженеров.

Система менеджмента качества компании отвечает требованиям в соответствии с
ГОСТ Р ИСО 9001, ГОСТ РВ 0015-002 и ЭС РД 009

Офис по работе с юридическими лицами:

105318, г.Москва, ул.Щербаковская д.3, офис 1107, 1118, ДЦ «Щербаковский»

Телефон: +7 495 668-12-70 (многоканальный)

Факс: +7 495 668-12-70 (доб.304)

E-mail: info@moschip.ru

Skype отдела продаж:
moschip.ru   moschip.ru_6
moschip.ru_4   moschip.ru_9