

The World Leader in High-Performance Signal Processing Solutions



*iSensor*<sup>®</sup>

## ADIS16240 Evaluation Tool Overview




Mark Looney  
*iSensor*<sup>®</sup> Application Engineer  
September 7, 2009



# iSensor<sup>®</sup> *The Simple Solution for Sensor Integration*


## Evaluation Tool Overview

1. **Evaluation/Interface Board (ADIS16240/PCBZ) for simpler connection to an existing processor/system PCB.**
  - ◆ These boards provide a simple connector translation that enables user to bypass BGA soldering. The 2mm pitch connectors are easy to interface with 1mm ribbon cable or solder to.
  - ◆ Part number for ordering: **ADIS16240/PCBZ**
2. **Evaluation System (ADISUSBZ) for those that prefer a simple PC interface**
  - ◆ This system provides a simple USB interface, along with a simple Graphical User Interface (GUI) package, for evaluating most of the ADIS16240 functions and performance.
  - ◆ Supports approximately 150-200SPS sample rate.
  - ◆ This system is not a development kit that comes with PC development tools, source code and software support.
  - ◆ Part number for ordering: **ADISUSBZ**

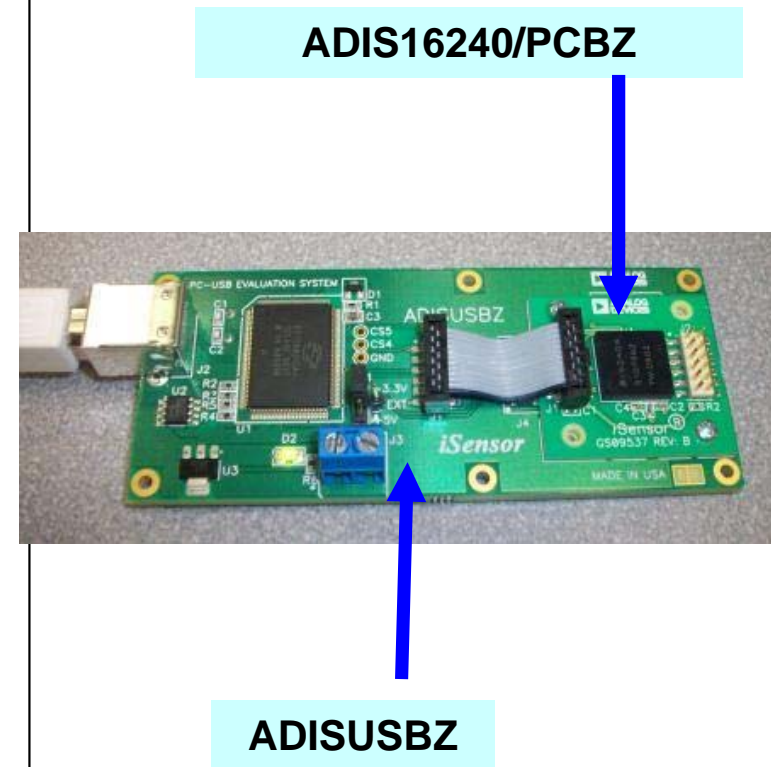


# iSensor<sup>®</sup> The Simple Solution for Sensor Integration

## Hooking up to the ADIS16240/PCBZ

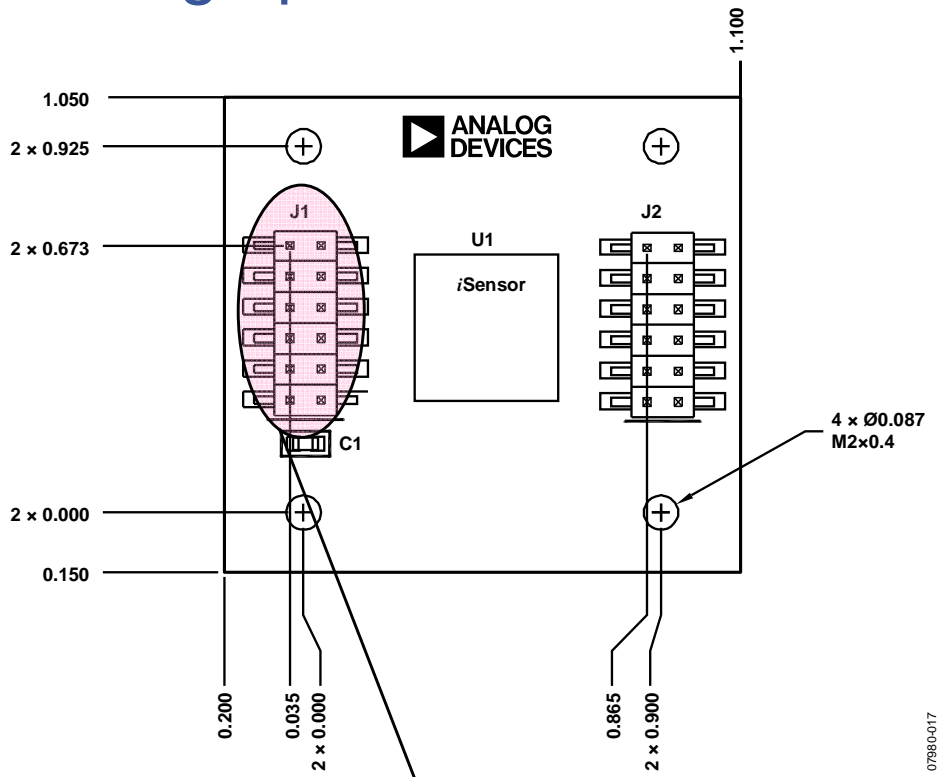


### J1 Ribbon Cable Interface Parts

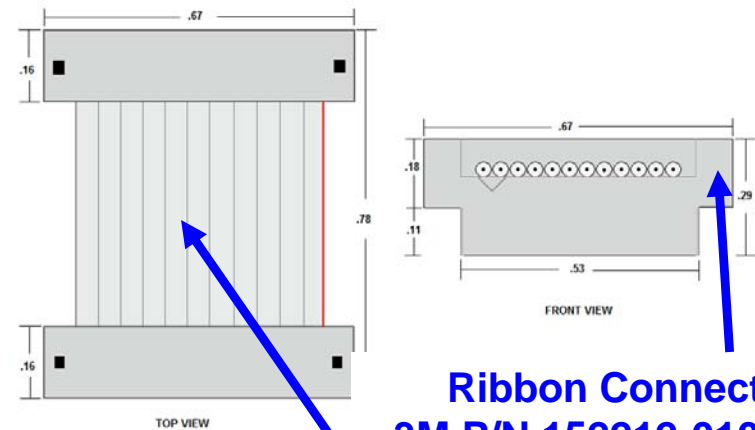

**Ribbon Connector**  
3M P/N 152212-0100-GB

**Ribbon Cable**  
3M P/N 3625/12 (100m)

### Master Processor Connection

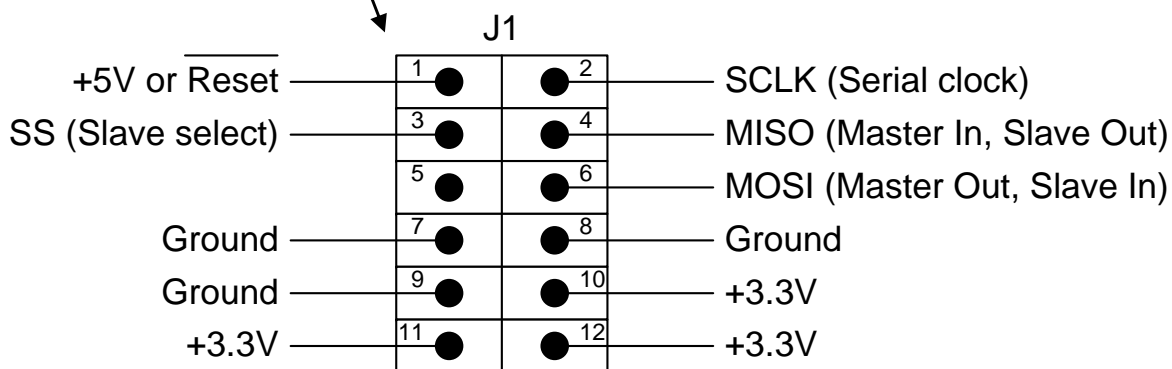

**ADISUSBZ uses the following cable assembly from Samtec:**

**ASP-140062-01**


# *iSensor*® The Simple Solution for Sensor Integration

## ADIS16240 Demonstration Software Installation

The ADIS16240 demonstration software can be found at

[www.analog.com/isensor-evaluation](http://www.analog.com/isensor-evaluation)

1. Click on “Evaluation Software Downloads”
2. Click on 240ES.zip and save it to a temporary directory
3. Open it and double click on setup.exe.


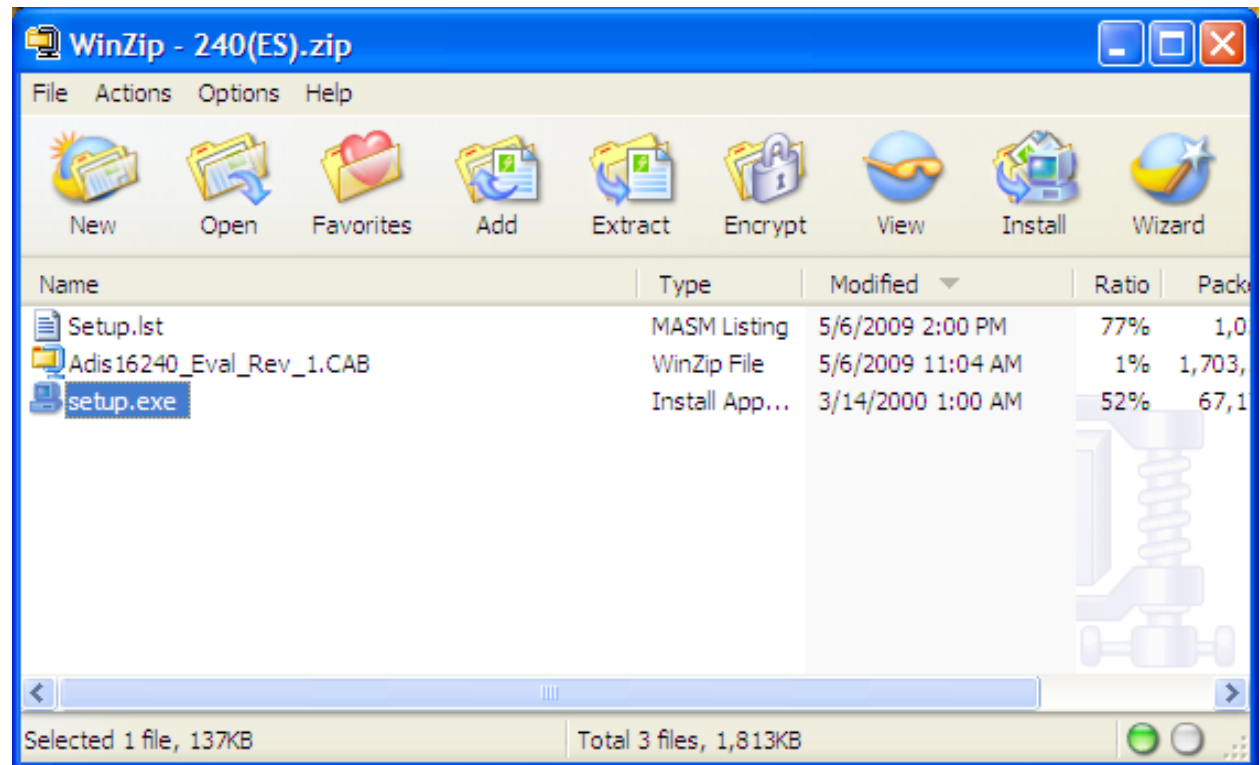


# iSensor® The Simple Solution for Sensor Integration

## ADIS16240 Demonstration Software Installation

### Installation Steps (continued)

4. Click OK on next screen
5. Click here to start installation

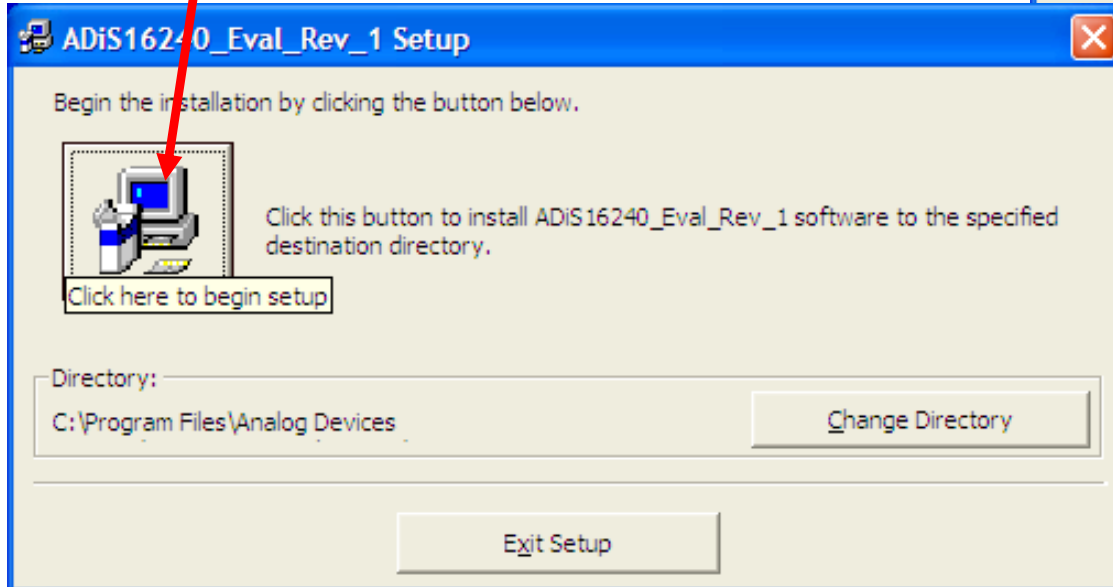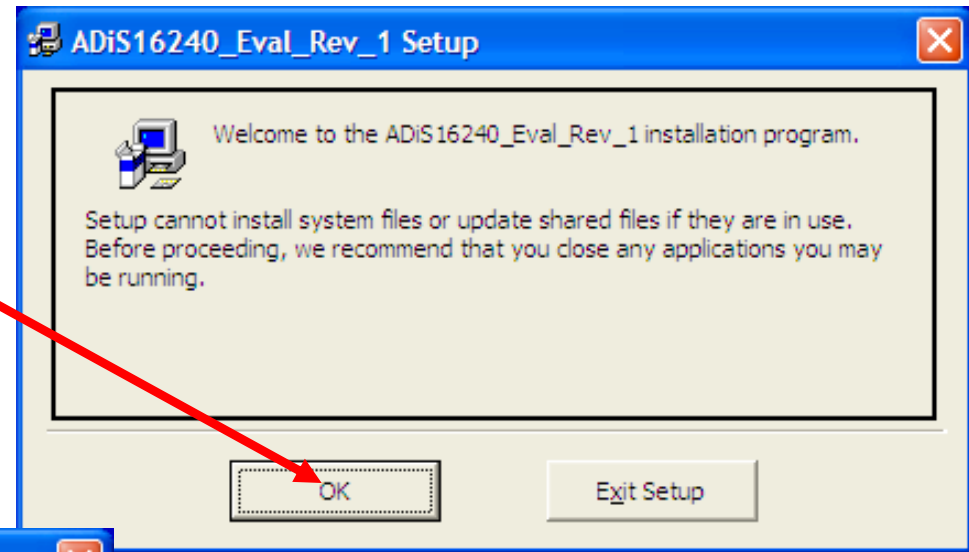

# iSensor® The Simple Solution for Sensor Integration




## ADIS16240 Demonstration Software Installation

### Installation Steps (continued)

6. Click Continue

7. If this message comes up, click on "No"

8. Click OK

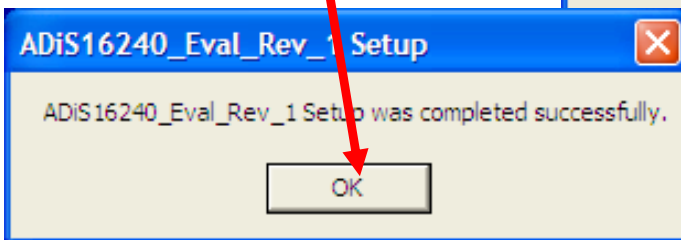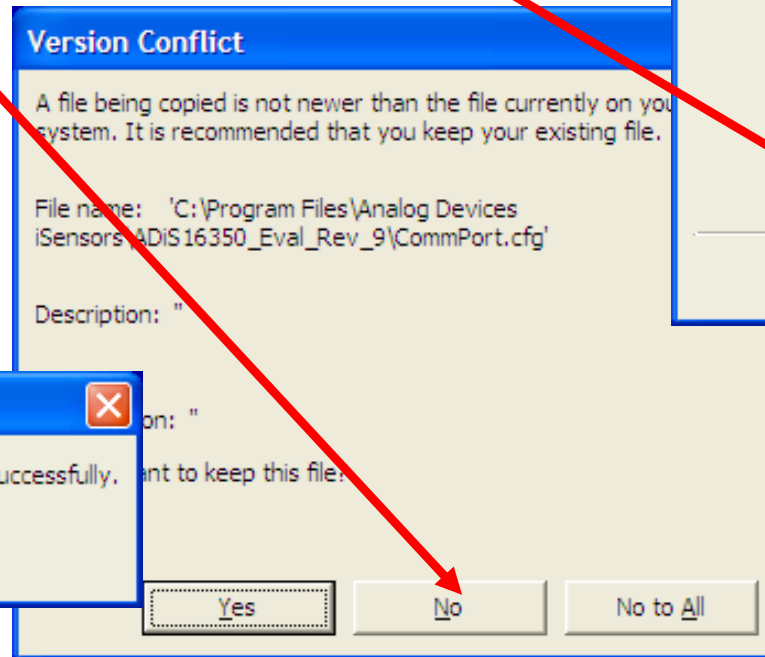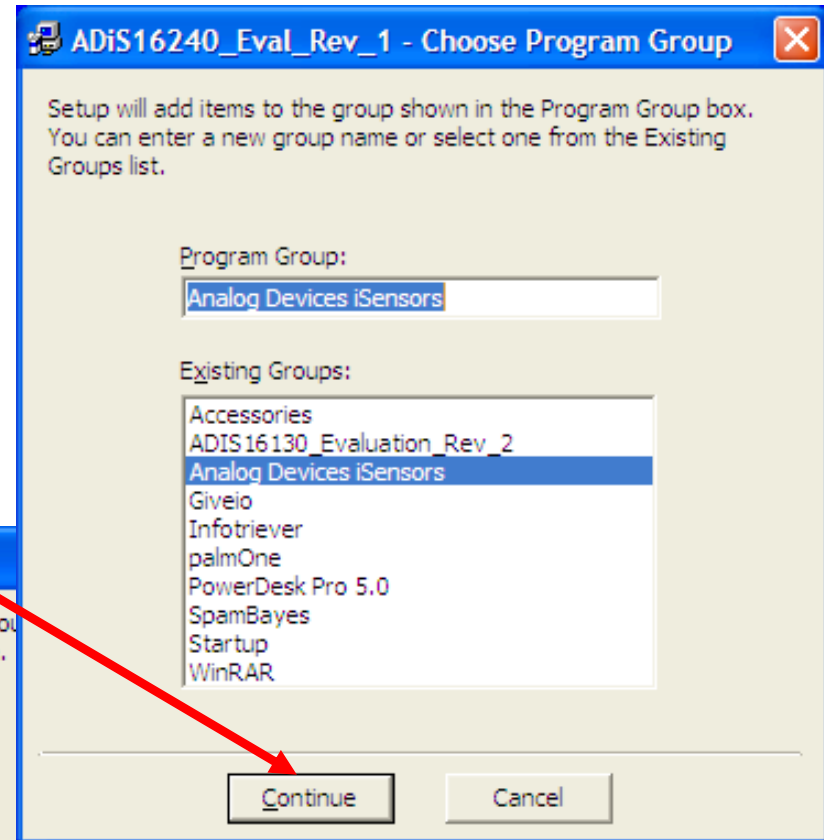

# iSensor<sup>®</sup> The Simple Solution for Sensor Integration

## ADIS16240 Demonstration Software Installation

### Installation Steps (continued)

9. Open the newly created directory and double-click onto “giveio.exe”

10. Click “Install,” then “I Agree”

The image displays three overlapping windows from a Windows XP environment:


- Visual basic runtimes (SP2) installation:** A dialog box with a blue title bar. It contains a welcome message and an "Install" button. A red arrow points from the "Install" button in this window to the "I agree" button in the license agreement window below it.
- License agreement:** A dialog box with a blue title bar. It contains a form for application details and a section titled "END-USER LICENSE AGREEMENT FOR THIS SOFTWARE". At the bottom, there are "I agree" and "Cancel" buttons. A red arrow points from the "I agree" button in this window to the "GIVEIO.EXE" file in the Explorer window to its right.
- Windows Explorer:** A window showing the directory "C:\Program Files\Analog Devices iSensors\ADIS16240\_Eval\_Rev\_1". The file "GIVEIO.EXE" is selected and highlighted. A red arrow points from the "GIVEIO.EXE" file to the "I agree" button in the license agreement window.

# *iSensor*® The Simple Solution for Sensor Integration


## ADIS16240 Demonstration Software Installation

### Installation Steps (continued)

11. Click “yes”

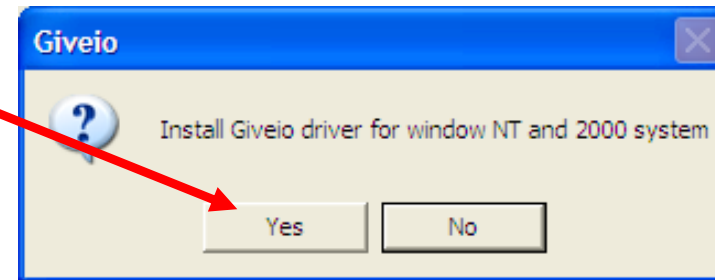

12. Giveio Driver complete

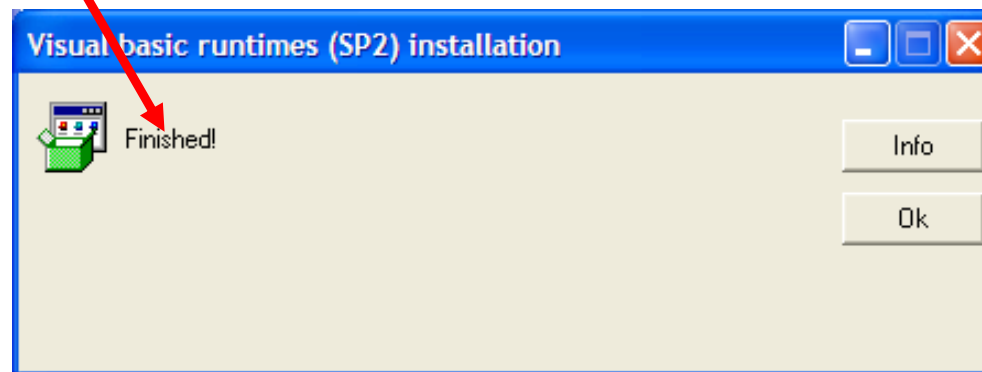



# iSensor<sup>®</sup> The Simple Solution for Sensor Integration


## ADIS16240 Installation on ADISUSBZ

### Installation Steps (continued)


13. Install 240/PCBZ on ADISUSBZ

14. Plug in USB cable


1. Secure 240/PCBZ w/ 2mm screws

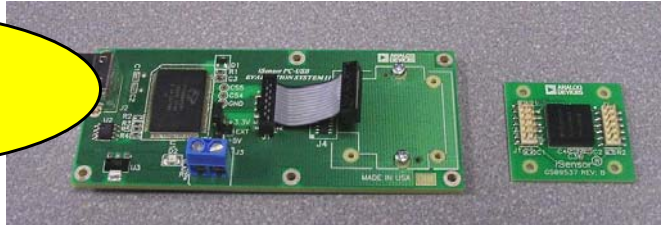



2. Connect ribbon cable

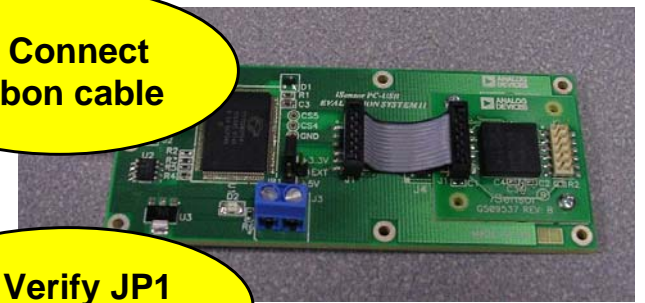

3. Verify JP1 set to +3.3V

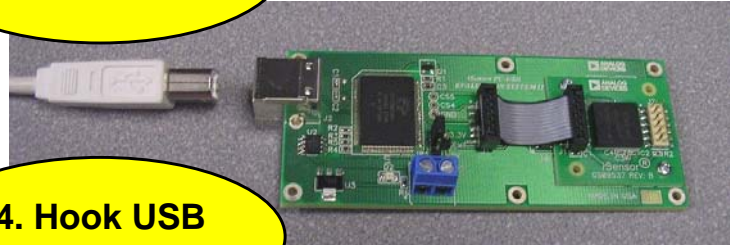

4. Hook USB cable up

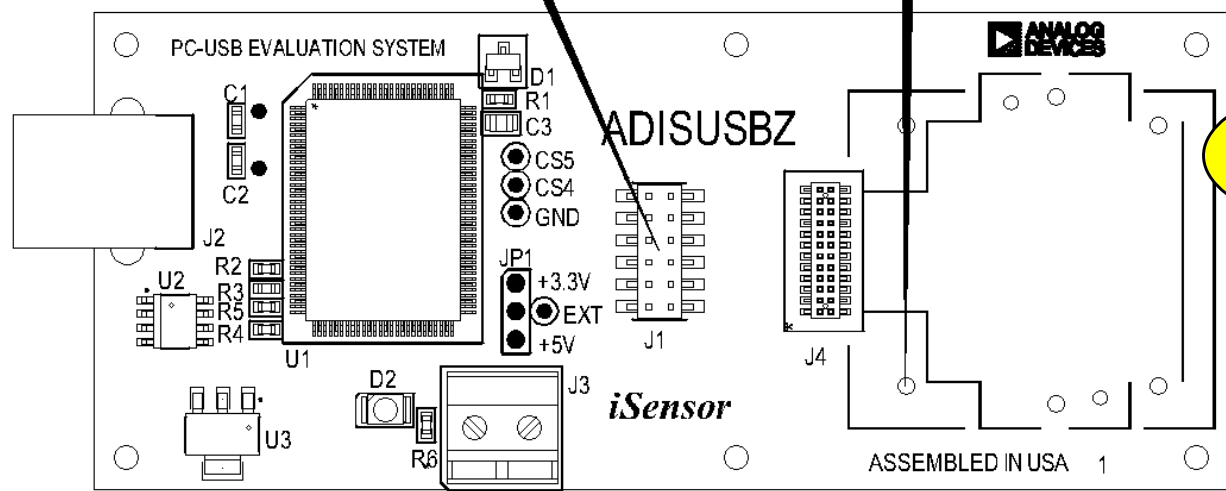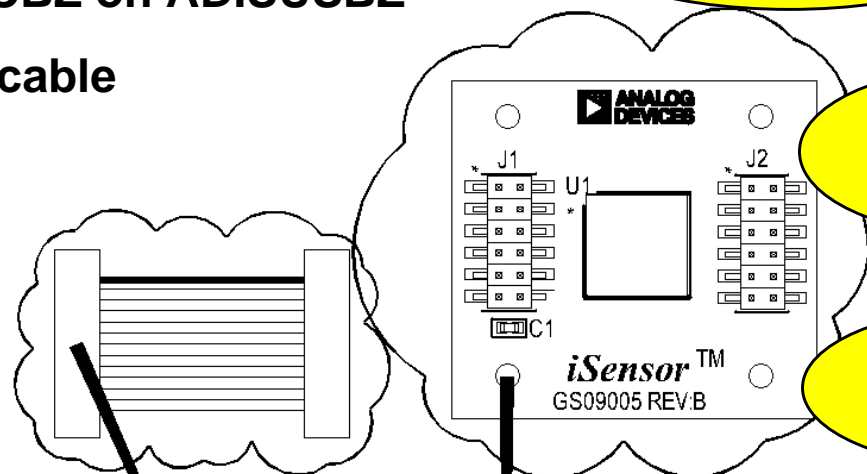



# iSensor® The Simple Solution for Sensor Integration

## ADIS16240 Demonstration Software Installation

### Installation Steps (continued)

15. USB Driver screen will pop-up  
Click “Next” to start this process

16. Then click on  
“Continue Anyway”

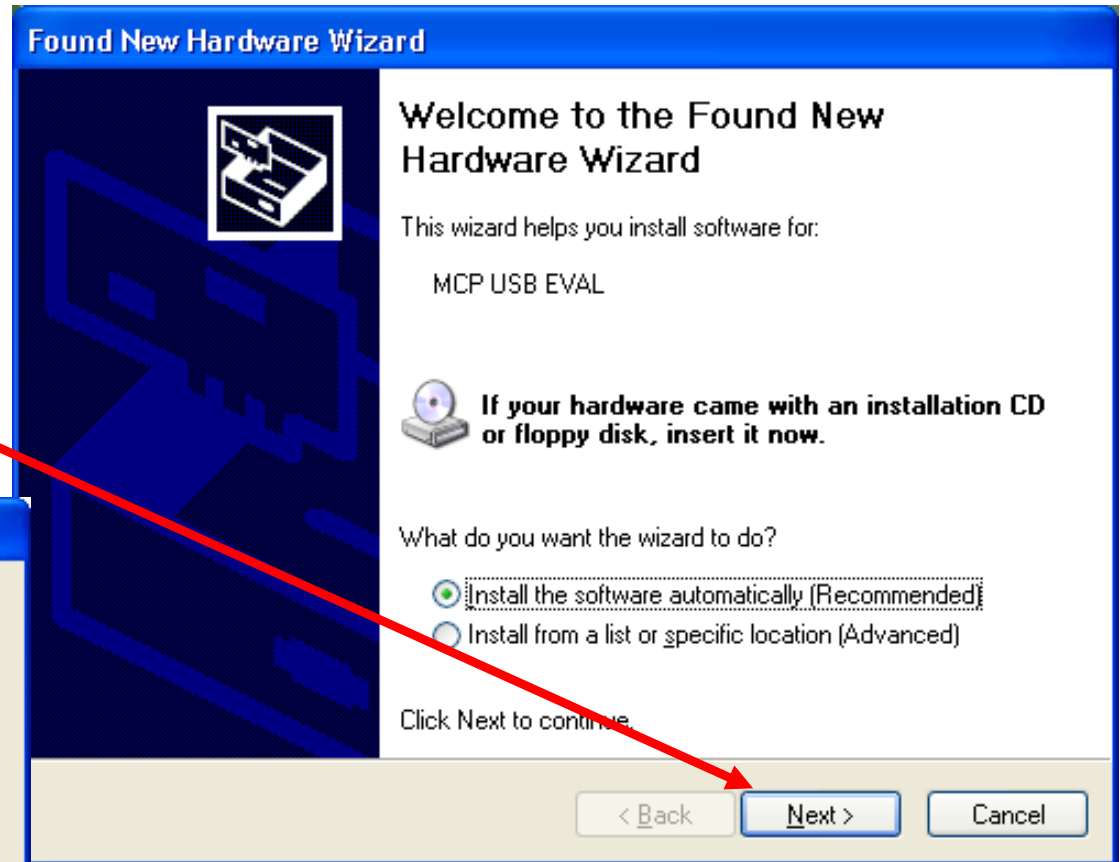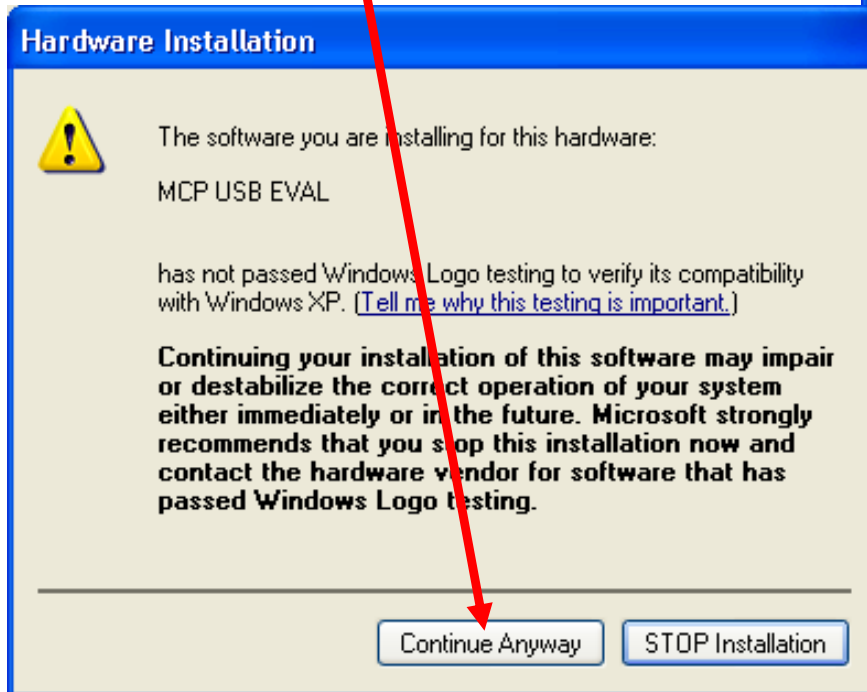

This process will repeat for a second driver file. Just follow the instructions and allow it to go through one more time. After completing this, then the devices is ready for test.

# iSensor<sup>®</sup> The Simple Solution for Sensor Integration

## ADIS16240 Demonstration Software Screen

The screenshot shows the ADIS16240 Evaluation Software interface. The window title is "Analog Devices ADIS16240 Evaluation Software Rev 3". The menu bar includes "Interface", "Device Configuration", "Datalog", "Registers", and "Exit".

**1** Callout points to the "Interface" menu item.

**2** Callout points to the "Graph" checkbox in the "Output Registers" section.

**3** Callout points to the "Device Configuration" menu item.

**4** Callout points to the "Read" button in the "Output Registers" section.

**5** Callout points to the "Sync to PC time" button in the "Date/Time" section.

**6** Callout points to the "Config" button in the "Event Capture" section.

The "Output Registers" section displays the following values:

Register	Value
SUPPLY_OUT (V)	3.294
XACCL_OUT (g)	-0.103
YACCL_OUT (g)	-0.308
ZACCL_OUT (g)	0.925
AUX_ADC (V)	-0.740
TEMP_OUT (C)	24.707
X_PEAK_OUT (g)	0.000
Y_PEAK_OUT (g)	0.000
Z_PEAK_OUT (g)	0.000
XYZ_PEAK_OUT (g)	0.000

The "Data Plot" section shows a graph with "Sample Number" on the x-axis (0 to 350) and "Value (g)" on the y-axis (-7 to 7). The current sample is 555, and the value is 5595. The plot is titled "lblmidS2".

The "Status Register" section shows the following status:

Status	Indicator
Power Supply Low	OK
Power Supply High	OK
Buffer Write Error	OK
SPI Error	OK
Alarm1 Set	OK
Alarm2 Set	OK
Buffer Full	OK
Self Test Fail	OK
Checksum Error	OK

The "Event Capture" section shows "Events Capt." as 0. The "Self Test" section has "OFF" selected. The "Powerdown" section has "Power Up" selected. The "Date/Time" section shows "Read Date" as 2/12/09 and "Read Time" as 16:11.

1. Click on "Interface" and select USB, then OK when the pop-up window shows the USB device is connected.
2. Click to enable different accelerometer axes (x,y,z)
3. Device configuration options. Turn on peak tracking (MSC\_CTRL option), adjust sample rate, etc.
4. Start on-screen log
5. Sync ADIS16240's time to the current PC time.
6. Capture, Click on Config button and see next page

# iSensor<sup>®</sup> The Simple Solution for Sensor Integration

## ADIS16240 Demonstration Software Installation

**ADIS16240 Event Trigger Configuration**

Step #1 - Configure Capture Parameters (CAPT\_CFG) 0023

Pre-Trigger Length Equals This Value Times 1/16 of Capt. Buff. Length: 2  
Capt\_Buff Length: 128

Update CAPT\_CFG Register

Step #2 - Set Trigger Source (ALM\_CTRL) 3230

Data Source - Buffer #1: X\_Acc  
Data Source - Buffer #2: Y\_Acc

Alarm I/O Line: OutPut Disabled, Active LOW, DIO0

Update ALM\_CTRL Register

Step #3 - Set Trigger Levels and Polarity (TRIG\_MAG) 804E 804E

ALM\_MAG1 Polarity: Greater Than, ALM\_MAG1 Trigger Level: 4.0092  
ALM\_MAG2 Polarity: Greater Than, ALM\_MAG2 Trigger Level: 4.0092

Update TRIG\_MAG1/2 Registers

**Trigger Configuration Example:**

Step 1 - Set Pre-trigger to zero then set Capt\_Buff Length to 1024 and press the update Capt\_CFG Register button

Step 2 - Set Data Source # 1 to Xacc and select Trigger #1 button, Press the Update ALM\_CTRL Register button

Step 3 - Set Trigger Level to 12 then set Polarity to greater than. Press the Update TRIG\_MAG 1/2 Registers button

Update Flash

1. Set number of captures vs. capture length and pre-capture length. Remember to click on the update button!
2. Set trigger source. Suggest both triggers. Remember to click on the Update button!
3. Set trigger levels and polarity, then hit the Update button.
4. Updating the flash makes the changes non-volatile.
5. Click on the red X to close and return to the main menu

# iSensor<sup>®</sup> The Simple Solution for Sensor Integration

## ADIS16240 Demonstration Software Installation

**Output Registers**

SUPPLY_OUT (V)	3.314	Graph
XACCL_OUT (g)	-0.154	<input checked="" type="checkbox"/>
YACCL_OUT (g)	-1.285	<input checked="" type="checkbox"/>
ZACCL_OUT (g)	0.000	<input checked="" type="checkbox"/>
AUX_ADC (V)	-0.751	
TEMP_OUT (C)	24.951	
X_PEAK_OUT (g)	0.000	
Y_PEAK_OUT (g)	0.000	
Z_PEAK_OUT (g)	0.000	
XYZ_PEAK_OUT (g)	0.000	

Reset Pk

Loop  STOP

Loop Delay msec 5

**Status Register**

Read Status	Clear
Power Supply Low	OK
Power Supply High	OK
Buffer Write Error	OK
SPI Error	Alarm
Alarm1 Set	Alarm
Alarm2 Set	Alarm
Buffer Full	OK
Self Test Fail	OK
Checksum Error	OK

**Data Plot**

Sample 0

Value (g) 3225

Scale(g) 7

Sample Number 0 85 175 260

**Event Capture**

Config Events Capt. 7

Show Buffer Clear Capt.

**Self Test**

OFF ON


**Date/Time**

**Callout 1:** Click on Run and start tapping ADISUSBZ on the desk, then click stop, then "Show Buffer"

**Callout 2:** Note that the event counter is increasing with each time the ADISUSBZ tap exceeds the pre-set shock level

# *iSensor*<sup>®</sup> The Simple Solution for Sensor Integration

## ADIS16240 Demonstration Software Installation

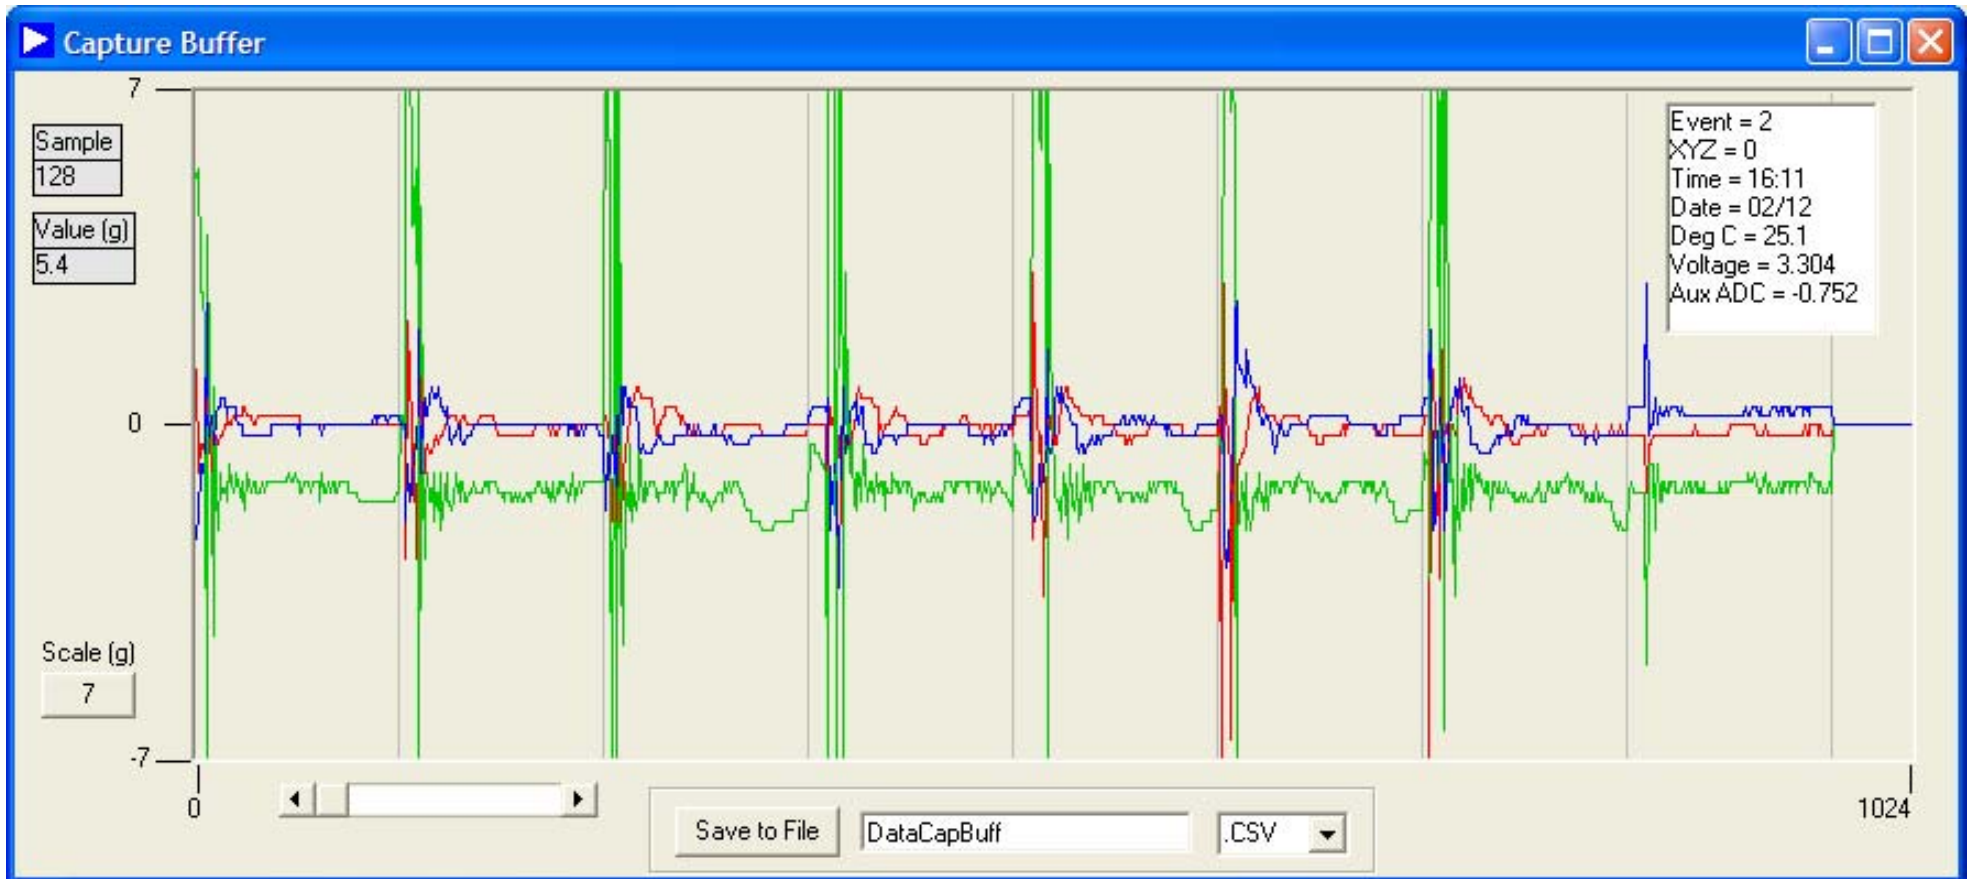

1. Place the mouse pointer over different spikes to see the Event header in the upper right hand corner change.
2. Slider bar in lower left hand corner will move event log as desired.



## ◆ CONTACTS:

- **MARKETING:** Bob Scannell, 1-336-605-4031
- **APPLICATIONS ENGINEER:** Mark Looney, 1-336-605-4139

## MORE INFORMATION:

- [www.analog.com/isensor](http://www.analog.com/isensor)
- **New Brochure:** *i*Sensor Motion Sensor Products
  - ◆ BR067755-2.5-4/08(A)
- **CD's with Product Info and Eval SW**

## Данный компонент на территории Российской Федерации

### Вы можете приобрести в компании MosChip.

Для оперативного оформления запроса Вам необходимо перейти по данной ссылке:

<http://moschip.ru/get-element>

Вы можете разместить у нас заказ для любого Вашего проекта, будь то серийное производство или разработка единичного прибора.

В нашем ассортименте представлены ведущие мировые производители активных и пассивных электронных компонентов.

Нашей специализацией является поставка электронной компонентной базы двойного назначения, продукции таких производителей как XILINX, Intel (ex.ALTERA), Vicor, Microchip, Texas Instruments, Analog Devices, Mini-Circuits, Amphenol, Glenair.

Сотрудничество с глобальными дистрибьюторами электронных компонентов, предоставляет возможность заказывать и получать с международных складов практически любой перечень компонентов в оптимальные для Вас сроки.

На всех этапах разработки и производства наши партнеры могут получить квалифицированную поддержку опытных инженеров.

Система менеджмента качества компании отвечает требованиям в соответствии с ГОСТ Р ИСО 9001, ГОСТ РВ 0015-002 и ЭС РД 009

### Офис по работе с юридическими лицами:

105318, г.Москва, ул.Щербаковская д.3, офис 1107, 1118, ДЦ «Щербаковский»

Телефон: +7 495 668-12-70 (многоканальный)

Факс: +7 495 668-12-70 (доб.304)

E-mail: [info@moschip.ru](mailto:info@moschip.ru)

Skype отдела продаж:

moschip.ru

moschip.ru\_4

moschip.ru\_6

moschip.ru\_9